
H150F MANUAL TRANSMISSION / TRANSAXLE BACK-UP LIGHT SWITCH INSPECTION

PROCEDURE

■ 1.INSPECT BACK-UP LIGHT SWITCH ASSEMBLY

84210

Exit

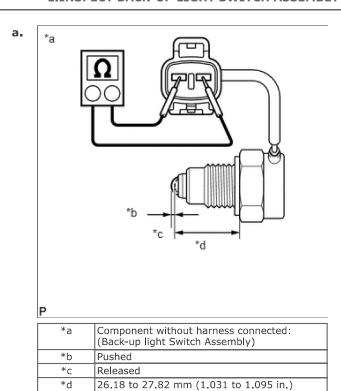

Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - 2	Pushed	Below 1 Ω
1 - 2	Released	10 kΩ or higher

If the result is not as specified, replace the back-up light switch assembly.

 $\ensuremath{\text{©}}$ 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.