
1GR-FE INTAKE / EXHAUST SNORKEL AIR CLEANER REMOVAL

PROCEDURE

■ 1.REMOVE COOL AIR INTAKE DUCT

53299B



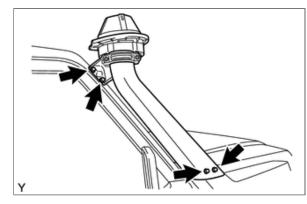


Remove the 4 bolts and cool air intake duct with pre cleaner assembly.

b. Remove the pre cleaner pad.

2.REMOVE NO. 2 COOL AIR INTAKE DUCT

53285G




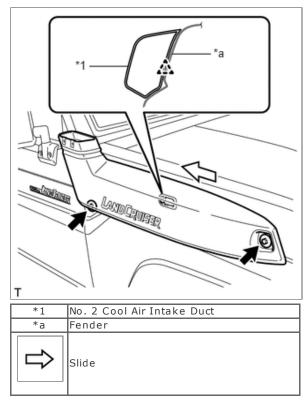

Remove the 2 bolts from the No. 2 cool air intake duct.

Slide the No. 2 cool air intake duct towards the rear of the vehicle to detach the clip and remove the No. 2 cool air intake duct.



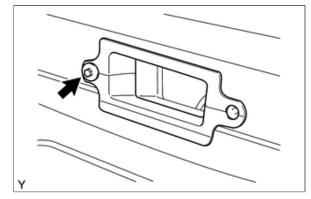


Remove the bolt and cool air intake pipe.

■ 4.REMOVE PRE CLEANER ASSEMBLY

17730

a.

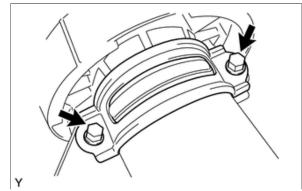

Remove the 2 bolts, No. 1 air cleaner inlet bracket and No. 2 air cleaner inlet bracket.

- **b.** Pull out the pre cleaner assembly from the cool air intake duct.
- © 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.