

ILLUSTRATION

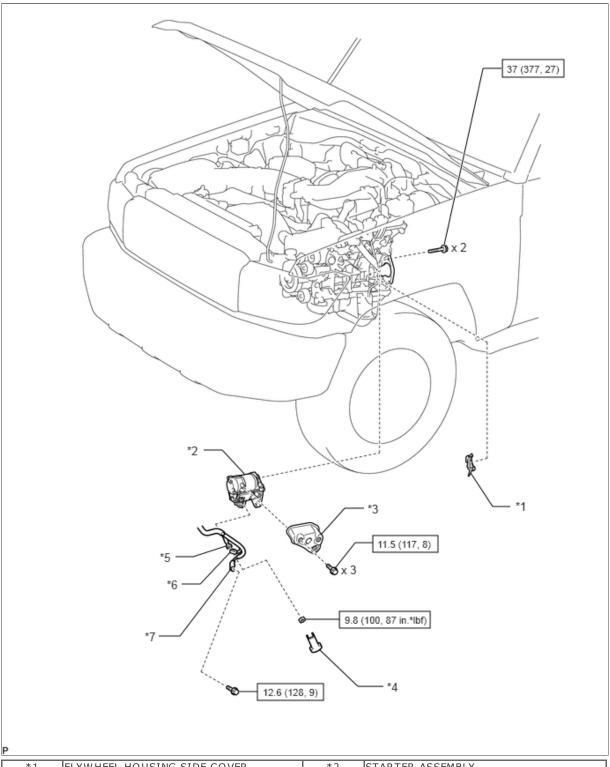

*1	FLYWHEEL HOUSING SIDE COVER	*2	STARTER ASSEMBLY
*3	STARTER COVER	*4	TERMINAL CAP
*5	STARTER WIRE	*6	STARTER CONNECTOR
*7	GROUND WIRE	-	-
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

ILLUSTRATION

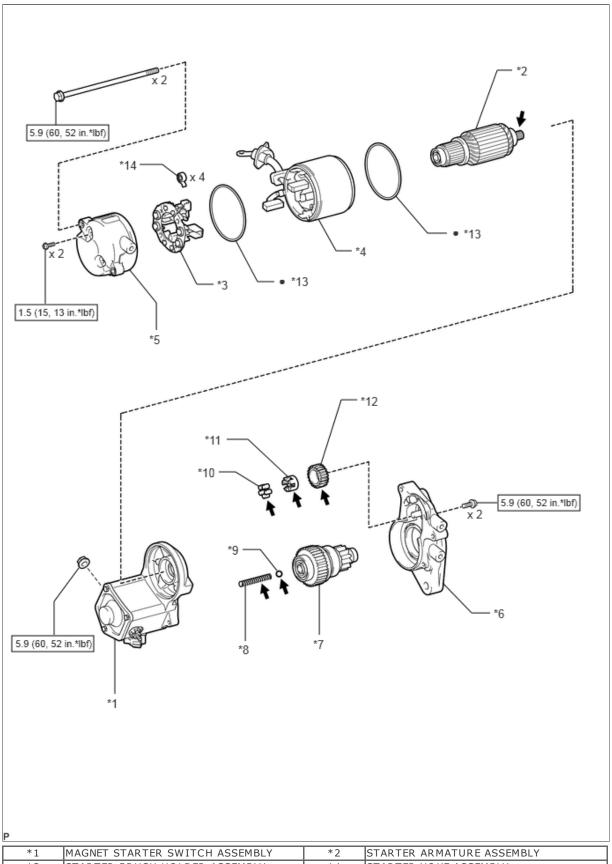

*1	MAGNET STARTER SWITCH ASSEMBLY	*2	STARTER ARMATURE ASSEMBLY
*3	STARTER BRUSH HOLDER ASSEMBLY	*4	STARTER YOKE ASSEMBLY
*5	STARTER COMMUTATOR END FRAME	*6	STARTER DRIVE HOUSING ASSEMBLY
*7	STARTER CLUTCH SUB-ASSEMBLY	*8	RETURN SPRING
*9	STEEL BALL	*10	CLUTCH ROLLER
*11	RETAINER	*12	IDLE GEAR
*13	O-RING	*14	BRUSH SPRING

	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part
→	High-temperature grease	-	-

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.