


H150F MANUAL TRANSMISSION / TRANSAXLE MANUAL TRANSMISSION ASSEMBLY(for 1VD-FTV) COMPONENTS

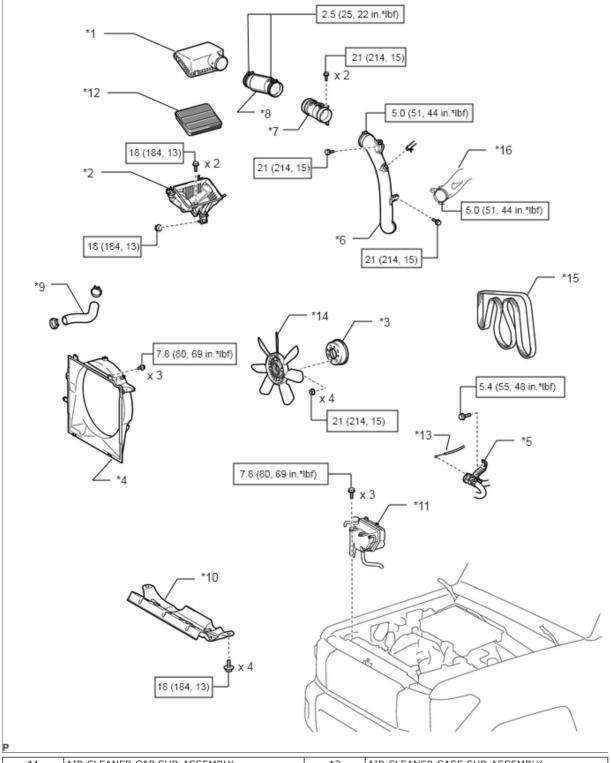


*1	AIR CLEANER CAP SUB-ASSEMBLY	*2	AIR CLEANER CASE SUB-ASSEMBLY
*3	FAN PULLEY	*4	FAN SHROUD
*5	HEATER WATER VALVE ASSEMBLY	*6	INTAKE AIR CONNECTOR PIPE
*7	INTAKE AIR CONNECTOR SUB-ASSEMBLY	*8	NO. 1 AIR CLEANER HOSE
*9	NO. 1 RADIATOR HOSE	*10	NO. 2 ENGINE UNDER COVER
*11	RADIATOR RESERVOIR ASSEMBLY	*12	AIR CLEANER FILTER ELEMENT SUB-ASSEMBLY
*13	CONTROL CABLE	*14	FAN
*15	FAN AND GENERATOR V-RIBBED BELT	*16	NO. 3 INTAKE AIR CONNECTOR PIPE
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

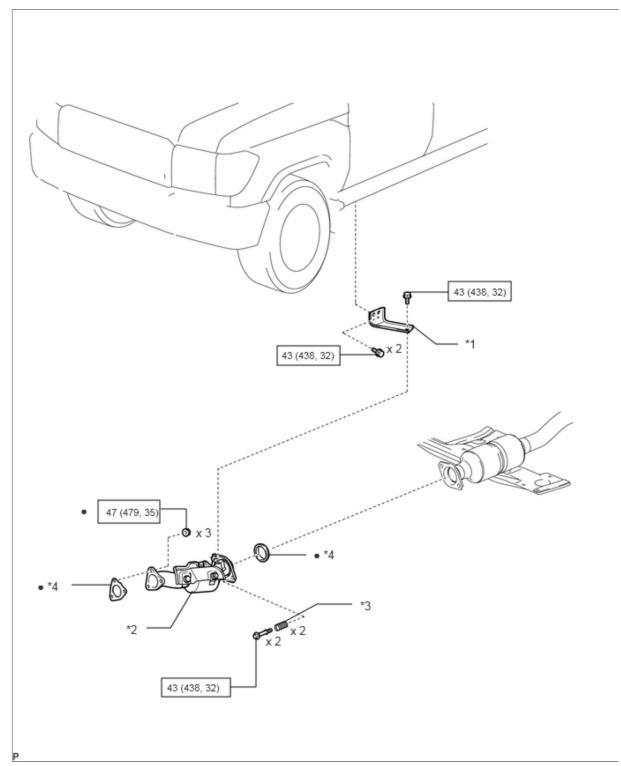


*1	CENTER CONVERTER PROTECTOR STAY	*2	MONOLITHIC CONVERTER ASSEMBLY
*3	COMPRESSION SPRING	*4	GASKET
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

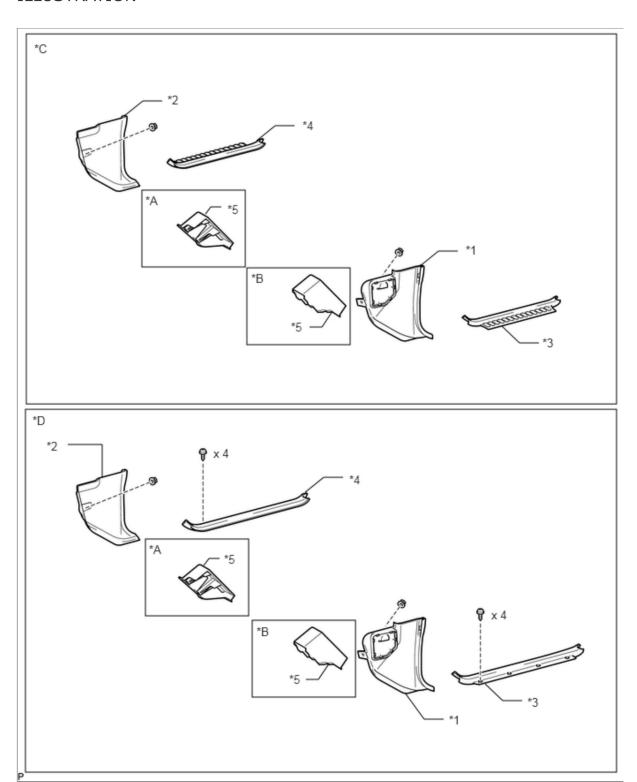


*A	for RHD	*B	for LHD
*C	for 4 Door	*D	for 2 Door
*1	COWL SIDE TRIM SUB-ASSEMBLY LH	*2	COWL SIDE TRIM SUB-ASSEMBLY RH
*3	FRONT DOOR SCUFF PLATE LH	*4	FRONT DOOR SCUFF PLATE RH
*5	FRONT FLOOR FOOTREST	-	-

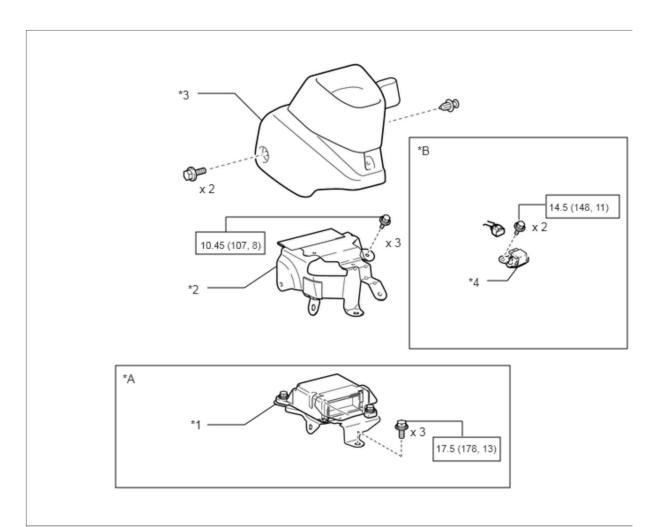


*A	w/ AIRBAG SYSTEM	*B	w/ ABS
*1	AIRBAG SENSOR ASSEMBLY WITH AIRBAG SENSOR BRACKET	*2	AIRBAG SENSOR COVER
*3	CONSOLE BOX	*4	DECELERATION SENSOR
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

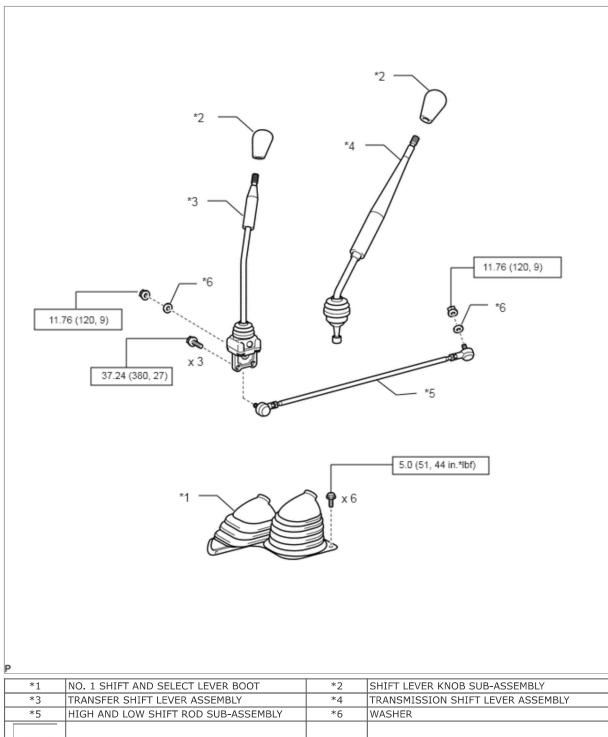

*1	NO. 1 SHIFT AND SELECT LEVER BOOT	*2	SHIFT LEVER KNOB SUB-ASSEMBLY
*3	TRANSFER SHIFT LEVER ASSEMBLY	*4	TRANSMISSION SHIFT LEVER ASSEMBLY
*5	HIGH AND LOW SHIFT ROD SUB-ASSEMBLY	*6	WASHER
	N*m (kgf*cm, ft.*lbf): Specified torque	-	-

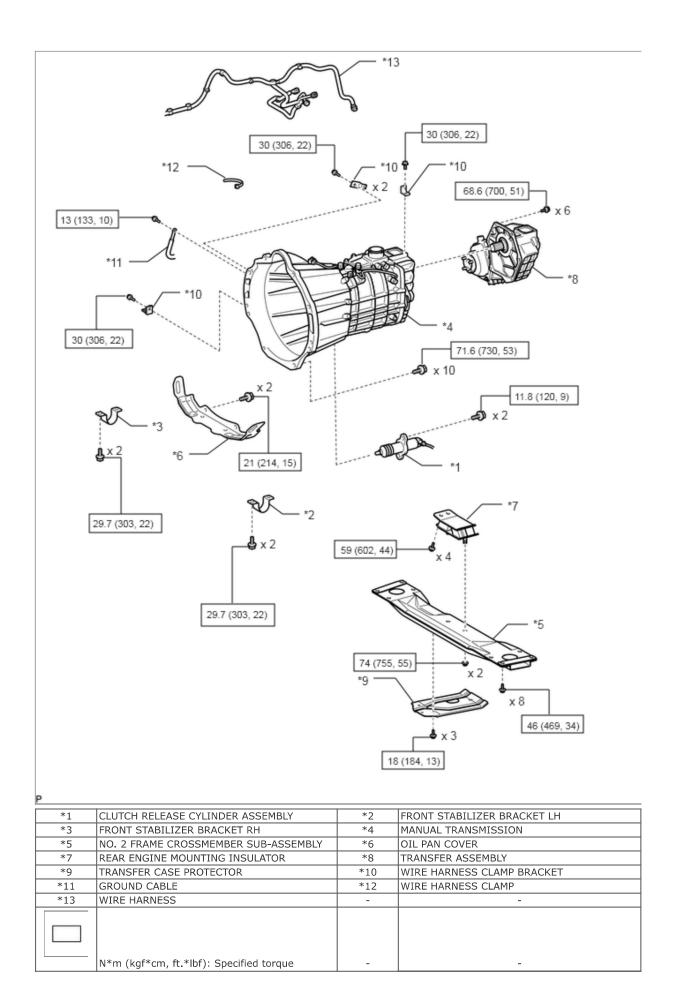

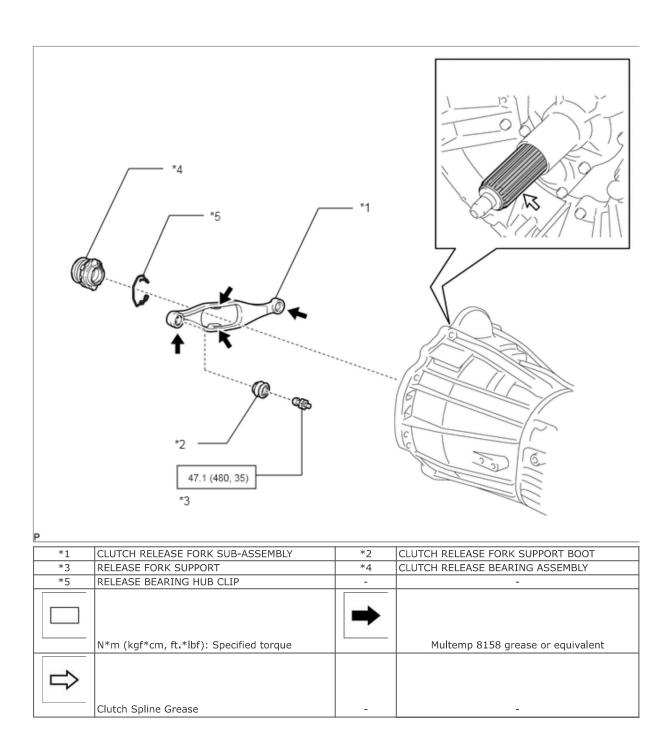

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.