INTERIOR PANELS / TRIM INSTRUMENT PANEL SAFETY PAD REMOVAL

CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for RHD and LHD vehicles.
- The procedure listed below is for LHD vehicles.

PROCEDURE



1. TABLE OF BOLT, SCREW AND NUT

HINT:

All bolts, screws, and clips relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.

Со	de	Shape		Code	Shape		Code	Shape	
<a< td=""><td>A></td><td></td><td>φ 6 (0.236) L = 21 (0.827)</td><td></td><td></td><td>φ 5 (0.197) L = 16 (0.630)</td><td><c></c></td><td></td><td>φ 6 (0.236)</td></a<>	A>		φ 6 (0.236) L = 21 (0.827)			φ 5 (0.197) L = 16 (0.630)	<c></c>		φ 6 (0.236)
<0)>		φ 6 (0.236) L = 20 (0.787)	<e></e>	E	φ 8 (0.315)		mm (in.) (L = Length)	



2. PRECAUTION

NOTICE:

After turning the power switch off, waiting time may be required before disconnecting the cable from the battery terminal. Therefore, make sure to read the disconnecting the cable from the battery terminal notice before proceeding with work.

Click hereGeneral>INTRODUCTION>REPAIR INSTRUCTION>PRECAUTION



3.DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) auxiliary battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected. Click hereGeneral>INTRODUCTION>REPAIR INSTRUCTION>INITIALIZATION

4.REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY

84140

Click hereVehicle Exterior>LIGHTING (EXT)>HEADLIGHT DIMMER SWITCH>REMOVAL



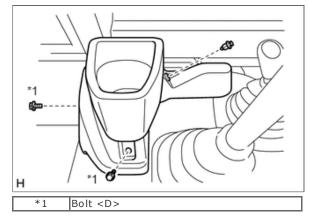


Remove the 2 bolts <D>, clip and front console box.

6.REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

55480D

a.

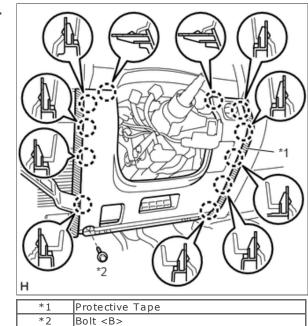


Put protective tape around the lower instrument panel finish panel assembly.

- **b.** Remove the bolt .
- c. Using moulding remover B, detach the 11 claws and remove the lower instrument panel finish panel assembly.
 HTNT-

If switches or the manual idle up cable is attached to the lower instrument panel finish panel assembly, disconnect each connector and the manual idle up cable before removing the lower instrument panel finish panel assembly.

7.REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL

55411G

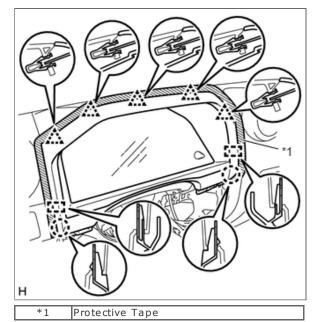


Put protective tape around the No. 1 instrument cluster finish panel.

b. Detach the 2 claws, 2 guides and 5 clips, and remove the No. 1 instrument cluster finish panel.

8.REMOVE UPPER INSTRUMENT CLUSTER FINISH PANEL

55421B

a.

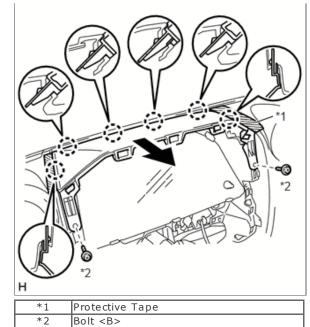

Put protective tape around the upper instrument cluster finish panel.

- **b.** Remove the 2 bolts .
- **c.** Detach the 6 claws and remove the upper instrument cluster finish panel.


9.REMOVE COMBINATION METER ASSEMBLY

83100

Click hereVehicle Interior>METER / GAUGE / DISPLAY>COMBINATION METER>REMOVAL

■ 10.REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

55409F

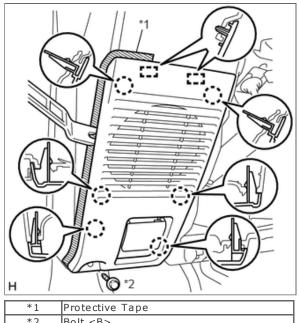


*2 Bolt


Put protective tape around the No. 2 instrument panel speaker panel sub-assembly.

- Remove the bolt .
- c. Using moulding remover B, detach the 6 claws and 2 guides.

d.

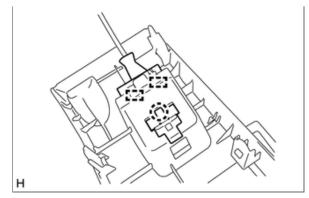

Detach the claw and 2 guides and disconnect the hood lock control cable and remove the No. 2 instrument panel speaker panel sub-assembly.

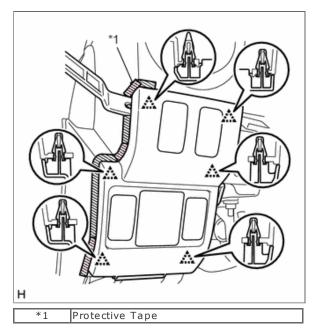

Put protective tape around the No. 1 switch hole base.


b. Using moulding remover B, detach the 6 clips and remove the No. 1 switch hole base.

HINT:

If switches are attached to the No. 1 switch hole base, disconnect each connector before removing the No. 1 switch hole base.

■ 12.REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY


55550

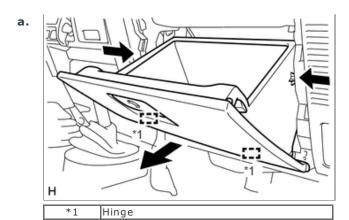

Push in the sides of the glove compartment door assembly to release the 2 stoppers and open the glove compartment door assembly until it is horizontal.

b. Pull the glove compartment door assembly toward the rear of the vehicle to detach the 2 hinges and remove the glove compartment door assembly.

13.REMOVE NO. 1 INSTRUMENT PANEL BOX DOOR SUB-ASSEMBLY (w/o Front Passenger Airbag)

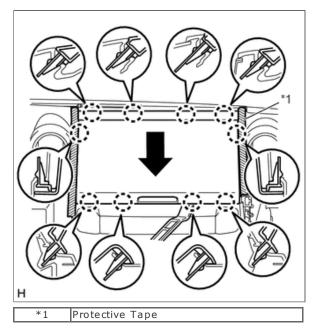

Put protective tape around the No. 1 instrument panel box door sub-assembly.


- **b.** Using moulding remover B, detach the 10 claws and remove the No. 1 instrument panel box door sub-assembly.
- 14.REMOVE INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY (w/ Front Passenger 73970A Airbag)

Click hereVehicle Interior>SUPPLEMENTAL RESTRAINT SYSTEMS>FRONT PASSENGER AIRBAG ASSEMBLY>REMOVAL

15.REMOVE LOWER INSTRUMENT FINISH PANEL SUB

55434A


a.

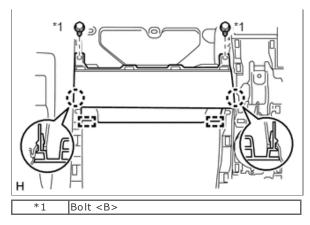

w/o Assist Grip:

- i. Remove the 2 bolts .
- ii. Detach the 2 claws and 2 guides, and remove the lower instrument finish panel sub.

b.

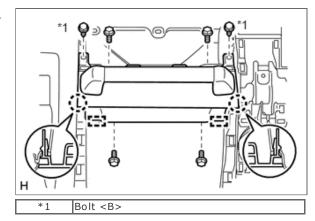


w/ Assist Grip:

- i. Remove the 4 bolts and 2 bolts .
- ii. Detach the 2 claws and 2 guides, and remove the lower instrument finish panel sub.

■ 16.REMOVE NO. 4 INSTRUMENT PANEL STAY (w/ Assist Grip)

55329B

a.

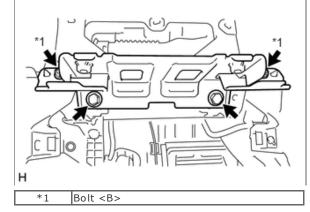


Remove the 2 bolts and 2 bolts and No. 4 instrument panel stay.

17.REMOVE INSTRUMENT ASSIST GRIP ASSEMBLY (w/ Assist Grip)


74670

a.

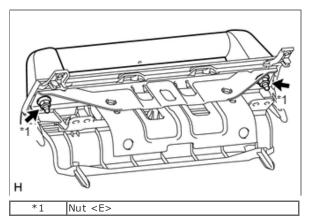

Remove the 2 nuts <E> and instrument assist grip assembly.

■ 18.REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL (w/ Assist Grip)

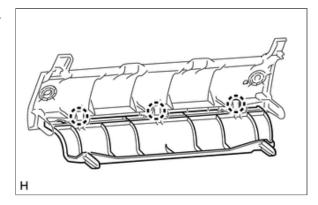


Detach the 3 claws and remove the lower No. 2 instrument panel finish panel.

19.REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

55408F

a.

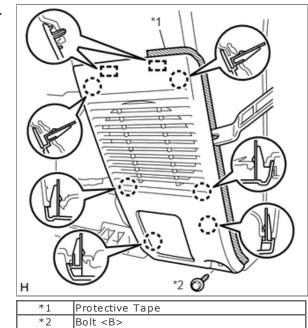

Put protective tape around the No. 1 instrument panel speaker panel sub-assembly.

- **b.** Remove the bolt
- c. Using moulding remover B, detach the 6 claws and 2 guides, and remove the No. 1 instrument panel speaker panel sub-assembly.


20.REMOVE FRONT NO. 1 SPEAKER ASSEMBLY

86160

Click hereAudio / Visual / Telematics>AUDIO / VIDEO>INSTRUMENT PANEL SPEAKER>REMOVAL

21.REMOVE NO. 2 INSTRUMENT PANEL BOX

55452A

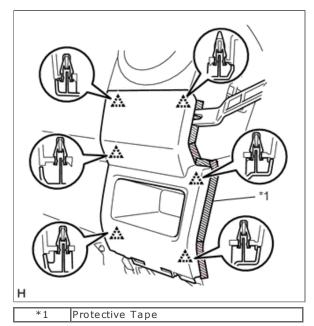


Put protective tape around the No. 2 instrument panel box.

b. Using moulding remover B, detach the 6 clips and remove the No. 2 instrument panel box.

22.REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL

55412D

a.

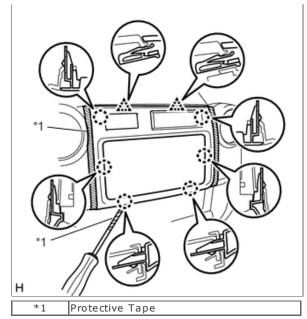

Put protective tape around the center instrument cluster finish panel.


b. Using a screwdriver, detach the 6 claws and 2 clips.

HINT:

Tape the screwdriver tip before use.

c. Disconnect the connector and remove the center instrument cluster finish panel.

23.REMOVE RADIO TUNER OPENING COVER (w/o Audio)

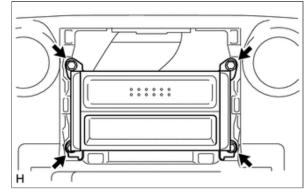

Remove the 2 screws, 2 bolts and radio tuner opening cover.

24.REMOVE RADIO RECEIVER ASSEMBLY (w/ Audio)


86120

Click hereAudio / Visual / Telematics>AUDIO / VIDEO>RADIO RECEIVER>REMOVAL

25.REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSEMBLY

74110

a.

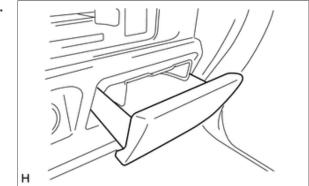


Remove the instrument panel ash receptacle assembly.

26.REMOVE CENTER LOWER INSTRUMENT CLUSTER FINISH PANEL

55413D

a.

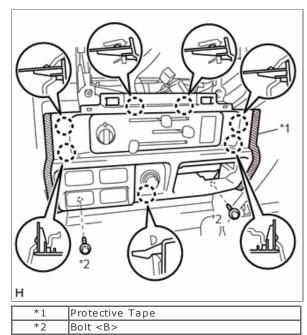


Put protective tape around the center lower instrument cluster finish panel.

- **b.** Remove the 2 bolts .
- c. Detach the 7 claws.
- **d.** Disconnect the connector and remove the center lower instrument cluster finish panel.
- 27.REMOVE HEATER OR BOOST VENTILATOR CONTROL ASSEMBLY (w/ Air Conditioning System) 55910

Click hereVehicle Interior>HEATING / AIR CONDITIONING>AIR CONDITIONING PANEL>REMOVAL

28.REMOVE INSTRUMENT PANEL PLATE LH

55356B

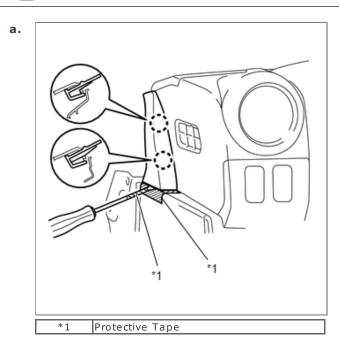


for Fixed Glass Type:

- i. Put protective tape around the instrument panel plate LH.
- ${f ii.}$ Using a screwdriver, detach the 2 claws and remove the instrument panel plate LH.

HINT:

Tape the screwdriver tip before use.

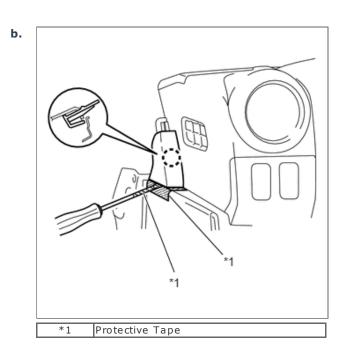

except Fixed Glass Type:

- i. Put protective tape around the instrument panel plate LH.
- ii. Using a screwdriver, detach the claw and remove the instrument panel plate LH.

HINT

Tape the screwdriver tip before use.

29.REMOVE INSTRUMENT PANEL PLATE RH

55355B


HINT:

Use the same procedure described for the LH side.

30.REMOVE INSTRUMENT SIDE PANEL LH

55318C



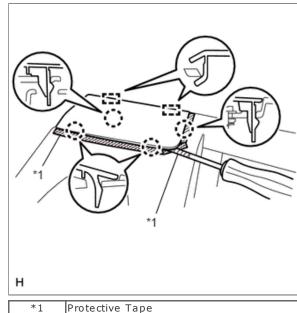


for Fixed Glass Type:

- i. Put protective tape around the instrument side panel LH.
- **ii.** Using a screwdriver, detach the 4 claws and 2 guides, and remove the instrument side panel LH.

HINT:

Tape the screwdriver tip before use.

b.

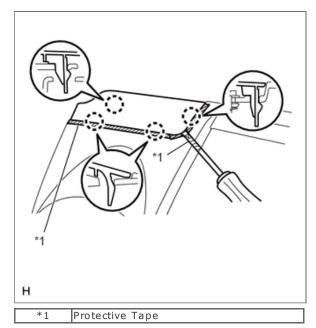

for Fixed Glass Type:

- i. Put protective tape around the instrument side panel LH.
- ${\it ii.}$ Using a screwdriver, detach the 4 claws and remove the instrument side panel LH.

HINT:

Tape the screwdriver tip before use.

31.REMOVE INSTRUMENT SIDE PANEL RH

55317A


HINT:

Use the same procedure described for the LH side.


32.REMOVE INSTRUMENT PANEL SUB-ASSEMBLY

55301

- **a.** Disconnect the connector and detach each clamp.
- **b.** Remove the 8 bolts <A>, 2 bolts and nut <C>.
- $\textbf{c.} \quad \text{Detach the 4 guides and remove the instrument panel sub-assembly}.$

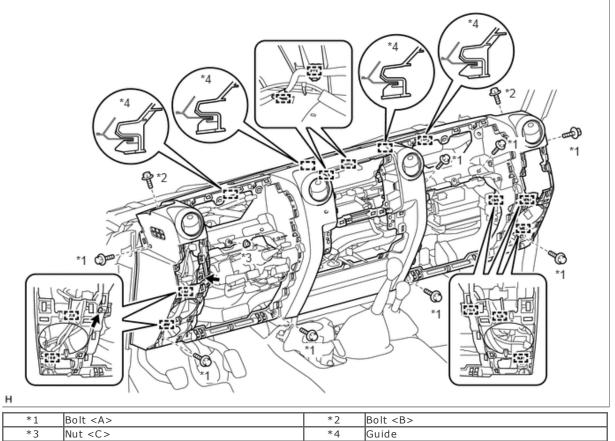

33.REMOVE GLOVE COMPARTMENT DOOR LOCK CYLINDER ASSEMBLY

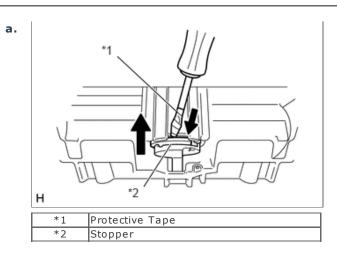

Using a screwdriver, push the stopper of the glove compartment door lock cylinder as shown in the illustration and remove the glove compartment door lock cylinder assembly in the direction of the arrow.

HINT:

Tape the screwdriver tip before use.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.