
Print

Exit

HF1A TRANSFER / 4WD / AWD TRANSFER CASE REAR OIL SEAL COMPONENTS

ILLUSTRATION

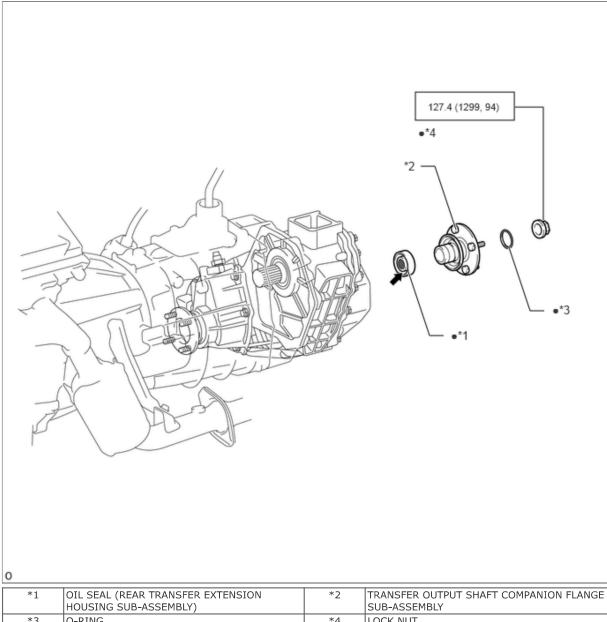

OIL SEAL (REAR TRANSFER EXTENSION HOUSING SUB-ASSEMBLY)	*2	TRANSFER OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY
O-RING	*4	LOCK NUT
N*m (kaf*cm_ft *lhf): Specified torque		Non-reusable part
Ry III (kgi ciii, it. ibi). Specifica torque		Non reasable part
MP grease	_	_
	HOUSING SUB-ASSEMBLY) O-RING N*m (kgf*cm, ft.*lbf): Specified torque	HOUSING SUB-ASSEMBLY) O-RING *4

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.