
Print

DRIVE SHAFT / PROPELLER SHAFT FRONT PROPELLER SHAFT ASSEMBLY REMOVAL

## **PROCEDURE**

## \_ 1.REMOVE FRONT PROPELLER SHAFT ASSEMBLY

37140

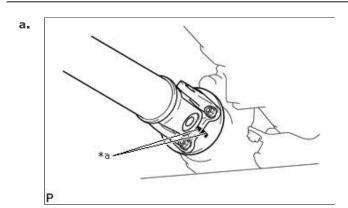


Place matchmarks on the propeller shaft flange and transfer flange.

Remove the 4 nuts and 4 washers.

Matchmark

\*a

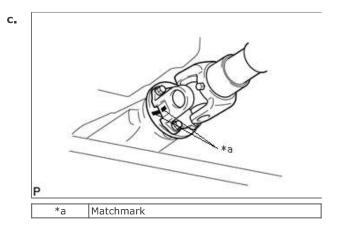

Place matchmarks on the propeller shaft flange and differential flange.

- Remove the 4 nuts, 4 bolts and 4 washers.
- Remove the front propeller shaft assembly.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.

Exit