Print Exit

CLUTCH CLUTCH ACCUMULATOR(for 1VD-FTV) REMOVAL


## **PROCEDURE**

**■ 1.DRAIN CLUTCH FLUID** 

## **■ 2.REMOVE CLUTCH ACCUMULATOR ASSEMBLY**

31490


a.

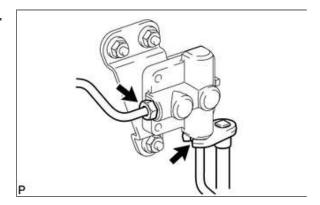

Using a union nut wrench, disconnect the 2 flexible hose tubes.  $\label{eq:HINT:} \textbf{HINT:}$ 

Use a container to catch the fluid.



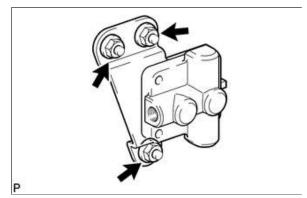

Remove the 3 nuts and clutch accumulator assembly.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.