

1GR-FE FUEL FUEL SYSTEM SYSTEM DIAGRAM

FUEL FLOW DIAGRAM

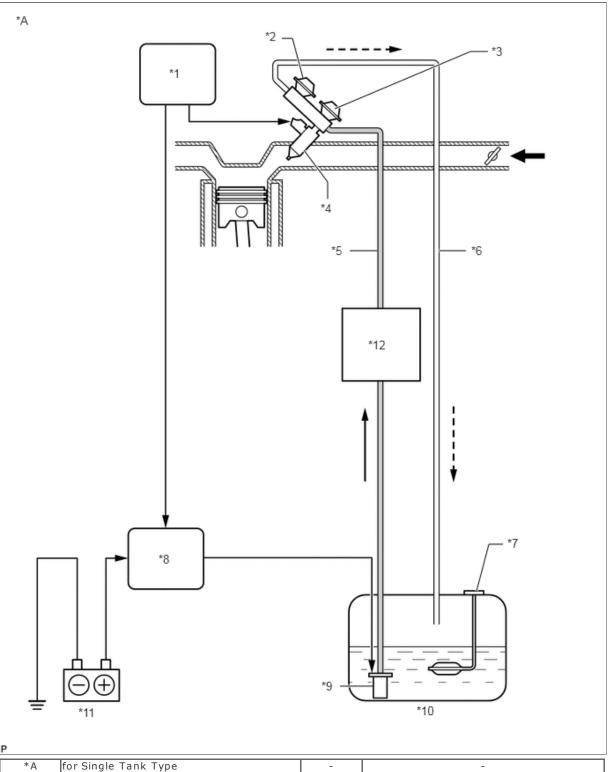

*A	for Single Tank Type	-	-
*1	ECM	*2	Fuel Pressure Regulator Assembly
*3	Fuel Pressure Pulsation Damper Assembly	*4	Fuel Injector Assembly
*5	Fuel Main Tube	*6	Fuel Return Tube
*7	Fuel Sender Gauge Assembly	*8	Fuel Pump Resistor
*9	Fuel Pump	*10	Fuel Tank Assembly
*11	Battery	*12	Fuel Filter
	Intake Air	-	-




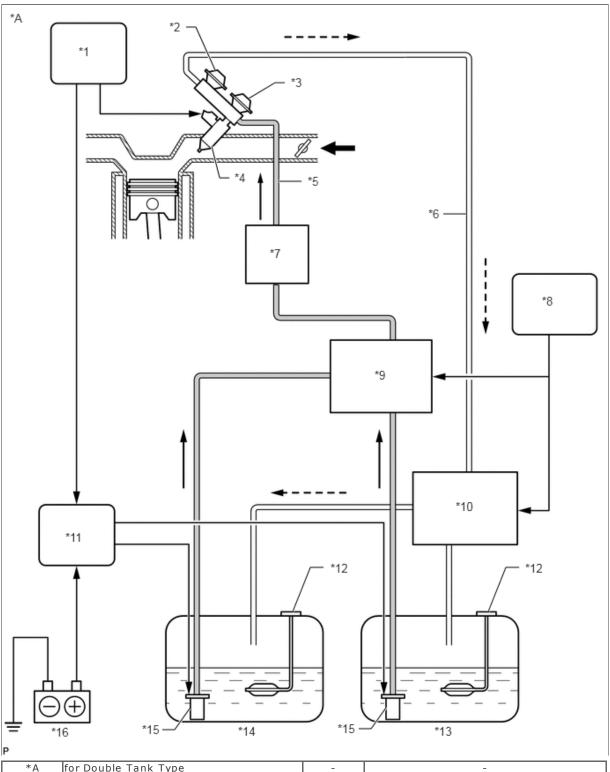



*A	for Double Tank Type	-	-
*1	ECM	*2	Fuel Pressure Regulator Assembly
*3	Fuel Pressure Pulsation Damper Assembly	*4	Fuel Injector Assembly
*5	Fuel Main Tube	*6	Fuel Return Tube
*7	Fuel Filter	*8	Fuel Tank Select Switch
*9	Fuel Tank Select Valve (for Main)	*10	Fuel Tank Select Valve (for Return)
*11	Fuel Pump Resistor	*12	Fuel Sender Gauge Assembly
*13	Fuel Tank Assembly	*14	Fuel Sub Tank
*15	Fuel Pump	*16	Battery
	Intake Air	-	-




ELECTRICAL CONTROL DIAGRAM

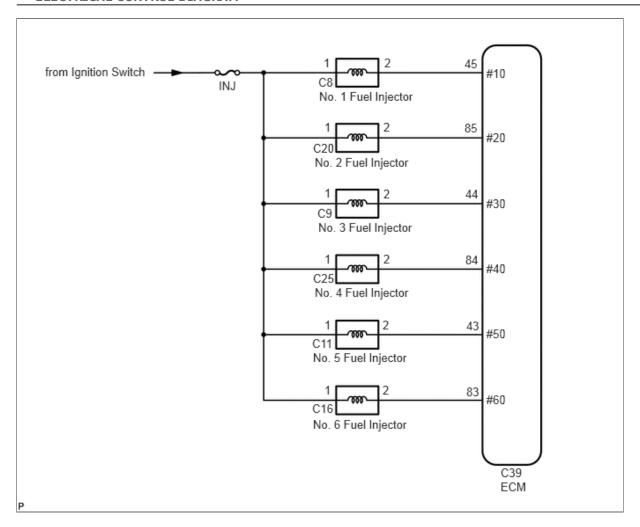

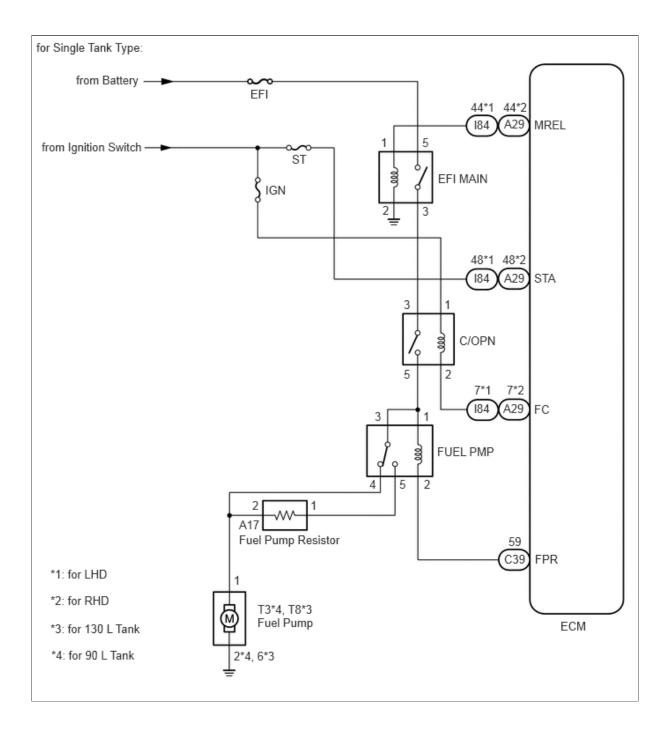

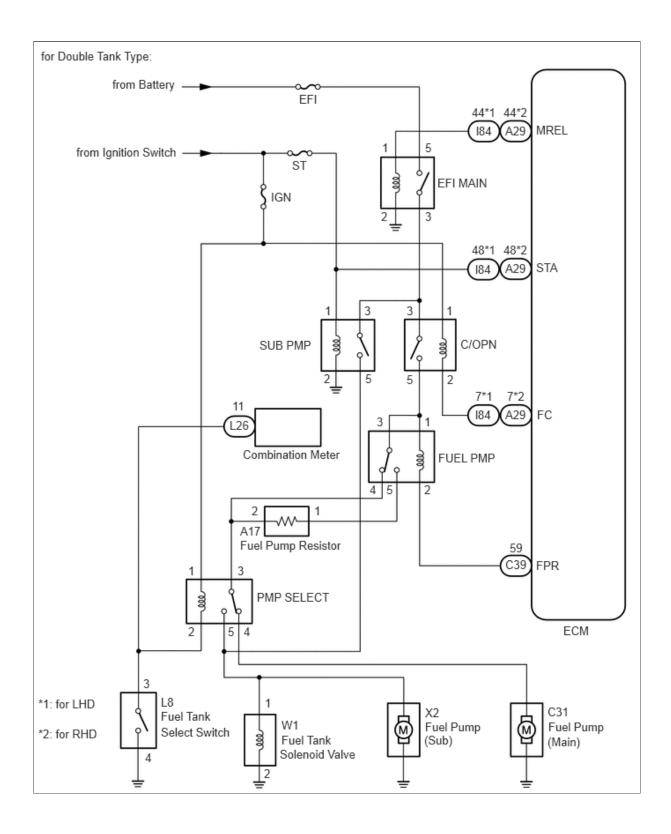

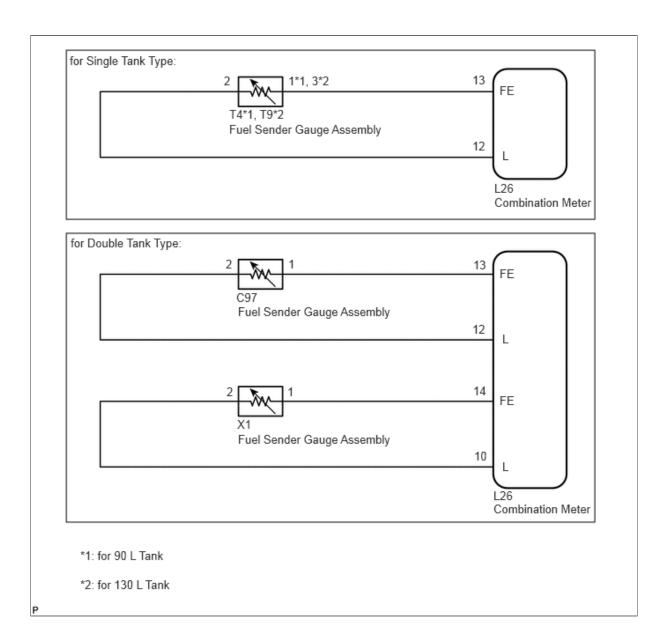

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.