
Print Exit

1GR-FE FUEL FUEL PRESSURE REGULATOR COMPONENTS

ILLUSTRATION

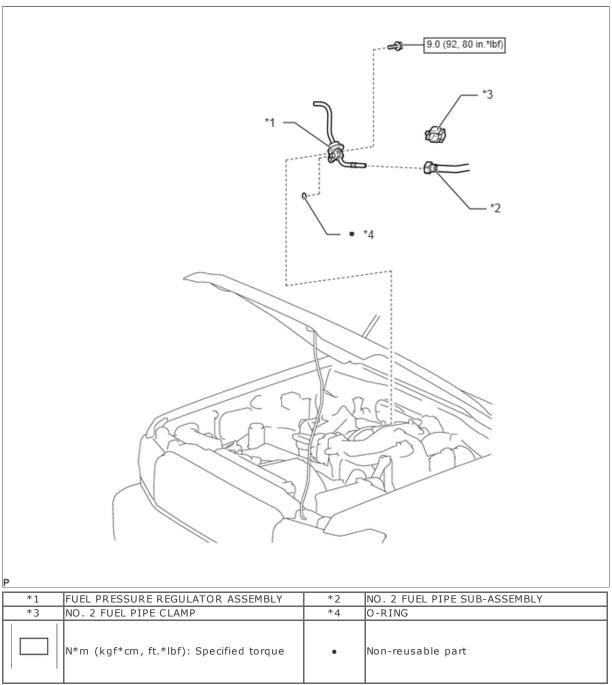

*1	FUEL PRESSURE REGULATOR ASSEMBLY	*2	NO. 2 FUEL PIPE SUB-ASSEMBLY
*3	NO. 2 FUEL PIPE CLAMP	*4	O-RING
	N*m (kgf*cm, ft.*lbf): Specified torque	•	Non-reusable part

^{© 2012} TOYOTA MOTOR CORPORATION. All Rights Reserved.