
Print Exit

H150F MANUAL TRANSMISSION / TRANSAXLE COUNTER GEAR INSPECTION

## **PROCEDURE**

## **■** 1.INSPECT COUNTER GEAR

a.

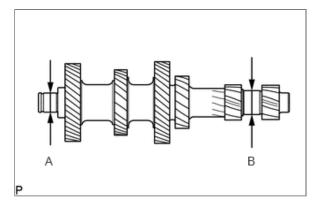

Using a micrometer, measure the journal diameter of the counter gear as shown in the illustration.

## Standard journal:

Measuring point	Standard journal diameter	Minimum journal diameter
А	30.002 to 30.015 mm (1.1812 to 1.1816 in.)	30.002 mm (1.1812 in.)
В	35.957 to 35.970 mm (1.4157 to 1.4161 in.)	35.957 mm (1.4156 in.)

If the journal diameter is less than the minimum, replace the counter gear with a new one.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.