Print

AXLE AND DIFFERENTIAL REAR AXLE HUB REMOVAL

# CAUTION / NOTICE / HINT

#### HINT:

- · Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

#### **PROCEDURE**

**■ 1.REMOVE REAR AXLE SHAFT LH** 

42312

Exit

Click hereDrivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>REMOVAL

**2.REMOVE REAR AXLE SHAFT OIL SEAL LH** 

42312C


Click hereDrivetrain>AXLE AND DIFFERENTIAL>REAR AXLE SHAFT>REMOVAL

3.REMOVE REAR WHEEL

Click hereSuspension>TIRE / WHEEL>TIRE AND WHEEL>REMOVAL

4.REMOVE REAR SPEED SENSOR LH (w/ ABS)

a.

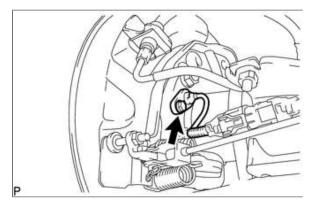


Remove the bolt and disconnect the rear speed sensor LH. **NOTICE:** 


- · Be careful not to damage the speed sensor.
- · Prevent foreign matter from adhering to the speed sensor.

# **■** 5.REMOVE REAR DISC BRAKE CYLINDER ASSEMBLY LH (for Disc Type)


a.

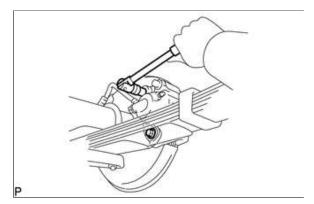

	6.REMOVE REAR DISC (for Disc Type)	42431
Click hereBrake>BRAKE (REAR)>REAR BRAKE (for Rear Disc Brake)>REMOVAL		
	7.REMOVE REAR BRAKE DRUM SUB-ASSEMBLY (for Drum Type)	42403
Click hereBrake>BRAKE (REAR)>REAR BRAKE (for Rear Drum Brake)>REMOVAL		
	8.REMOVE REAR AXLE HUB BOLT LH	42312E
Click hereDrivetrain>AXLE AND DIFFERENTIAL>REAR AXLE HUB BOLT>REPLACEMENT		
	9.REMOVE REAR AXLE BEARING LOCK NUT	42427

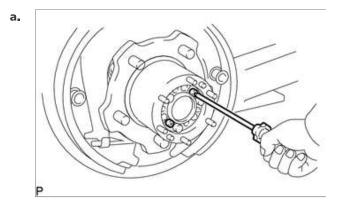


Remove the 2 lock nut set screws.

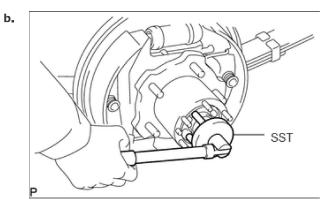

Using SST, remove the rear axle bearing lock nut. SST 09509-25011

a.

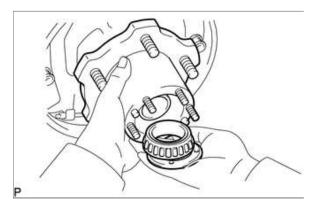

Remove the rear axle lock nut plate LH and rear axle shaft outer bearing LH.

## **■ 11.REMOVE REAR AXLE HUB AND INNER BEARING ASSEMBLY LH**


42440

a. Remove the rear axle hub and rear axle shaft inner bearing LH.

## **■ 12.REMOVE REAR AXLE HUB OIL SEAL LH**

42402E

a.

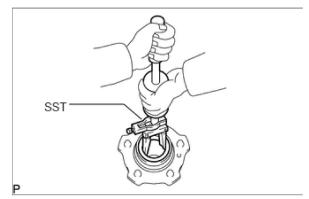

Using SST, remove the rear axle hub oil seal LH from the rear axle hub. SST 09308-00010


## **13.REMOVE REAR AXLE SHAFT INNER BEARING LH**

42312G

 $\mathbf{a}_{\scriptscriptstyle{\bullet}}$  Remove the rear axle shaft inner bearing LH from the rear axle hub.

## **■ 14.REMOVE BEARING OUTER RACE**

a.

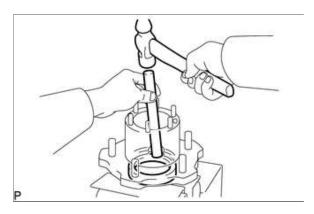

Using a brass bar and hammer, remove the 2 bearing outer races from the rear axle hub.

**■** 15.REMOVE REAR BRAKE SHOE (for Drum Type)

Click hereBrake>BRAKE (REAR)>REAR BRAKE (for Rear Drum Brake)>DISASSEMBLY

**■ 16.REMOVE REAR AXLE SHAFT OIL SEAL (for Drum Type)** 

42311A

a. Remove the rear axle shaft oil seal with the 4 bolts and 4 nuts.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.