

Complete User Guide

MackieControl for X-Touch-Mini – Ableton Live



Ricky_Fr

Complete User Guide

MackieControl for X-Touch-Mini – Ableton Live

Table of contents

Disclaimer	2
Installing the script	2
Introduction.....	4
Physical structure of the controller	4
Simplified glossary.....	5
Main modes.....	7
Navigation	8
Navigating tracks	8
Navigating plugins and settings.....	8
Automatic selection of the track bank	8
🔊 SOLO Mode.....	1
🔇 MUTE Mode	2
NAVIGATION Mode	3
Track Selection Function	3
Mixer Strip Control	3
Navigation Control	3
STRIP Mode (Mixer Strip)	5
Mixer Strip Control	5
Navigation Control	5
Track and Recording Control Buttons	6
🔧 PLUGIN Mode	7
Step 1: Selecting a plugin	7
Step 2: ⚙️ Editing parameters	8
EQ Eight example:	8
Case of Drum Kit:.....	8
Case of synthesizers and other internal or external plugins.....	9
Reset of Rack, Plugin, and Instrument During Live Sessions.....	10

FULL-MIXER mode	15
Assigning VPOTs to VOLUME	16
Assigning VPOTs to PANORAMIC	16
Assigning VPOTs to SENDS	17
Transport buttons	17
User FAQ.....	19
Troubleshooting	20
Configuring DEBUG mode	20
Ableton Live log file	21
Future releases.....	21

Disclaimer

This script has been successfully tested on Ableton Live Standard 12.2 and Windows 11. Since it relies on APIs introduced in version 12, it is likely incompatible with earlier versions.

The XTouch-Mini must be configured in Mackie Control mode (the MC MODE LED must be lit). If this is not the case, hold down the MC button at the bottom left of the controller, unplug the power cord, and plug it back in. As soon as the MC LED is lit, release the MC button.


Installing the script

Unzip the XTouchMini.zip file into the "C:\ProgramData\Ableton\Live 12 Standard\Resources\MIDI Remote Scripts\" directory. This will create an XTouch_Mini directory, with the .pyc files inside.

A license file (license.txt) must be copied into the XTouch_Mini directory to unlock the script's restrictions. Without this file, the script launches in demo mode with all functions enabled and deactivates after 10 minutes. **Licence provided on GitHub is permanent.**


Launch Ableton Live and select XTouch Mini from the list of available surfaces. Check the Tracks and Remote boxes for input and output.

When launching Ableton Live, wait until the script is fully loaded before manipulating the tracks.



When this message appears and disappears, the XTouch is ready to be used. Wait for the same message when switching projects, as the XTouch controls are automatically reset.

Please note: when updating Ableton Live, the XTouch_Mini directory may be deleted by the installation program. Make sure you have a backup handy so you can restore it. You can also connect to the Github site [XTouch-Mini-Script/compiled at main · Ricky-Fr/XTouch-Mini-Script](https://github.com/Ricky-Fr/XTouch-Mini-Script) to download the latest version (without the license file).

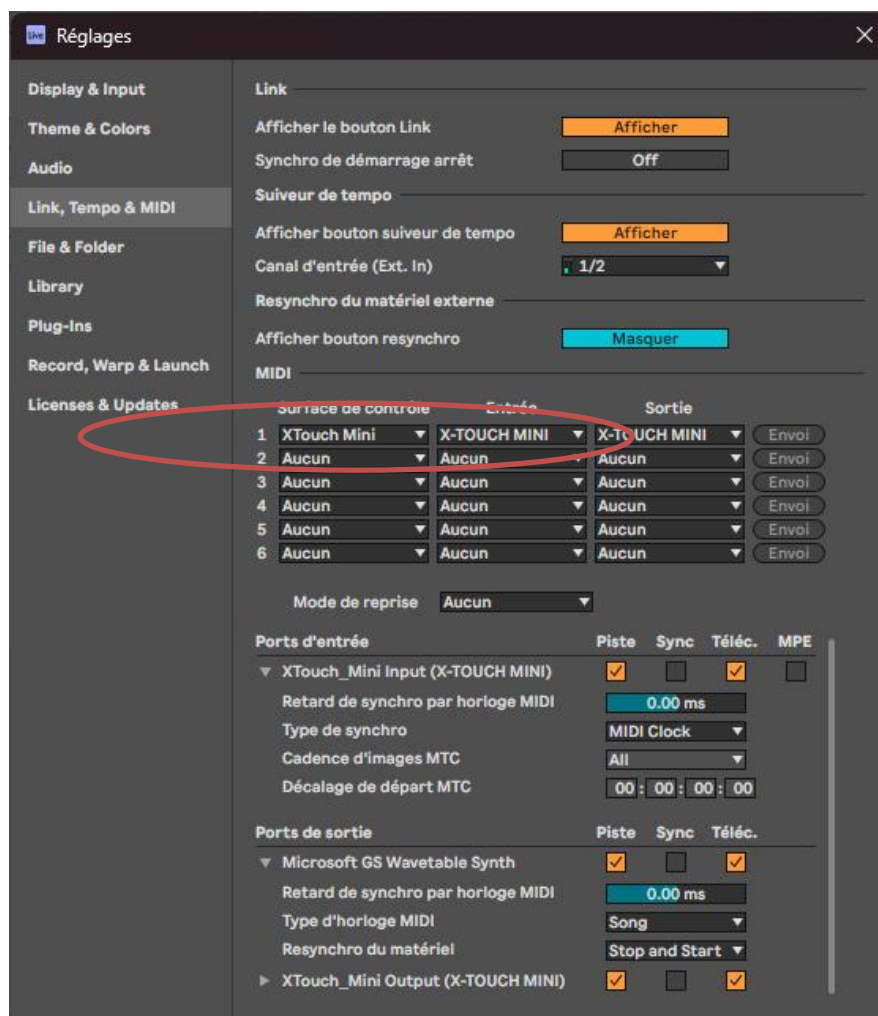

Xtouch Mini Script Selection

Introduction

This guide will walk you through the process of using the custom script that transforms the X-Touch Mini into a powerful control surface for Ableton Live. The goal is to achieve a smooth, visual, and precise mixing experience—without having to touch the mouse.

In order to compensate for the many shortcomings of the native driver supplied for X-Touch-Mini Mackie mode, I decided to completely redevelop this driver. I started with a blank slate, thinking about the features I would like to have on such a controller, taking into account the limited number of physical buttons it offers.

First, I wanted to be able to use it in *full mixer* mode, with the top buttons controlling solo tracks and the bottom buttons controlling mute tracks. The potentiometers (VPOT) are assigned to volume. Then a **channel strip mode**, a **navigation mode** are available.

Then an advanced mode per track where the top buttons are assigned to the SOLO or MUTE function and the bottom buttons to transport functions, as well as to advanced functions such as intelligent modification of the parameters of an **EQ8** equalizer or the **ADSR** functions of a synthesizer.

Physical structure of the controller

The X-Touch Mini includes:

- **8 rotary encoders** called “VPots” with circular LEDs that light up in different ways
- **2 rows of 8 buttons:**
 - Top row → track buttons (SOLO, MUTE, display of the current track or plugin, etc.)
 - Lower row → additional functions (mode switching, transport, etc.)
- **2 A/B navigation buttons** (on the right) → allow you to switch between track banks, parameter pages, or plugins
- **Fader** controls the master volume (managed directly by Live)

The whole thing is controlled by the script, which dynamically assigns functions to the VPots and buttons depending on the active mode.



Assigning functions to keys

Full bidirectional synchronization allows the status of Live to be reflected on the controller. Track and plugin changes, additions, and deletions are displayed (depending on the mode) on the controller.

The XTouch-Mini controller does not include a display, so, where relevant, we will use the Live status line as a display to show useful information such as the current mode, the selected bank, etc.

Simplified glossary


- **VPot:** rotary encoder with circular LED
- **Strip:** individual channel (track 1 to 8, etc.)
- **Bank:** group of 8 tracks, plugins, or parameters. The A and B buttons allow you to move backward or forward through the banks
- **Song :** The currently playing tracks in Ableton Live; resets values when switching to a new song.
- **Device:** plugin, instrument, rack, or effect used in a Live track
- **Parameters:** device parameters: plugin, instrument, rack, or effect used in Live
- **Active device or plugin:** plugin selected in the chain of plugins available in the track
- **Active track:** This is the selected track. If the active track is in the visible bank, the top button corresponding to the active track flashes to make it easier to find the corresponding VPOT. Example: track 13 is active (from the second bank), button 5 flashes ($9 + 5 = 13$) in bank 2. The active track indicator takes precedence over the track's SOLO or MUTE status, but does not prevent any action on this button.
- **Active plugin:** this is the selected plugin. If the active plugin is in the visible bank, the top button corresponding to the active plugin flashes. If it does not appear as a

flashing button, move to the next bank(s) until you see the corresponding button flashing.

Note: the bouton 1 **VOLUME|PAN|SENDS** button allows you to refresh the position of the selected plugin in the correct bank.

Main modes

Each interaction is based on an “operating mode.” You can switch between modes using two dedicated buttons:

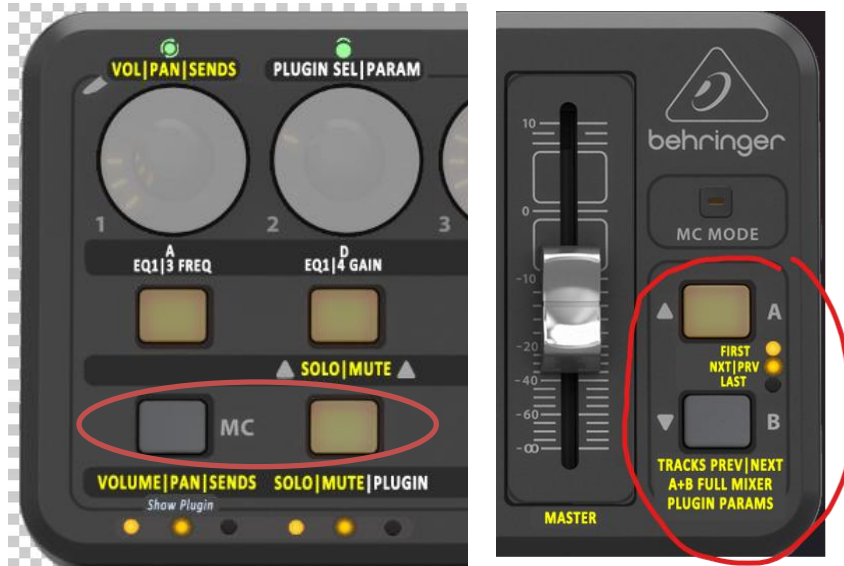

Modes and Banks

BUTTON 1 VOLUME|PAN|SENDS: Selects the mode for assigning VPOTs to volume, pan, and sends.

BUTTON 2 SOLO|MUTE|NAVIGATION|STRIP⁽¹⁾|PLUGIN : Assigns the upper keys to the solo, mute, navigation, channel strip or plugin function.

⁽¹⁾ Switching from NAVIGATION mode to STRIP mode is done using BUTTON 1 and vice versa.

BANK A | BANK B: Navigation mode between tracks, plugins or plugin parameters

Navigation

Navigating tracks

- Use the **`PREV BANK`** (button A) and **`NEXT BANK`** (button B) buttons to move to the next or previous tracks in groups of 8 tracks
- The A/B buttons flash briefly when a change is made and remain lit if navigation is possible

The controller displays **8 tracks at a time**, but you can switch to other tracks using the A/B buttons.

- **• PREV BANK** (button A): 8 previous tracks
- **• NEXT BANK** (button B): 8 next tracks
- **• Feedback LED:**
 - **ON** = navigation possible
 - **OFF** = end or beginning of the list
 - **BLINK** = action in progress

Navigating plugins and settings

The page buttons allow you to navigate between groups of 8 plugins. Please note that when you have a drum kit, each pad will be considered a plugin, so the plugin following the drum rack will be relegated 16 plugins further and accessible via the next page button (twice). Scroll through the groups of 8 plugins until you see the selected plugin flashing.

Once in settings mode, a plugin can have more than 8 settings, which will be accessible via the previous (back) pages. The VPOTs are automatically reassigned to the following settings.

Automatic selection of the track bank


Each time you select a track in Live, the controller automatically switches to the bank of 8 tracks that contains it.

Example:


If you select track 14 in Live, the X-Touch immediately select bank [9–16] — no need to press NEXT/PREV BANK.

Mode	Activation	LED indicator
BUTTON 1 – VPOT VOL PAN SENDS	<i>VPOTs assignment. Not active in certain modes (full-mixer, plugin parameters)</i>	<i>On, Flashing, Off</i>
VOLUME	Assignment of VPOTs to track volume (priority to Utility) LED on (steady)	LED on (steady)
PAN	Assignment of VPOT to pan control LED flashing	LED flashing
SENDS	Assignment of VPOT to tracks SENDS (RETURN) controls	LED off
BUTTON 2 SOLO MUTE PLUGIN	<i>Mode selection. Not active in certain modes (full-mixer)</i>	<i>On, Flashing, Off</i>
SOLO	Press the “SOLO/MUTE” button	LED on (steady)
MUTE	Press the “SOLO/MUTE” button again	LED flashing
NAVIGATION	Track selection via top buttons. These are primarily <i>song</i> -related functions. Mode rotation is triggered from Button 1 .	LED flashing
CHANNEL STRIP	From NAVIGATION mode, pressing Button 1 (“VOL PAN SENDS”) switches to mixer strip and recording functions. Mode rotation is triggered via Button 1 .	LED flashing
PLUGIN	Press the “SOLO/MUTE” button again	LED off
BANK A/B	<i>Change bank in tracks, plugin chain, plugin parameters. Banks contain up to 8 tracks or elements.</i>	<i>On, Flashing, Off</i>
BANK A - B	Go to previous/next page in tracks, plugins, or parameters. Off if first/last page reached, flashing or steady if other pages are available before/after the current track	On, Flashing, Off
FULL-MIXER	Simultaneous press of A + B (action when keys are released)	A/B LEDs flash
Specials Functions	<i>Improves flow and mode management</i>	
BUTTON 1	In PLUGIN PARAMETERS mode, returns to PLUGIN DEVICE mode to select another plugin	Message Ableton
BUTTON 1	In PLUGIN DEVICE mode, allows you to refresh the selected plugin on the top row of buttons.	Message Ableton
BUTTON 1	Switch from NAVIGATION mode to STRIP mode and vice versa.	Message Ableton
VPOT 8 VPOT 8 UP BUTTON 8	Toggle between Utility Gain and Track Volume in SOLO MODE. Tempo A/B values reset (NAV mode) Rack, instrument & plugin values reset (PLUGIN mode)	Message Ableton

XTouch-Mini modes table for Ableton

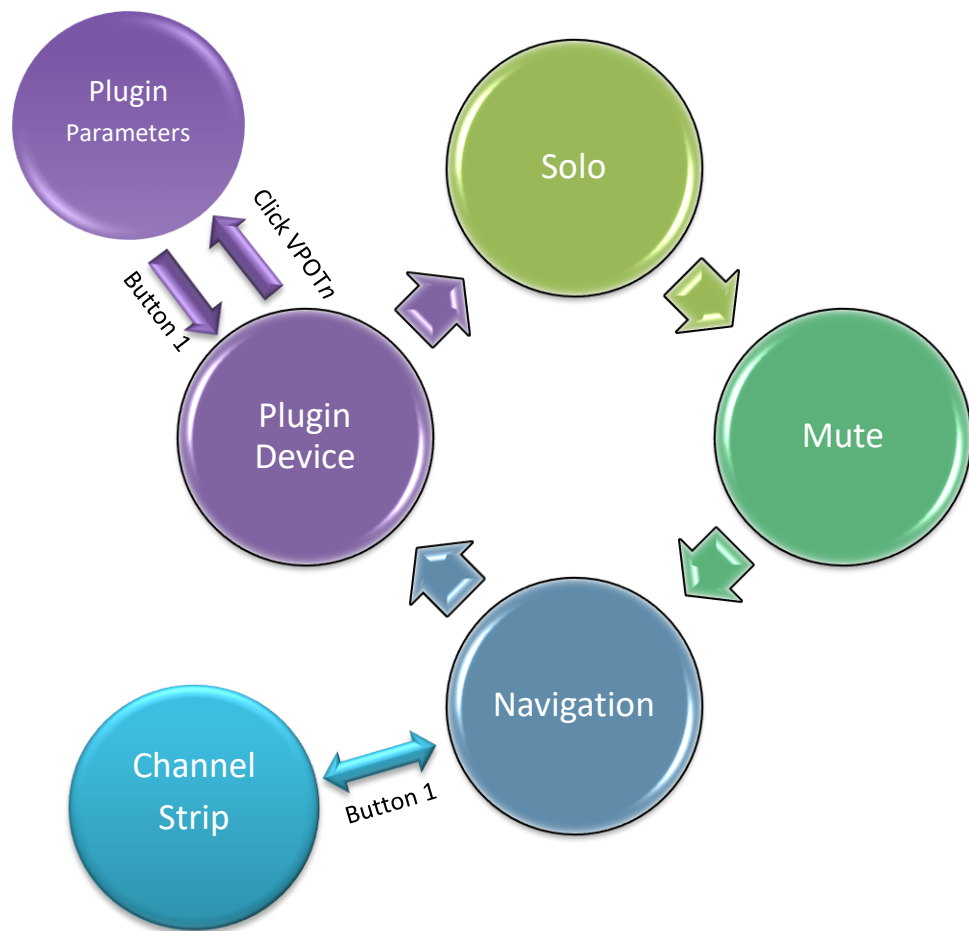

Button 2 - Selection cycle (mode) and Button 1 (sub-mode)

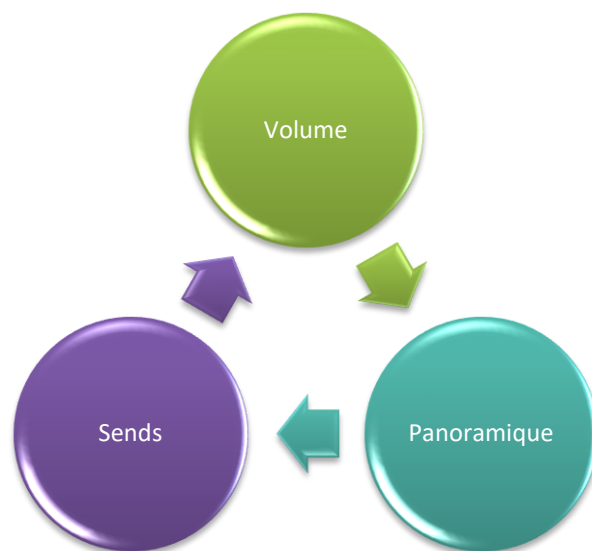

VPOT assignment cycle triggered by Button 1

SOLO Mode



- **Purpose:** To put a track in exclusive solo mode; the lead track is solo, the other tracks are muted.
- **Activation:** Press SOLO/MUTE until the LED stays lit. A message on Live indicates the current mode.
- **Operation:**
 - The 8 buttons at the top correspond to the 8 visible tracks
 - Press one of the buttons at the top → puts the track in exclusive solo mode. All tracks are muted except the selected track.
 - Press again → deactivates solo mode. Tracks that were not initially muted are unmuted.
- **LED feedback:**
 - The button LED is lit when the track is in solo mode. Note that the solo value is hidden by the flashing indicator for the current track, but this does not prevent you from switching to the solo value.
- **Track navigation:**
 - Use the A/B buttons to navigate in groups of 8 tracks (bank).
 - The LED on the A/B buttons flashes if navigation is possible, and is off at the end or beginning of the list.
- **Active track:** if the active track is in the visible bank, the top button corresponding to the active track flashes. Example: track 13 is active (from the second bank), button 5 flashes ($9 + 5 = 13$). The active track indicator takes precedence over the track's SOLO or MUTE status.
- **VPOTs:** control the track's volume, pan, or send level to return tracks (see § VPOT assignment).

🔊 MUTE Mode

- **Purpose:** Mute or unmute tracks individually
- **Activation:** Press SOLO/MUTE until the LED flashes. A message on Live indicates the current mode
- **Operation:**
 - The 8 buttons at the top correspond to the 8 visible tracks
 - Press one of the top buttons → mutes the track
 - Press again → unmutes
 - Several tracks can be muted at the same time
- **LED feedback:**
 - The button LED flashes if the track is muted. Note that the mute value is hidden by the flashing but does not prevent the track from being muted
- **Active track:** if the active track is in the visible bank, the top button corresponding to the active track flashes. Example: track 13 is active (from the second bank), button 5 flashes ($9 + 5 = 13$). The active track indicator takes precedence over the track's SOLO or MUTE status
- **VPOTs:** control the track's volume, pan, or send level to return tracks (see § VPOT assignment).

*Important note: pressing **VPOT8** for 1 second toggles the management option that prioritizes the Utility gain (if present) over track volume, in SOLO or MUTE mode. See § VPOT assignment.*

NAVIGATION Mode



- **Purpose:** Track selection and basic track functions; screen navigation primarily for song-related operations.
- **Activation:** Press and hold the SOLO/MUTE button until the LED flashes, then blinks. A message in Live confirms the current mode.

Track Selection Function

- **Operation:**
 - The 8 top buttons correspond to the 8 tracks in the currently selected bank.
 - Pressing one of the top buttons selects the corresponding track. Pressing the A/B bank buttons allows navigation in blocks of 8 tracks. Only one track can be selected at a time.
 - The bottom buttons are used to select modes (first 2 buttons) and control the transport section (remaining 6 buttons).
- **LED Feedback:**
 - The LED of the selected track button blinks to indicate active selection.
- **Active Track:**
 - Selecting a track via button press or mouse click automatically updates the corresponding track bank

Mixer Strip Control

- **VPOT 1:** Controls volume. See section “VPOT assignment for volume” for details.
- **VPOT 2:** Controls pan. See section “VPOT assignment for pan” for details.

Navigation Control

- **VPOT 3:** Moves the playhead to the next or previous locator depending on rotation direction, up to the start or end of the song. Pressing the VPOT at its initial position enters the mode.
- **VPOT 4:** Moves the playhead position. Pressing the VPOT inserts or removes a locator if one exists.
- **VPOT 5:** Zooms in or out depending on rotation direction. Pressing resets zoom to near 0.
- **VPOT 6:** Moves the loop. Pressing the VPOT resets the loop to its initial start point.
- **VPOT 7:** Adjusts loop length based on rotation direction. Pressing sets the loop start point.
- **VPOT 8:** Adjusts tempo from the initial value of 120 BPM, depending on rotation direction. Pressing the VPOT stores tempo value A. Pressing again with a new value stores value B. Subsequent presses toggle between A and B, allowing **reference track** playback at normal or reduced speed, and easy return to the original tempo. Holding down the VPOT (0.5s) resets the A/B tempo value pair. Switching to a new **song** also resets both A and B values.

STRIP Mode (Mixer Strip)



Keys mapping in STRIP mode

- **Purpose:** Track selection and basic track functions; screen navigation. Useful for recording and in-depth track editing.
- **Activation:** Hold the SOLO/MUTE button until the LED flashes, then blinks. Pressing **Button 1 (VOL|PAN|SENDS)** switches from NAVIGATION mode to STRIP mode (LED flashes then blinks). A message in Live confirms the current mode. Pressing Button 1 again toggles back to NAVIGATION mode. This flip-flop behavior allows quick switching between modes for efficient track editing.

Mixer Strip Control

- **VPOT 1:** Controls volume. See section “VPOT assignment for volume” for details.
- **VPOT 2:** Controls pan. See section “VPOT assignment for pan” for details.
- **VPOTs 3, 4, 5:** Control return tracks A, B, and C if available. Clicking the VPOT resets the send level to its default value (i.e., $-\infty$). See section “VPOT assignment for SENDS” for details.

Navigation Control

- **VPOT 6:** Moves the loop. Clicking the VPOT resets the loop to its initial start point. Especially useful for punch-in during recording.
- **VPOT 7:** Adjusts loop length based on rotation direction. Clicking the VPOT sets the loop start point. Especially useful for punch-out during recording.
- **VPOT 8:** Changes the currently selected track. Not effective on return tracks. Clicking on VPOT select first or last track of the song

Track and Recording Control Buttons

- **BT1 – SOLO:** Solos the track without affecting other soloed tracks.
- **BT2 – SOLO EX:** Exclusive solo; all other soloed tracks are un-soloed. LED blinks briefly.
- **BT3 – MUTE:** Toggles mute on the track.
- **BT4 – ARM:** Exclusively arms the track for recording.
- **BT5 – MON:** Cycles through monitoring modes.
- **BT6 – PUNCH IN:** Recording starts at the beginning of the loop.
- **BT7 – PUNCH OUT:** Recording ends at the end of the loop.
- **BT8 – CLICK:** Toggles the metronome on or off during playback or recording.

🔌 PLUGIN Mode



This mode allows you to **browse through the effects/instruments** of the selected track and **modify their parameters** via the VPots. A number of effects, racks, or instruments are specially treated to make updating parameters more intuitive. This module is designed to be the most adaptable across future versions. A dedicated mode for live sessions is planned.

Step 1: Selecting a plugin

- **Purpose:** Select a plugin in the track to modify it
- **Activation:** Press SOLO/MUTE until the LED turns off. A message on Live indicates the current mode
- **Operation:**
 - The 8 buttons at the top correspond to the first 8 plugins in the track. Each illuminated VPot corresponds to a plugin present on the selected track
 - You can move through the plugin chain using the Bank A/B buttons
 - To make selection easier, when a plugin is selected, it is indicated by the top button flashing to correspond to its position in the plugin chain
 - Press the VPOT corresponding to the desired plugin (it should be lit up).
 - The name of the selected plugin appears in Live's message bar.

Racks, Drum Racks, and grouped effects are all recognized and “flattened” to be listed correctly. A rack counts as a plugin, since it can have associated parameters that can be controlled by the VPOTs.

Plugin visualization is automatic. But pressing **Button 1 (VOL|PAN|SENDS)** refresh the blinking LED of the button corresponding to the selected plugin if not the correct one. The plugin's A/B bank is automatically selected. Then press the corresponding **VPOT** to select the plugin and edit its parameters.

Please note that you may need to scroll through the plugins in Live to get the selected plugin on screen.

Step 2: ✂ Editing parameters

- The VPots control each of the parameters of the selected plugin
- Press a VPot → return to default value or increment
- Use the A/B buttons to navigate between pages if the plugin has more than 8 parameters
- After editing, press PAN again → return to plugin selection mode
- Pressing the **SOLO|MUTE|PLUGIN BUTTON 2** again switches to the next mode (SOLO)
- Pressing the **VOL|PAN|SENDS BUTTON 1** returns you to DEVICE mode, allowing you to select a new plugin.

The circular LEDs on the VPOTS adapt to the type of parameter being controlled: wrap (gain), boost/cut (EQ), single point (filter type, etc.)

EQ Eight example:

4 VPOTs are assigned in groups of 2 VPOTs to manage the 4 parameters accessible per filter point:

- • Frequency (full circle)
- • Gain (boost/cut)
- • Q Resonance (boost/cut)
- • Curve type (bright spot)

You must change banks to access the following filter points, up to 8 points.

Bank 1: points 1 and 2, bank 2: points 3 and 4, bank 3: points 5 and 6, bank 4: points 7 and 8

Case of Drum Kit:

Drum kit racks are managed as racks, with plugin 1 being the rack parameters, and the other instruments (or pads) in the rack being managed in the order of the MIDI notes (position in the rack). The name of the pad is assigned to the device.

Note: The drum rack contains many instruments, which are considered plugins. The effects or plugins following the drum rack will be accessible by navigating with A/B to the plugin in question after 16 or 32 instruments in the drum rack, 3 or 4 pages later. If it has been selected, the corresponding button will flash to indicate its position.


Due to an unresolved bug, the selected instrument in the drum rack (blue highlight) is not displayed at the moment. Parameters can only be viewed after manual selection, though control and automation remain fully functional.

Case of synthesizers and other internal or external plugins

The **Attack**, **Decay**, **Sustain**, and **Release** (ADSR) parameters can be easily assigned to internal or external plugins. Up to 8 parameters can be assigned to VPOTs, such as filter frequency and resonance. Depending on the name of the setting, the VPOT will display differently.

To do this, expand the plugin's macro mode and click on Configure. Open the external plugin if necessary. Then click on the 8 parameters that you want to control with the VPOTs. Save the plugin's macro preset as the default value, this will avoid having to reassign them each time. Simply recall the plugin to access the preset settings again. Saving a preset allows you to restore the name of the selected preset.


Tip: Assign the same parameters in the same order for each of the macros of the different plugins managed, which will make it easier for you to remember the VPOT assignment.

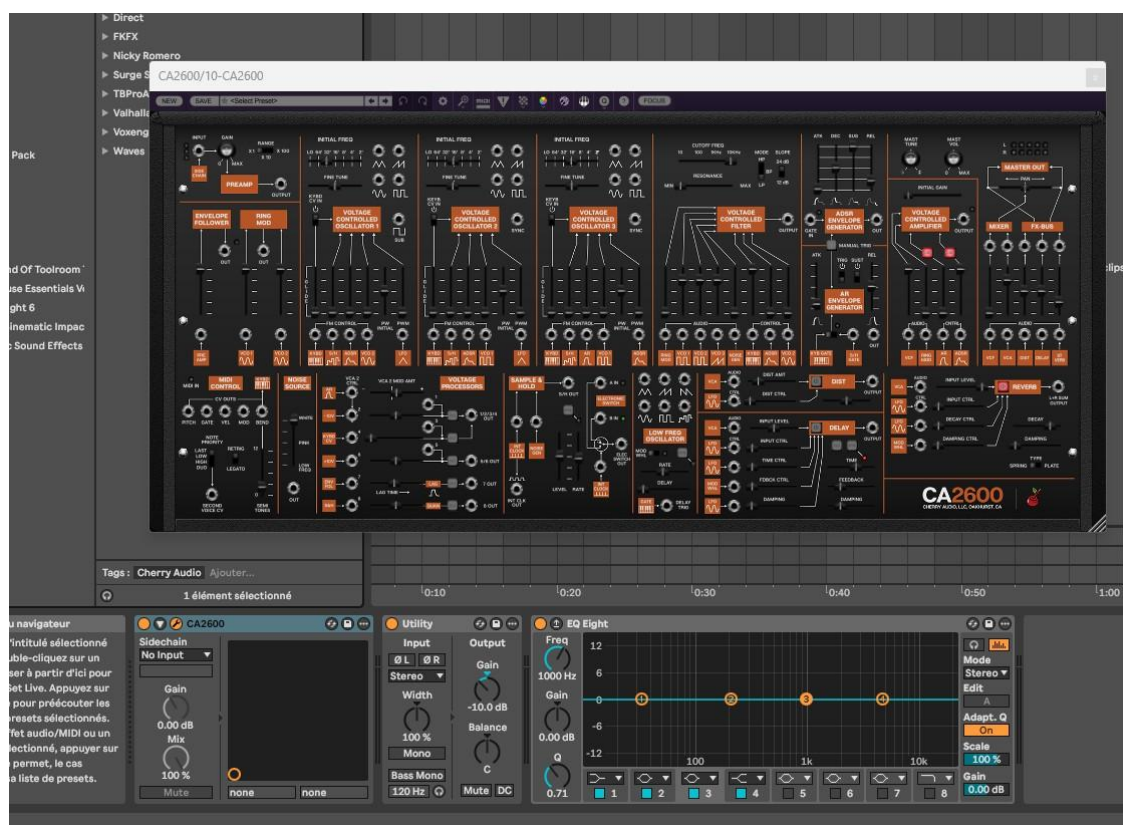

External Plugin



Add parameters and save default preset

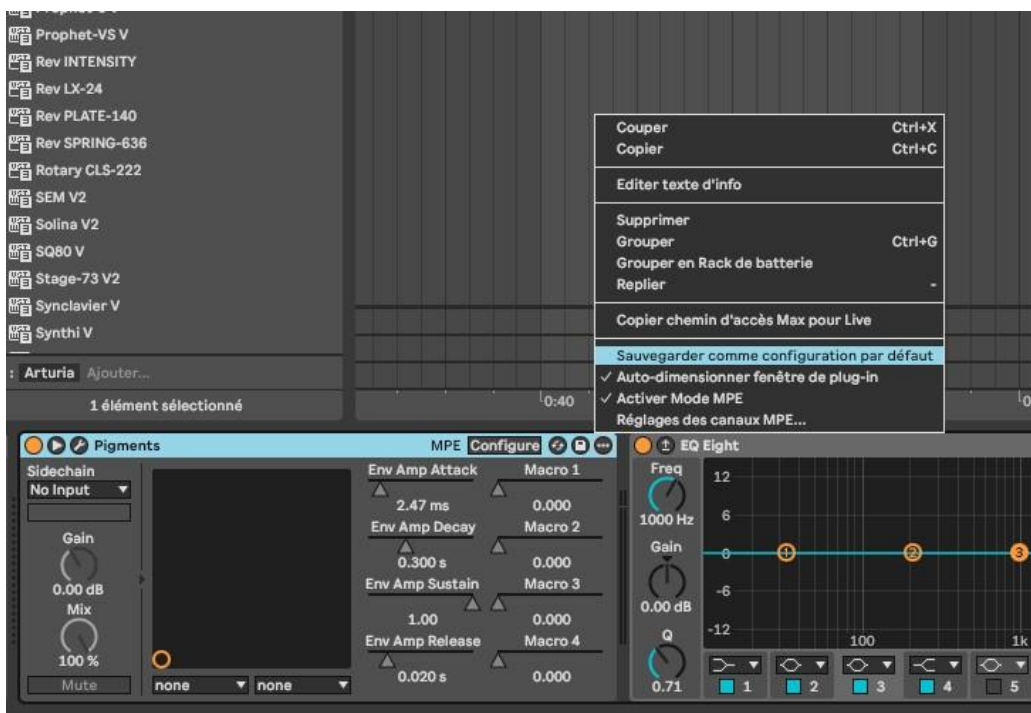

default preset backup

Reset of Rack, Plugin, and Instrument During Live Sessions

A version specifically adapted for live sessions is currently under development.

New: The first 100 parameters of an internal plugin, or the 8 exposed parameters of an external plugin, are saved automatically. Pressing the **BUTTON8 SUP** key recalls the most recent save. Note that this only works if you haven't switched plugins and you remain in edit mode. Otherwise, the saved data is cleared.

As mentioned earlier, VPOTs in plugin mode can be mapped either to the parameters of a plugin or to Ableton's internal instruments. VPOTs are automatically mapped to rack macros (up to 16 macros), which greatly simplifies controller implementation.

When performing live, musicians often manipulate VPOT parameters—for example, adjusting the frequency and resonance of a filter—and may want to return to the default settings at certain moments, such as restoring the “big sound.” The **PLUGIN | PARAMETERS** mode allows returning to default settings, either by using the macro-variation mechanism or through an advanced save/restore system during editing:

1. **For instruments supporting macro-variation:** Pressing **SUP BUTTON 8** recalls the first macro variation, generally considered the default variation.
2. **For internal instruments:** During editing, the first 60 parameters are saved. Pressing **SUP BUTTON 8** recalls and restores these parameters.
3. **For external plugins (VST):** Since there are too many parameters to recall natively and Live does not expose their values, you must create parameters that are automatically assigned to VPOTs (see previous section). As with point 2 above, these values are automatically recalled when pressing **SUP BUTTON 8**. This is the preferred method for VSTs when a rack is not required.



4. **For external plugins (VST) within a rack:** Create macro variations, in which case the mechanism described in point 1 applies, just as with internal instruments.

Depending on the chosen methodology, you may choose to restore either the plugin itself or its rack.

- In the case of the rack, the macro variation will be restored if it exists; otherwise, the system will revert to the initial values saved when entering edit mode.
- For plugins, if they are not mapped, nothing happens except the **device on** state being recalled. (See table below.)

Note: Plugins that do not expose parameters still expose the **device on** state



Rack setup for an internal instrument without variations

Once the instrument's settings are mapped to the rack, you can no longer directly access those exposed by the plugin itself—you must go through the rack. The rack must be selected as the active plugin. Resetting the rack values correctly restores the default values of the generic plugin, but not those of the plugin's preset. This is why the macro-variation system is used.

Once a macro variation has been created, pressing it recalls all values at once. **SUP BUTTON 8** is mapped to this function.




Creating a variation for an internal instrument



Native variations for an internal instrument

In the case of multiple native variations, move the one you want as the default to the first position. This is the variation that will be recalled during reset.

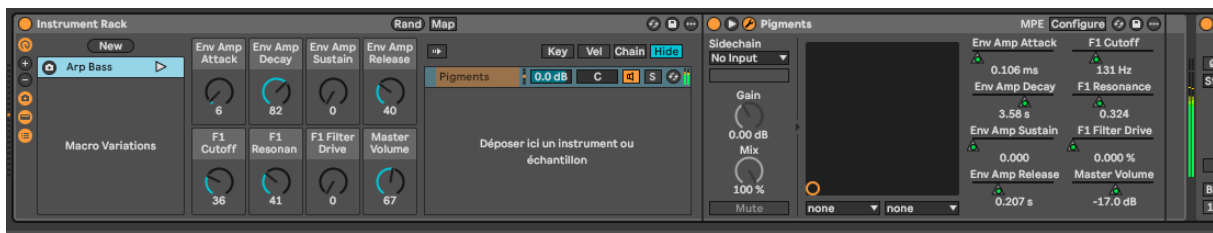

Creating a variation for a plugin

For external plugins, the plugin's macros are mapped one-to-one to the rack's macros, and the variation is then created. The variation must be created once all macros have been defined, in order to preserve all default values. Clicking on the variation reloads these default values.

It is recommended to save the entire rack under a descriptive name so that its presets, along with the associated variation, can be reused when needed.

Type	Variation	Rack	Reset	VPOT	But8
External plugin not mapped	None	N	Requires manual preset reload if available, with audio cut on the track.	N	N
External plugin mapped	None	N	Recall of mapped values, otherwise VST default value per VPOT.	D	O
External plugin mapped	With	O	Variation values ; VPOT default VST value	D	O
Internal instrument without native variation	None	N	Recall of mapped values. Instrument default value by VPOT	O	O
Internal instrument without native variation	None	O	Recall of mapped values. Instrument default value by VPOT	D	O
Internal instrument with native variation	With	N	Variation values	D	O
Internal instrument with native variation	With	O	Variation values	D	O
Audio effect			Like internal instrument	N	O

The logic implemented in the script follows this order:

- If a rack with a variation exists, the first variation is recalled.
- If a rack without a variation exists, the default values of all rack parameters are recalled.
- If an internal instrument without a rack exists, the default values of all its parameters are recalled.
- If an internal instrument with native variations exists, its first variation is recalled.
- If a plugin without a rack exists, its mapped configuration is recalled; otherwise, nothing happens.

FULL-MIXER mode

Important: Full-mixer mode can only be selected outside of PLUGIN mode. You must therefore exit PLUGIN mode using the SOLO/MUTE MODE button in order to activate it.

Place both fingers on buttons A and B and hop! SOLO and MUTE activated on both rows, the VPots in Volume mode = **instant overview**.

- **Purpose:** To have an immediate overview of the SOLO and MUTE statuses of the 8 tracks in the bank
- **Activation: Simultaneously** pressing the Bank A and B buttons activates this special mode (in fact, the switch is made when the keys are **released**). The A/B LEDs flash briefly when entering/exiting the mode
- **Upper row:** SOLO buttons for all tracks in the bank
- **Lower row:** MUTE buttons for all tracks in the bank
- **VPots:** control the Utility gain (if present) or the track volume
- **LEDs:** all tracks in the bank are displayed, clear feedback
- **Track navigation:**
 - Use the A/B buttons to navigate in groups of 8 tracks (bank)
 - The LED on the A/B buttons flashes if navigation is possible, and is off at the end or beginning of the list
- **Active track:** if the active track is in the visible bank, the top button corresponding to the active track flashes. Example: track 13 is active (from the second bank), button 5 flashes ($9 + 5 = 13$). The active track indicator takes precedence over the track's SOLO or MUTE status

This mode is perfect for live performances or mixing, as it provides an immediate overview of the status of the 8 tracks and allows you to act quickly.

When you exit **FULL-MIXER** mode, you return to the previous mode used and the track initially selected.

Assigning VPOTs to VOLUME

Important: Please note that the Utility plugin gain is modified first if present in the track, rather than the track's overall volume.

- **Purpose:** Assign VPOT settings to track volume
- **Activation:** Press the **VOL|PAN|SENDS** button until the LED lights up. A message in Live indicates the current assignment mode
- **Operation:**
 - The 8 VPOTs at the top correspond to the 8 tracks in the current bank. Each illuminated VPOT corresponds to a track in the song.
 - You can move through the track list using the Bank A/B buttons, 8 tracks at a time.
 - To make it easier to select the **VPOT** for the desired track, if it is present in the displayed bank, the button on the top line flashes to indicate its position. Note that the mute or solo value is hidden by the flashing, but this does not prevent you from switching to the mute or solo value.
 - If the **Utility** plugin is present on the track, its gain is managed automatically; otherwise, the track volume is modified.
 - **Pressing the VPOT** resets the **default value** to either the gain of the Utility plugin, if present, or the track volume, i.e., 0db.

Important note: pressing VPOT8 for 1 second toggles the management option that prioritizes the Utility gain (if present) over track volume, in SOLO or MUTE mode.

Assigning VPOTs to PANORAMIC

- **Purpose:** Assign VPOT settings to panoramic.
- **Activation:** Press **BUTTON 1 VOL|PAN|SENDS** until the LED flashes. A message on Live indicates the current assignment mode.
- **Operation:**
 - The 8 VPOTs at the top correspond to the 8 tracks in the current bank. Each illuminated VPOT corresponds to a track in the song.
 - You can move through the track list using the Bank A/B buttons, 8 tracks at a time.
 - To make it easier to select the VPOT for the desired track, if it is present in the displayed bank, the button on the top row **flashes** to indicate its position.

Note that the mute or solo value is hidden by the flashing, but this does not prevent you from switching to the mute or solo value.

- Depending on whether the VPOT is rotated to the right or left, the pan is moved to the right or left.
- Pressing the VPOT resets the track pan to its **default value**, i.e., the center value **C**.

Assigning VPOTs to SENDS

Note: We manage the insertion of main tracks into RETURN tracks using SENDS mode. Only the PLUGIN function is managed directly in RETURN tracks. We do not manage the MUTE, SOLO, VOLUME, PANORAMIC, and SEND functions in these tracks.

- **Purpose:** Assign VPOT settings to the insertion volume in the return tracks.
- **Activation:** Press **BUTTON 1 VOL|PAN|SENDS** until the LED turns **off**. A message in Live indicates the current assignment mode.
- **Operation:**
 - The 8 VPOTs at the top correspond to the 8 tracks in the current bank. Each illuminated VPOT corresponds to a track in the song.
 - Currently, no more than 8 return tracks are supported.
 - To facilitate selection of the desired track's VPOT, if it is present in the displayed bank, the button on the top row flashes to indicate its position. Note that the mute or solo value is hidden by the flashing, but this does not prevent you from switching to the mute or solo value.
 - The insert volume starts at -infinity.
 - **Pressing** the VPOT resets the **default value** of the insert volume in the return track, i.e. the value $-\infty$ (-infinity).

Transport buttons

- **Purpose:** The transport functions allow you to start playback, stop playback, fast forward or rewind, and start recording.
- **Activation:** The transport panel is active in SOLO, MUTE, PLUGIN modes and not available in **FULL MIXER** mode.
- **Operation:**
 - the PLAY button starts playback,
 - the STOP button stops playback,
 - the RECORD button starts recording,

- the REWIND and FORWARD buttons quickly move the playback cursor backward or forward in 2-beat increments.

User FAQ

Q: I don't see the navigation LEDs lit up?

→ You may be at the beginning or end of the tracks, where navigation is not possible.

Q: A VPot is turning but has no effect?

→ You are in PLUGIN mode (selection). You need to click on a VPOT to select a plugin, or on a track without audio.

Q: I pressed SOLO/MUTE several times and now I'm confused.

→ Look at the LED: steady = SOLO, flashing = MUTE, off = PLUGIN

Q: How do I return to classic mode?

→ Press SOLO/MUTE until SOLO or disable FULL-MIXER (A+B)

Q: I don't know if I'm in plugin selection mode or plugin settings mode

→ Press BUTTON1 (VOL|PAN) to return to plugin mode if you were in settings mode.

Q: I press BUTTON1 or BUTTON2 and nothing happens:

→ You are probably in FULL-MIXER mode, and pressing BUTTON1 and BUTTON2 probably changes the mute value of tracks 1 and 2 in the bank. Disable FULL-MIXER mode (A+B)

Troubleshooting

If, despite all the care taken in testing this script, there are still errors or malfunctions, below are two ways to obtain more information about a problem. This will be useful to the developer, if requested, in order to remedy the situation.


Configuring DEBUG mode

If you encounter problems running the script, you can enable debug mode. To do this, set the local variable `XTOUCH_MODE` to “dev”; to return to normal execution mode, delete the local variable or set it to “prod”.

Debug mode creates the `xtouch_debug.log` file in the user directory:

- **Windows:** `C:\Users\<YourName>\xtouch_debug.log`
- **macOS:** `/Users/<YourName>/xtouch_debug.log`

The file is reset each time it is launched. All important actions are logged. Can be used by the developer to analyze a malfunction.

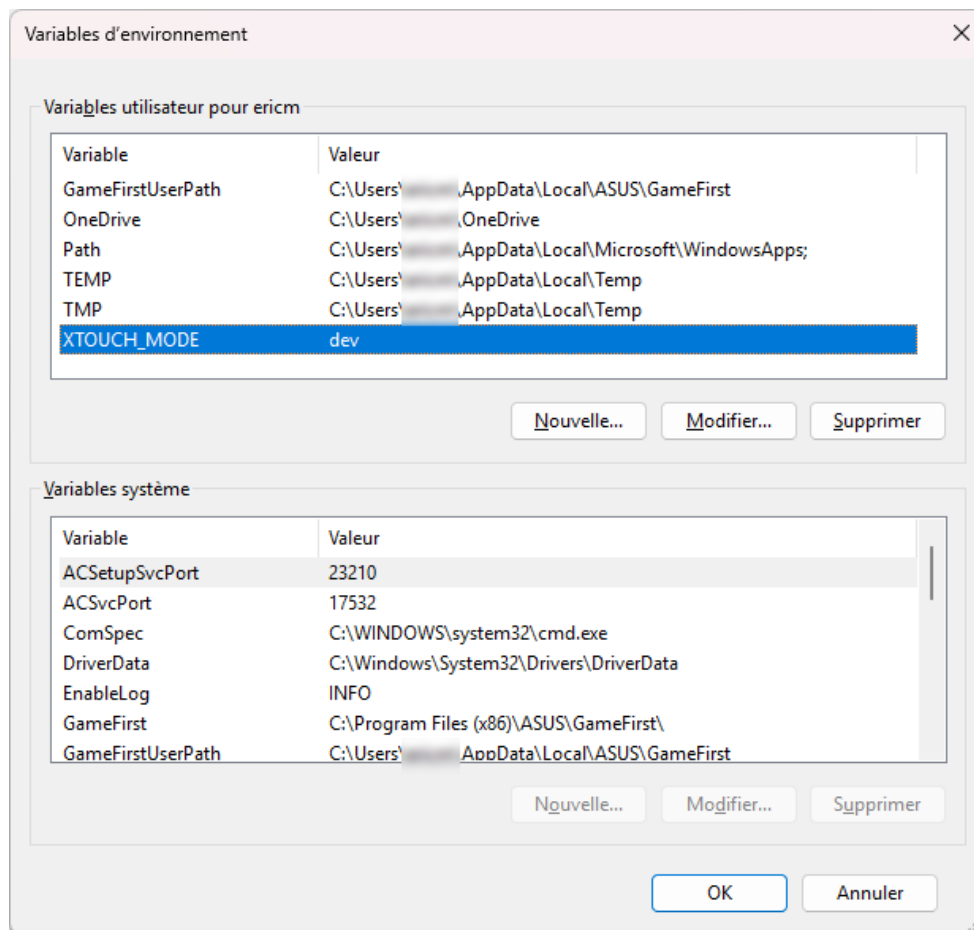

Ableton Live log file

You can obtain additional information about Ableton Live's operation and errors from the `log.txt` file in the directory: `C:\Users\YourName\AppData\Roaming\Ableton\Live 12.2.1\Preferences`.

You will be asked to send this file if any operational problems are encountered.

Future releases

If successful, a future version of the script will include:

- Custom calibration of the MASTER fader
- Customization of Utility, OTT, and many other plugins, as done for EQ8
- Multi-surface X-Touch-Mini up to 24 tracks = 3 devices
- Customization of options
- RETURN track management
- Migration to API 3.0
- ...