



Rocket Reel

by Ridge Runner Gear LLC.

RUN THE RIDGE (and don't forget your line)

**Operator's Guide for Those Who'd
Rather Be Fishing**



Product Name: Rocket Reel **Brand:** Ridge Runner Gear (RRG)

Model Number: DoubleR2000

Weight: 4.5 oz (3.0 oz if used with a Timber Tickler saw, like a true minimalist MacGyver)

Dimensions: 7.16" L x 3.62" W x 4.21" H (Just the right size to confuse TSA)

Materials: ASA, TPU, stainless steel (translation: tougher than your uncle's pickup truck)

Line Capacity: 80 ft of 20 lb mono-filament or 110 ft of 20 lb braided fishing line

What Is This Magical Contraption?

The Rocket Reel is your new favorite sidekick for backcountry angling adventures. Whether you're in a kayak, trekking through bear country, or just hiding from your in-laws, this waterproof, floaty little beast lets you fish in places rods dare not go.

NOTICE: Before you launch into your next epic fishing adventure, do yourself (and the fish) a favor—read this whole manual. Skipping it may result in confusion, mild frustration, or impressively creative fishing fails. Trust us, the Rocket Reel deserves your full attention... at least once.

Super Cool Features

- ◆ **Hybrid Hero:** It's part reel, part hand line spool, all awesome.
- ◆ **Switchable Anti-Reverse Wizardry:** Instant hook sets, zero spaghetti line disasters.
- ◆ **Stealth Mode:** For silent reeling—and ninja-level baiting.
- ◆ **Dynamic Drag Brake System:** Fine-tune your fish-wrangling resistance mid-fight.
- ◆ **It Floats!** Because losing gear to the lake is a rookie move.
- ◆ **Pocket-Sized Power:** Lighter than a protein bar. Or two.
- ◆ **Tangle Terminator:** Built-in anti-tangle sorcery.
- ◆ **Mount It Anywhere:** Belt? Boat? Bear-proof backpack? Yes. Clips to belt or integrates with the Tackle Toter, Reel Rack, or Yak Rack systems.
- ◆ **Two-Piece Snap-Apart:** Disassembles faster than your buddy's excuse for true pocket carry and ultra-portable storage.
- ◆ **Ergonomic Handle:** Add a reciprocating saw blade and make your own casting lane.
- ◆ **Replaceable Bits:** Even gear deserves a makeover sometimes.
- ◆ **72-Stop Anti-Reverse Gear:** That's not a typo—72 glorious, clicky stops for precise hook-setting and tangle prevention.

About Ridge Runner Gear

At Ridge Runner Gear, we believe you shouldn't have to choose between comfort and capability. Our gear is meticulously engineered for those who seek the serenity of the wilderness without sacrificing the sophistication of well-designed essentials. Whether you're setting up a base camp beneath alpine stars or trekking toward your next breathtaking vista, our products deliver premium performance with minimalist weight. Because luxury isn't about excess—it's about excellence, wherever the trail leads.




We are a faith-based company, guided by Christian values in everything we do—from the way we design our gear to how we serve our customers. We believe the outdoors is one of God's greatest gifts, and we're passionate about helping others enjoy it responsibly and respectfully. That's why we practice Leave No Trace principles and strive to be good stewards of the wild places we love.


Proudly American Made, our gear is built with rugged durability and refined utility for the serious adventurer.

Thank you for supporting our dream and being part of the Ridge Runner journey. With your support, we get to build gear we love—for adventures you'll never forget.

Dimensions

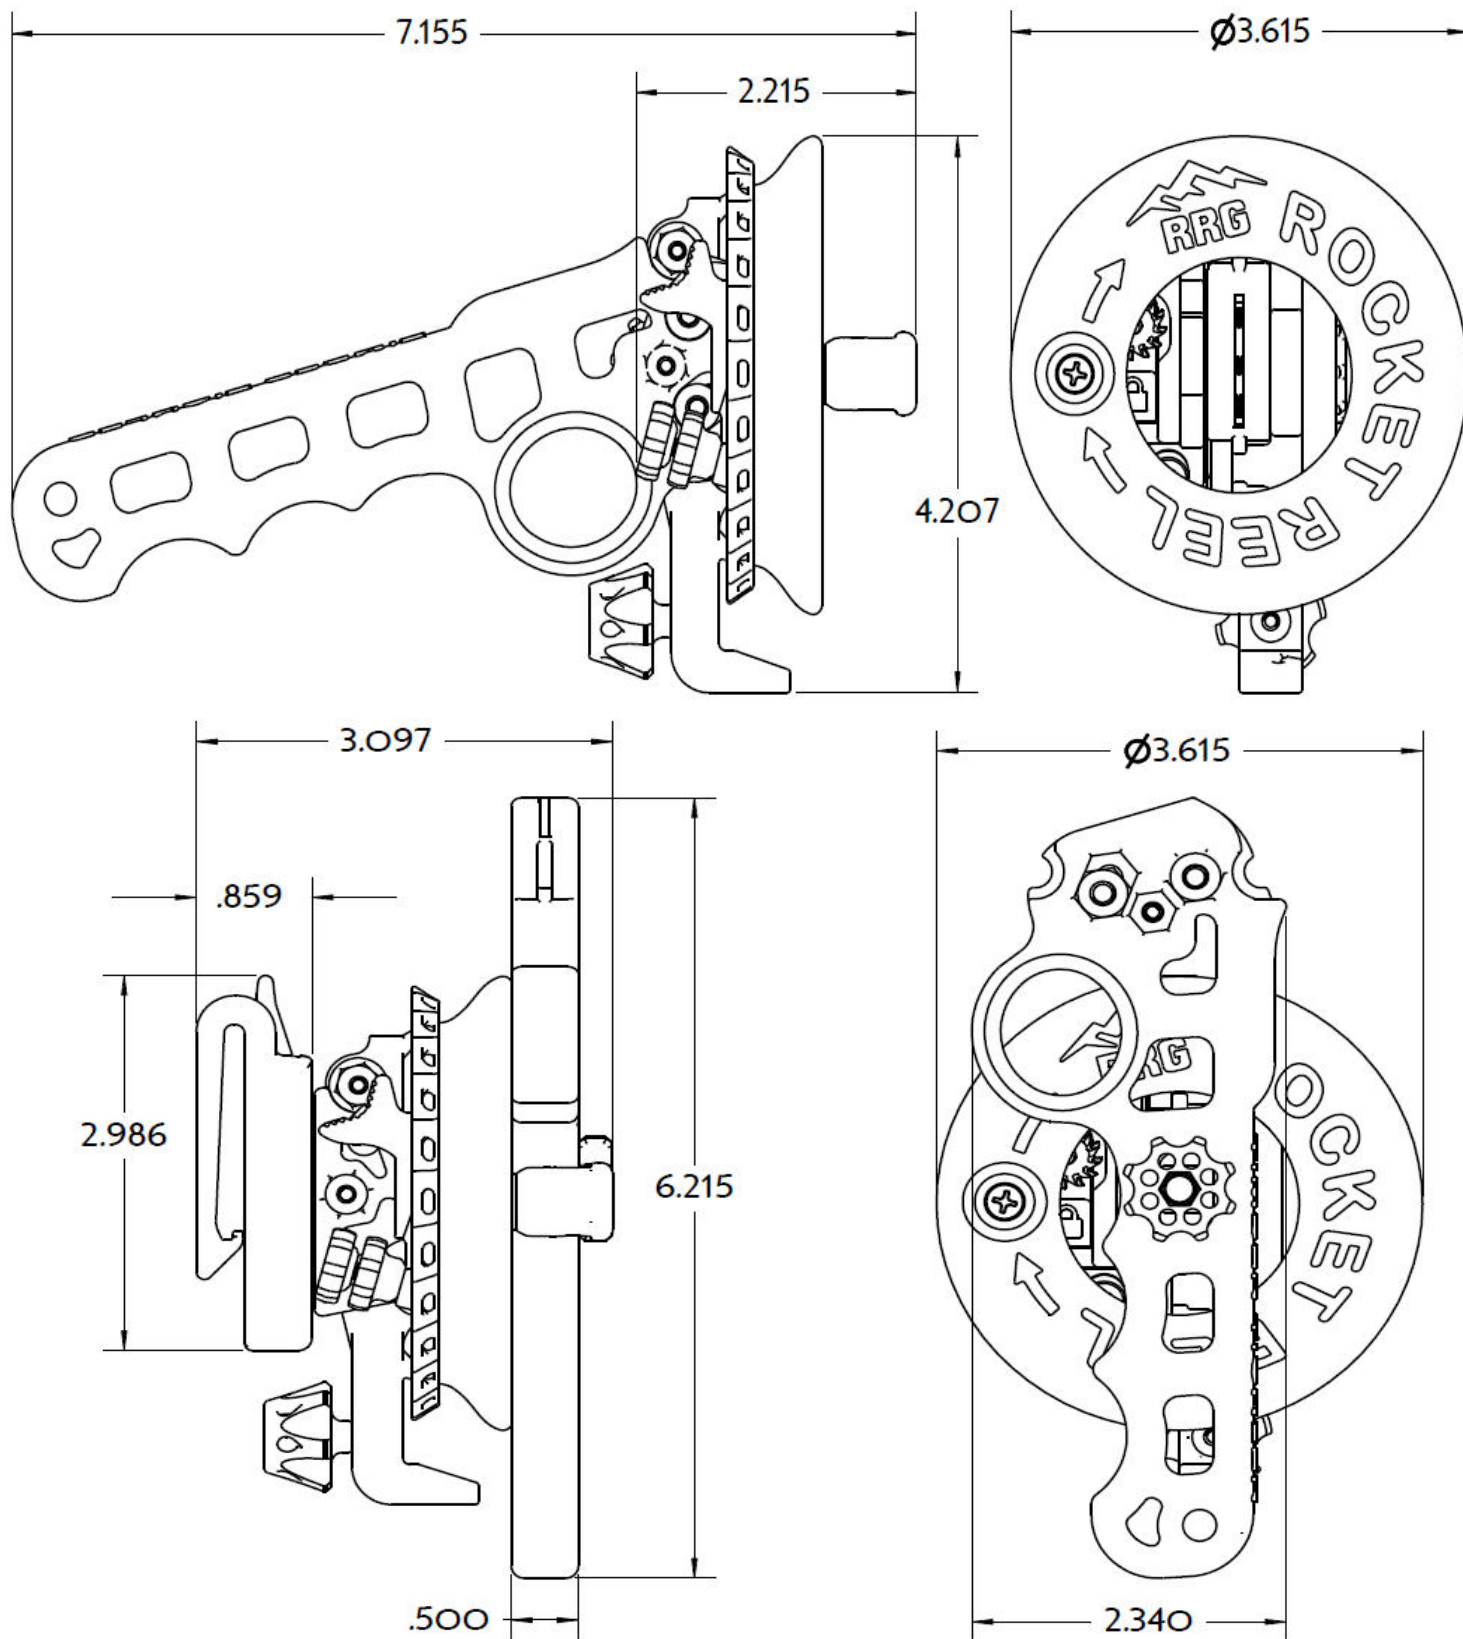


Identification

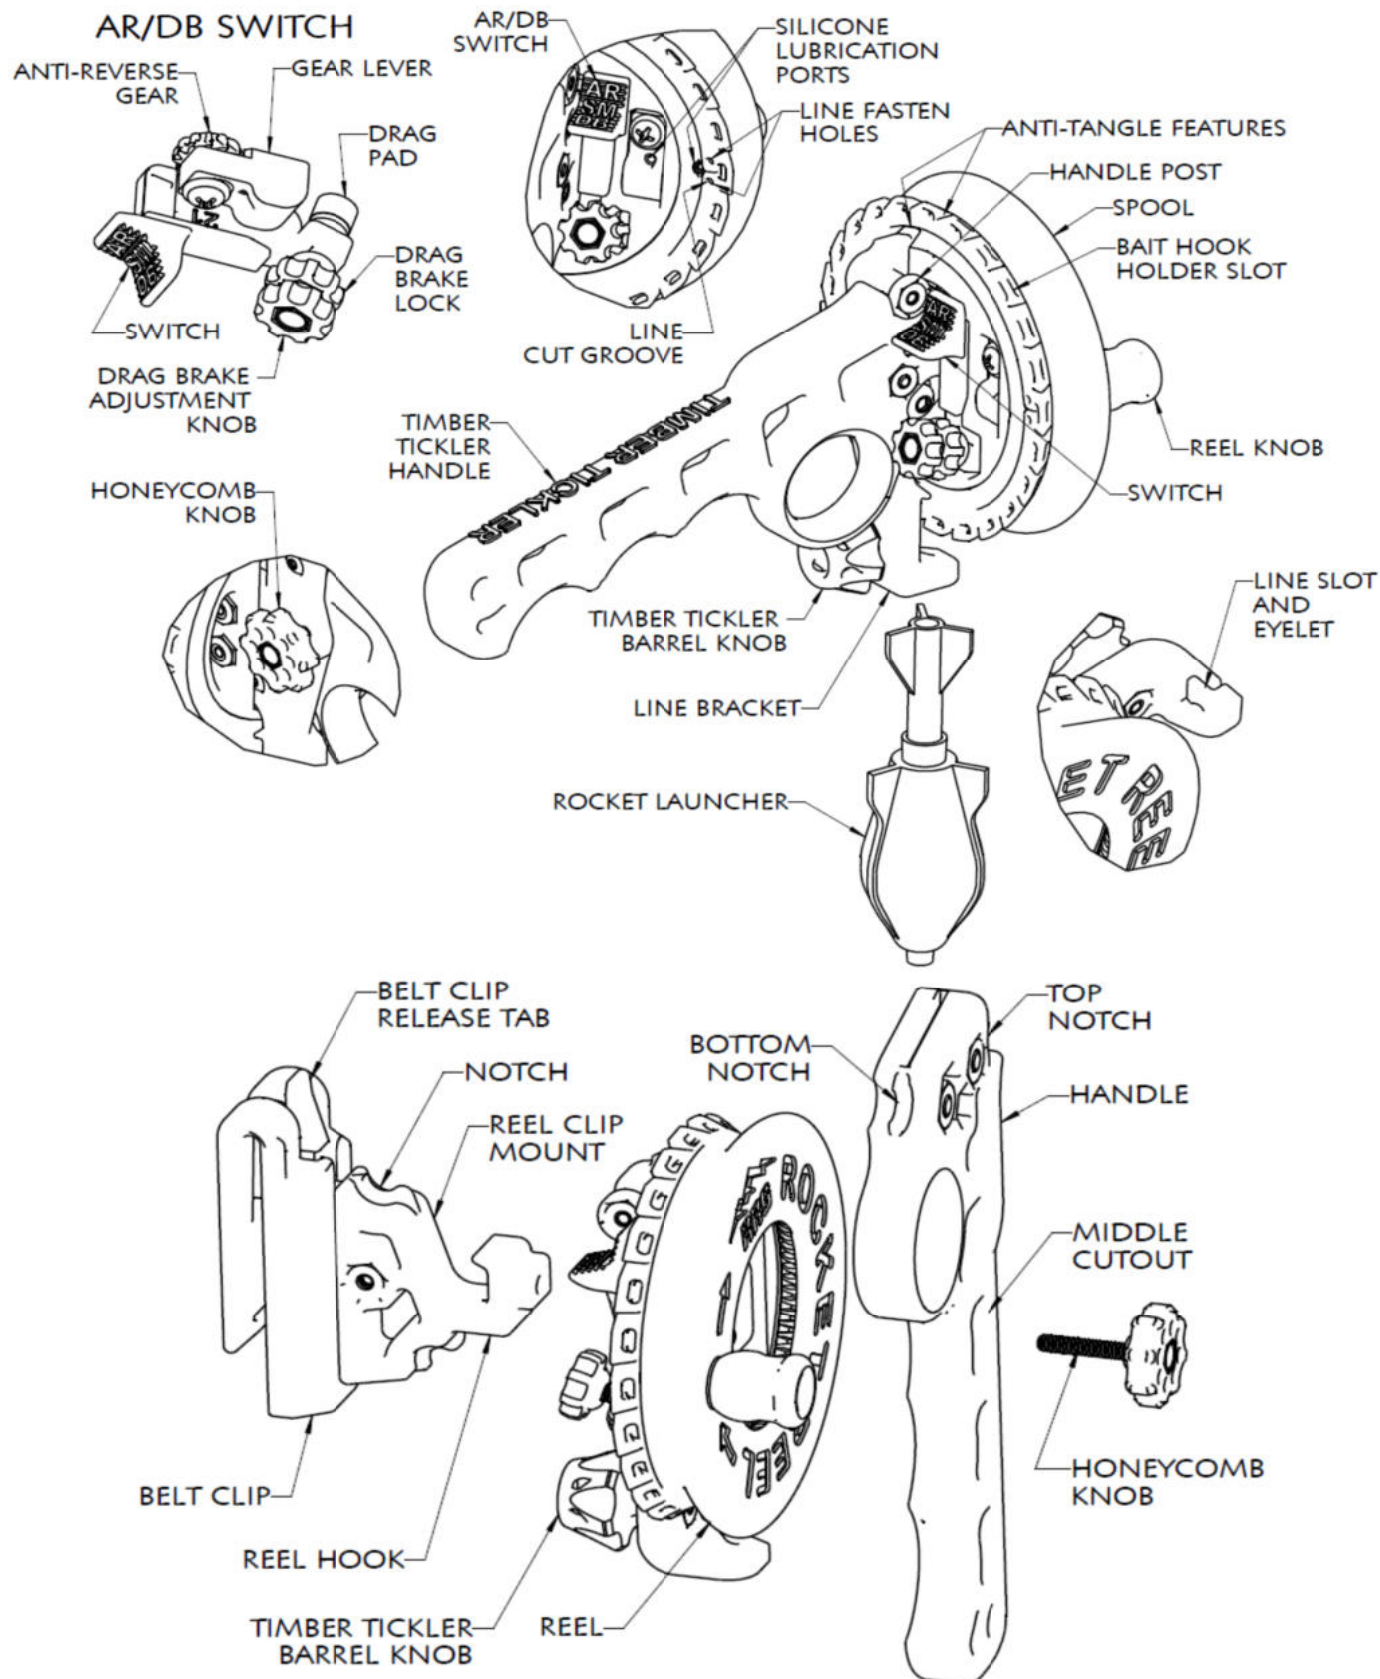


Assembly – Let's Get Reel

- ◆ Insert the bottom handle post into the handle notch. Boom.
- ◆ Swing that handle up until the top snaps in like a bear trap (but safer).
- ◆ Screw the honeycomb knob through the line bracket into the handle. Tight = right.

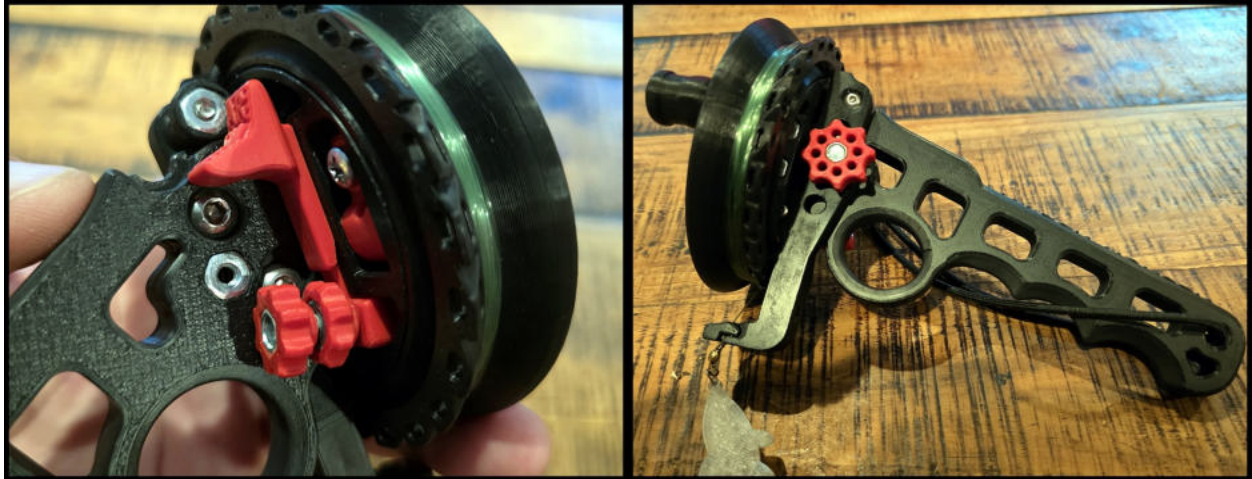


- ◆ Using the Timber Tickler? Screw the barrel knob in the line bracket. Just for keeps.
- ◆ For the belt clip mode, do the same magic. Just make sure it clicks into place.

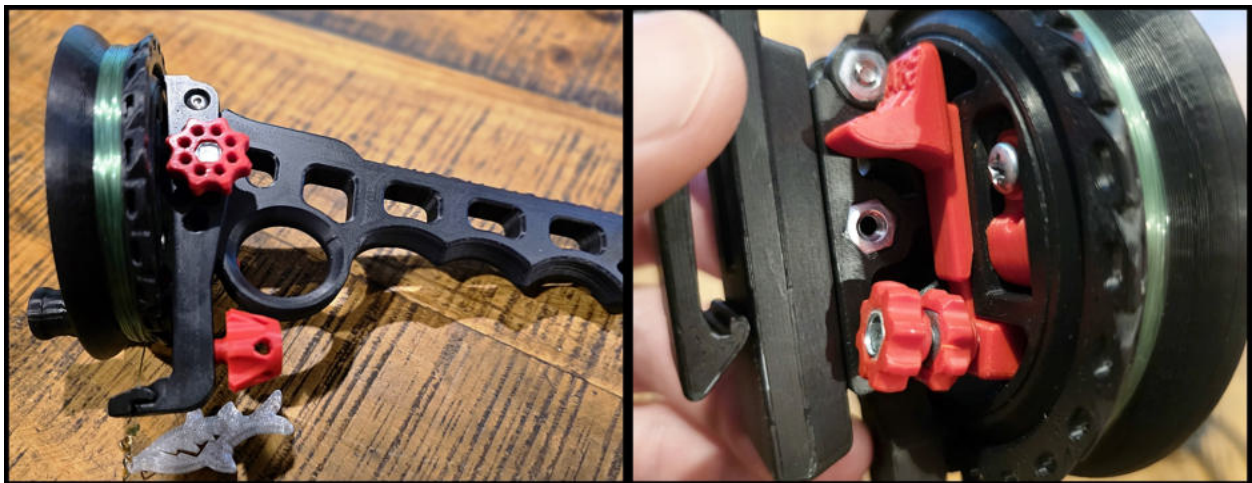

- ◆ Set the handle on the spool face, right in the middle cutout—like it was made to be there (because it was).
- ◆ Screw the honeycomb knob through the handle into the reel clip—tighten it like you mean it.



- ◆ If you're rockin' the Timber Tickler, just screw the honeycomb knob through the line bracket into the reel clip. Easy peasy, saw and reel breezy.
- ◆ Insert bait hook in holder slot, lock the reel in anti-reverse, reel tight and look smug.

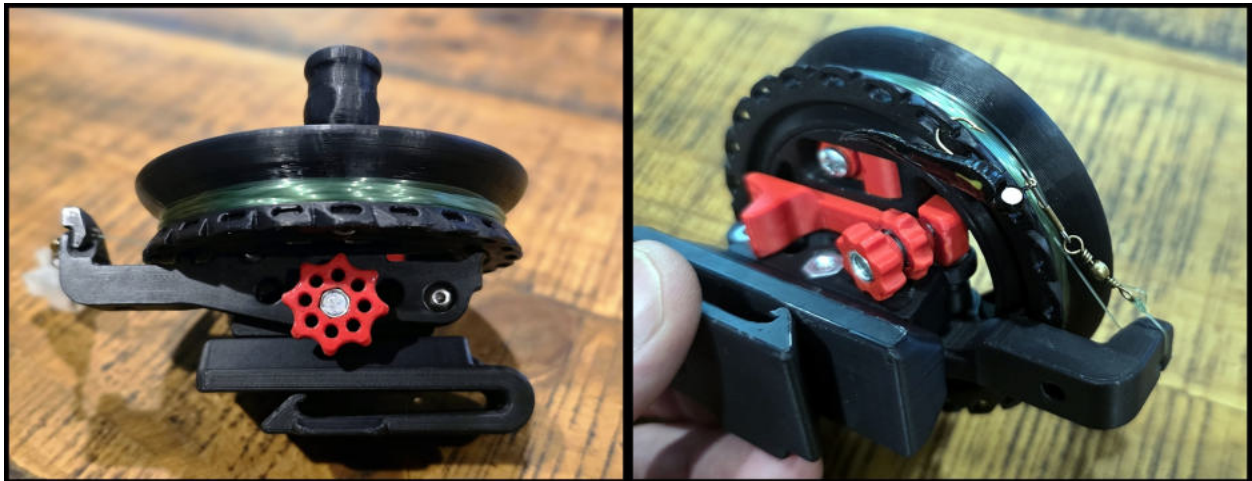

- ◆ Pull up the bungee strap and pop it into the top handle notch—like buckling up for fishy action.




How to Spool (Like a Boss)

- ◆ Find the line holes (right behind the reel knob).
- ◆ Thread it through like you're threading a needle in a windstorm.




- ◆ Double square knot. No half-measures here, place line in line slot and into the eyelet.
- ◆ Reel in following the arrows—because going against the flow is for salmon, not spools.

- ◆ Don't overfill your spool—stop at the top of the back flange corner like a responsible reel parent.
- ◆ Need to remove the line? Use the groove between the holes. That's not just a design flex.

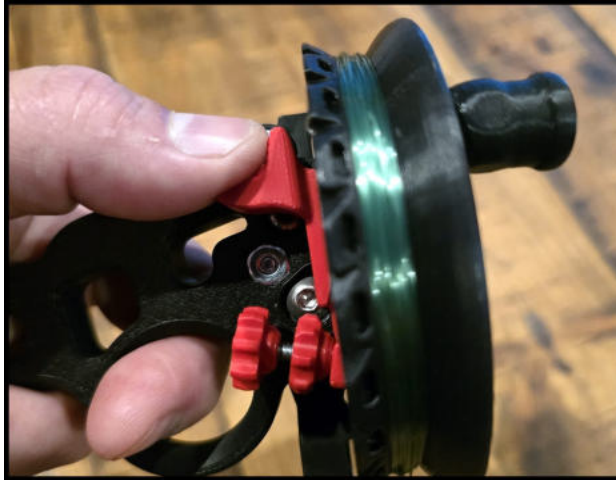

Switch in Anti-Reverse position

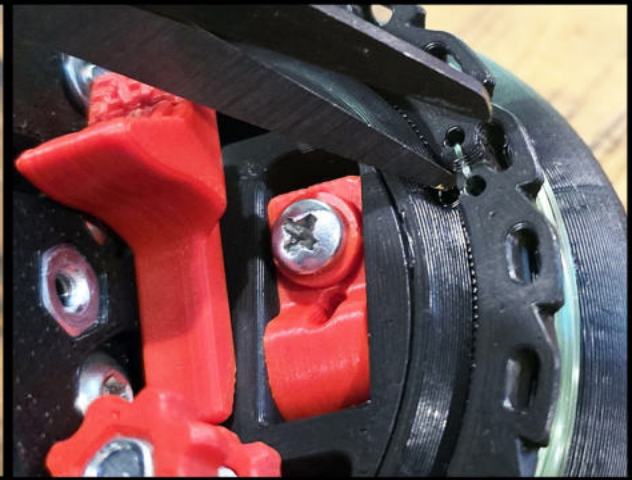

Line removal cut groove

How to Use (Catch Fish, Not Feelings)

Rocket Reel Casting Techniques



Standard Cast

The most natural casting method for new **Rocket Reel** users. This technique feels similar to casting a traditional rod and reel. Use the included **Rocket Launcher** for impressive distance regardless of how light your lure or bait is.

How to Perform:


- ◆ Hold the **Rocket Reel** securely in your dominant hand.
- ◆ Set switch to **Anti-Reverse** (top position).
- ◆ Remove the line from the eyelet.
- ◆ Hold your thumb on the line pressing it against the top of the reel.
- ◆ Face your target and make a smooth forward **side arm** casting motion.
- ◆ Release the line as your hand moves toward the target as shown above.
- ◆ Follow through naturally while **holding the face of the reel toward your target** while keeping your thumb on the back of the reel.
- ◆ Practice varying the release point to improve accuracy and distance.
- ◆ **Feed the line back to the eyelet** through the slot—like threading a fishy needle.

Best For:

- ◆ General fishing situations
- ◆ Learning the Rocket Reel
- ◆ Accurate casts at short to medium distances, longer casts with the **Rocket Launcher**.

Pro Tip: Use the **Rocket Launcher** for long-distance casts.

Thumb Brake Technique: Use your thumb on top of the reel to stop the cast mid-flight to improve casting accuracy.

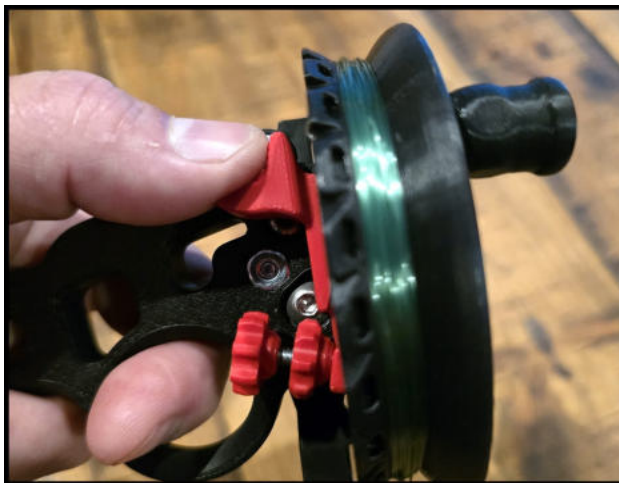

Switch in the Anti-Reverse position



Underhand Swing Cast

Underhand Swing Cast

The Underhand Swing Cast uses a smooth upward pitching motion to launch the bait. The motion is similar to an underhand softball pitch and is one of the easiest techniques for beginners to learn.

How to Perform:

- ◆ Hold the Rocket Reel securely in your left hand.
- ◆ Set switch to **Anti-Reverse** (top position), remove line from eyelet.
- ◆ Left hand on the reel, right hand pulls line to arm's length.
- ◆ With your right hand, hold the bait or lure approximately 6 inches below your casting hand.
- ◆ Lower the lure slightly on the right side of your body.
- ◆ Begin a smooth underhand swinging motion upward toward the target.
- ◆ Release the line as your hand reaches the forward portion of the swing.
- ◆ Follow through naturally while holding the face of the reel toward your target while keeping your thumb on the back of the reel.
- ◆ Allow the lure's momentum to carry it toward the target.
- ◆ Feed the line back to the eyelet through the slot—like threading a fishy needle.

Tips:

- ◆ While holding your thumb on the back of the reel keep your thumb in-line with your wrist.
- ◆ Focus on a smooth motion rather than power.
- ◆ Excellent for accurate casts at short to medium distances.
- ◆ Works well when casting beneath overhanging branches, docks, or other obstacles.

- ◆ Easy to learn and ideal for introducing new anglers to the Rocket Reel.
- ◆ Use your thumb on top of the reel to stop the cast mid-flight to improve casting accuracy.
- ◆ The **Rocket Launcher** will significantly increase casting distance when using this technique.

Best For:

- ◆ Beginners
- ◆ Accurate short-range casts
- ◆ Fishing around low-hanging cover
- ◆ Open shoreline fishing

Whip Cast

The Whip Cast uses the lure's momentum to generate additional casting distance.

How to Perform:

- ◆ Hold the Rocket Reel securely in your left hand.
- ◆ Set switch to **Anti-Reverse** (top position), remove line from eyelet.
- ◆ Left hand on the reel, right hand pulls line to arm's length.
- ◆ Swing the bait or lure with your right hand in a circle outward to your side.
- ◆ As the lure reaches the end of its swing, smoothly accelerate your hand toward the target.
- ◆ Release the line at the proper moment to allow the lure's momentum to carry it forward.
- ◆ Follow through naturally while holding the face of the reel toward your target while keeping your thumb on the back of the reel.
- ◆ Maintain a smooth motion rather than a sudden jerk for best results.
- ◆ Feed the line back to the eyelet through the slot—like threading a fishy needle.

Tips:

- ◆ While holding your thumb on the back of the reel keep your thumb in-line with your wrist.
- ◆ The **Rocket Launcher** will significantly increase casting distance when using this technique.
- ◆ Works especially well with lightweight baits and lures.
- ◆ Practice timing the release for maximum distance and accuracy.
- ◆ Use your thumb on top of the reel to stop the cast mid-flight to improve casting accuracy.

Best For:

- ◆ Long-distance casts
- ◆ Lightweight lures
- ◆ Open shoreline fishing

Lasso Cast

The Lasso Cast creates momentum by swinging the lure overhead before release.

How to Perform:

- ◆ Hold the Rocket Reel securely in your left hand.
- ◆ Set switch to **Anti-Reverse** (top position), remove line from eyelet.
- ◆ Left hand on the reel, right hand pulls line to arm's length.
- ◆ Begin swinging the bait or lure with your right hand in a controlled circle above your head.
- ◆ Once the lure has built sufficient momentum, face your target.
- ◆ Release the line as the lure comes forward toward the target area.
- ◆ Follow through naturally while holding the face of the reel toward your target while keeping your thumb on the back of the reel.
- ◆ Follow through naturally and allow the lure to carry the cast.
- ◆ Feed the line back to the eyelet through the slot—like threading a fishy needle.

Tips:

- ◆ While holding your thumb on the back of the reel keep your thumb in-line with your wrist.
- ◆ Start with slow circles until you become comfortable with the technique.
- ◆ Ensure the area around you is clear before casting.
- ◆ Larger circles generally create greater casting momentum.
- ◆ Use your thumb on top of the reel to stop the cast mid-flight to improve casting accuracy.
- ◆ The **Rocket Launcher** will significantly increase casting distance when using this technique.

Best For:

- ◆ Open areas with plenty of casting room
- ◆ Long-distance casts
- ◆ Shoreline fishing

Crossbody Cast

A compact casting technique ideal for boats, kayaks, and situations where other anglers are nearby. This is the technique demonstrated by Clinton in the Rocket Reel Field Report video.

How to Perform:

- ◆ Hold the bait or lure in your right hand, reel in your left hand.
- ◆ Set switch to **Anti-Reverse** (top position), remove line from eyelet.
- ◆ Left hand on the reel, right hand pulls line to arm's length.
- ◆ Start with your hand positioned across your body on your left side.
- ◆ Swing the lure smoothly across the front of your body toward the target.
- ◆ Release the line as your hand passes through the casting motion.
- ◆ Follow through naturally while holding the face of the reel toward your target while keeping your thumb on the back of the reel.
- ◆ Allow the lure's momentum to carry it toward the target.
- ◆ Feed the line back to the eyelet through the slot—like threading a fishy needle.

Tips:

- ◆ While holding your thumb on the back of the reel keep your thumb in-line with your wrist.
- ◆ Reduces the chance of interfering with other people in the boat.
- ◆ Excellent for fishing from confined spaces.
- ◆ Use your thumb on top of the reel to stop the cast mid-flight to improve casting accuracy.
- ◆ The **Rocket Launcher** will significantly increase casting distance when using this technique.

Best For:

- ◆ Boats and kayaks
- ◆ Fishing around other anglers
- ◆ Tight casting environments
- ◆ Accurate short to medium-distance casts

Rocket Launcher

The **Rocket Launcher** is a versatile casting accessory designed specifically for the **Rocket Reel**. It can be used as a **float, sinker, or depth-control device**, depending on how much water is added to the body.

The **Rocket Launcher** works similarly to a traditional casting bubble, but its **one-piece transparent body** is designed to reduce the chance of breakage while allowing you to easily see the water level inside.



Adjusting Buoyancy and Fishing Depth

The amount of water added to the **Rocket Launcher** determines how it behaves in the water.

- ◆ **Less water** provides more flotation for fishing near the surface.
- ◆ **Additional water** allows the **Rocket Launcher** and bait to fish progressively deeper.
- ◆ **More water** can also allow the **Rocket Launcher** to function as a sinker for bottom fishing.

Even when using the **Rocket Launcher** as a float, filling it to approximately **25% of its available volume** is recommended. The added water provides additional casting weight and helps stabilize the **Rocket Launcher** during flight.

This adjustable design makes it possible to cast extremely lightweight baits that would otherwise be difficult to cast, including many baits commonly used for fly fishing.

Rocket Launcher Afterburner

The stopper is designed to accept the included red tail fin, called the **Rocket Launcher Afterburner**.

When the **Rocket Launcher** is being used as a float, the **Afterburner** provides a highly visible strike indicator. When a fish takes the bait and pulls the **Rocket Launcher**, the red **Afterburner** will rise out of the water, helping signal the bite.

The aerodynamic shape of the **Rocket Launcher** combined with the **Afterburner** tail fins also helps stabilize the **Rocket Launcher** during flight and can provide greater casting distances than a conventional casting bubble. Adding water increases casting weight and further improves flight stability and distance.

Glow Bead

The included bead serves two purposes.

After being exposed to sunlight for approximately **three hours**, the bead will glow in the dark, making it easier to see during low-light or nighttime fishing.

The bead also acts as a retention device. If the stopper should accidentally pull completely out of the **Rocket Launcher** body, the bead helps prevent the **Rocket Launcher** body from sliding off the fishing line and becoming lost.

Installing the Rocket Launcher


The included **Rocket Launcher Threading Tool** makes it easier to feed fishing line through the stopper especially wet braided fishing line.



- ◆ Place the fishing line into the small groove located at the end of the threading tool.
- ◆ Insert the tool through the bottom of the **Rocket Launcher** and push the fishing line upward through the stopper.
- ◆ Pull enough line through the stopper to complete your desired rig.
- ◆ Remove the **Threading Tool** and finish attaching your bait, hook, leader, or other terminal tackle.

The handle of the **Threading Tool** also includes a small indentation that can be used to help remove the stopper from the **Rocket Launcher** when adding or removing water.

By adjusting the water level, the **Rocket Launcher** gives the **Rocket Reel** the ability to cast farther, fish a wide range of depths, use extremely lightweight baits, and transition between floating and sinking presentations without changing to an entirely different casting system.

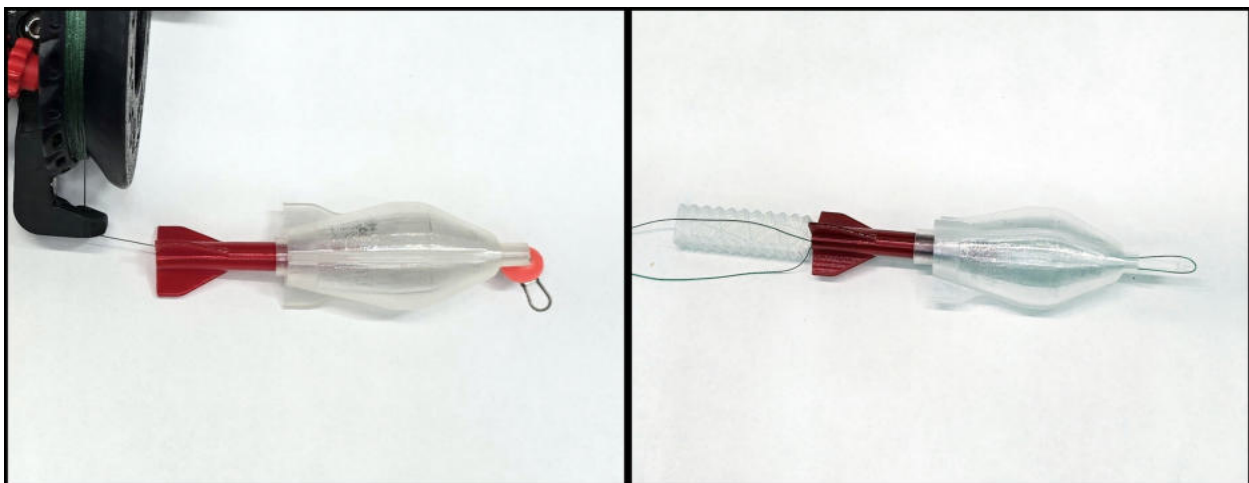


Rigged Rocket Launcher

Rocket Launcher Threading Tool




Thumb brake

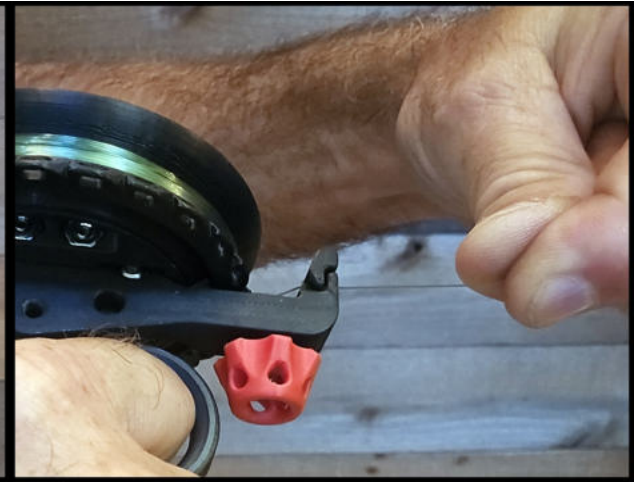

Threading the eyelet

Reeling

- ◆ **Anti-Reverse Mode:** (switch top position) Crank like a traditional reel. Set that hook!
- ◆ **Stealth Mode:** (switch middle position) Quiet, bidirectional, sneaky sneaky. Switch back up before going into full-on beast mode.

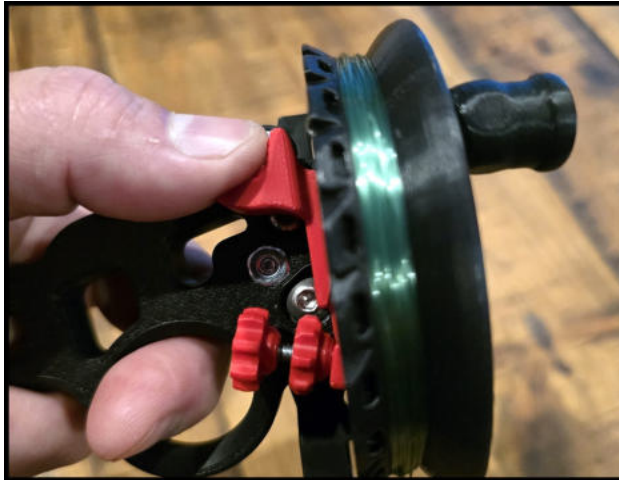

Switch in Anti-Reverse position



Switch in Stealth Mode position

Drag Brake Mode

- ◆ Set switch to bottom position.
- ◆ Loosen lock knob.
- ◆ Turn drag brake adjustment knob clockwise until drag pad contacts spool.



Drag brake locking knob




Drag brake adjustment knob

- ◆ Adjust the drag by giving the line a tug—because guesswork is for guessing, not fishing.
- ◆ Lock the drag setting by tightening the drag brake lock like it owes you money.
- ◆ Apply downward pressure to tweak on the fly.

Want More Line?

- ◆ Pull it out in **Stealth Mode** (middle position) while thumb braking the spool.
- ◆ When done, switch back to **Anti-Reverse Mode** (top position). Easy.

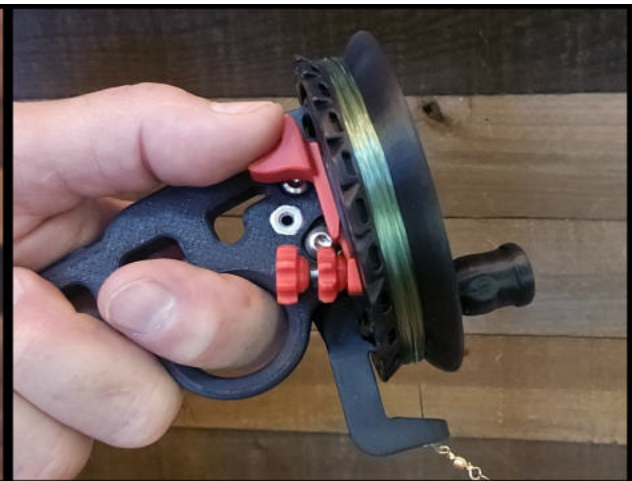

Line Jam?

- ◆ Set to **Anti-Reverse Mode** (top position), remove line from the slot, unwind, and re-slot it in the eyelet like nothing happened.



Hot Tips from Reel Pros

- ◆ Always wear the wrist strap. Don't be “that guy.”
- ◆ Wrap line behind your left pinky to detect fish kisses.
- ◆ Thumb stop = cast control. Use it.
- ◆ The **Rocket Launcher** will significantly increase casting distance.
- ◆ In **Stealth Mode** (middle position), use your thumb on the spool to add drag—sneaky fish don't stand a chance.
- ◆ Always flip to **Anti-Reverse Mode** (top position) before setting the hook—don't let that trophy fish laugh at you.
- ◆ To enter **Drag Brake Mode** (bottom position), grab the top of the switch and pull down—like you're shifting into slow-your-roll mode.
- ◆ Use 20 lb+ line since it bears the full load without a rod; add a clear leader for stealth and desired strength. This reel isn't for goldfish.
- ◆ After reeling in your catch, hang the Rocket Reel on the belt-clip reel-hook—because victory tastes better with two free hands.
- ◆ When spooling, run the line behind your left pinky and add light pressure—like giving your reel a precision haircut.
- ◆ Big fish? Engage **Anti-Reverse Mode** (top position), set hook, pull straight to avoid stressing the line bracket, reel slack, repeat. Hulk smash not required.
- ◆ Don't overfill. This ain't a spaghetti jar—anti-tangle features eliminates the need for excess line.
- ◆ Practice casting with the included bait—it's like camp cornhole. Bonus: You don't have to chase it.

Rocket Reel Use & Care: (Because Even Space-Age Gear Deserves a Spa Day)

- ◆ **Cleaning & Lube:** Keep it clean, keep it slick—your reel deserves a little TLC too.
No chemical warfare: Clean it with mild soap and water. Harsh chemicals are for villains in action movies, not your Rocket Reel. Wipe the whole contraption down with quick-dry silicone spray and let it dry (WD-40 Specialist is the MVP). Use the lube ports, rotate reel 180° spray again. Sparingly. Nobody likes an over-lubricated reel.
- ◆ **Cool it, cowboy:** ASA plastic is tough — UV-resistant, heat-defiant — but it's not a sunbathing lizard. **Do NOT leave your Rocket Reel in a hot car or anywhere hotter than 100°C (212°F)** unless you're testing it for NASA (and no, they won't cover your warranty).
- ◆ **Replace parts as needed:** Nothing lasts forever, except bad fishing stories.
- ◆ **Give it time to shine:** The Rocket Reel has a short break-in period—kind of like new boots or your brother-in-law. The reel and switch will smooth out with use, so don't panic if it feels a little stiff at first. Just fish more. (Doctor's orders.)
- ◆ **Peek under the hood:** Give it a once-over now and then. Check for wear, cracks, or that missing screw you swore was there yesterday. (Gremlins?) Give all screws a loving little twist from time to time. Loose hardware is only fun on roller coasters.

Spare Parts You'll Be Glad You Have: Because even the toughest gear likes a backup plan.

- ◆ 700362-02 AR/DB Switch Assembly
- ◆ 700246-01 Honeycomb Knob

AR/DB Switch Swap: Time to play reel surgeon—grab your tools and give your switch a fresh start.

Tools required: Phillips screwdriver, ball end 7/64" hex wrench

Disassembly Instructions

- ◆ Pop off the handle by unscrewing the honeycomb knob and pushing the line bracket with your thumb.
- ◆ Then, grab your 7/64" hex wrench and yank those two 6-32 cap screws as seen below—easy as reeling in a guppy.



- ◆ Unscrew the Phillips head from the switch—like you're defusing a very chill, fish-related bomb.



- ◆ Take out the Phillips screw from the gear and drop out the switch as shown above—surgery complete, Dr. Angler.

Reassembly Instructions

- ◆ Drop the switch into place, line it up with the switch, and tighten the Phillips screw. Test all three positions—if it's stubborn, back off a smidge.



- ◆ Set the gear on the lever, drop in the gear bushing, then secure it all with the Phillips screw as shown below—like topping off a reel sandwich.



- ◆ Pop the line bracket back on and tighten those 6-32 screws with your trusty ball end 7/64" hex wrench as shown below—like buttoning up your reel for action.



- ◆ Insert the bottom handle post into the handle notch as shown above.
- ◆ Swing the handle up until the top post clicks into the notch—like it was born to be there.

- ◆ Twist the honeycomb knob through the line bracket into the handle as shown below—tighten it like you're locking in a lunker.



Troubleshooting

Issue	Cause	Fix
Reel hard to turn	Dirty or dry bearing	Clean + lube
Anti-reverse slipping	Gears tired	Replace AR/DB switch assembly
Stealth Mode sticky	Too much drag	Loosen it up
Switch floppy	Mount screw is too loose or switch is worn	Tighten up the switch mount screw Replace AR/DB switch assembly
Drag not dragging	Pad's done	Replace AR/DB switch assembly

Legal Stuff (Because Lawyers Exist)

- ◆ Hooks are sharp. Don't prove it to your fingers.
- ◆ Fish can be slippery. Don't fight one while on one foot.
- ◆ Cast like a pro and not at your buddy—aim for fish, not friendships.
- ◆ Pack a first-aid kit—just in case the fish fight back.
- ◆ Don't overload line; —check your line and bracket so it doesn't all go south mid-cast.
- ◆ Always fish responsibly and Leave No Trace—except great memories.

Need Parts? Want to Chat?


To purchase replacement parts contact us at:

www.rgruntheridge.com



ITEM	QTY	PART #	DESCRIPTION
1	1	700198-01	BAIT, PRACTICE
2	1	700348-01	HANDLE, TIMBER TICKLER SAW
3	1	700356-01	ASSY, RH REEL/MOUNT

REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----


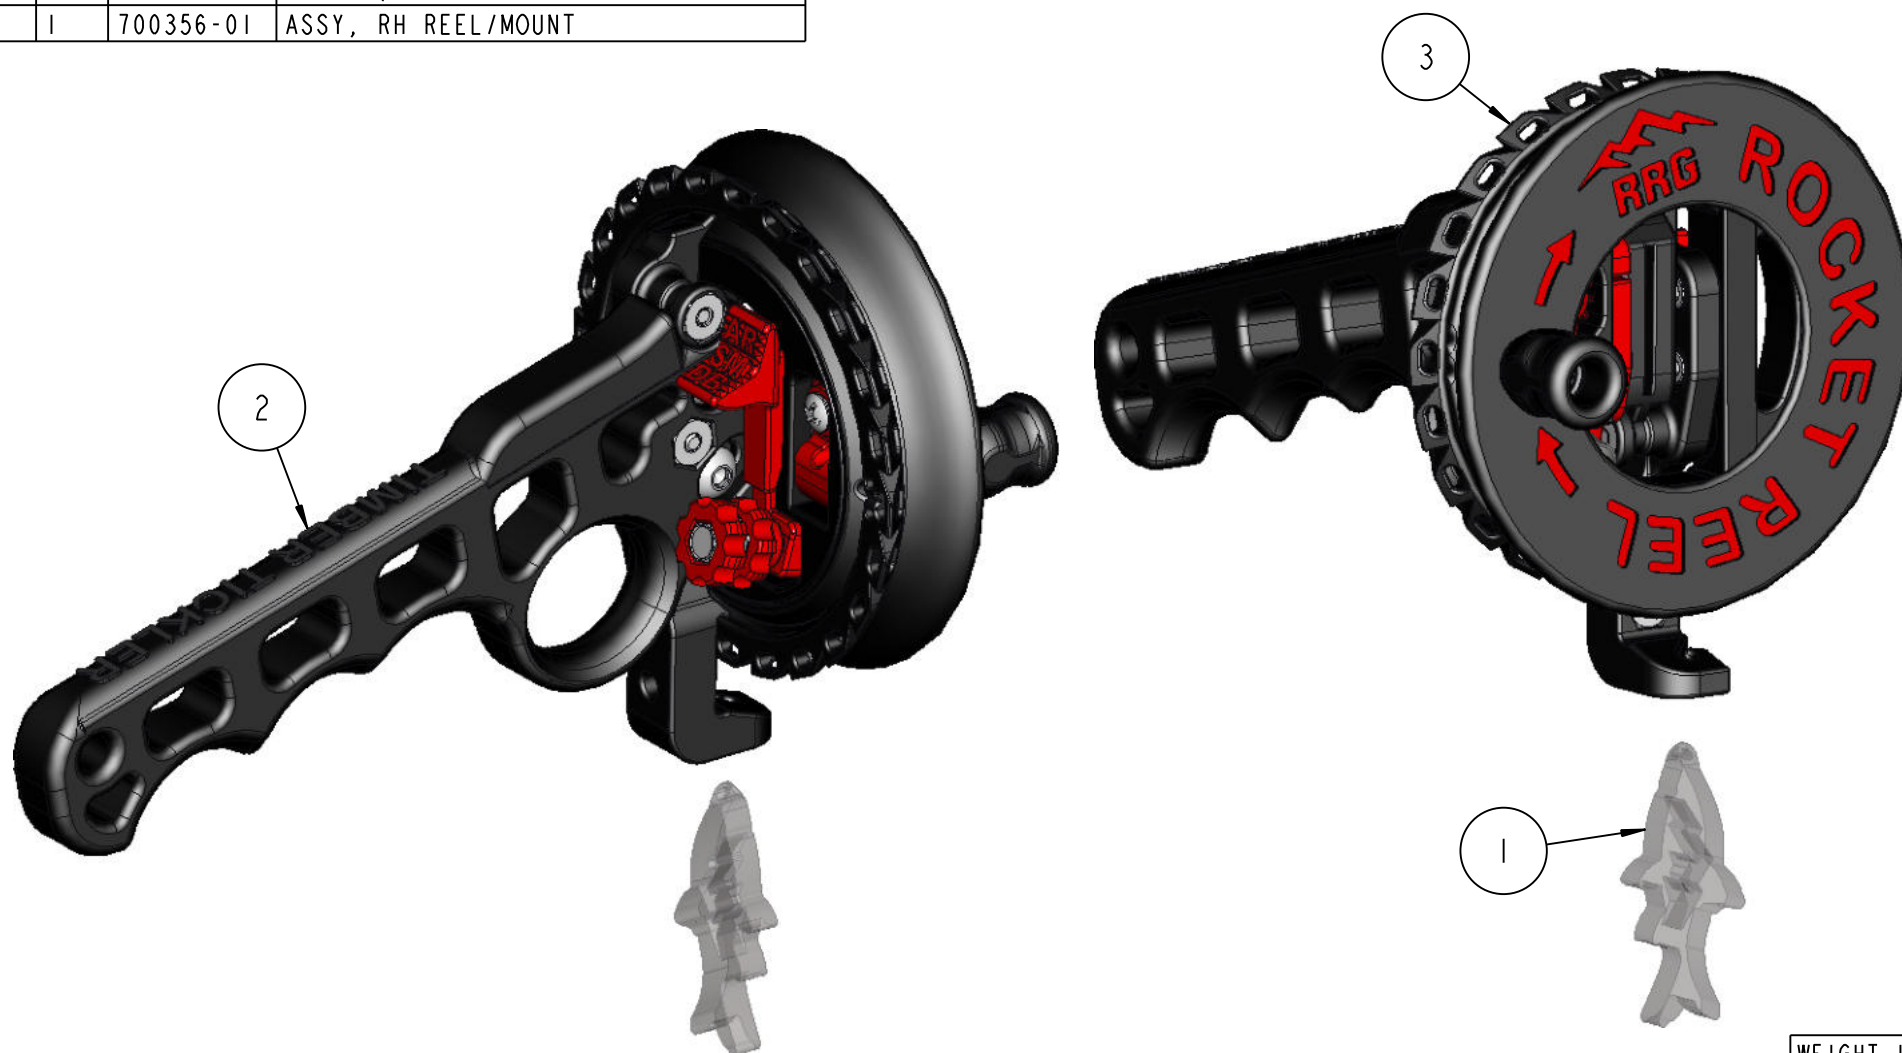


WEIGHT IN OZ.
5.0

DRAWN BY: A KEY	SCALE 0.800	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	RIDGE RUNNER
CHECKED BY:	DATE Apr-08-26	.XX .XXX ANG. .01 .005 .5	HEAT TREAT: N/A	MODEL: ROCKET	TITLE: ASSY, ROCKET REEL	
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 7	DRAWING # 700177-03	

ITEM	QTY	PART #	DESCRIPTION
1	1	700246-01	ASSY, HONEYCOMB KNOB 1.00
2	1	700348-01	HANDLE, TIMBER TICKLER SAW
3	1	700356-01	ASSY, RH REEL/MOUNT
4	1	700360-01	ASSY, ROCKET REEL BELT CLIP
5	1	700500-02	ASSY, ROCKET LAUNCHER

REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

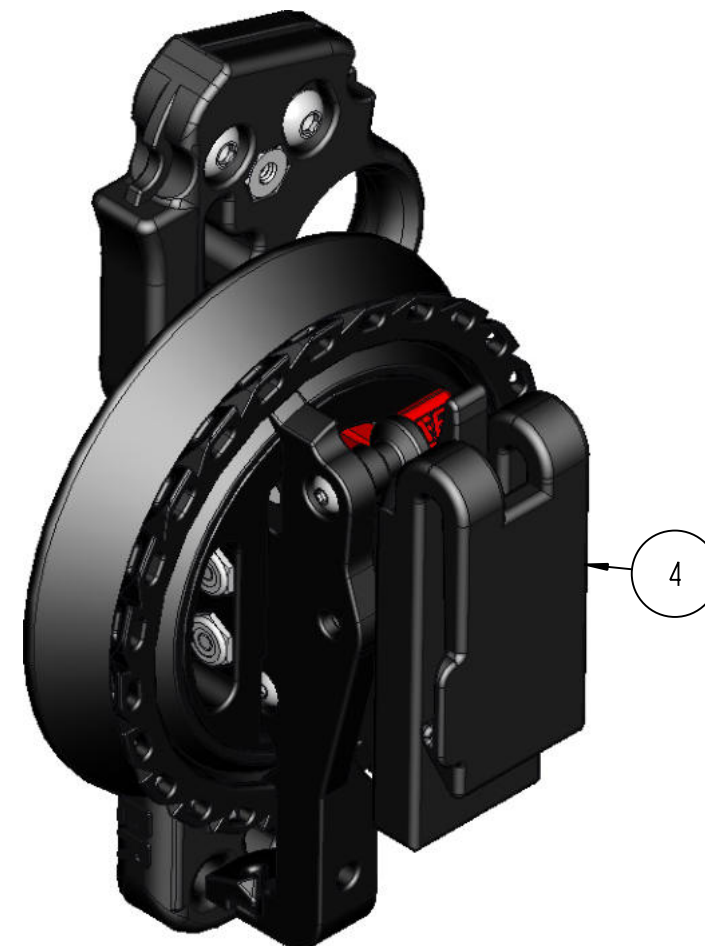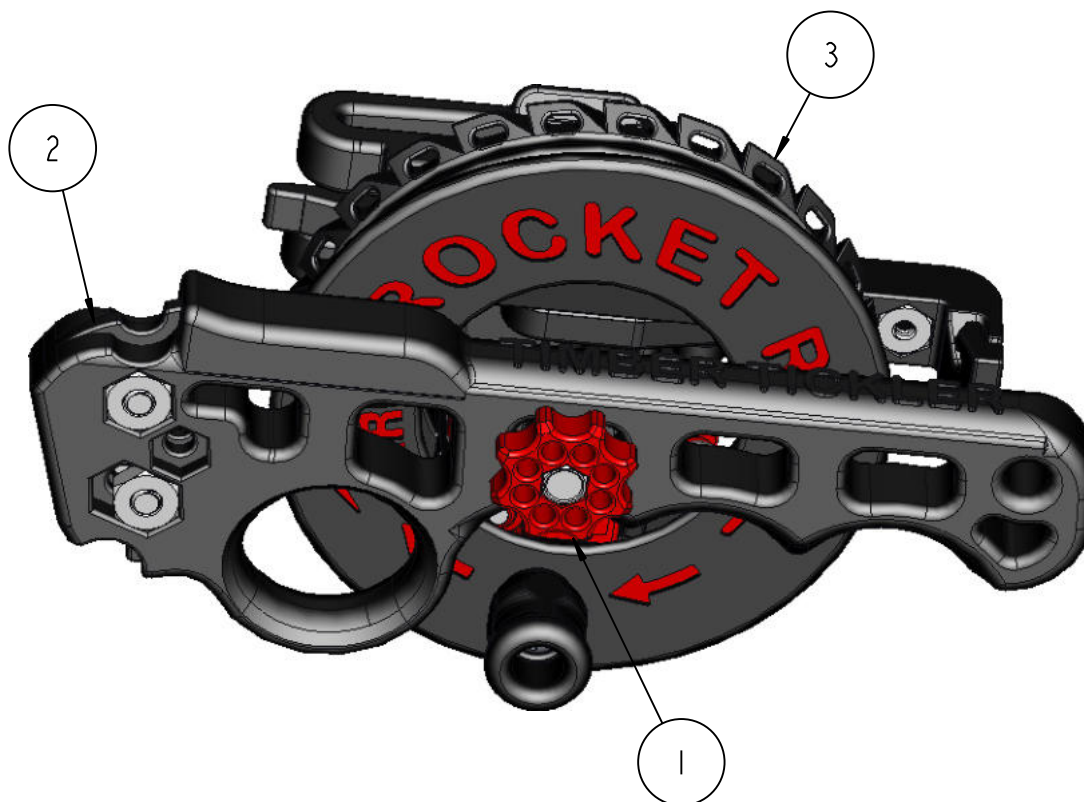


WEIGHT IN OZ.
5.0

DRAWN BY: A KEY	SCALE 0.900	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER						
CHECKED BY:	DATE Jun-27-25	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.	.01	.005	.5	HEAT TREAT: N/A	MODEL: ROCKET	TITLE: ASSY, ROCKET REEL	
.XX	.XXX	ANG.										
.01	.005	.5										
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 20F7		DRAWING # 700177-03						

ITEM	QTY	PART #	DESCRIPTION
1	1	700245-05	ASSY, REEL
2	1	700247-01	ASSY, RH REEL/MNT BRACKET

REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

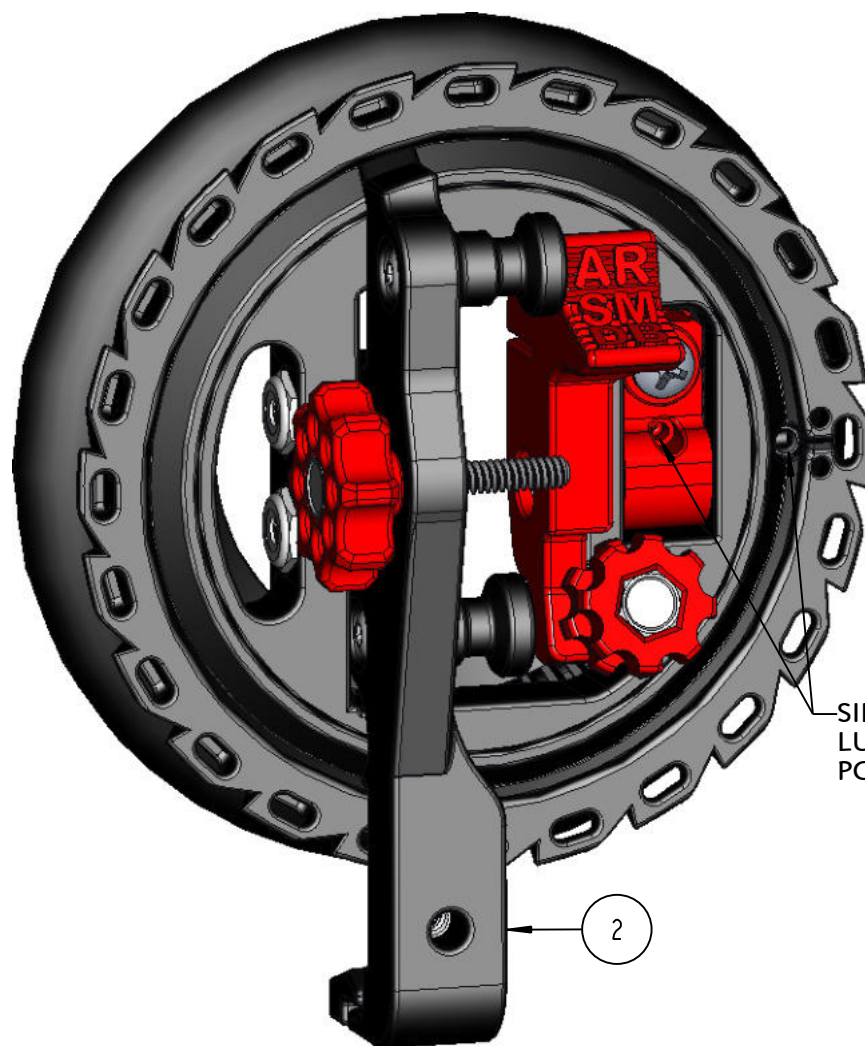

SILICONE
LUBRICATION
PORTS





WEIGHT IN OZ.
3.0

DRAWN BY: A KEY	SCALE 1.250	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED .XX .XXX ANG. .01 .005 .5	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER
CHECKED BY:	DATE Apr-08-26	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	HEAT TREAT: N/A	MODEL: ROCKET	TITLE: ASSY, RH REEL/MOUNT	
TRACED BY:	MASTER		FINISH: N/A	SHEET NO.: 1 OF 2		DRAWING # 700356-01

ITEM	QTY	PART #	DESCRIPTION
1	1	700362-02	ASSY, AR/DB SWITCH
2	1	700366-01	REEL, ROCKET REEL



REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

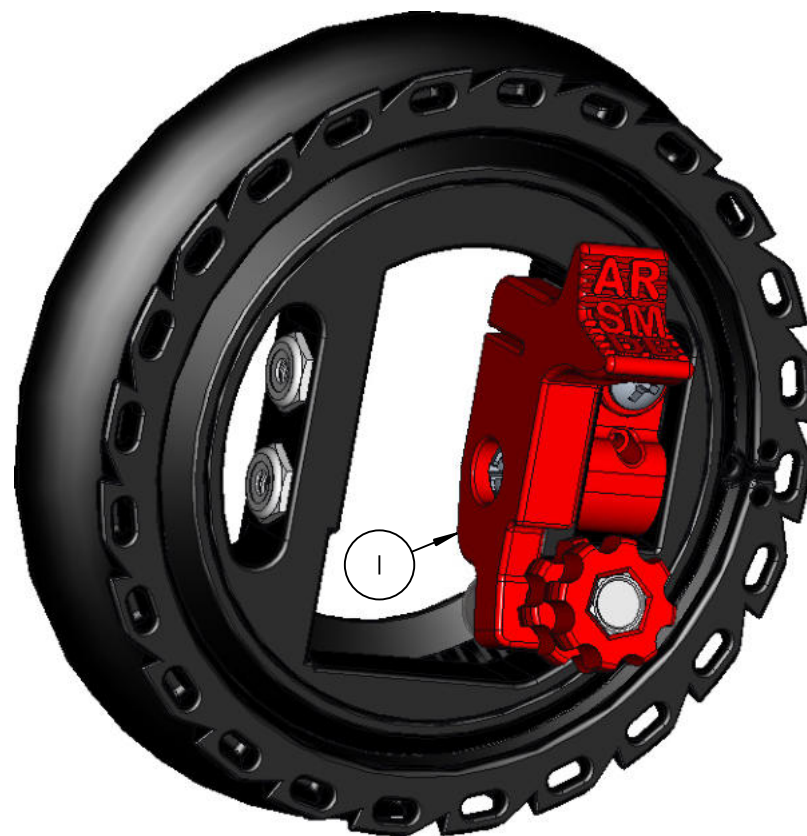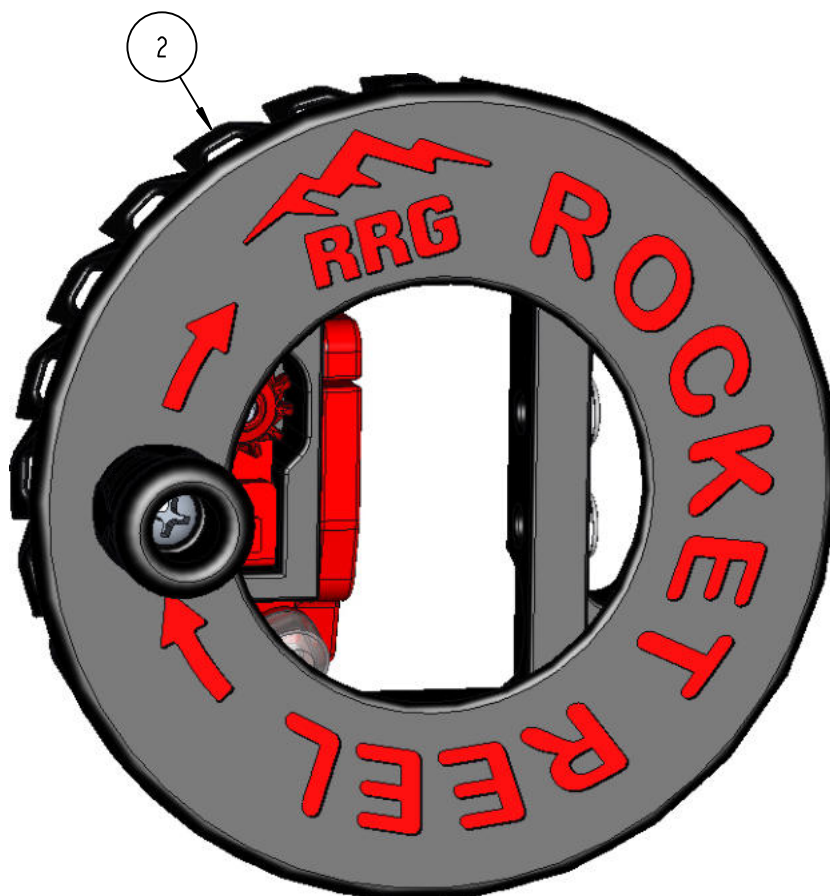

WEIGHT IN OZ.
N/A


DRAWN BY: A KEY	SCALE 1.200	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER						
CHECKED BY:	DATE Apr-08-26	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.	.01	.005	.5	HEAT TREAT: N/A	MODEL: ROCKET	TITLE: ASSY, REEL	
.XX	.XXX	ANG.										
.01	.005	.5										
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700245-05						

REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----

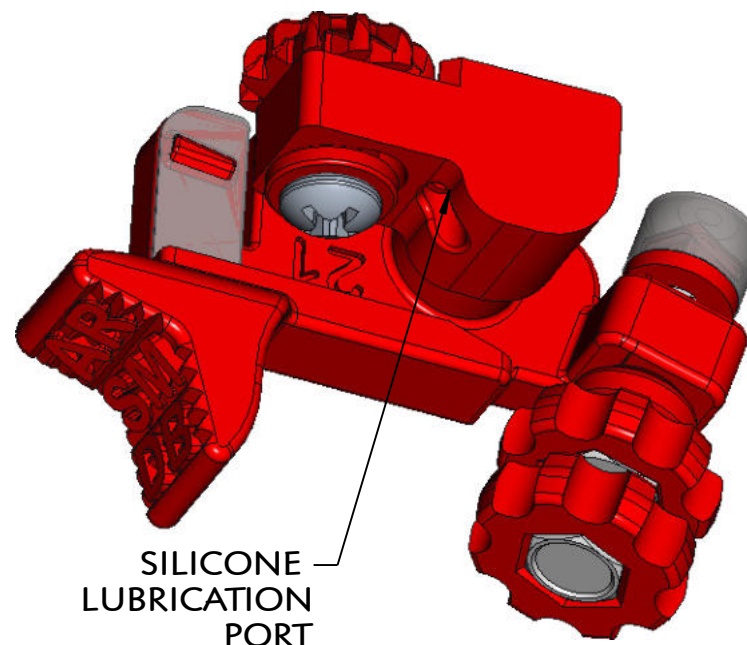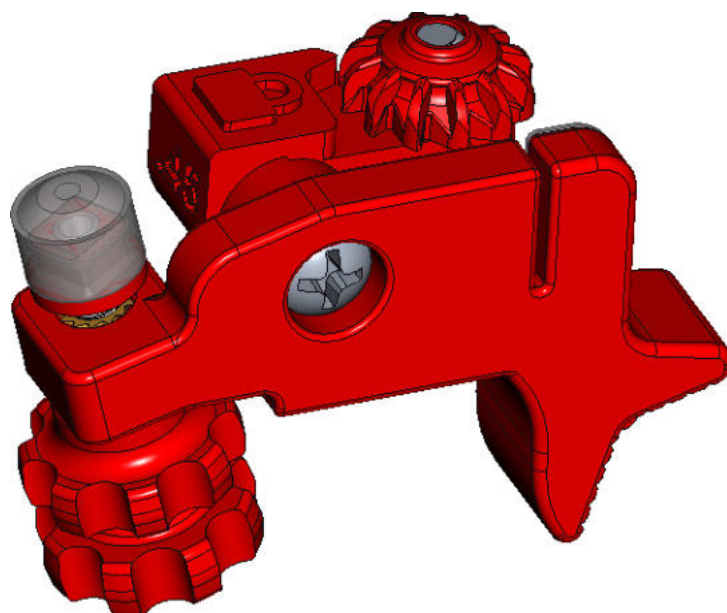


SILICONE
LUBRICATION
PORT

WEIGHT IN OZ.
N/A


DRAWN BY: A KEY	SCALE 2.000	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER					
CHECKED BY:	DATE Jul-27-25	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.		.01	.005	.5	HEAT TREAT: N/A	MODEL: ROCKET
.XX	.XXX	ANG.									
.01	.005	.5									
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 20F2		DRAWING # 700362-02					

ITEM	QTY	PART #	DESCRIPTION
1	1	700244-01	ASSY, RH REEL MNT BRACKET
2	1	700246-01	ASSY, HONEYCOMB KNOB 1.00
3	1	700346-01	ASSY, BARREL KNOB
4	2	92196A146	SCREW, SHCS SS 6-32 X .375

REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

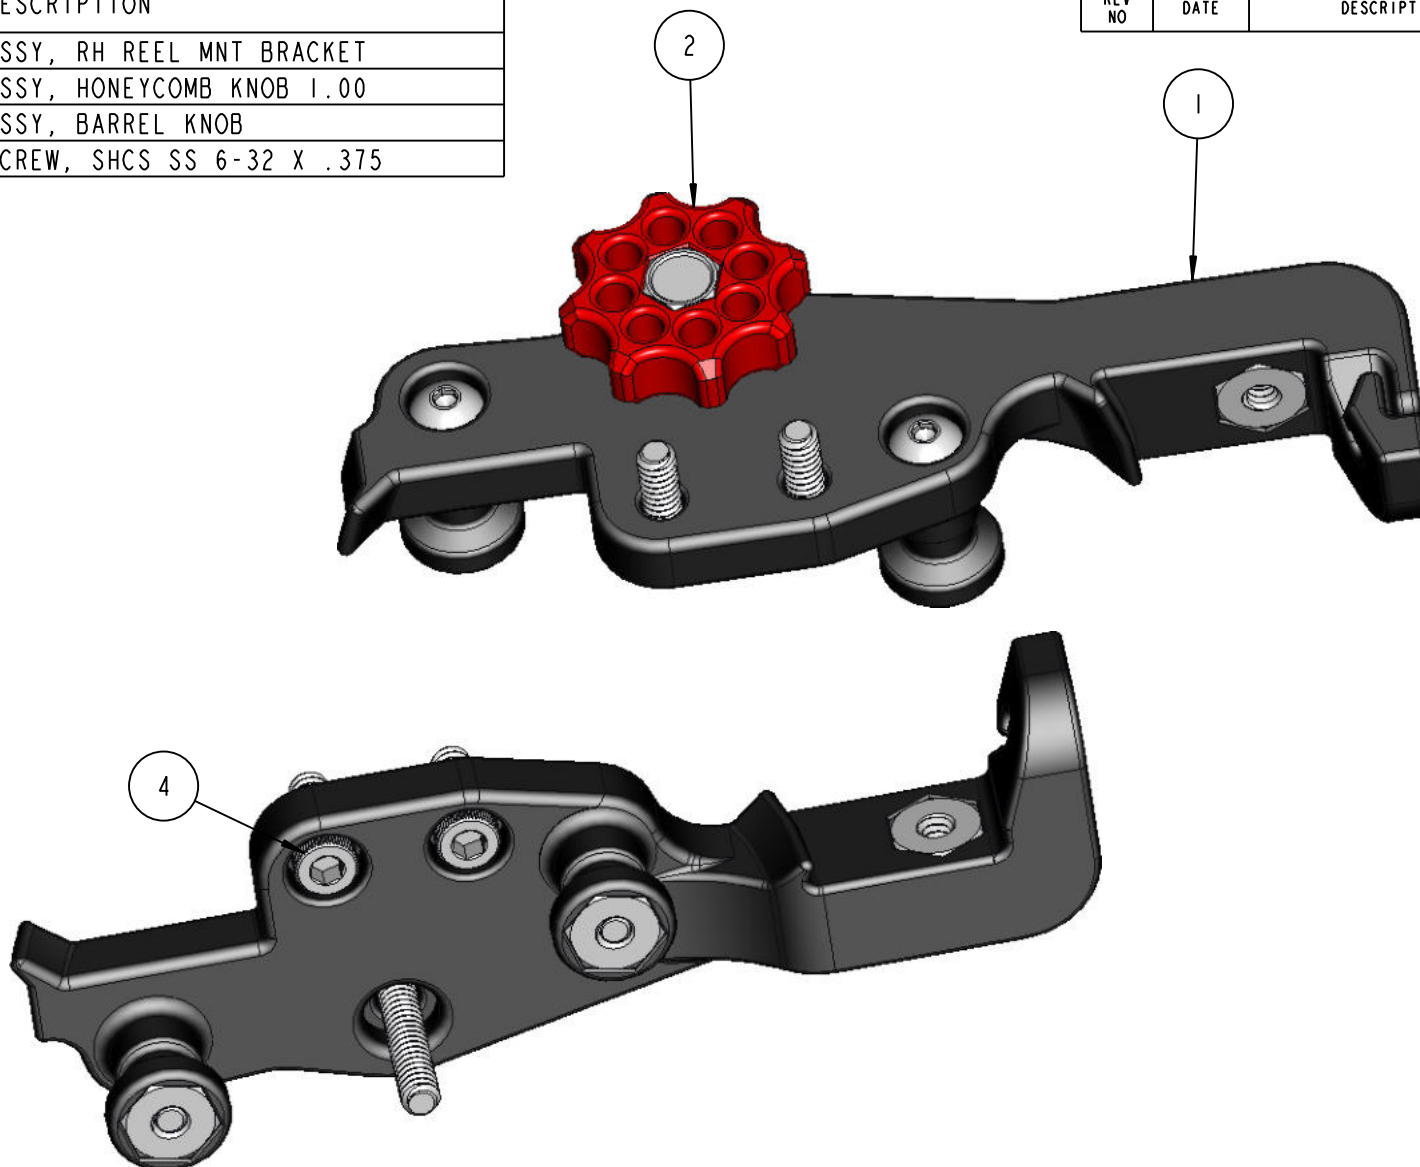


WEIGHT IN OZ.
N/A

DRAWN BY: A KEY	SCALE 1.500	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED <table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table> REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	.XX	.XXX	ANG.	.01	.005	.5	MATERIAL: N/A		PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	
.XX	.XXX		ANG.									
.01	.005		.5									
CHECKED BY:	DATE Apr-08-26	HEAT TREAT: N/A	MODEL: ROCKET	TITLE: ASSY, RH REEL/MNT BRACKET								
TRACED BY:	MASTER	FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700247-01							

ITEM	QTY	PART #	DESCRIPTION
1	1	700199-04	CLIP, BELT
2	1	700365-01	ASSY, REEL CLIP MOUNT


REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

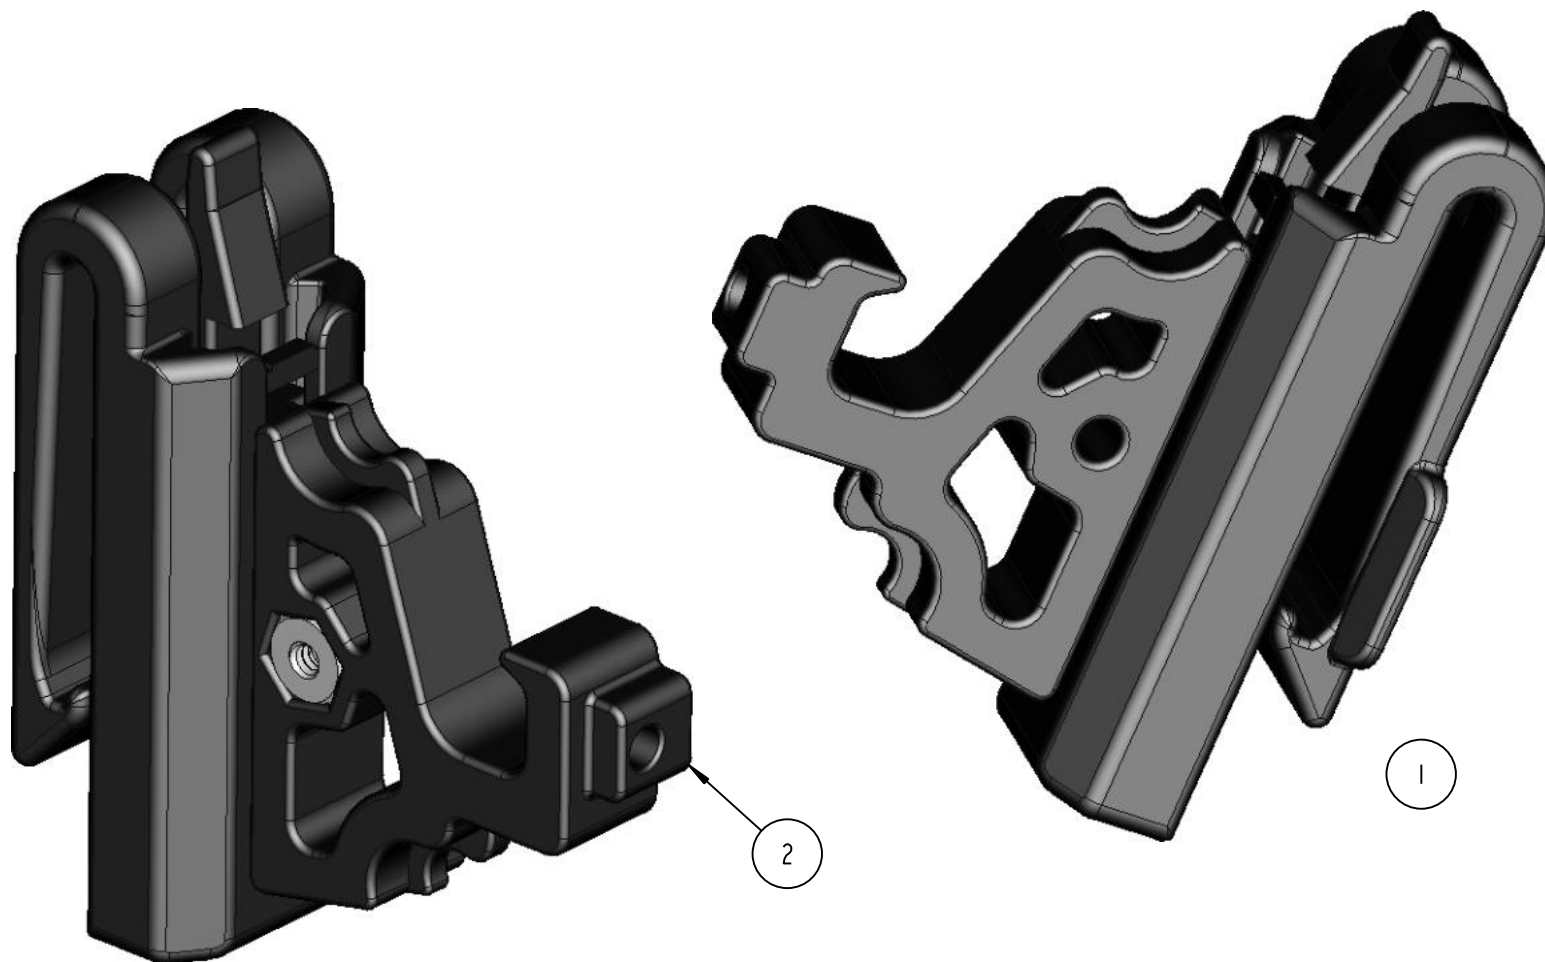



WEIGHT IN OZ.
N/A

DRAWN BY: A KEY	SCALE 1.500	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER						
CHECKED BY:	DATE May-09-25	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.	.01	.005	.5	HEAT TREAT: N/A	MODEL: ROCKET	TITLE: ASSY, ROCKET REEL BELT CLIP	
.XX	.XXX	ANG.										
.01	.005	.5										
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 1		DRAWING # 700360-01						

REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----

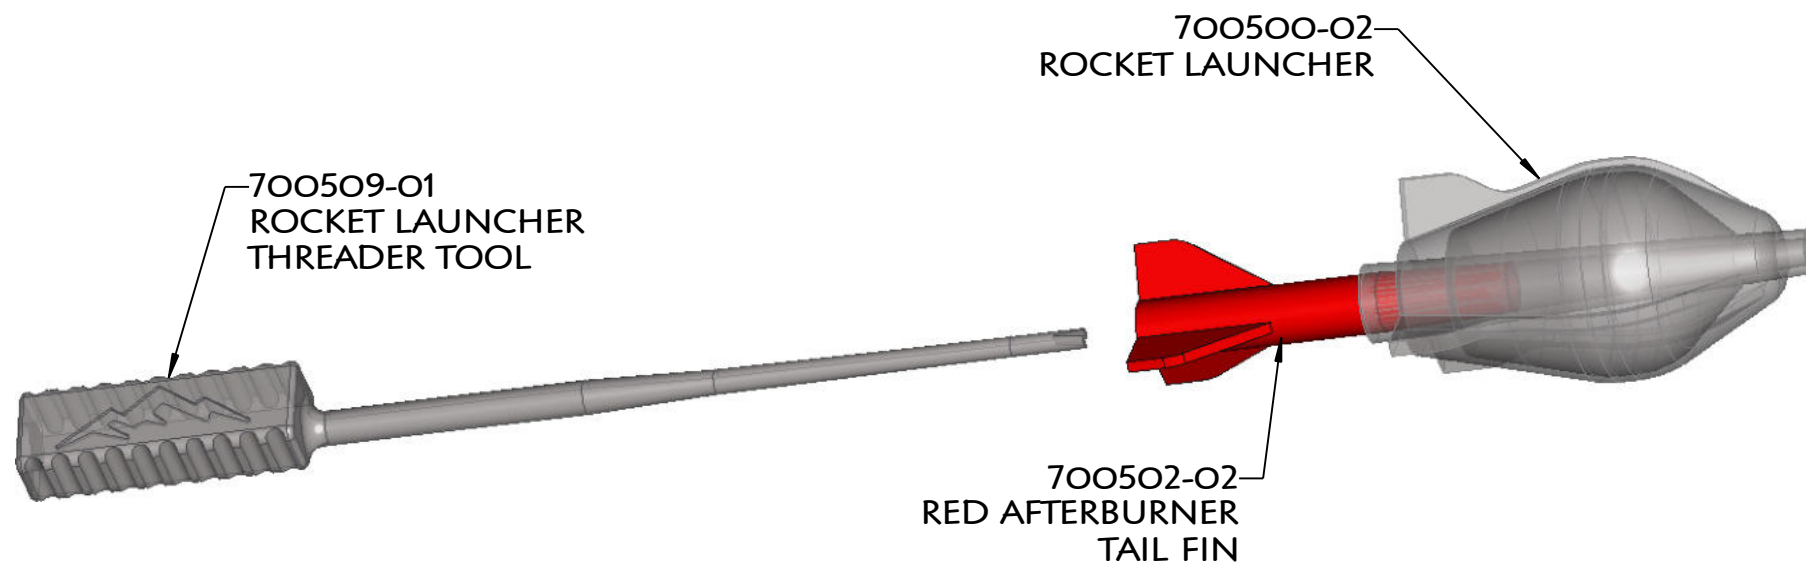

WEIGHT IN OZ.
.35

DRAWN BY: A KEY	SCALE 1.000	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED <table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table> REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	.XX	.XXX	ANG.	.01	.005	.5	MATERIAL: N/A		PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	
.XX	.XXX		ANG.									
.01	.005		.5									
CHECKED BY:	DATE Jul-18-26	HEAT TREAT: N/A	MODEL: LAUNCHER	TITLE: ASSY, ROCKET LAUNCHER								
TRACED BY:	MASTER	FINISH: N/A	SHEET NO.: 1 OF 3		DRAWING # 700500-02							

Trick Out Your Rocket Reel: Optional Gear for Overachievers

Reel Rack: Hands-Free Fishing, Anywhere

Turn any camp chair or pole into your personal fishing throne with the Reel Rack! This ultralight mount securely holds your Rocket Reel in place while you kick back and relax. The positive trigger mechanism gives you lightning-fast release when it's time to fight that fish. Super lightweight, rock-solid, and ridiculously convenient—because your hands deserve a break too.



Yak Rack: Your Kayak's New MVP

The Yak Rack turns your kayak into a fully loaded fishing machine! It mounts your Rocket Reel and Tackle Toter tackle box right into standard T-slots—no drilling, no fuss. With the same trusty trigger mechanism as the Reel Rack, plus a quick-lock sliding arm to secure your tackle box, everything stays put even when the action heats up. The articulated mount adjusts to your setup and pops off quickly when it's time to pack up. Paddle, cast, conquer—yak-style.



Tackle Toter: Your Belt-Mounted Bait Boss

Meet the Tackle Toter—the tactical-grade tackle box that does it all. Your Rocket Reel snaps apart and mounts right to the front, making you ready to cast at a moment's notice. It clips onto quick-release belt mounts, fits standard MOLLE webbing like a glove, and connects seamlessly to the Yak Rack or Tack Rack for kayak or camp chair fishing. Use it while strapped to your belt like a true backcountry commando. Available in five models with up to 12 individually covered compartments—because organized chaos is still chaos.



Tack Rack: Your Chair's Tackle Sidekick

The Tack Rack keeps your Tackle Toter right where you need it—mounted to your camp chair or any round pole for hands-free, hassle-free access. It's ultra-lightweight, packs down easy, and holds your tackle box snug so it won't budge... until you want it to. Sit back, relax, and let your chair do the organizing.



Timber Tickler: One Handle, Endless Possibilities

Meet the Timber Tickler—the ultralight backpacking saw that moonlights as your Rocket Reel handle. Designed for serious weight savers, it breaks down to blade-length size for compact carry. With five scabbard-style sheath options (6", 9", and 12" blades available), it attaches to the same quick-release belt clip as your other RRG gear. The handle snaps to the sheath and locks tight with a clever wedge system—no wiggle, all wow.


One handle + multiple blade sheaths = one smart, versatile saw that saves pack space *and* cash.



Optional Kits for the Rocket Reel Handle: The Timber Tickler Saw Collection

Alright, you gear-head, ready to kick your outdoor adventures up a notch? We know you're all about getting things done with style and efficiency—enter the Timber Tickler saw kits. Paired with your trusty Rocket Reel handle, these saws transform you from fisherman to full-on woodsman in no time. Whether you're clearing a trail, trimming branches, or prepping firewood, these kits have you covered.

Check out the Timber Tickler saws that turn your Rocket Reel into the ultimate outdoor multi-tool:

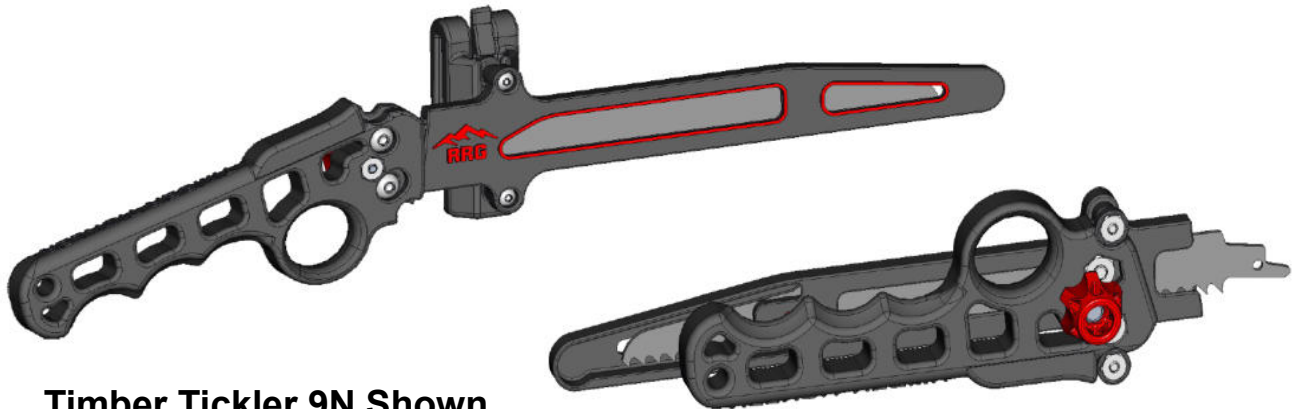


Timber Tickler 9N Shown
(Rocket Reel Handle + Timber Tickler
9N Kit)

1. 700349-01: The Timber Tickler 6N Kit - The Pruning Pro

Total 6N saw weight: 3.3 oz


- **Kit Includes:** 6" narrow pruning blade, barrel knob, lightweight sheath and belt clip, and an attitude that says, "I've got this."
- **Perfect For:** Quick, precision cuts on smaller branches or delicate pruning tasks. Think of it as your pocket-sized ninja for when you need to clean up those overgrown bushes or trim the campfire prep without making a mess.
- **Additional Features:** The 6N's narrow blade is perfect for controlled, precise cuts. It's like a scalpel for trees—except, you know, tougher and way more fun to use.

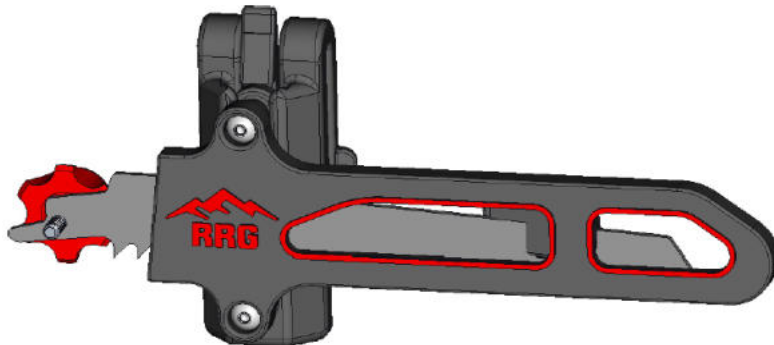

2. 700341-01: The Timber Tickler 9N Kit - The Classic Pruner

Total 9N saw weight: 3.8 oz


- **Kit Includes:** 9" narrow pruning blade, barrel knob, lightweight sheath and belt clip and a grip so comfy you'll wonder why all tools aren't made like this.
- **Perfect For:** General pruning tasks, clearing branches, and taking care of those not-so-little limbs. It's the saw you'll grab for everything from trail work to making space for your tent.
- **Additional Features:** The 9N gives you a solid mix of power and finesse, making it perfect for tasks that need a little extra reach but still require precision.

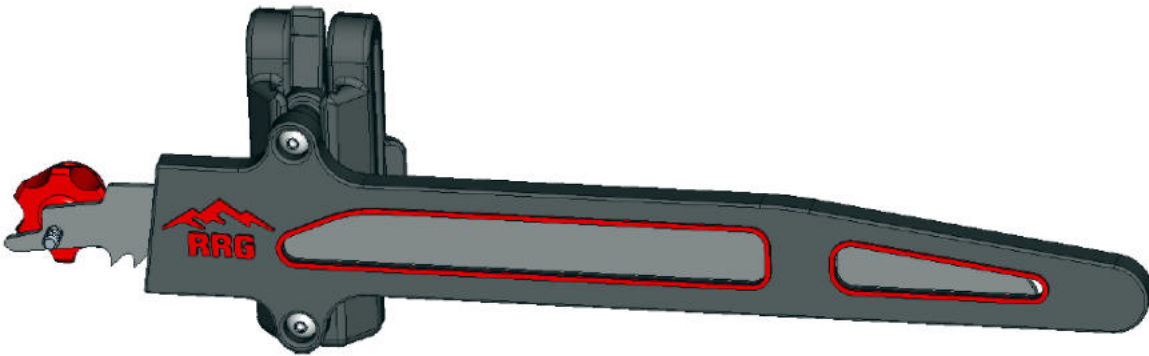

3. 700343-01: The Timber Tickler 12N Kit - The Long Reach

Total 12N saw weight: 4.9 oz

- **Kit Includes:** 12" narrow pruning blade, barrel knob, lightweight sheath and belt clip, and a build that's just the right amount of rugged.
- **Perfect For:** When you need to cut through thicker branches but still want that finesse. The 12N handles larger limbs but still provides the precision you need for controlled cuts.
- **Additional Features:** With a longer blade, this saw lets you reach further while keeping your cutting power sharp and steady. It's the perfect balance between strength and precision.

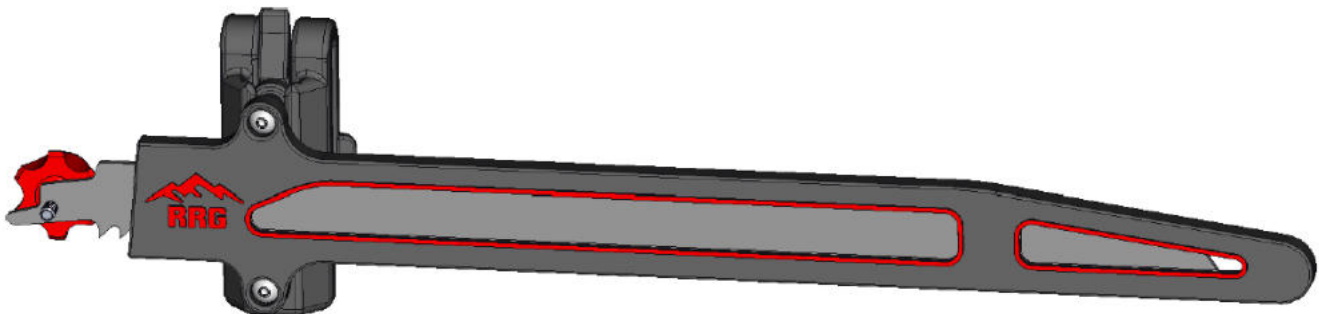

Why Choose the Timber Tickler Saw Kits?

- **Versatility:** Turn your Rocket Reel handle into a forest-clearing beast. Swap from fishing to brush-busting in seconds, all while using the same Ridge Runner belt clip system for easy carry. The handle fits any reciprocating saw blade or attachment—perfect for camping, backpacking, trimming hedges, slicing metal, or fending off the inevitable alien invasion.
- **Portability:** The Timber Tickler handle snaps onto the sheath, making the handle and sheath the same length as the blade. This nifty design provides a tight wedge that grips backpack pockets, so you won't have to worry about the saw slipping out or taking up extra space. It's compact, lightweight, and ready to go—whenever you need it.
- **Durability:** Built tough to last through your wildest adventures (and maybe a few questionable decisions), the Timber Tickler saws can handle anything the outdoors throws your way.
- **Ease of Use:** No need for complicated instructions. Just slip the saw into your Rocket Reel handle, tighten the barrel knob and you're good to go. You'll be chopping in no time.
- **Finger Protection:** The ergonomic grip keeps your pointer safe from rocks, roots, and all the other trail nasties when cutting low. No more knuckle-busting cuts—just clean, smooth strokes. The handle even gives you two thumb-rest options: barrel knob or top thumb pad. And when the sawing's done, that guard doubles as a perfect prop for practicing your best gunslinger spin. Just don't challenge the camp cook to a duel.
- **Lightweight Power:** The Timber Tickler is feather-light but loaded with features. It might be easy to carry, but it cuts like a heavyweight champ—keeping you fast, efficient, and unstoppable on the trail.
- **No Saw-Wobble:** The handle comes with an adjustment screw that locks the saw blade in place, so no more worrying about your blade going rogue while you're in the middle of a big cut. It's like having a tool that actually behaves itself—what a concept!

Get Your Timber Tickler Saw Kits Today!

Don't get caught without the right tool. Whether you're pruning, clearing, or chopping your way through the wild, the Timber Tickler saw kits are here to make it easier. From narrow precision cuts to heavy-duty action, there's a Timber Tickler saw for every job.

Note to self: Clean your saw blades after every use. A sharp saw is a happy saw, and happy saws make happy campers.

Now get out there and give those branches the business—because with the Timber Tickler saw kits, the only thing that'll be left standing is you!

Legal Notices & Policies

Copyright & Use Disclaimer

All content, images, instructions, and designs in this manual are the property of Ridge Runner Gear. Unauthorized reproduction, distribution, or commercial use of any part of this manual or product design is not permitted without written permission.

© 2025 Ridge Runner Gear. All rights reserved.

Liability Disclaimer

Ridge Runner Gear assumes no responsibility for any injury, damage, or loss resulting from the use or misuse of the Rocket Reel. Users are responsible for reading and following all instructions provided in this manual. Fishing—especially the backwoods, hand-line variety—involves inherent risks, including but not limited to tangled line, accidental hook sets, splash zone mishaps, and the occasional fish story that gets way out of hand. Always exercise caution and use the Rocket Reel at your own risk. If you end up explaining to your buddy how you “nearly reeled in a snapping turtle the size of a truck tire,” that’s on you.

Limited Warranty

Ridge Runner Gear warrants the Rocket Reel to be free from defects in materials and workmanship under normal use for a period of 90 days from the date of purchase. This warranty applies only to the original purchaser and does not cover damage caused by misuse, abuse, modifications, improper maintenance, or normal wear and tear.

If a defect arises during the warranty period, Ridge Runner Gear will, at its discretion, repair or replace the defective part with proof of purchase. To submit a warranty claim, contact us at: www.rgruntheridge.com

Return Policy

If you're not completely satisfied with your Rocket Reel, you may return it within 30 days of purchase for a full refund or exchange. All returns must include an RMA (Return Merchandise Authorization) number. Items must be returned in unused condition with original packaging.

Return shipping is the responsibility of the customer unless the product arrived damaged or defective. To initiate a return or exchange, contact us at: www.rgruntheridge.com

A Word on 3D Printing

Our gear is proudly 3D printed, which means you may spot layer lines, tiny gaps, or slight weight differences. These are natural traits of the process and do not affect strength or performance. Color tones may also vary from batch to batch. While Ridge Runner Gear is a function over form company, we still care about aesthetics and hold every product to the highest standards possible. In short: it may not look like it came from a spaceship factory, but it'll perform like it belongs on your next adventure.