



Timber Tickler 6N

by Ridge Runner Gear, LLC

RUN THE RIDGE

(and don't forget your Rocket Reel)

**Operator's Guide for Folks Who Think
Manuals Are Just Fire Starter**



Product Name: Timber Tickler **Brand:** Ridge Runner Gear (RRG)

Model Number: 6N (The 6th wonder of the woods)

Weight: 3.3 oz (Light enough for one hand. Heavy enough to feel manly.)

Dimensions: 14.5" L (9.1" L stored) x .5" W x 3.0" H (Pocket-sized for pockets that mean business)

Materials: ASA, stainless steel, high-carbon steel (Tougher than grandma's skillet, and twice as sharp.)

Saw Blade: 6" Pruning Reciprocating High-Carbon Saw Blade 6 TPI

What Is This Magical Contraption?

The Timber Tickler is a backwoods wand of wonder disguised as a saw — light enough to hitch a ride on your pack, but mean enough to turn stubborn branches into polite kindling. Some folks call it a pruning saw, others call it overkill; we just call it the fastest way to make a log realize it was born to be firewood.

NOTICE: Reading this manual first is cheaper than replacing fingers, faster than a trip to the ER, and way less embarrassing than explaining to your buddies why the tree looks fine but you're the one limping. Think of it as sharpening your brain before you sharpen your blade.

Why the Timber Tickler is the Sharpest Idea You'll Pack

- ◆ **Versatility** – Turns your Rocket Reel handle into a forest-clearing beast. Swap from fishing to brush-busting in seconds, flip the handle from righty to lefty without breaking a sweat, clip it on your Ridge Runner belt system, and tackle everything from camp chores to alien invasions.
- ◆ **Portability** – Snaps together to blade length, packs tight, and weighs next to nothing — unlike your buddy's overstuffed pack of "essential snacks."
- ◆ **Durability** – Built tough enough for epic adventures, bad weather, and at least three questionable decisions you'll pretend were "on purpose."
- ◆ **Ease of Use** – Slide the blade in, twist the barrel knob, and boom—you're sawing. No degree in "Tool Assembly Engineering" required.
- ◆ **Finger Protection** – Grip guards your digits, smart thumb rests, and a built-in excuse to practice your fastest draw.
- ◆ **Lightweight Power** – Feels feather-light on your pack, but cuts like a heavyweight champ in the wild.
- ◆ **No Saw-Wobble** – Adjustment screw keeps your blade locked tighter than a raccoon in a trash can. No rogue wobbling mid-cut—finally, a tool with manners.

About Ridge Runner Gear

At Ridge Runner Gear, we believe you shouldn't have to choose between comfort and capability. Our gear is meticulously engineered for those who seek the serenity of the wilderness without sacrificing the sophistication of well-designed essentials. Whether you're setting up a base camp beneath alpine stars or trekking toward your next breathtaking vista, our products deliver premium performance with minimalist weight. Because luxury isn't about excess—it's about excellence, wherever the trail leads.




We are a faith-based company, guided by Christian values in everything we do—from the way we design our gear to how we serve our customers. We believe the outdoors is one of God's greatest gifts, and we're passionate about helping others enjoy it responsibly and respectfully. That's why we practice Leave No Trace principles and strive to be good stewards of the wild places we love.



Proudly American Made, our gear is built with rugged durability and refined utility for the serious adventurer.

Thank you for supporting our dream and being part of the Ridge Runner journey. With your support, we get to build gear we love—for adventures you'll never forget.

Dimensions

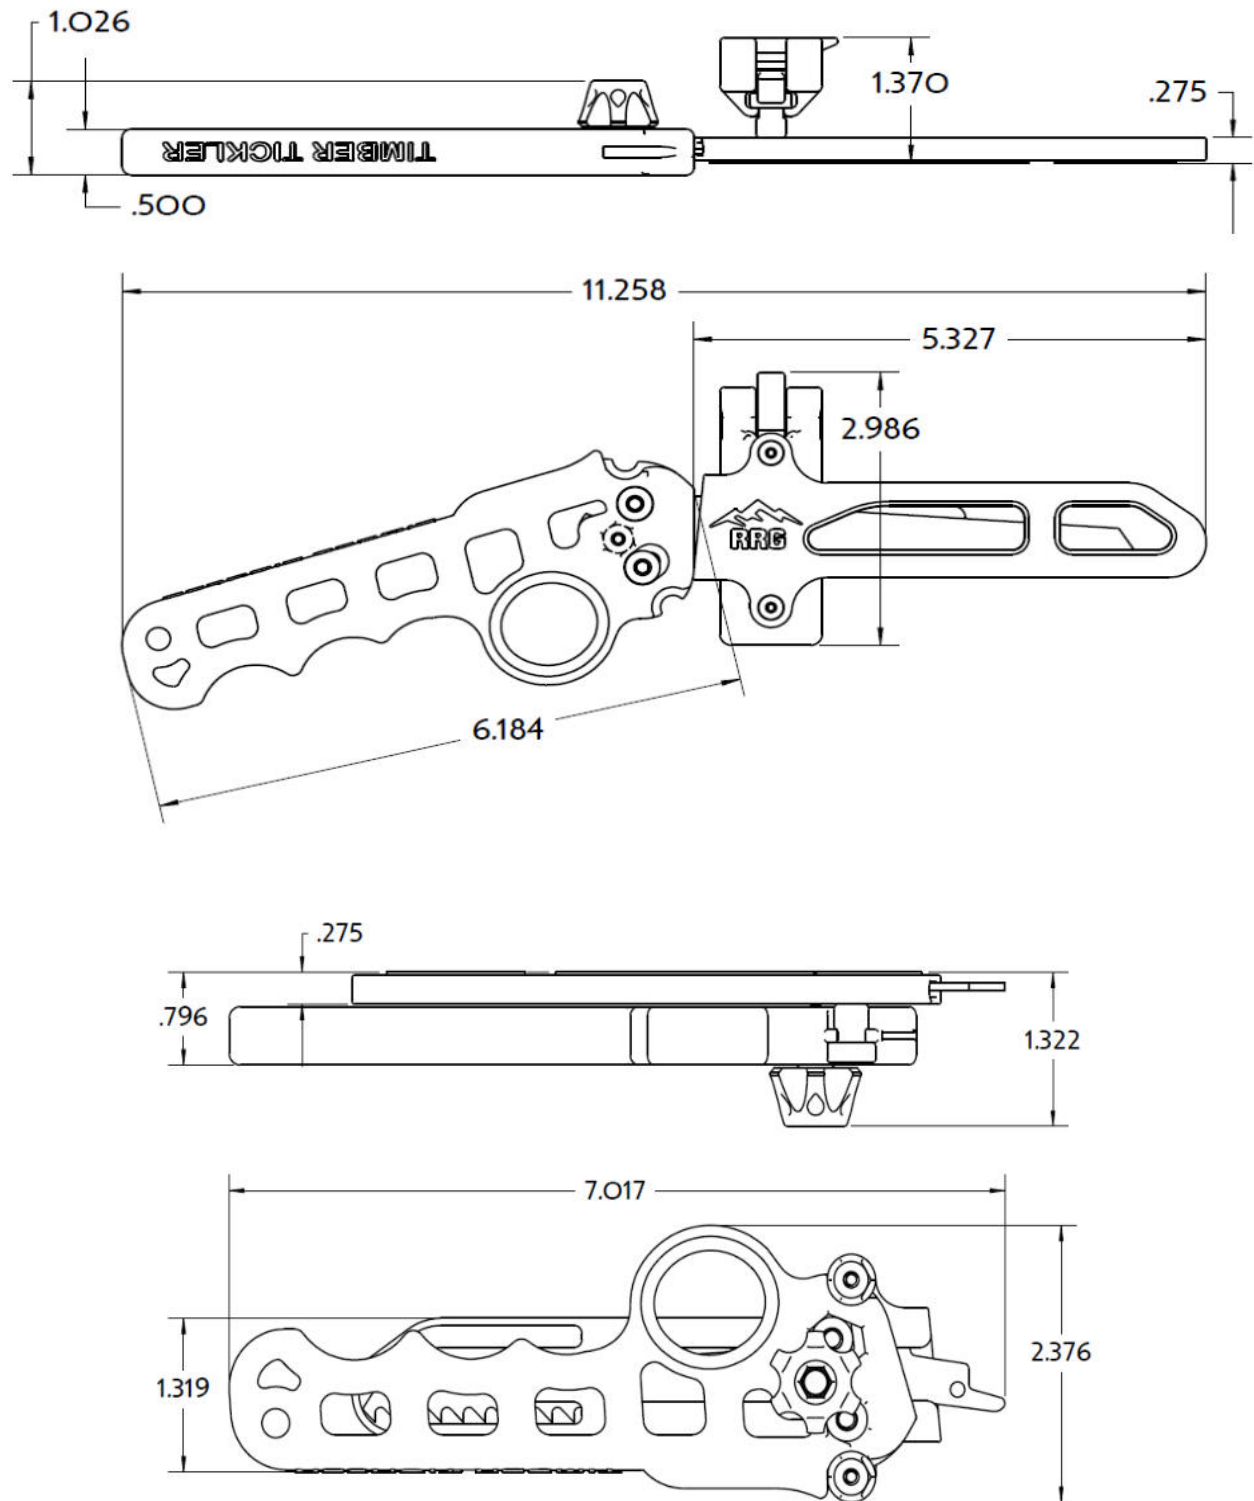

Identification

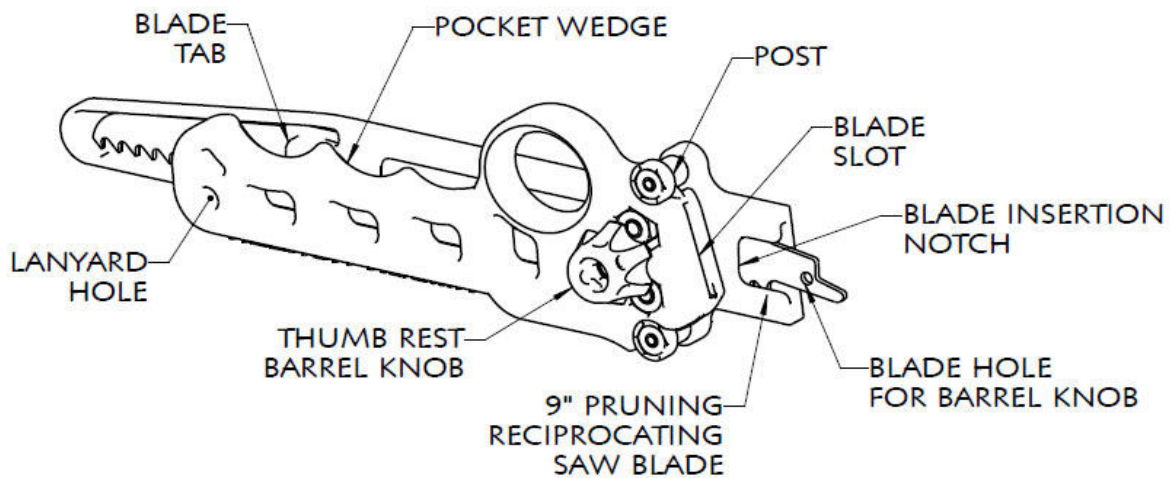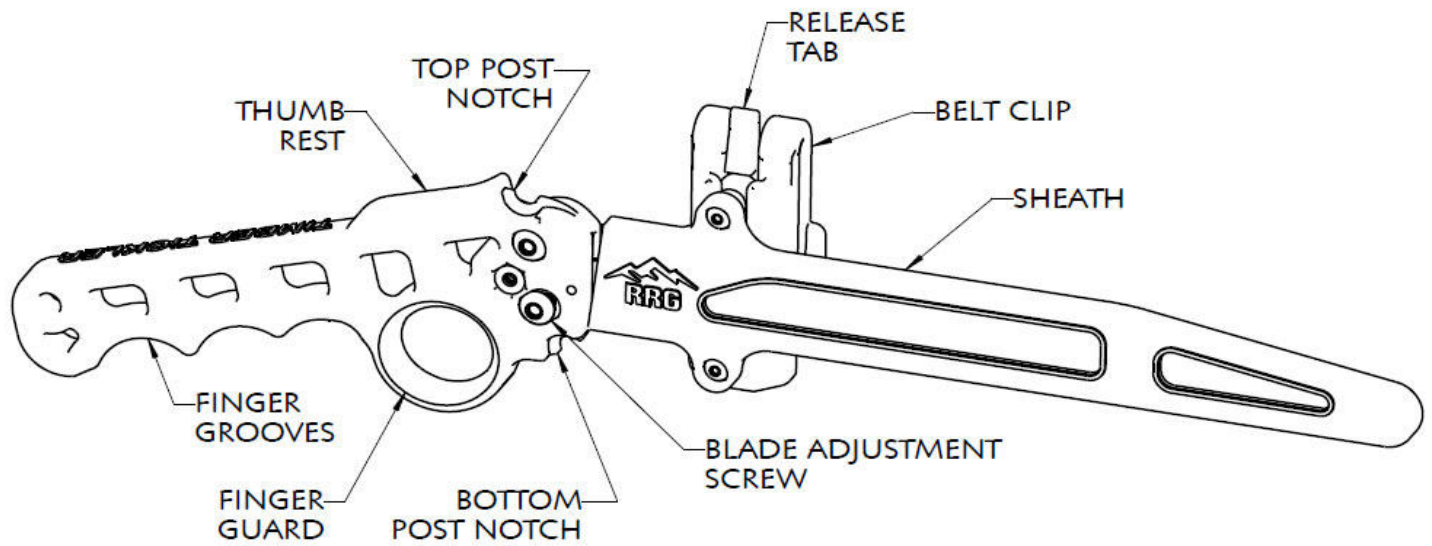

Assembly Instructions (a.k.a. How Not to Lose a Finger Before You Even Start)

- ◆ Twist the handle off the sheath posts clockwise, counter-clockwise, or however your mountain brain decides — it works both ways, so you can't mess this one up.



- ◆ Remove the barrel knob. Remember: lefty loosey, righty tighty... unless you're holding it upside down, then good luck.
- ◆ Slide the blade out of the sheath a couple inches.
- ◆ Grip blade and sheath together in your left hand.
- ◆ Slide the blade into the handle, lining up the holes like a backwoods carnival game. Points for first try.



- ◆ Screw the barrel knob back in tight enough to hold the blade, but not so tight you invent new swear words.
- ◆ Push the saw all the way back into the sheath.

- ◆ Jam both sheath posts into the top of the belt clip until it clicks.




Disassembly Instructions (a.k.a. Reverse Shenanigans)

- ◆ Remove the sheath from the belt clip. Push in on the release tab at the top.



- ◆ Unscrew the barrel knob. (Lefty loosey again, unless you forgot which way's left. In that case, try both until it works.)

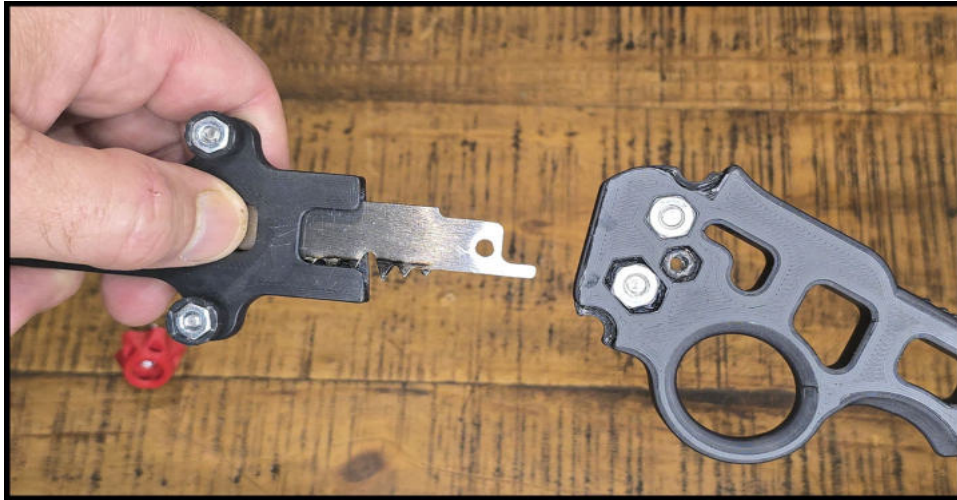

- ◆ Pull the blade out of the handle. Keep fingers clear unless you've always dreamed of a nickname like "Stumpy."
- ◆ Slide the blade back into the sheath.
- ◆ Screw the barrel knob back into the handle.
- ◆ Reattach the handle to the sheath posts. Twist whichever way feels natural. If it falls off, congratulations, you found the wrong way.
- ◆ Pull the lanyard bungee over the end of the blade — keeps the saw from sliding out,



- ◆ Bask in the glory of a job well done — or at least "done enough" to keep the blade from greeting your leg on the hike out.

Congratulations, You Survived Assembly and Disassembly!

If you're reading this, that means you managed to put the Timber Tickler together without losing any fingers, swearing too loudly, or inventing new curse words the squirrels are now repeating. Well done!

You are now the proud owner of a saw that laughs at twigs, scoffs at branches, and politely suggests to logs that they rethink their career choices. Whether you're clearing campfire fuel, blazing a trail, or just looking for an excuse to show off in front of your hiking buddies, the Timber Tickler has your back.

So strap it on, saw safe, and remember: if it feels like you're working too hard, you're probably doing it wrong... or trying to cut through a rock.

No More Blade Boogie: Adjusting the Anti-Wobble Screw


- ◆ With the blade still tucked safe in its sheath, press the tip down on a flat surface.
- ◆ Grab a 1/8" hex wrench, loosen the 10-32 button head screw, and slide it snug up against the blade like you're tucking it in for bed.




- ◆ Tighten that screw down, then give the blade a wiggle test. If it still dances, repeat the process until the party's over.

Where to Park Your Thumb (Two Options, Both Classy)

- ◆ **Option 1:** Rest your thumb on the top thumb pad — steady, controlled, and perfect for those “I know what I’m doing” cuts.

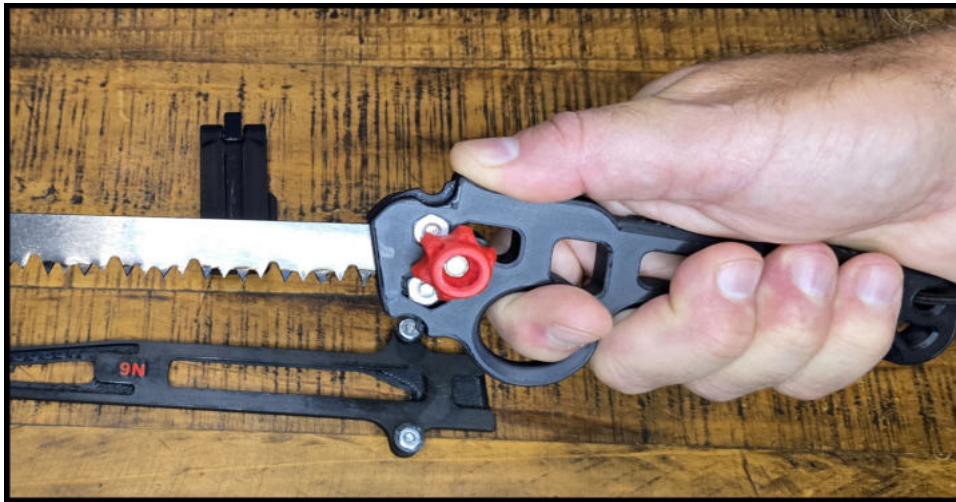


- ◆ **Option 2:** Or, go full gunslinger and plant that thumb right on the barrel knob. It's rugged, comfortable, and makes you look like you've been sawing since birth.

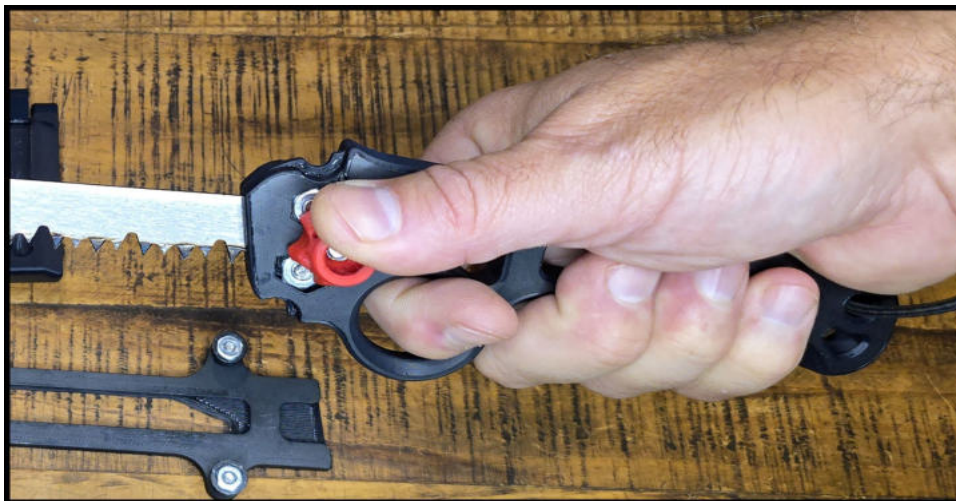

Righty to Lefty: Flipping Your Timber Tickler Handle

- ◆ Use the barrel knob to pry out the 6-32 nut from the handle (see left picture below).

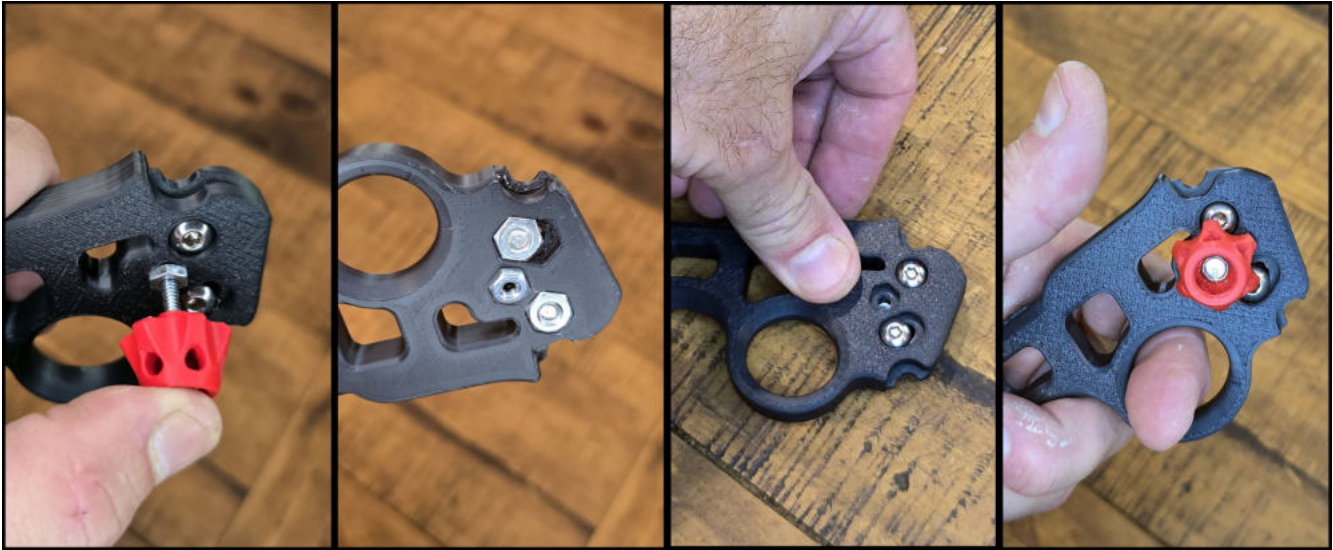

- ◆ Drop that 6-32 nut into the opposite nut pocket, giving your southpaw friends a fighting chance.
- ◆ Press the nut into place by setting the handle on a flat surface and pushing down until it seats. Bonus points if you make a grunting noise while doing it.

Congratulations — your Timber Tickler is now ambidextrous... unlike Uncle Carl.

Backwoods Sawing Tips & Tricks

- ◆ **Let the blade do the work:** If you're sweating like a hog at the county fair, you're pushing too hard. Slow down and let the teeth earn their keep.
- ◆ **Pick the right target:** Wood good. Rocks bad. Metal worse. (Aliens... undecided.)
- ◆ **Cut low, cut smart:** Brace the wood, keep your fingers out of the danger zone, and remember — logs don't bleed, but you do.
- ◆ **Saw with rhythm:** Think "banjo strum," not "jackhammer." A smooth back-and-forth keeps the cut clean and your ego intact.
- ◆ **Respect the rebound:** If the saw sticks, don't yank like you're starting an old lawnmower. Ease it out unless you *want* an airborne stick of doom.
- ◆ **Save face (literally):** Never cut above your head unless you enjoy sawdust facials or explaining to your friends why you look like you lost a fight with a raccoon.
- ◆ **Clean up camp cuts:** Nothing says "pro" like leaving behind perfect firewood stacks instead of mangled stumps that look like a beaver quit halfway.

- ◆ **Pocket Power Move:** When parking the handle on the side of the sheath, let that built-in wedge bite your pocket so the saw rides snug instead of making a break for freedom.



Safety Stuff (a.k.a. The Lawyer Made Us Say It)

- ◆ Always wear the wrist strap. Don't be "that guy."
- ◆ Don't test sharpness with your tongue. That's not how taste-testing works.
- ◆ Keep fingers, toes, and any other "wiggly bits" away from the business end of the blade.
- ◆ If it looks like a tree's about to fall on you, step left, step right — just don't stand there admiring your saw.
- ◆ This is a saw, not a backscratcher, flyswatter, or toothpick. Please adjust accordingly.
- ◆ Never cut above shoulder height unless you're auditioning for "America's Funniest Home Videos."
- ◆ If the saw gets stuck, do not yank like you're starting a lawnmower — unless you want surprise lumber flying at your head.
- ◆ Remember: the Timber Tickler was built to chew wood, not your tent poles, trekking poles, or relationships.

Care & Feeding of Your Saw (Because Even Beasts Need TLC)

- ◆ **Keep it clean:** Wipe off sap, dirt, and mysterious goo after each use. (If it's still sticky after cleaning, that's probably peanut butter — not tree sap.)
No chemical warfare: Clean it with mild soap and water. Harsh chemicals are for villains in action movies, not your Timber Tickler.
- ◆ **Dry it off:** Moisture and metal don't get along. If you put it away wet, don't act surprised when it smells like swamp and cuts like pudding.
- ◆ **Check the screws:** Tighten that barrel knob once in a while. A loose blade is basically a boomerang you didn't mean to throw.
- ◆ **Cool it, cowboy:** ASA plastic is tough — UV-resistant, heat-defiant — but it's not a sunbathing lizard. **Do NOT leave your Timber Tickler in a hot car or anywhere hotter than 100°C (212°F)** unless you're testing it for NASA (and no, they won't cover your warranty).
- ◆ **Store smart:** Sheath the saw before stuffing it in your pack. Your backpack, tent, and hiking buddy will thank you.
- ◆ **Respect the edge:** The blade is sharp enough without you “testing” it on your finger. Use wood, not flesh, for experiments.

Need Parts? Want to Chat?

To purchase replacement parts contact us at:
www.rrgruntheridge.com



Final Words of Wisdom

Well, you made it to the end — which means you've either read the whole manual like a responsible outdoors person, or you skipped here hoping for a shortcut. Either way, congrats.

Now it's time to stop reading and start cutting. The Timber Tickler is ready to chew through branches, earn its keep around camp, and maybe win you a little trail cred along the way.

So clip it on, saw safe, and remember: trees fear you now.

Now get out there and tickle some timber!

ITEM	QTY	PART #	DESCRIPTION
1	1	700348-01	HANDLE, TIMBER TICKLER
2	1	700349-01	ASSY, SHEATH 6 INCH NARROW

REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----




WEIGHT IN OZ.
3.3


DRAWN BY: A KEY	SCALE 0.938	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	RIDGE RUNNER
CHECKED BY:	DATE Aug-07-25	.XX .XXX ANG. .01 .005 .5	HEAT TREAT: N/A	MODEL: TIMBER	TITLE: ASSY, TIMBER TICKLER 6 NARROW	
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 1 OF 4	DRAWING # 700381-01	

ITEM	QTY	PART #	DESCRIPTION
1	1	700348-01	HANDLE, TIMBER TICKLER
2	1	700349-01	ASSY, SHEATH 6 INCH NARROW


REV NO	DATE	DESCRIPTION	ECN NO	BY
--------	------	-------------	--------	----

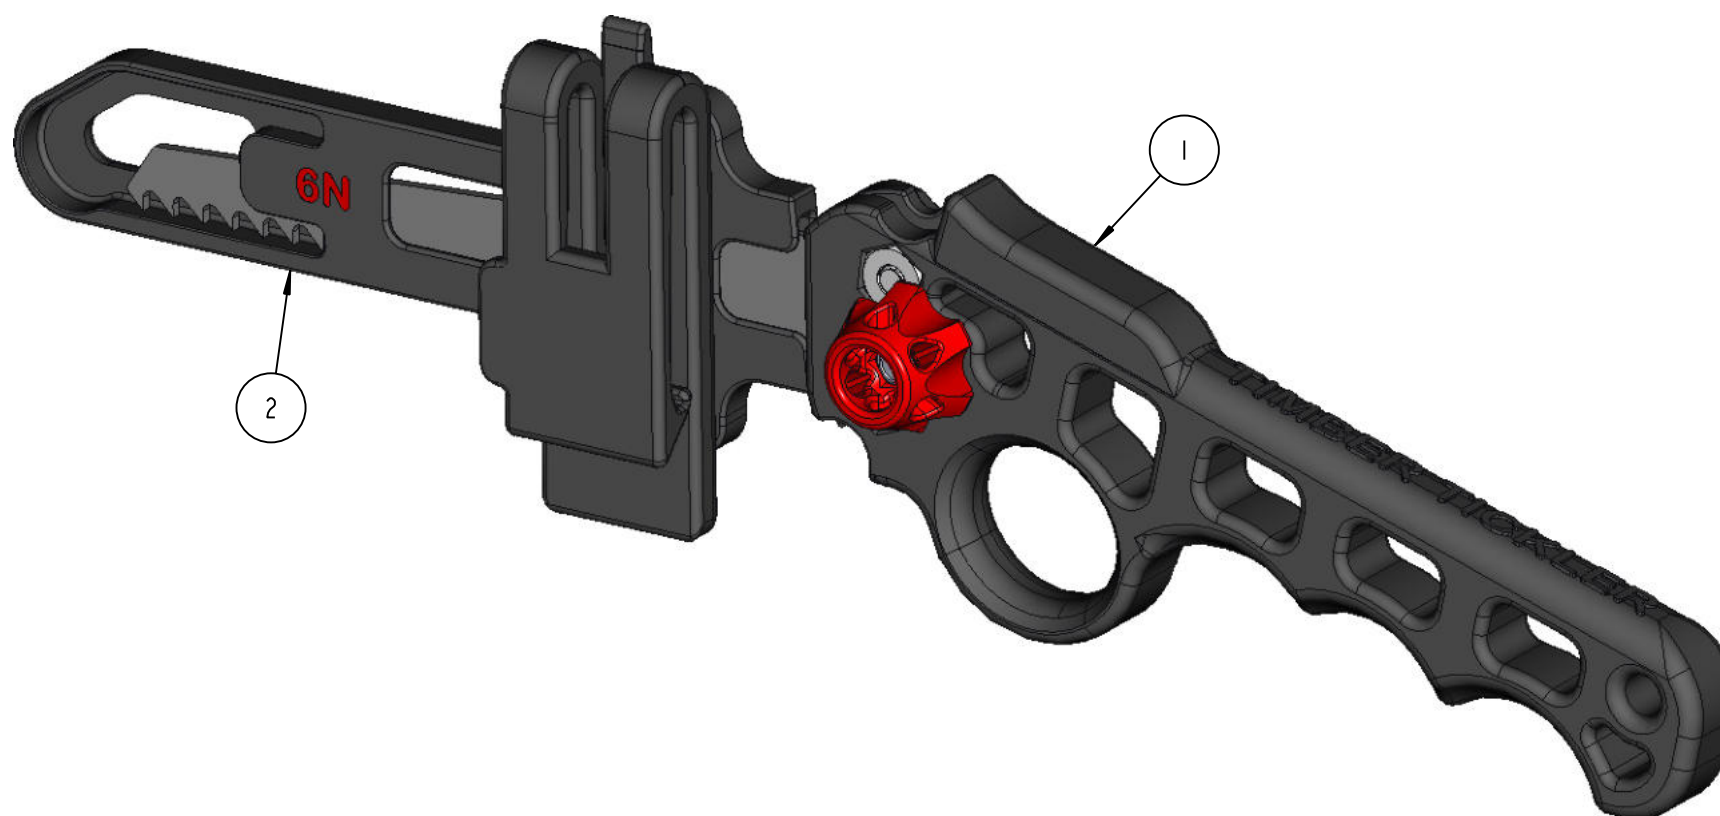


WEIGHT IN OZ.
3.3

DRAWN BY: A KEY	SCALE 0.938	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED	MATERIAL: N/A	THIRD ANGLE PROJECTION 	PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER						
CHECKED BY:	DATE Aug-07-25	<table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table>	.XX	.XXX	ANG.	.01	.005	.5	HEAT TREAT: N/A	MODEL: TIMBER	TITLE: ASSY, TIMBER TICKLER 6 NARROW	
.XX	.XXX	ANG.										
.01	.005	.5										
TRACED BY:	MASTER	REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	FINISH: N/A	SHEET NO.: 20F4		DRAWING # 700381-01						

REV NO	DATE	DESCRIPTION	ECN NO	BY
-----------	------	-------------	-----------	----

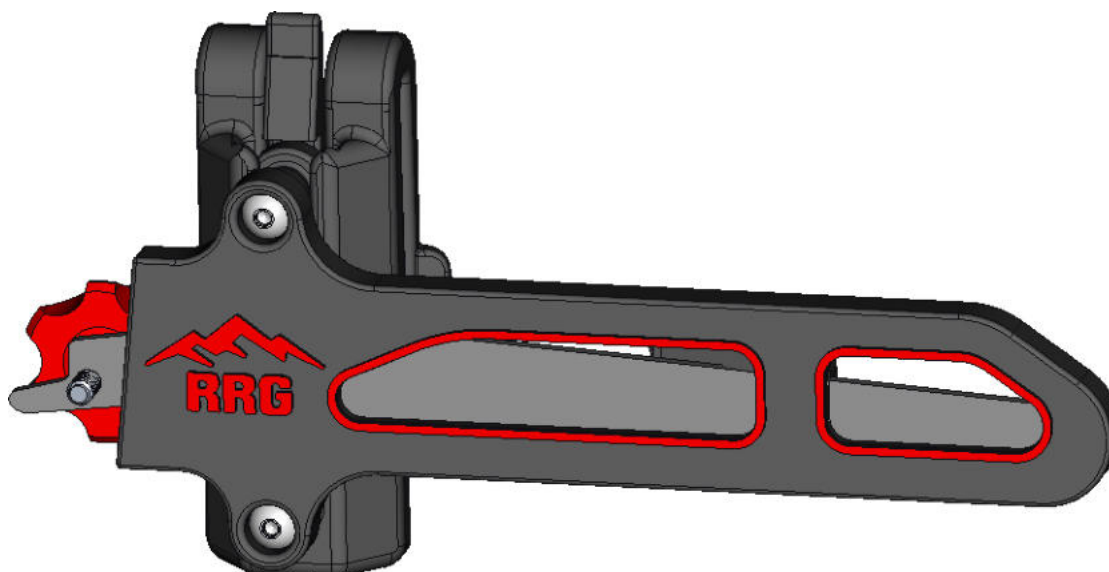

WEIGHT IN OZ.
1.7

DRAWN BY: A KEY	SCALE 1.000	DIMENSIONAL TOLERANCES UNLESS OTHERWISE NOTED <table><tr><td>.XX</td><td>.XXX</td><td>ANG.</td></tr><tr><td>.01</td><td>.005</td><td>.5</td></tr></table> REMOVE ALL BURRS AND SHARP EDGES UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE FINISHED DIMENSIONS DO NOT SCALE - WORK TO DIMENSIONS ONLY	.XX	.XXX	ANG.	.01	.005	.5	MATERIAL: N/A		PROPRIETARY AND CONFIDENTIAL NO PORTION OF THIS DRAWING MAY BE QUOTED OR REPRODUCED IN ANY FORM WITHOUT THE EXPRESS WRITTEN PERMISSION OF RIDGE RUNNER GEAR, LLC. CANTON, GA 30114 USA	 RIDGE RUNNER
.XX	.XXX		ANG.									
.01	.005		.5									
CHECKED BY:	DATE Aug-08-25	HEAT TREAT: N/A	MODEL: TIMBER	TITLE: ASSY, SHEATH 6 INCH NARROW								
TRACED BY:	MASTER	FINISH: N/A	SHEET NO.: 20F2		DRAWING # 700349-01							

Trick Out Your Timber Tickler: Optional Gear for Overachievers

Rocket Reel: Your Cast-Anywhere Ticket to Dinner

Why pack two handles when one will do it all? Clip in the Rocket Reel kit and watch your Timber Tickler handle transform from a branch-busting saw grip into a fish-wrangling reel holder. One minute you're clearing campfire wood, the next you're pulling dinner out of the creek like a backwoods magician. It still fits the Ridge Runner belt clip system, so you can swap from "Paul Bunyan mode" to "Old Man and the Sea" in seconds flat — no toolbox, no hassle, just pure outdoorsy showmanship.



Reel Rack: Hands-Free Fishing, Anywhere

Turn any camp chair or pole into your personal fishing throne with the Reel Rack! This ultralight mount securely holds your Rocket Reel in place while you kick back and relax. The positive trigger mechanism gives you lightning-fast release when it's time to fight that fish. Super lightweight, rock-solid, and ridiculously convenient—because your hands deserve a break too.



Yak Rack: Your Kayak's New MVP

The Yak Rack turns your kayak into a fully loaded fishing machine! It mounts your Rocket Reel and Tackle Toter tackle box right into standard T-slots—no drilling, no fuss. With the same trusty trigger mechanism as the Reel Rack, plus a quick-lock sliding arm to secure your tackle box, everything stays put even when the action heats up. The articulated mount adjusts to your setup and pops off quickly when it's time to pack up. Paddle, cast, conquer—yak-style.



Tackle Toter: Your Belt-Mounted Bait Boss

Meet the Tackle Toter—the tactical-grade tackle box that does it all. Your Rocket Reel snaps apart and mounts right to the front, making you ready to cast at a moment's notice. It clips onto quick-release belt mounts, fits standard MOLLE webbing like a glove, and connects seamlessly to the Yak Rack or Tack Rack for kayak or camp chair fishing. Use it while strapped to your belt like a true backcountry commando. Available in five models with up to 12 individually covered compartments—because organized chaos is still chaos.



Tack Rack: Your Chair's Tackle Sidekick


The Tack Rack keeps your Tackle Toter right where you need it—mounted to your camp chair or any round pole for hands-free, hassle-free access. It's ultra-lightweight, packs down easy, and holds your tackle box snug so it won't budge... until you want it to. Sit back, relax, and let your chair do the organizing.



Don't just hike it — run the ridge at rrgruntheridge.com

The Timber Tickler Saw Collection – Collect Them All

Alright, you gear-head, ready to kick your outdoor adventures up a notch? We know you're all about getting things done with style and efficiency—enter the Timber Tickler saw kits. Paired with your trusty handle, these saws transform you into a full-on woodsman in no time. Whether you're clearing a trail, trimming branches, or prepping firewood, these kits have you covered.

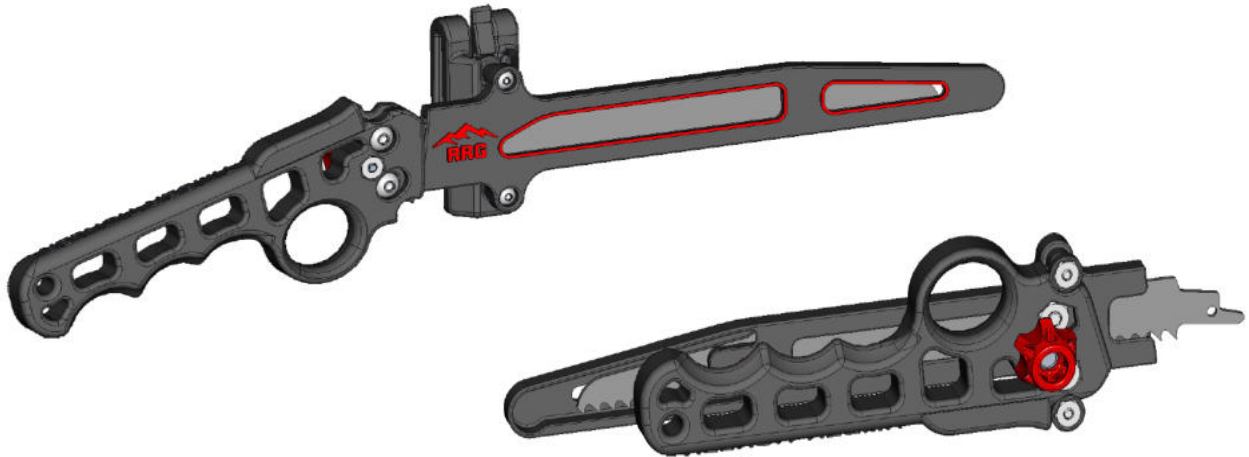


Timber Tickler 9N Shown
(Rocket Reel Handle + Timber Tickler 9N Kit)

1. 700349-01: The Timber Tickler 6N Kit - The Pruning Pro

Total 6N saw weight: 3.3 oz


- **Kit Includes:** 6" narrow high-carbon pruning blade, barrel knob, lightweight sheath and belt clip, and an attitude that says, "I've got this."
- **Perfect For:** Quick, precision cuts on smaller branches or delicate pruning tasks. Think of it as your pocket-sized ninja for when you need to clean up those overgrown bushes or trim the campfire prep without making a mess.
- **Additional Features:** The 6N's narrow high-carbon blade is perfect for controlled, precise cuts. It's like a scalpel for trees—except, you know, tougher and way more fun to use.

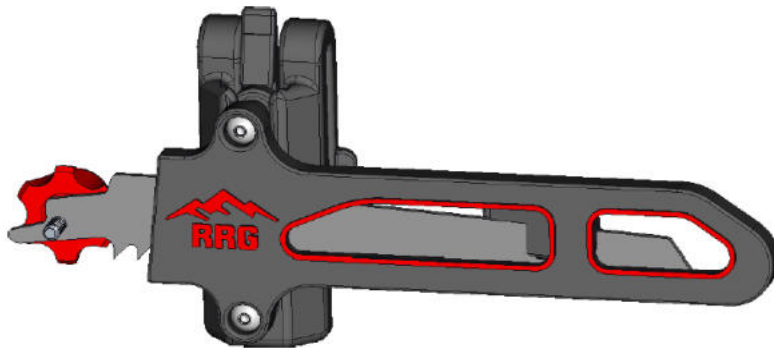

2. 700341-01: The Timber Tickler 9N Kit - The Classic Pruner

Total 9N saw weight: 3.8 oz


- **Kit Includes:** 9" narrow high-carbon pruning blade, barrel knob, lightweight sheath and belt clip and a grip so comfy you'll wonder why all tools aren't made like this.
- **Perfect For:** General pruning tasks, clearing branches, and taking care of those not-so-little limbs. It's the saw you'll grab for everything from trail work to making space for your tent.
- **Additional Features:** The 9N gives you a solid mix of power and finesse, making it perfect for tasks that need a little extra reach but still require precision.

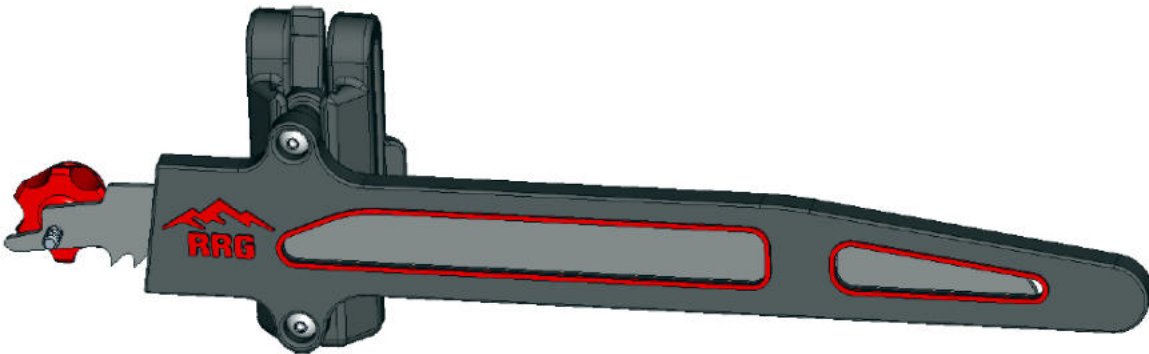

3. 700343-01: The Timber Tickler 12N Kit - The Long Reach

Total 12N saw weight: 4.9 oz

- **Kit Includes:** 12" narrow pruning high-carbon blade, barrel knob, lightweight sheath and belt clip, and a build that's just the right amount of rugged.
- **Perfect For:** When you need to cut through thicker branches but still want that finesse. The 12N handles larger limbs but still provides the precision you need for controlled cuts.
- **Additional Features:** With a longer blade, this saw lets you reach further while keeping your cutting power sharp and steady. It's the perfect balance between strength and precision.

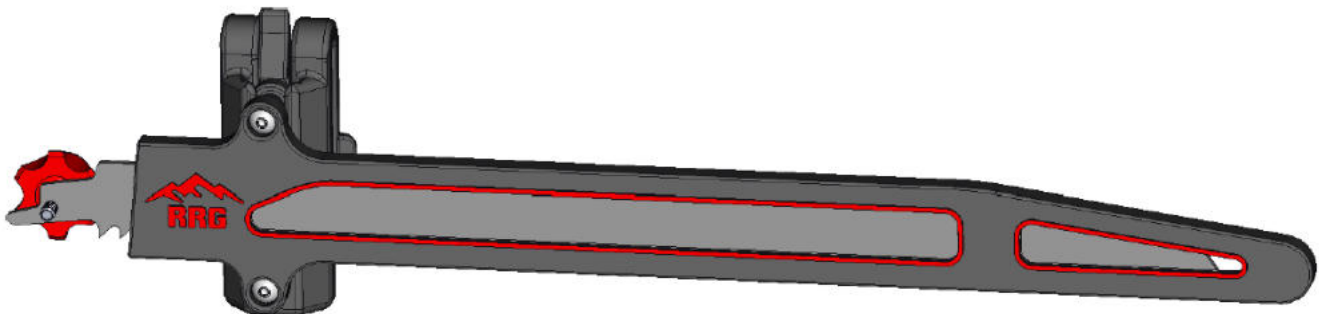

Legal Notices & Policies

Copyright & Use Disclaimer

All content, images, instructions, and designs in this manual are the property of Ridge Runner Gear. Unauthorized reproduction, distribution, or commercial use of any part of this manual or product design is not permitted without written permission.

© 2025 Ridge Runner Gear. All rights reserved.

Liability Disclaimer

Ridge Runner Gear assumes no responsibility for any injury, damage, or loss resulting from the use or misuse of the Timber Tickler. Users are responsible for reading and following all instructions in this manual. Sawing wood in the wild comes with inherent risks—including but not limited to sharp blades, falling limbs, misjudged muscle strength, and unsolicited lumberjack cosplay. Always exercise caution and use the Timber Tickler at your own risk. And no, we're not liable if you try to tickle actual timber and it tickles back.

90-Day Limited Warranty

Ridge Runner Gear warrants the Timber Tickler to be free from defects in materials and workmanship under normal use for a period of 90 days from the date of purchase. This warranty applies only to the original purchaser and does not cover damage caused by misuse, abuse, modifications, improper maintenance, or normal wear and tear.

If a defect arises during the warranty period, Ridge Runner Gear will, at its discretion, repair or replace the defective part with proof of purchase. To submit a warranty claim, contact us at:

www.ridgerunnergear.net

30-Day Return Policy

If you're not satisfied with your Timber Tickler, you may return it within 30 days of purchase for a refund or exchange. The product may be lightly used for evaluation but must be returned in good condition with all included components. Normal signs of reasonable testing are acceptable, but damaged, abused, modified, or incomplete items may be subject to a reduced refund or may not qualify for a refund. Contact Ridge Runner Gear before returning the product to receive an RMA number and return instructions. Return shipping is the responsibility of the customer unless the item arrived damaged, defective, or incorrect. Original shipping charges are non-refundable unless the return is due to an RRG error or covered defect. To initiate a return or exchange, contact us at:

www.ridgerunnergear.net

A Word on 3D Printing

Our gear is proudly 3D printed, which means you may spot layer lines, tiny gaps, or slight weight differences. These are natural traits of the process and do not affect strength or performance. Color tones may also vary from batch to batch. While Ridge Runner Gear is a function over form company, we still care about aesthetics and hold every product to the highest standards possible. In short: it may not look like it came from a spaceship factory, but it'll perform like it belongs on your next adventure.