

BAJAJ
pulsar DTS-i 125

BS VI

Bajaj Auto Limited
Akurdi, Pune - 411 035. India.

Tel : +91 20 27472851

Fax : +91 20 27407385

Customer care : +91 7219821111

Website : www.bajajauto.com

CIN L65993PN2007PLC130076



BAJAJ
pulsar DTS-i 125

BS VI

Spare Parts Catalogue



Notice



All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO.: 71120152

REV. 00 MAR., 20

Copy rights : All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Bajaj Auto LTD.

Foreword



We have pleasure in presenting the Spare Parts Catalogue for '**Pulsar 125 Disc-Drum & Drum-Drum BS VI**' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Service Department
Akurdi, Pune 411 035 India

Instructions



- How to Read the Catalogue :** Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

- How to Order Spare Parts :** The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

- Part Number System :** We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

- Abbreviations :** The following abbreviations are used in this catalogue.

Assly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

Revision No. &
Change Details

BAJAJ
pulsar DTS-i 125

REV. NO., MM YY	PART NUMBER	SHORT DESCRIPTION	QTY.	SR. NO.	PAGE NO.	A: Add D: Delete C: Change	Reason for change

Revision No. &
Change Details

BAJAJ
pulsar DTS-i 125

REV. NO., MM YY	PART NUMBER	SHORT DESCRIPTION	QTY.	SR. NO.	PAGE NO.	A: Add D: Delete C: Change	Reason for change

Revision No. &
Change Details

BAJAJ
pulsar DTS-i 125

REV. NO., MM YY	PART NUMBER	SHORT DESCRIPTION	QTY.	SR. NO.	PAGE NO.	A: Add D: Delete C: Change	Reason for change

Revision No. &
Change Details

BAJAJ
pulsar DTS-i 125

REV. NO., MM YY	PART NUMBER	SHORT DESCRIPTION	QTY.	SR. NO.	PAGE NO.	A: Add D: Delete C: Change	Reason for change

Index



Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	Cylinder Head	4
3	Valve	6
4	Camshaft & Tensioner	8
5	Cylinder & Piston	10
6	Crankshaft	12
7	Transmission	14
8	Balancer & Balancer Idler Gear	16
9	Change Drum & Shaft Fork	18
10	Gear Change Mechanism	20
11	Engine Assembly & Crankcase RH	22
12	Crankcase LH	24
13	Cover Clutch	26
14	Cover Magneto	28
15	Clutch Assembly	30
16	Oil Pump Assembly	32
17	Carburettor Assembly	34
18	Kick Starter Mechanism	36
19	Silencer Assembly	38
20	Air Cleaner Assembly	40
21	EVAP Mechanism	42
22	Magneto, Spark Plug & H.T. Coil	44
23	Starter Assembly	46
24	Frame and Frame Fittings	48
25	Engine Mountings & ECU EMS Assembly	50
26	Swing Arm with Bush / Rear Shock Absorber	52
27	Pillion Foot Rest / Holder	54
28	Rider Foot Rest	56
29	Mudguard - Front & Rear	58
30	Center & Side Stand Assembly	60
31	Tube / Tyre / Rim	62





Index



Plate No.	Description	Page No.
32	Front Wheel Assembly (Disc - Drum)	64
33	Front Wheel Assembly (Drum - Drum)	66
34	Front Master Cylinder Assembly	68
35	CBS - Combined Braking System - For Disc Brake	70
36	Front Brake - Caliper & Disc	72
37	Rear Wheel Assembly	74 - 76
38	Rear Brake Pedal	78 - 80
39	Handle Bar	82 - 84
40	Front Fork	86 - 88
41	Fuel Tank & Fuel Gauge	90
42	Fittings Petrol Tank, Side Cover & Cover Seat	92
43	Seat Assembly & Seat Lock	94
44	Speedometer Assembly	96
45	Cables	98
46	Leg Guards, Saree Guard & Grab Handle	100
47	Chain Case	102
48	Head Lamp & Fairing	104
49	Indicator Light Assembly	106
50	Tail Lamp Assly & Front / Rear Number Plate	108
51	Electrical Equipments	110
52	Tool Kit	112
53	Painted Parts & Decals	114 - 116
54	Consumable Parts	118 - 120
	Kit List	121 - 124
	Part Index	125 - 138





Pictorial Index

BAJAJ
pulsar DTS-i 125

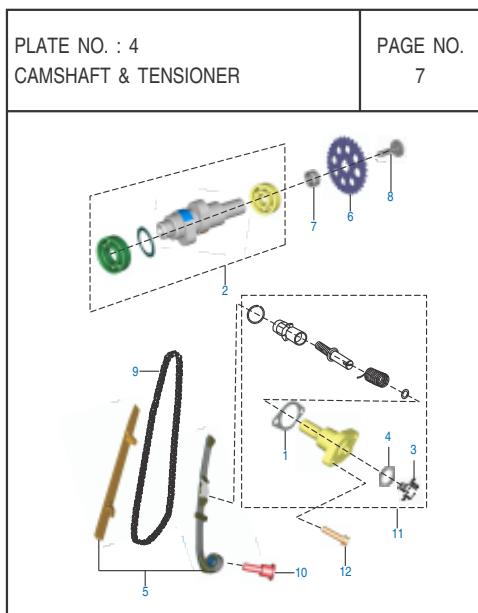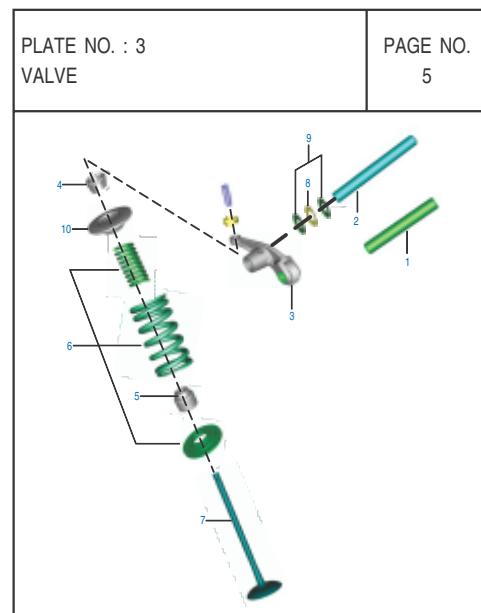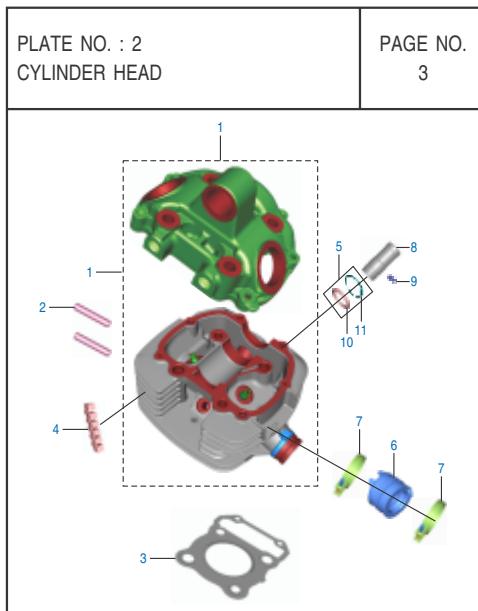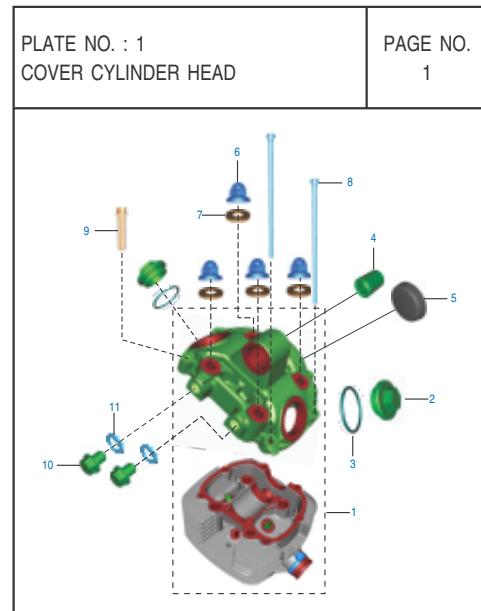





Pictorial Index

BAJAJ
pulsar DTS-i 125

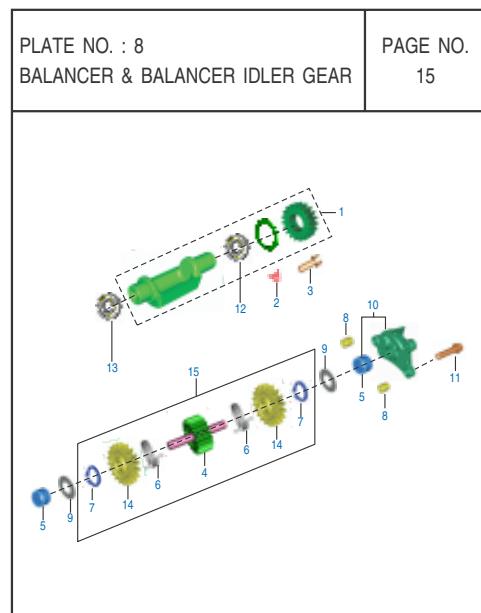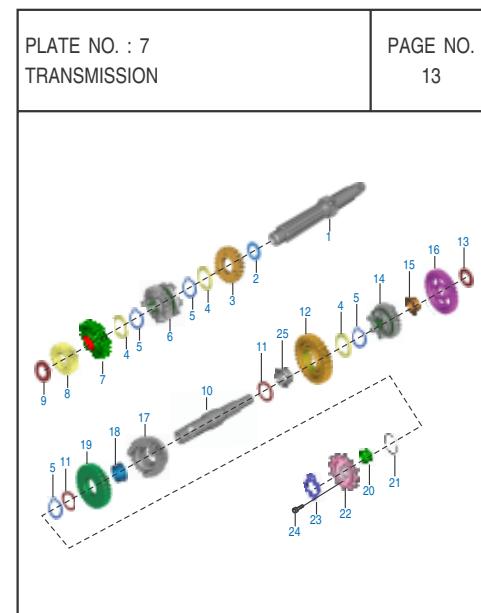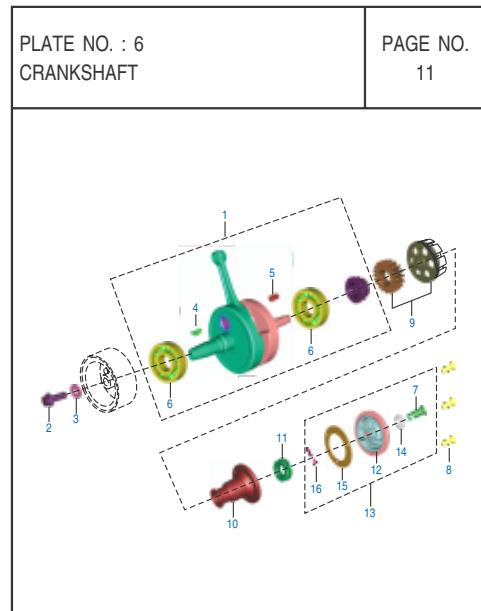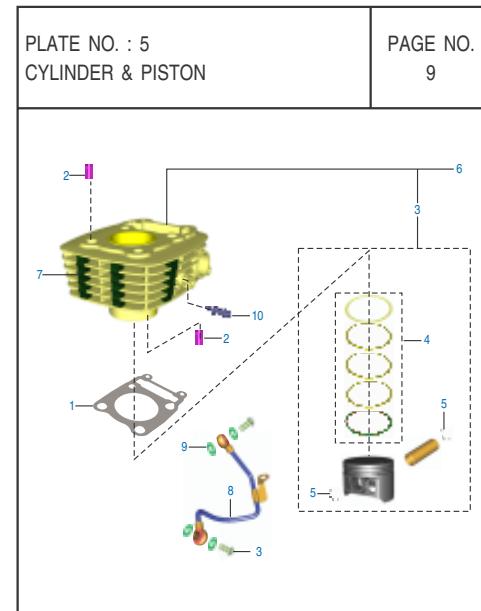





Pictorial Index

BAJAJ
pulsar DTS-i 125

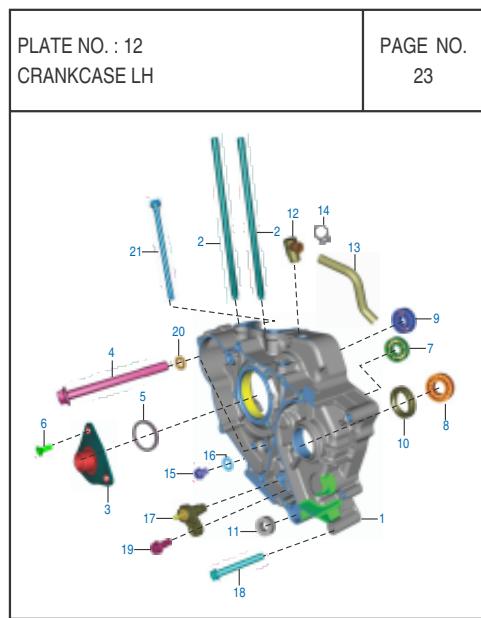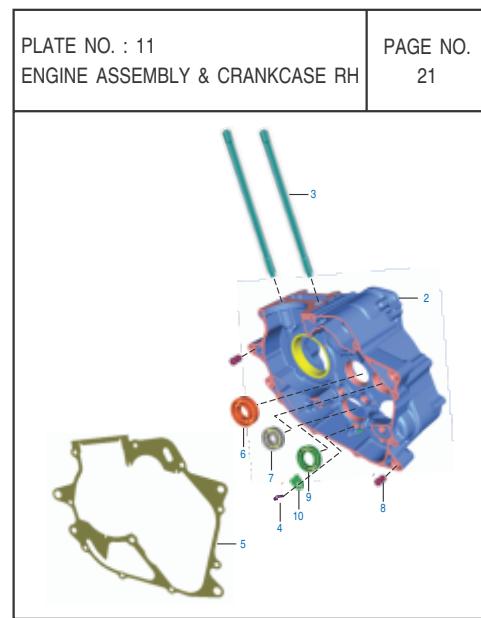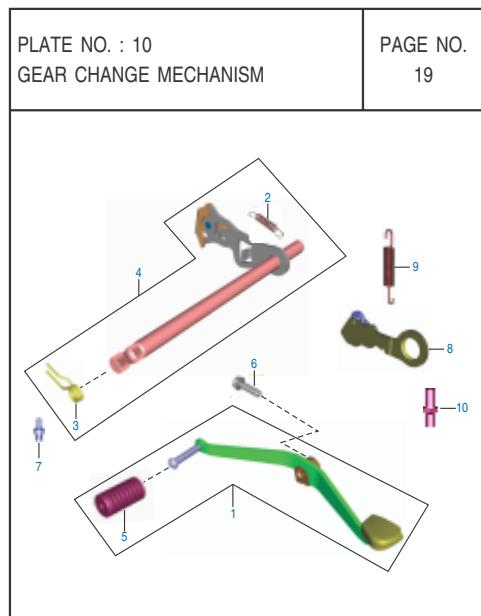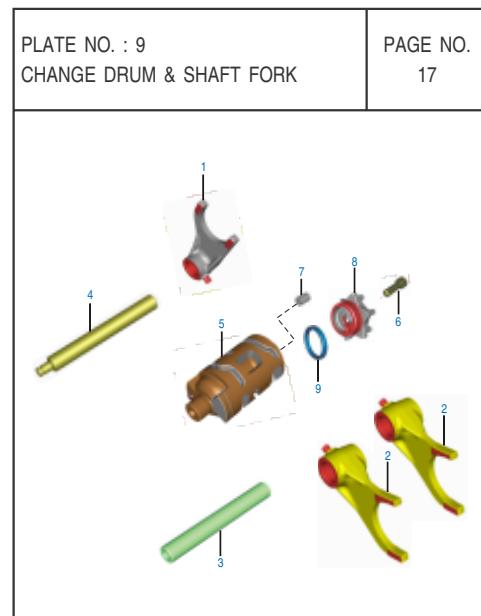





Pictorial Index

BAJAJ
pulsar DTS-i 125

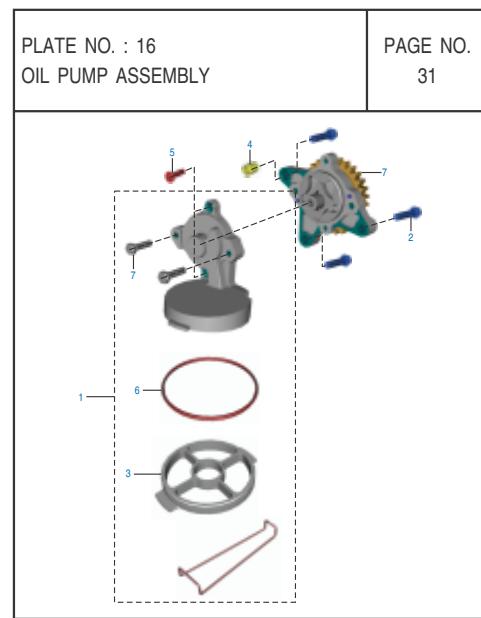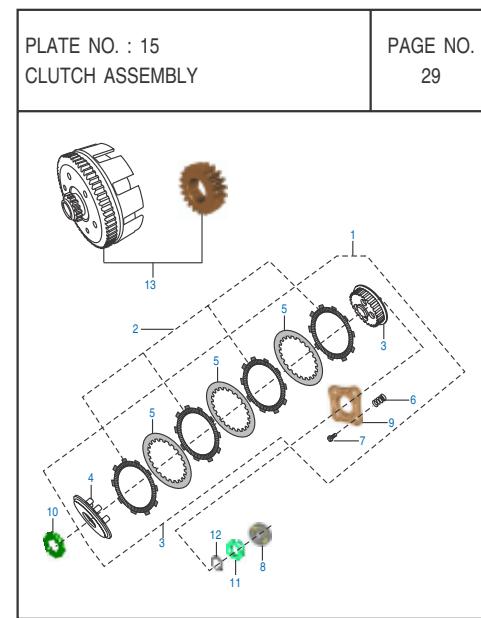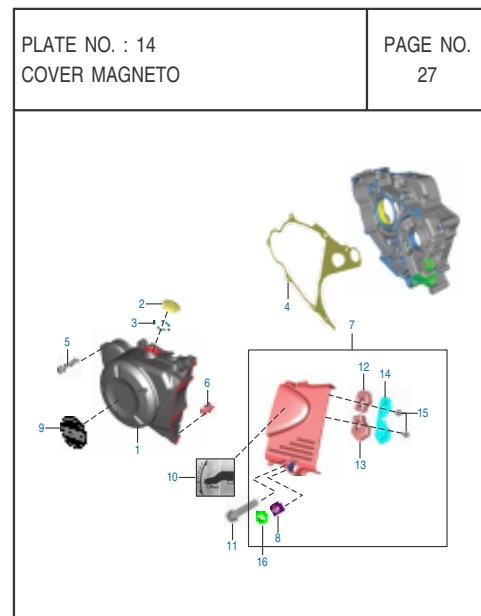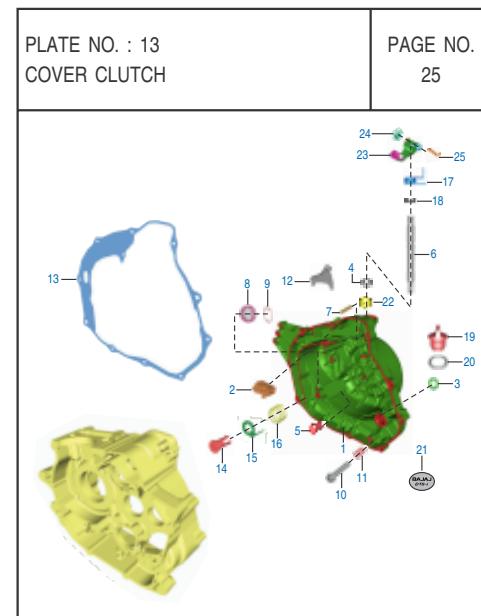





Pictorial Index

BAJAJ
pulsar DTS-i 125

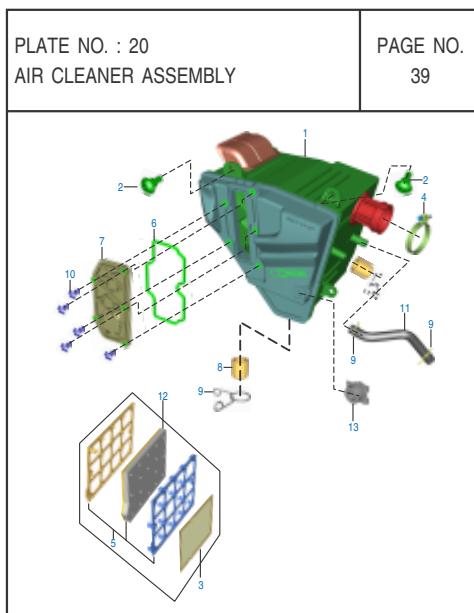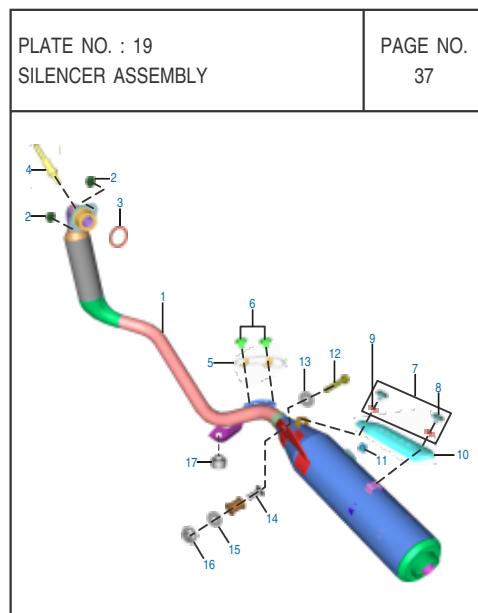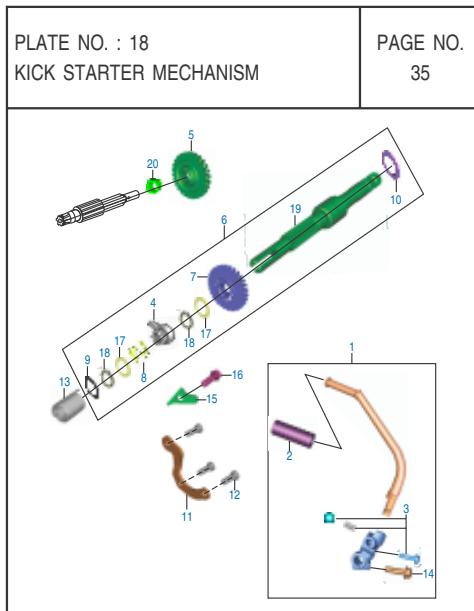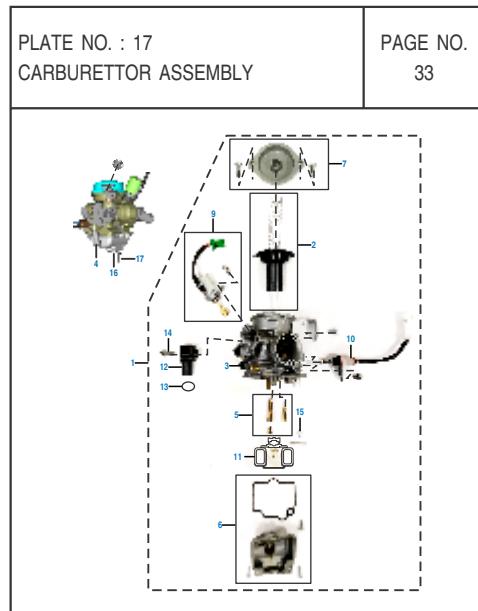





Pictorial Index

BAJAJ
pulsar DTS-i 125

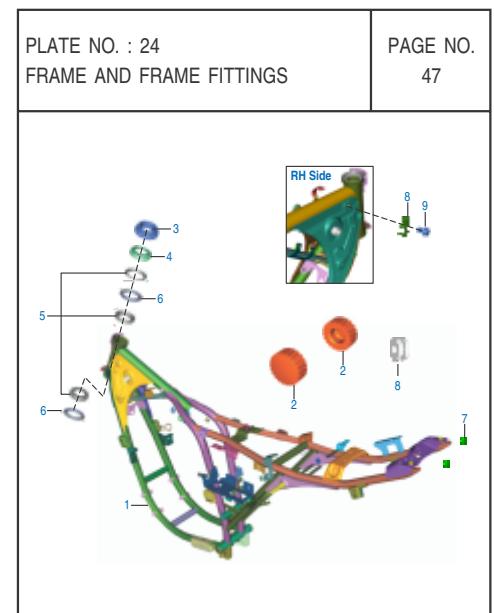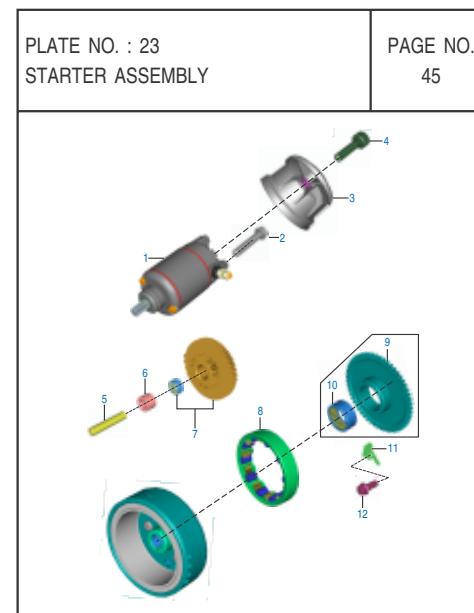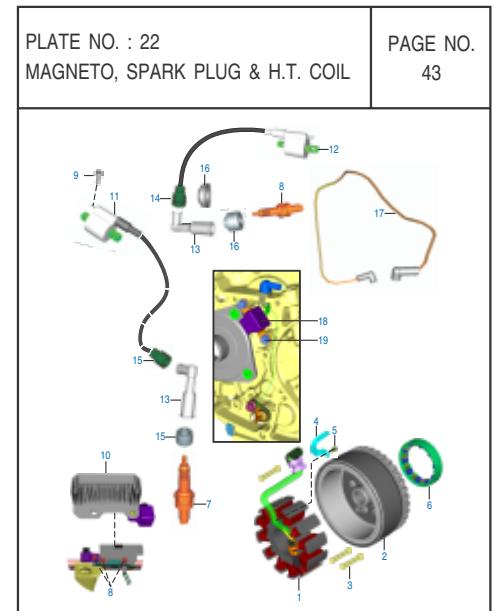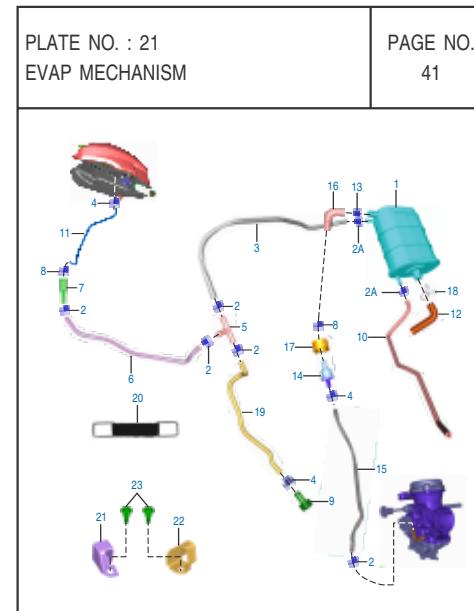





Pictorial Index

BAJAJ
pulsar DTS-i 125

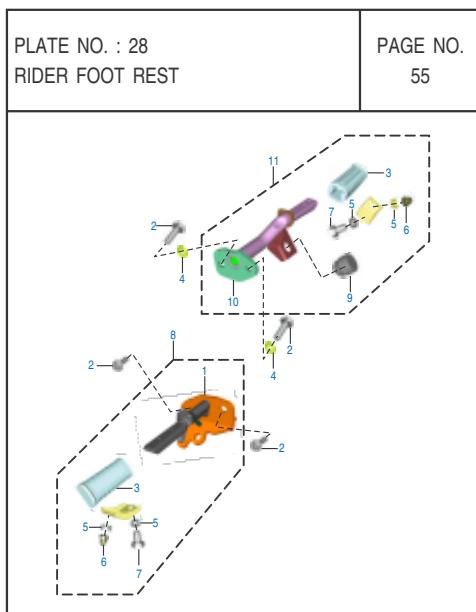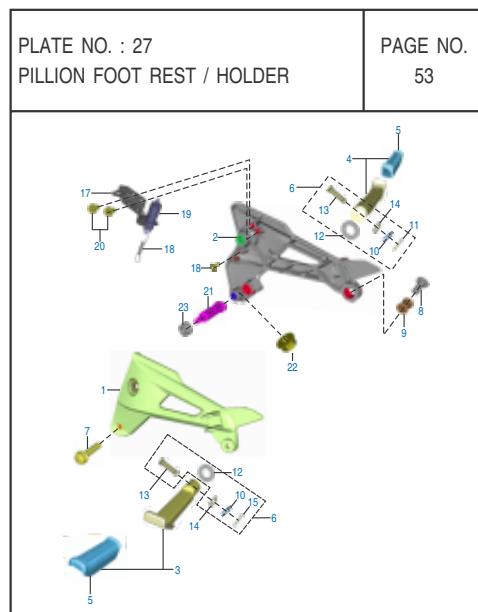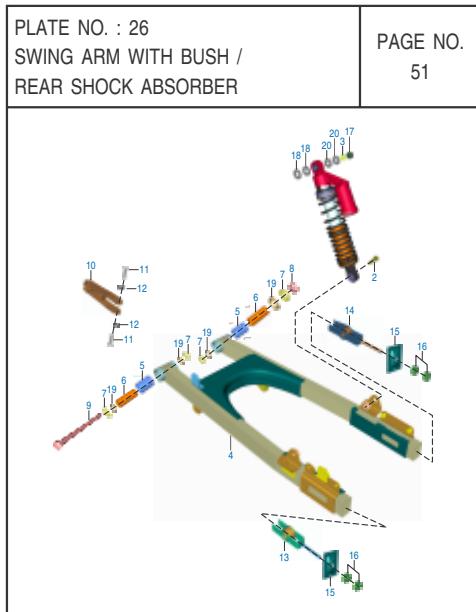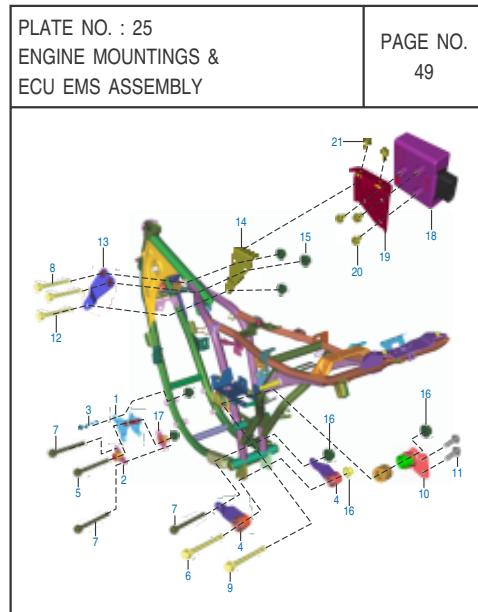

Pictorial Index

BAJAJ
pulsar DTS-i 125

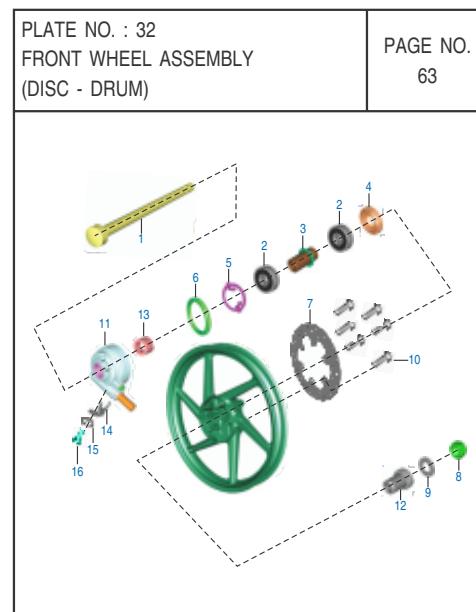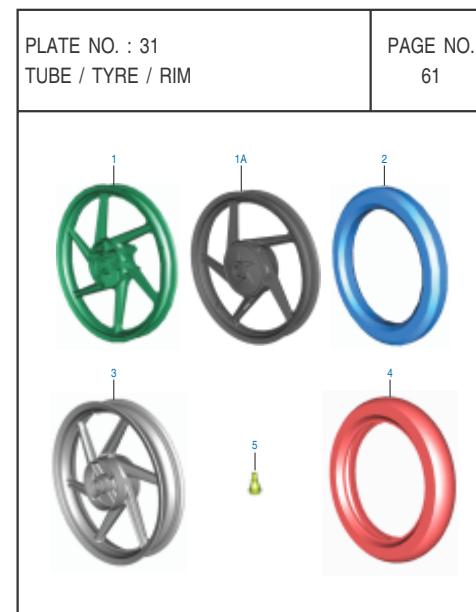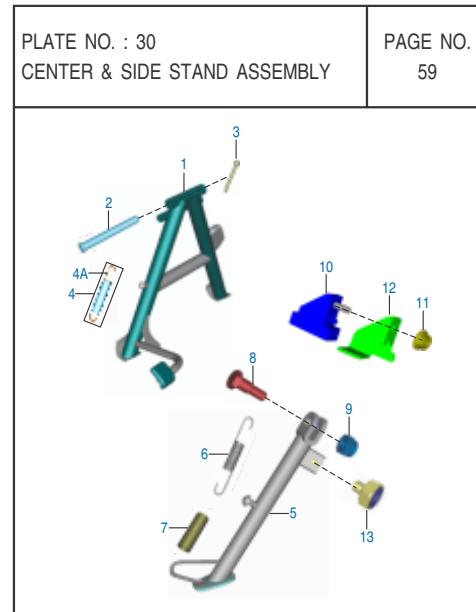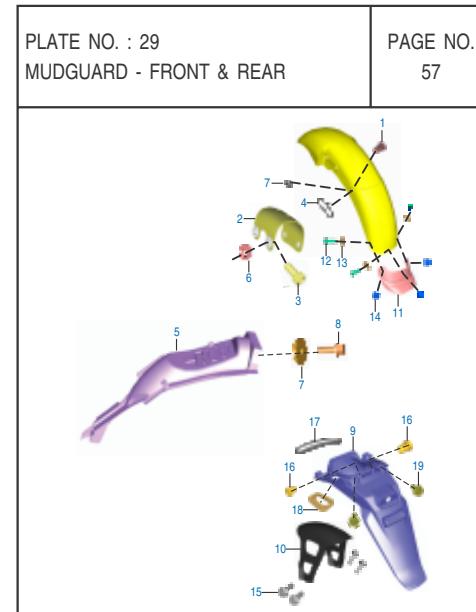

Pictorial Index

BAJAJ
pulsar DTS-i 125

PLATE NO. : 33 FRONT WHEEL ASSEMBLY (DRUM - DRUM)	PAGE NO. 65
---	----------------

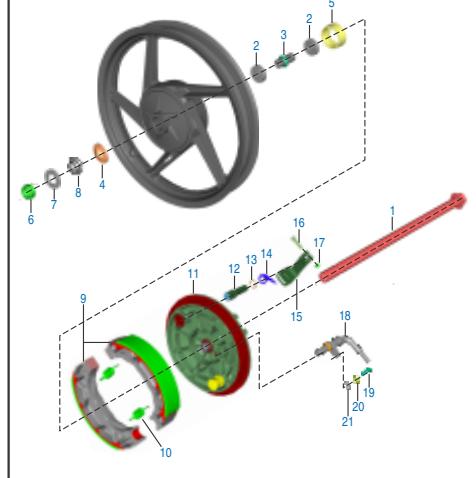


PLATE NO. : 34 FRONT MASTER CYLINDER ASSEMBLY	PAGE NO. 67
--	----------------


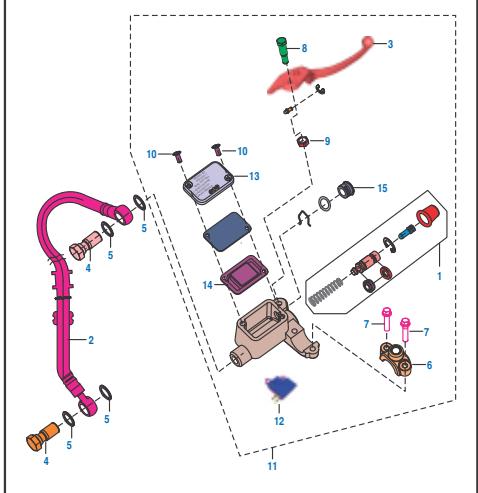


PLATE NO. : 35 CBS - COMBINED BRAKING SYSTEM - FOR DISC BRAKE	PAGE NO. 69
---	----------------

PLATE NO. : 36 FRONT BRAKE - CALIPER & DISC	PAGE NO. 71
--	----------------

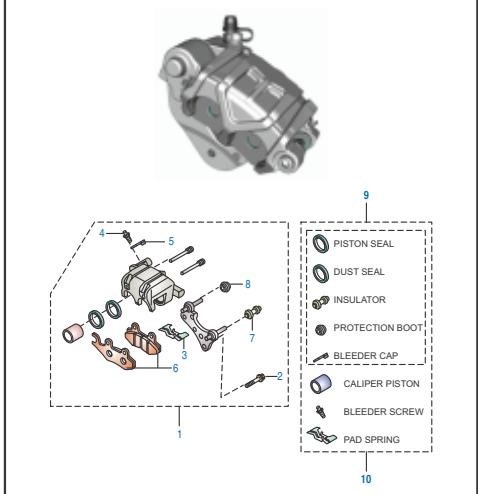

Pictorial Index

BAJAJ
pulsar DTS-i 125

PLATE NO. : 37 REAR WHEEL ASSEMBLY	PAGE NO. 73 - 75
---------------------------------------	---------------------

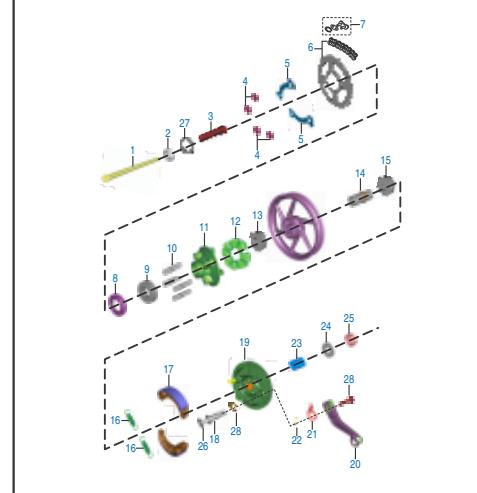


PLATE NO. : 38 REAR BRAKE PEDAL	PAGE NO. 77 - 79
------------------------------------	---------------------

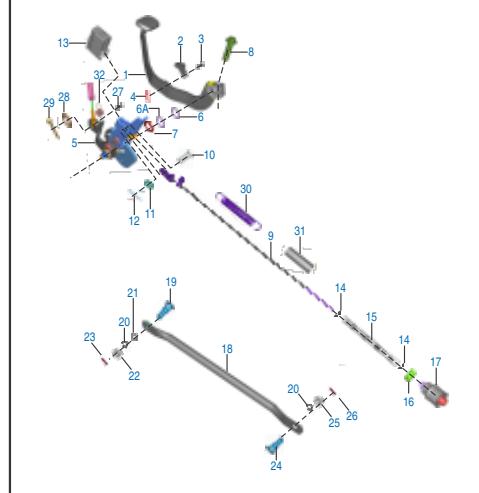


PLATE NO. : 39 HANDLE BAR	PAGE NO. 81 - 83
------------------------------	---------------------






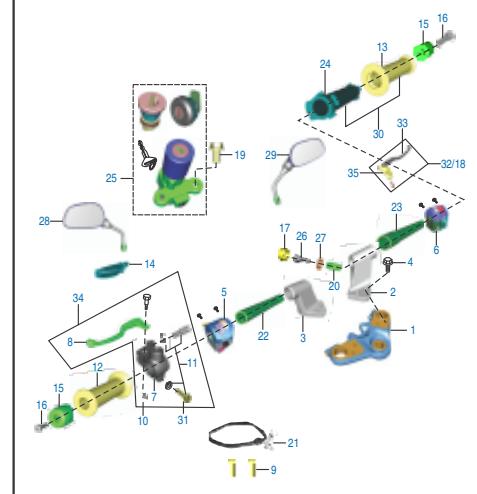


PLATE NO. : 40 FRONT FORK	PAGE NO. 85 - 87
------------------------------	---------------------

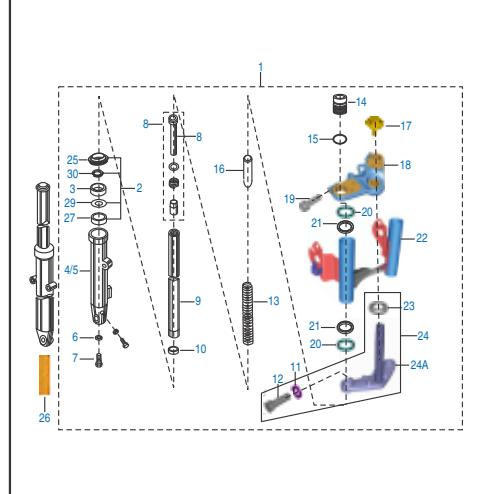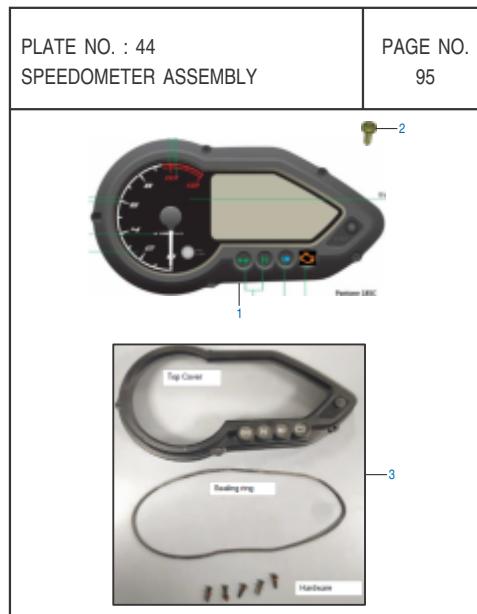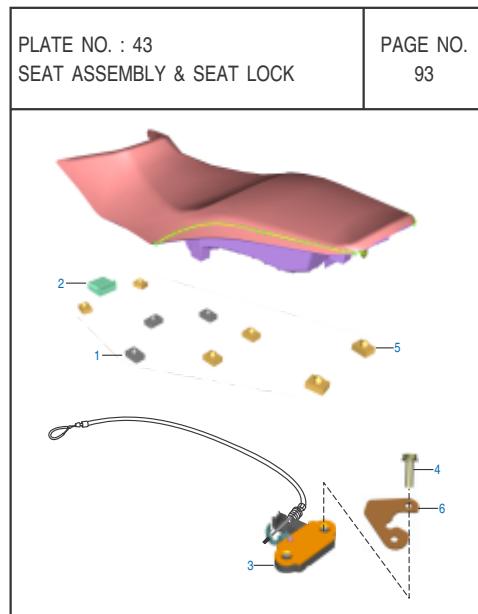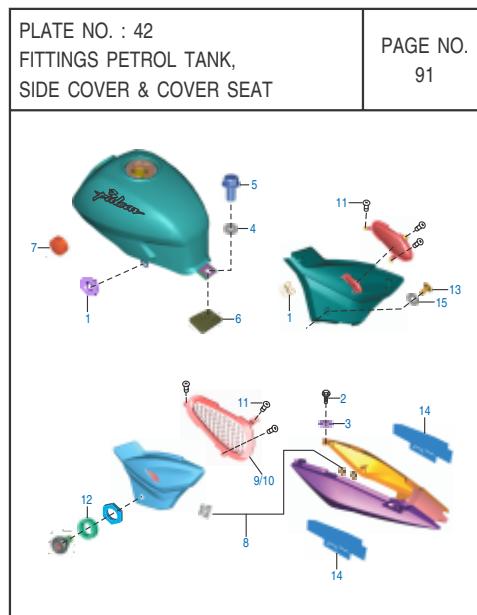





Pictorial Index

BAJAJ
pulsar DTS-i 125

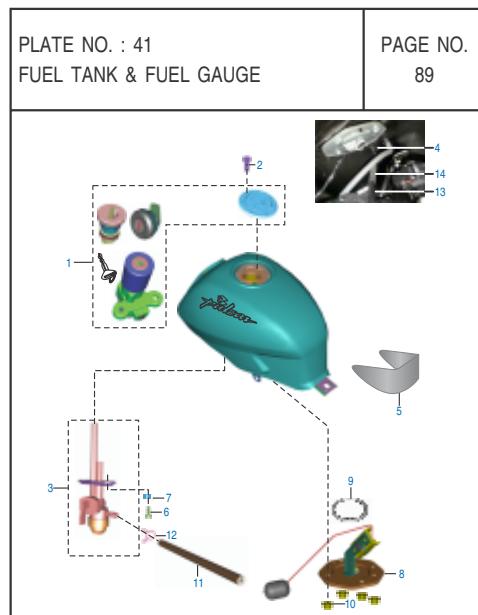




Pictorial Index

BAJAJ
pulsar DTS-i 125

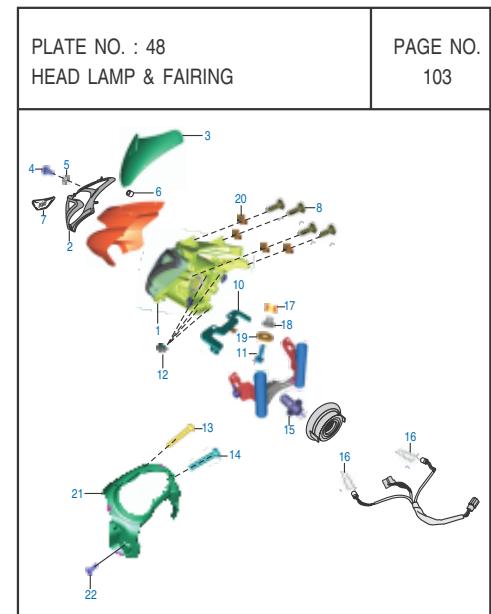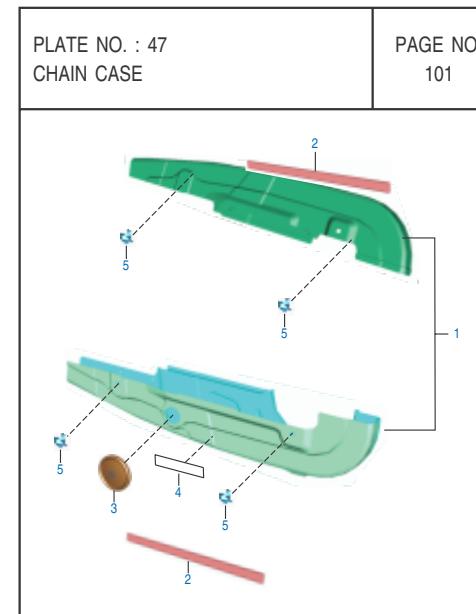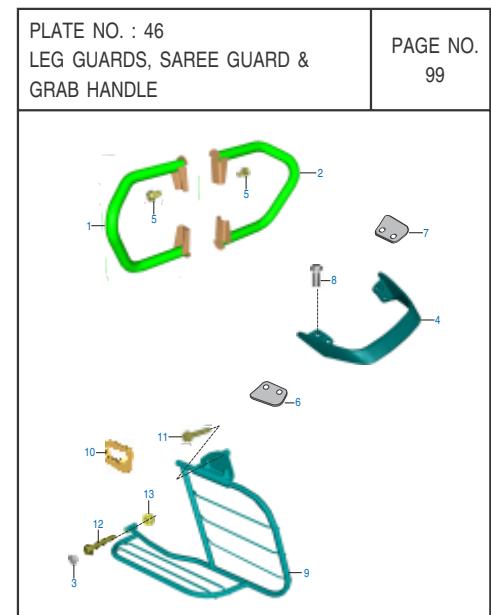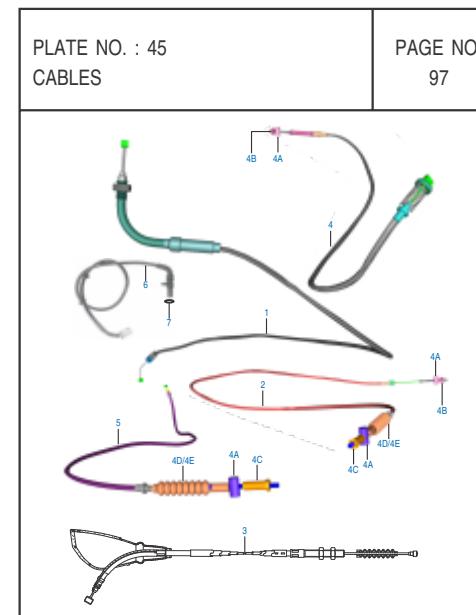



Pictorial Index

BAJAJ pulsar DTS-i 125

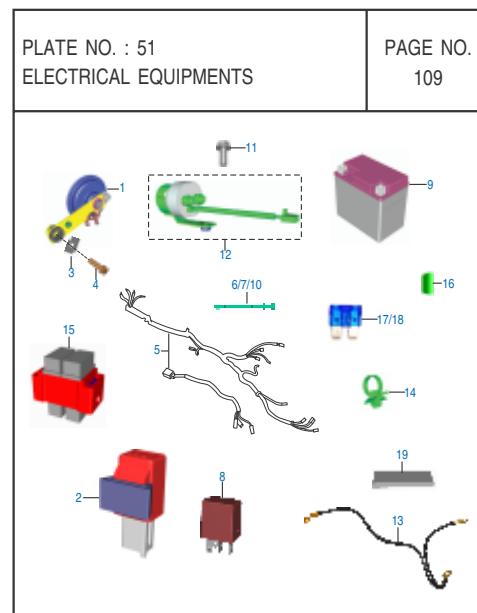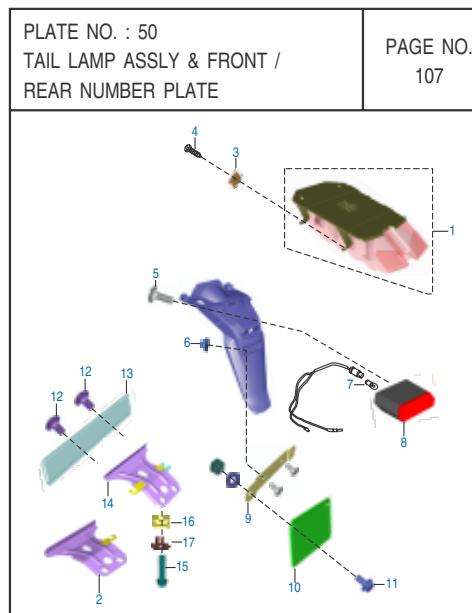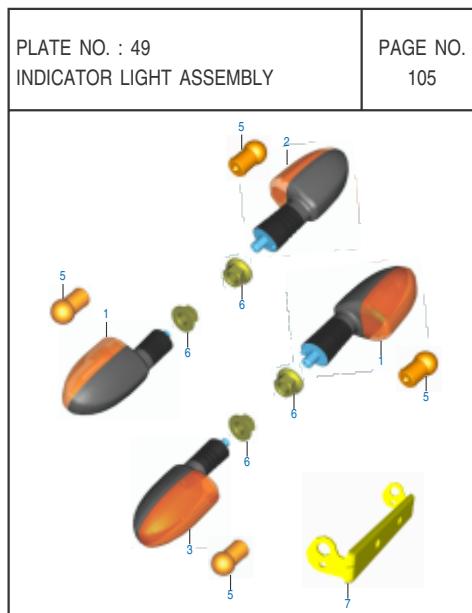


Pictorial Index

BAJAJ pulsar DTS-i 125

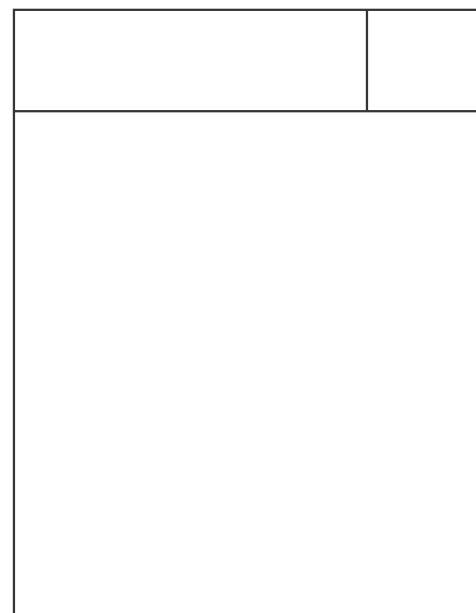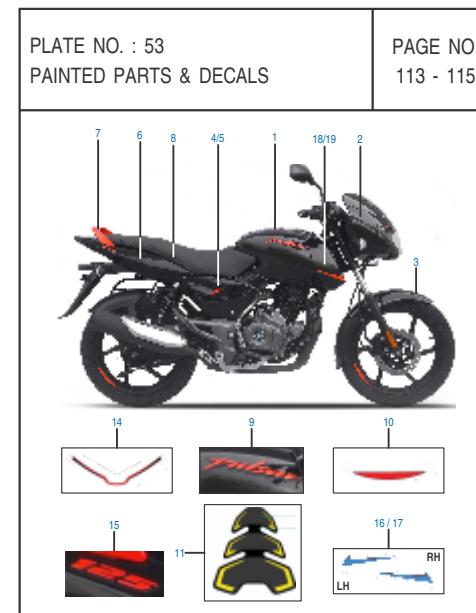


Cover Cylinder Head

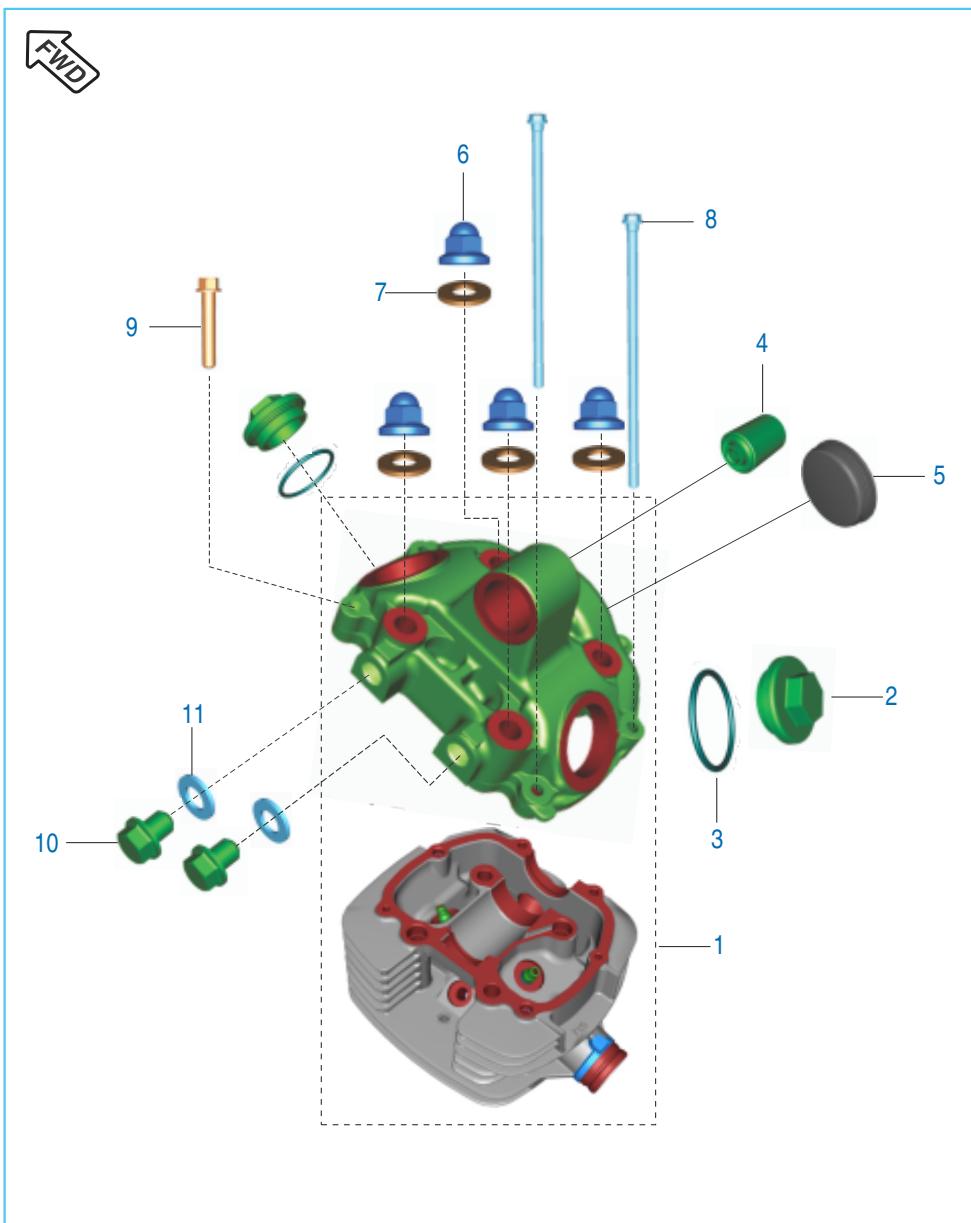


No.	Part No.	Description	Qty.	Remarks
1	DH 1025 01	Kit cylinder head with cover	1	Refer kit list
2	52 JN01 36	Cover Tappet with 'O' ring	2	Refer kit list
3	39 2391 21	'O' Ring	2	
4	DS 1011 66	Silent Bush (V)	1	
5	DH 1022 01	Camshaft Cap	1	
6	39 2647 15	Domed Cap Nut	4	
7	DS 1010 84	Copper Gasket	4	
8	39 2532 04	Hex. Bolt With Flange	2	
9	KA ED06 35	Bolt flanged small	4	
10	DH 1019 16	Bolt flange - M12	2	
11	DG 1014 98	Gasket	2	

Cylinder Head

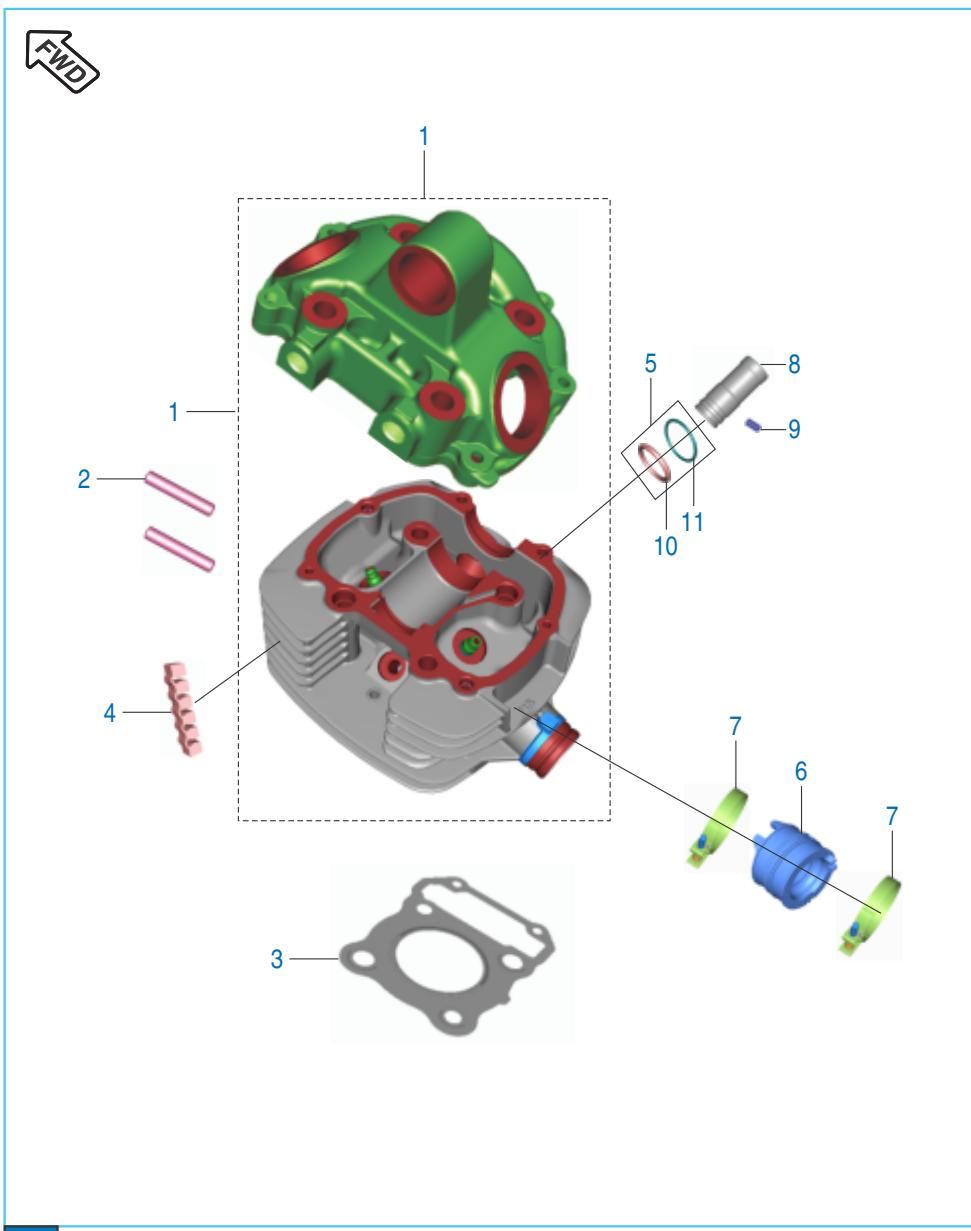

No.	Part No.	Description	Qty.	Remarks
1	DH 1025 01	Kit cylinder head with cover	1	Refer kit list
2	39 1660 05	Stud (Exhaust)	2	
3	DH 1022 30	Gasket Cylinder Head	1	
4	DH 1015 08	Damper Cylinder Head	5	
5	36 DS10 01	Cylinder head 'O' Ring Kit	1	Refer kit list
6	DH 1037 28	Sleeve Manifold	1	
7	DH 1021 18	Clamp For Insulator	2	
8	DH 1023 29	Sleeve Spark Plug	1	
9	39 2608 01	Grub Screw	1	
10	KJ AC18 24	O - Ring	1	
11	39 1283 21	'O' Ring	1	

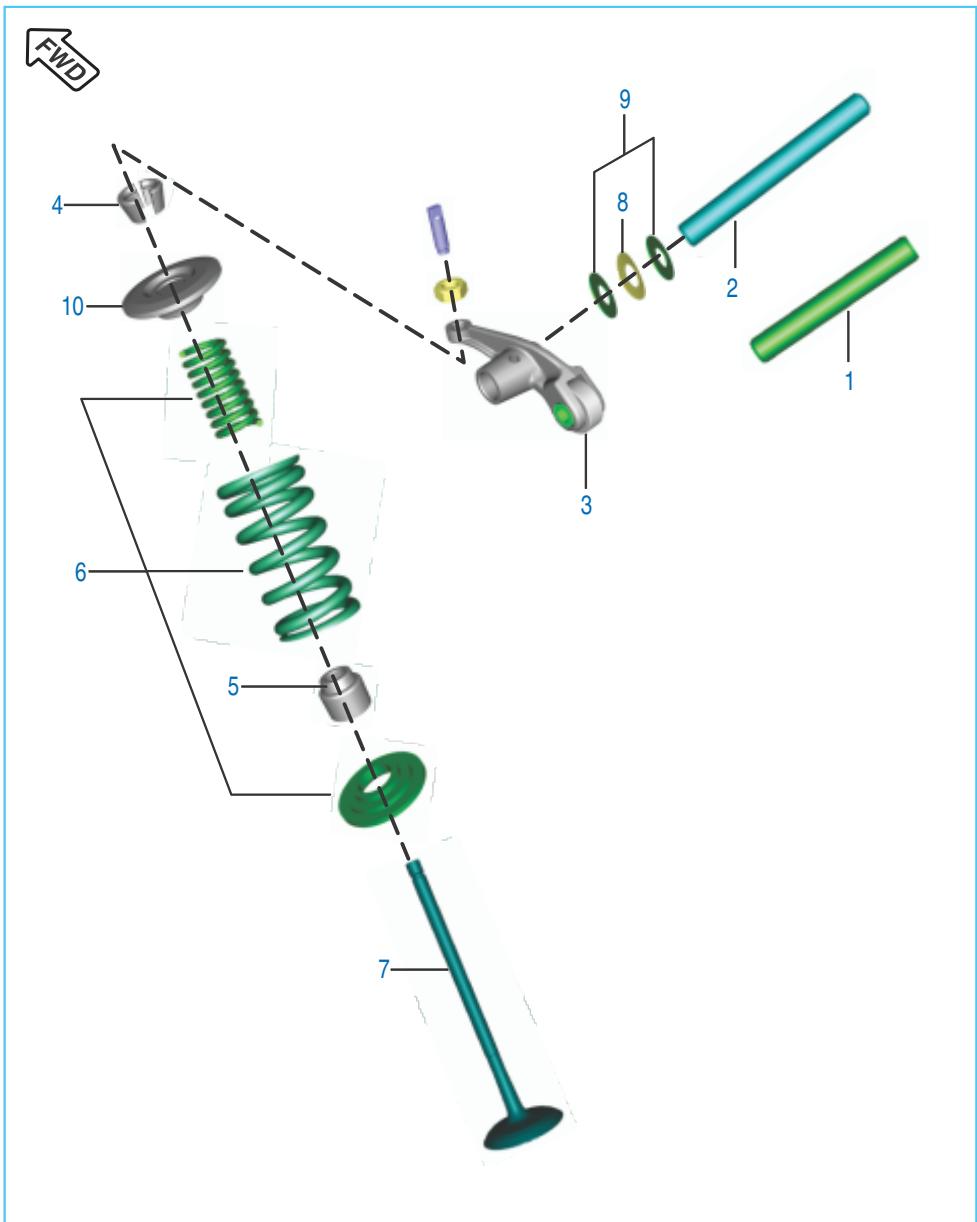

Valve

No.	Part No.	Description	Qty.	Remarks
1	DK 1017 48	Rocker Arm Shaft - Intake	1	
2	DK 1017 51	Rocker Arm Shaft - Exhaust	1	
3	DK 1017 55	Rocker Arm With Roller	2	
4	DG 1010 29	Cotter Valve	4	
5	JU 5112 14	Valve Stem Seal	2	
6	36 DH42 44	Valve repair kit	2	Refer Kit List
7	36 DH42 25	Valve kit	1	Refer Kit List
8	DH 1012 95	Wave Washer	2	
9	39 2440 11	Plain Washer	4	
10	JF 5112 14	Retainer Valve Spring	2	

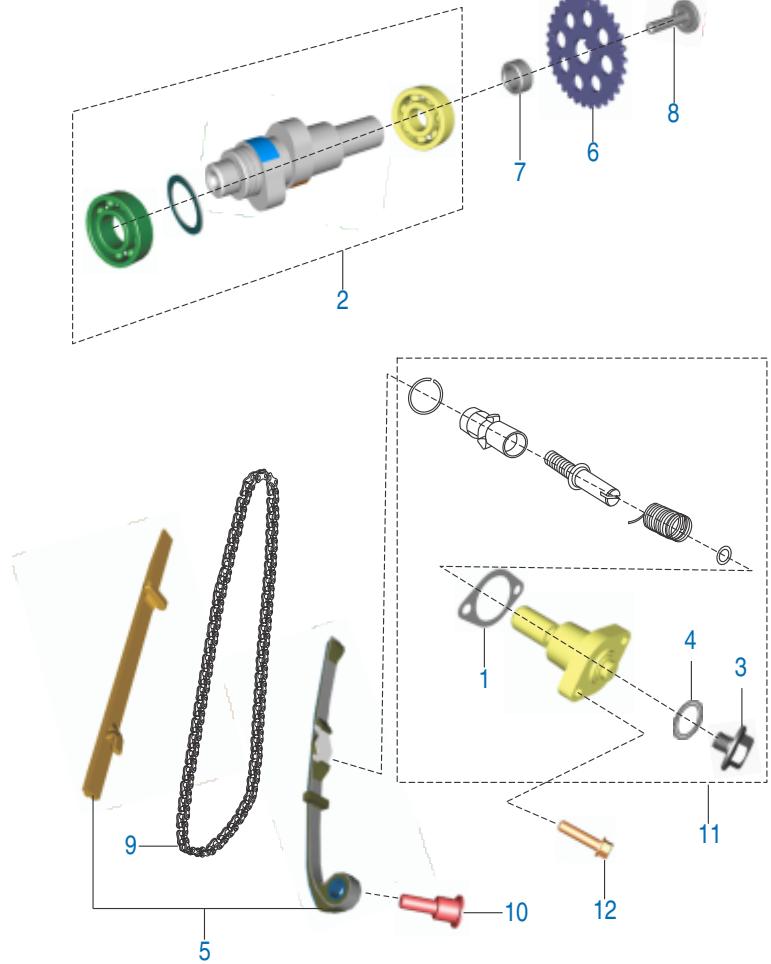


Plate No.: 4


Camshaft & Tensioner

No.	Part No.	Description	Qty.	Remarks
1	CS 1011 28	Gasket Tensioner Assembly	1	
2	DH 1025 46	Camshaft Assembly	1	
3	DD 1010 62	Bolt	1	
4	39 2669 21	O - Ring	1	
5	36 DH42 45	Kit Guide Chain	1	Refer Kit List
6	JE 5112 37	Sprocket Camshaft	1	
7	DH 1014 12	Collar Cam Sprocket	1	
8	DH 1021 25	Bolt Special Camshaft	1	
9	PD 5110 84	Cam Chain	1	
10	DH 1013 92	Cam Chain Tensioner Pivot Bolt	1	
11	JC 1010 34	Tensioner Assembly	1	
12	KA ED06 20	Bolt flanged small	2	


Cylinder and Piston

No.	Part No.	Description	Qty.	Remarks
1	DK 1010 63	Gasket Cylinder Block	1	
2	39 2181 06	Pin Dowel	4	
3	DD 1210 07	Bolt Banjo	2	
4	36 DH41 02	Piston Ring Set	1	Refer Kit List
5	DH 1016 71	Ring Snap	2	
6	36 DH42 62	Kit Cylinder Block - Piston	1	Refer Kit List
7	DH 1014 14	Damper Cylinder Block	5	
8	DH 1024 48	Pipe Assembly Oil	1	
9	31 1210 06	Gasket	4	
10	JE 3514 07	Sensor Temperature Engine	1	

FWD

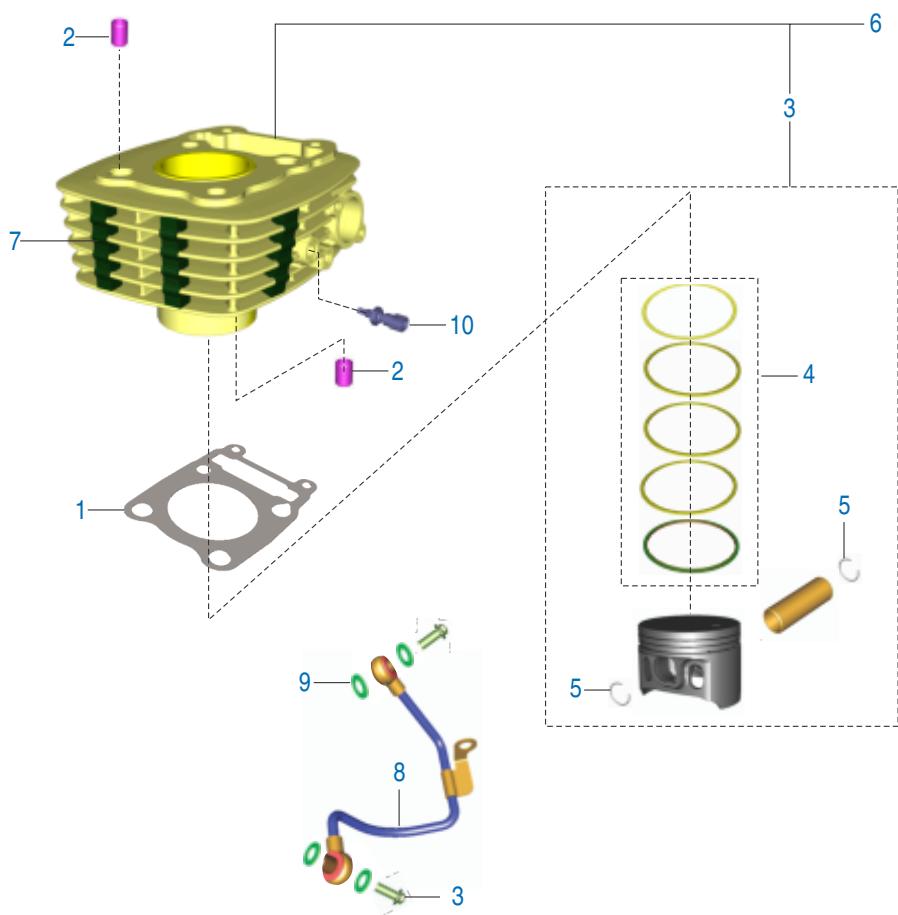

Crankshaft

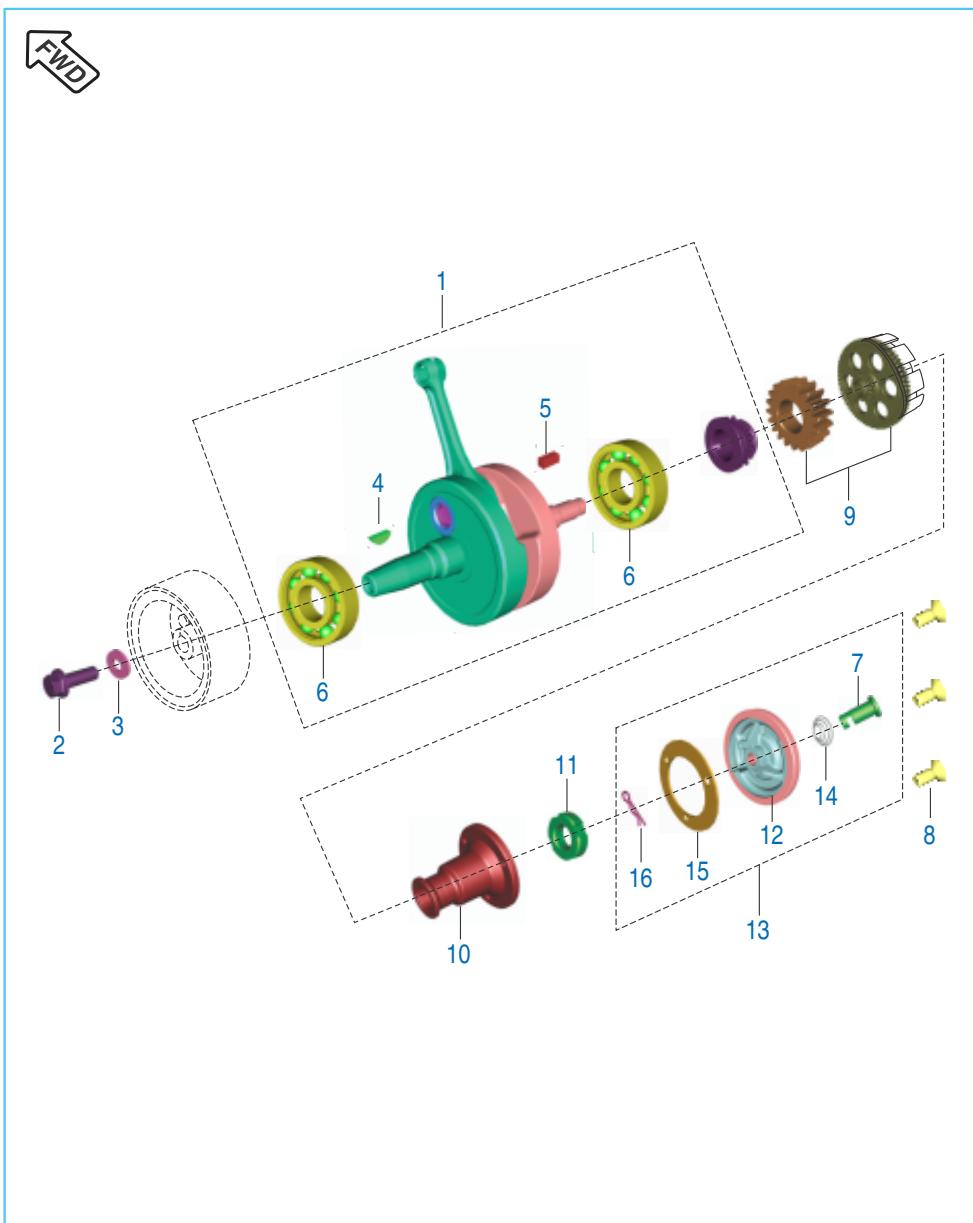


No.	Part No.	Description	Qty.	Remarks
1	DH 1025 40	Crankshaft Assembly	1	
2	DH 1013 96	Bolt	1	
3	39 2165 11	Plain Washer	1	
4	31 1011 73	Key Woodruff	1	
5	DS 1011 54	Square Key	1	
6	39 1931 20	Bearing Ball	2	
7	DH 1010 66	Joint Oil Delivery B	1	
8	DH 1016 40	Screw CSK cross - M5 x 0.8 x L9	3	For Centrifugal Mtg. Refer Kit Details
13	36 DH41 16	Kit Primary Drive & Driven Gear	1	
10	DH 1010 64	Body Centrifugal Oil Filter	1	
11	DH 1011 95	Nut	1	
12	DH 1013 55	Cover Centrifugal Oil Filter	1	
13	36 DH40 19	Kit Centrifugal Oil Filter	1	Refer kit list
14	DH 1010 67	Spring Oil Delivery B	1	
15	DH 1012 34	Gasket Centrifugal Oil Filter	1	
16	39 2199 08	Pin Snap	1	


Transmission

No.	Part No.	Description	Qty.	Remarks
1	DH 1025 08	Shaft assembly input	1	
2	39 2158 11	Plain Washer	1	
3	DH 1010 78	Gear 4th Drive	1	
4	DH 1010 79	Washer Spline	3	
5	DH 1012 35	External Circlip	4	
6	DH 1010 80	Gear 3rd Drive	1	
7	DH 1025 11	Gear 5th Drive	1	
8	DH 1020 13	Gear 2nd Drive	1	
9	39 2160 11	Plain Washer	1	
10	DH 1014 16	Shaft Output Tran Sub - Assy	1	
11	DH 1013 36	Washer Special	2	
12	DH 1025 76	Gear 3rd Driven	1	
13	39 2159 11	Plain Washer	1	
14	DH 1011 10	Gear 4th Driven	1	
15	DH 1011 11	Bush 1st Driven	1	
16	DH 1025 13	Gear 1st Driven	1	
17	DH 1025 14	Gear 5th Driven	1	
18	DH 1013 19	Bush 2nd Driven	1	
19	DH 1020 22	Gear 2nd Driven	1	
20	DH 1013 34	Collar Sprocket	1	
21	30 1010 61	'O' Ring Sprocket Coller	1	
22	36 DH42 32	Sprocket Output	1	
23	JH 5512 02	Plate Drive Sprocket	1	
24	DS 1013 55	Bolt Socket - M5 x 0.8 x L10	2	
25	DH 1025 68	Bush Third Driven	1	

FWD

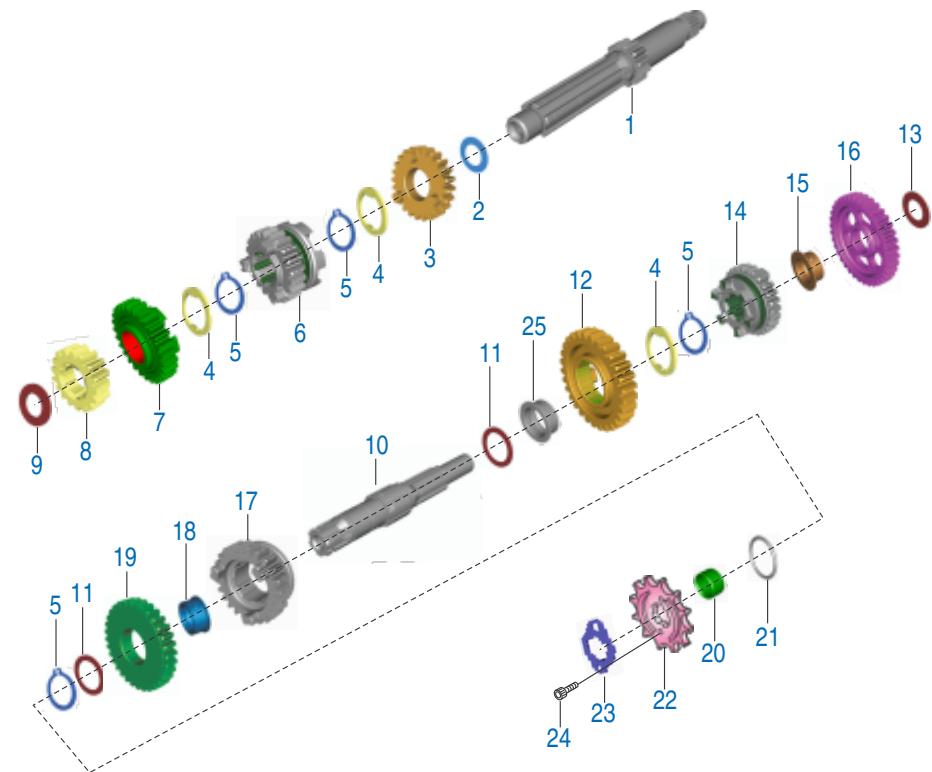


FWD

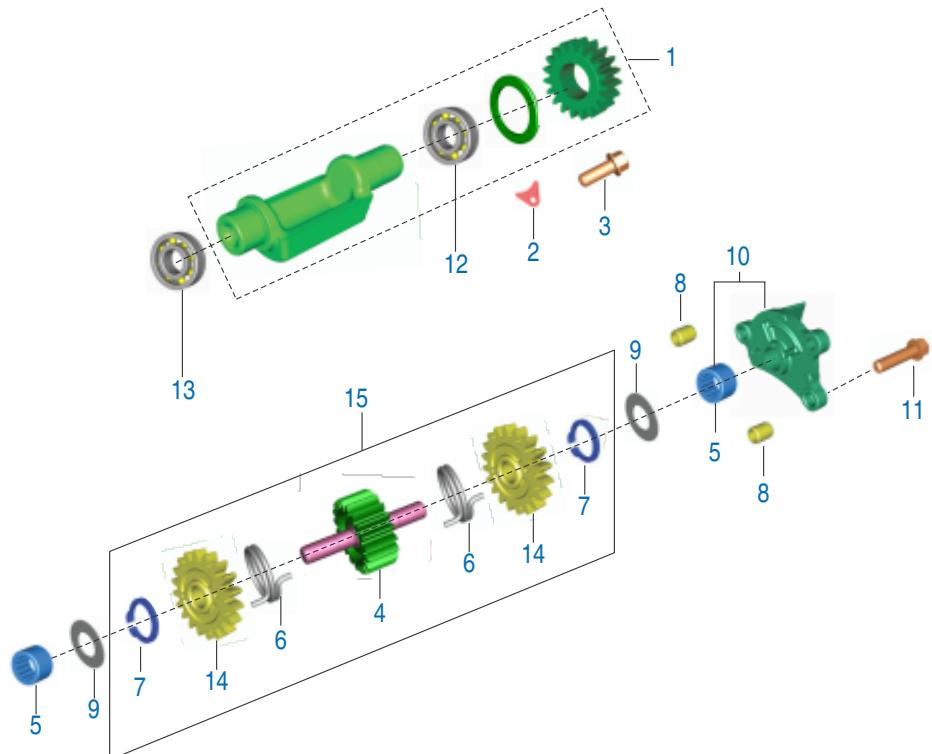


Balancer & Balancer Idler Gear

No.	Part No.	Description	Qty.	Remarks
1	DH 1024 75	Balancer Assembly	1	
2	DH 1010 72	Bearing Stopper	1	
3	DH 1013 85	Bolt	1	
4	DH 1020 52	Assembly balancer idler gear	1	
5	39 2152 20	Needle Roller Bearing	2	
6	DH 1014 24	Spring Torsion Balancer Idler	2	
7	KE AB10 10	Circlip external	2	
8	39 1686 06	Dowel Pin	2	
9	39 1620 11	Thrust Washer	2	
10	52 DH01 77	Balancer Idler Holder	1	
11	KA ED06 25	Bolt Flanged Small	3	
12	59 2000 28	Bearing Ball Balancer RH	1	
13	59 2000 29	Bearing Ball Balancer LH	1	
14	DH 1013 73	Scissor Balancer Idler - Nylon	2	
15	DH 1020 53	Gear assembly balancer idler	1	

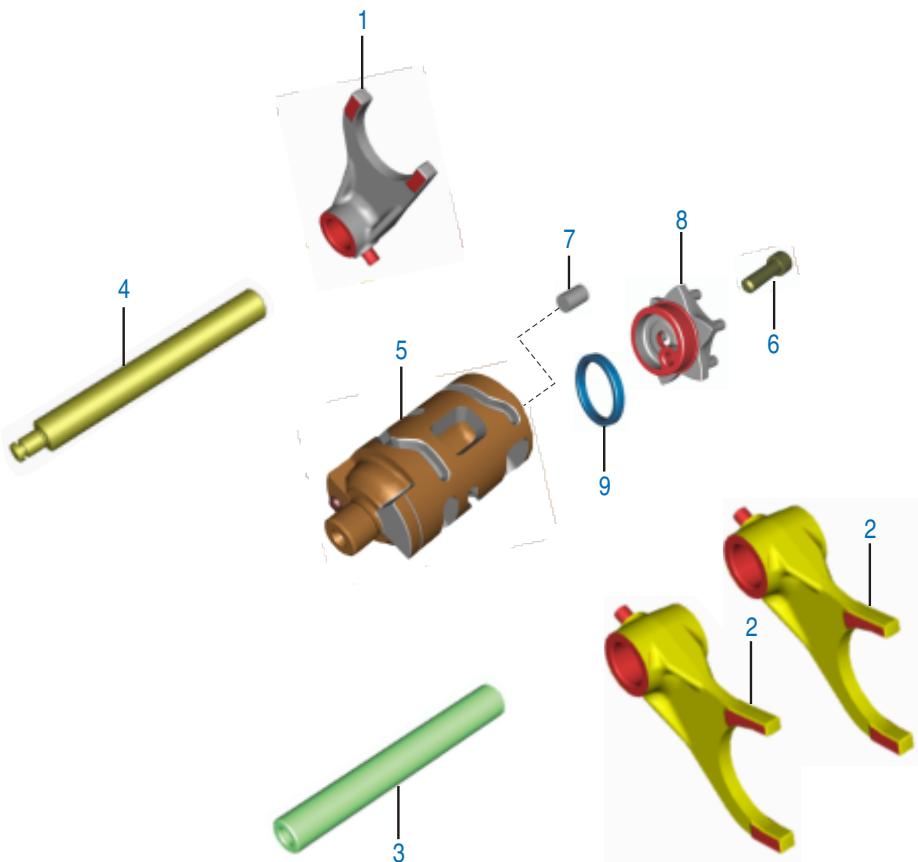

Change Drum & Shaft Fork


No.	Part No.	Description	Qty.	Remarks
1	DK 1011 59	Fork Gear Shift Input	1	
2	DK 1011 60	Fork Gear Shift Output	2	
3	DH 1011 46	Shaft Gear Shift Fork	1	
4	DH 1014 93	Shaft Gear Shift Fork	1	
5	DK 1019 57	Drum Assembly Gear Shift	1	
6	DH 1013 89	Bolt Socket	1	
7	KH DA04 08	Pin dowel - Dia 04 x L08	1	
8	DH 1021 89	Guide Gear Shifter	1	
9	DH 1014 96	Spacer	1	

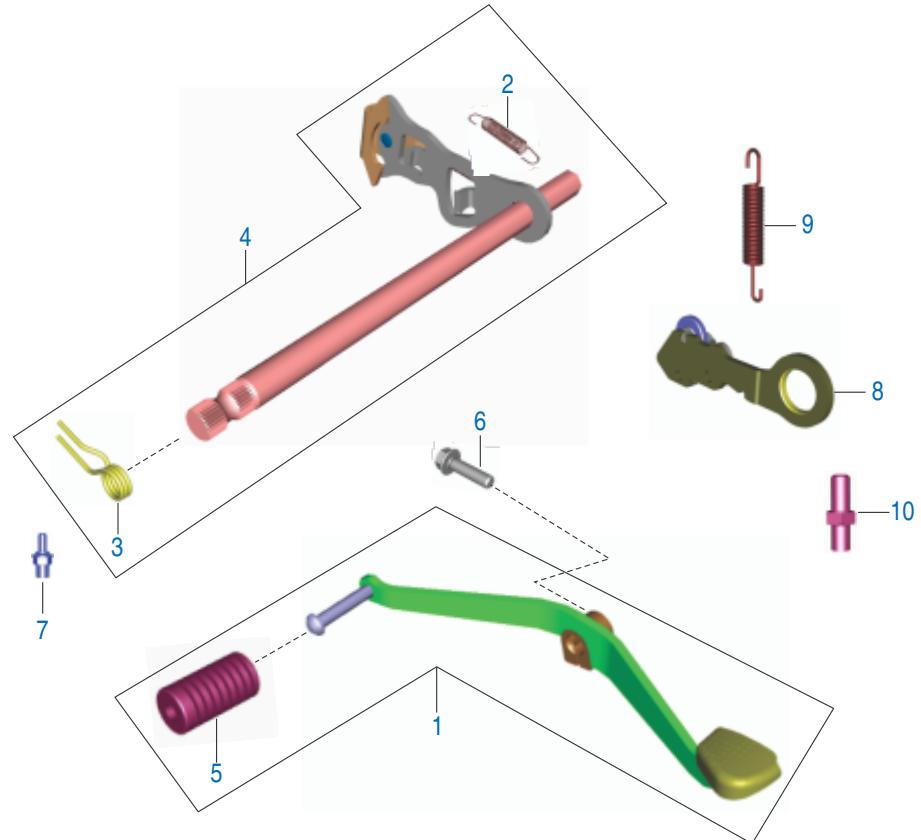

Gear Change Mechanism


No.	Part No.	Description	Qty.	Remarks
1	DH 1013 97	Lever Complete Gear Shifter	1	
2	DH 1017 14	Spring Gear Shift	1	
3	DK 1017 22	Spring shift return	1	
4	DK 1017 33	Lever Complete Change	1	
5	DH 1015 09	Damper	1	
6	39 2354 04	Flanged Bolt	1	
7	DH 1013 93	Bolt Gear Shift Drum Stopper	1	
8	DK 1017 25	Stopper Drum	1	
9	DK 1012 53	Spring Gear Shift Stopper Detent	1	
10	DH 1013 94	Bolt Shift Change	1	

Engine Assembly & Crankcase RH

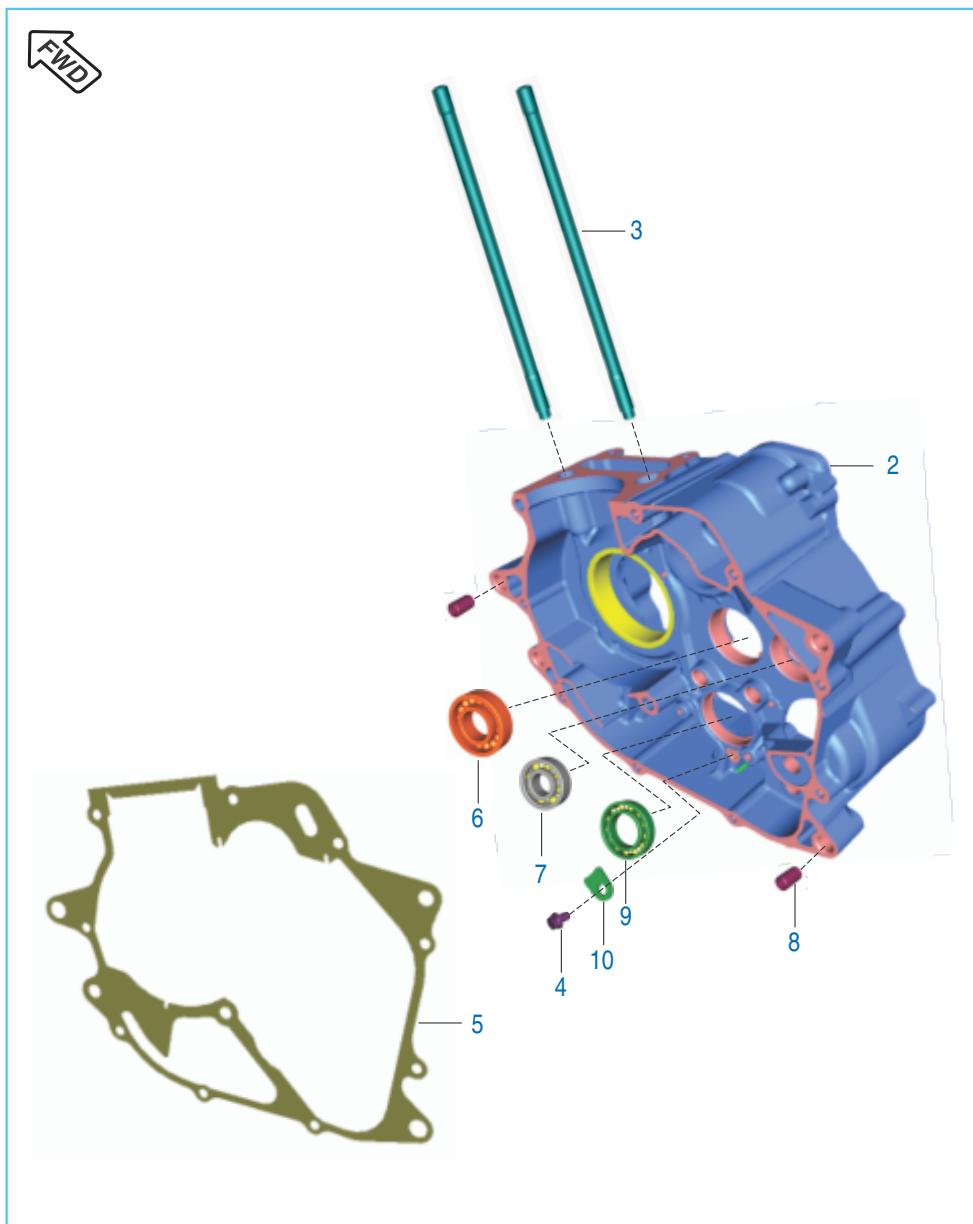

No.	Part No.	Description	Qty.	Remarks
1	DH 1025 26	Engine Assly. With Starter Motor	1	
2	36 DH42 48	Crankcase RH	1	
3	59 0500 08	Stud	2	
4	AA 1014 37	Screw Pre - Coated	1	
5	DH 1010 06	Gasket Crankcase	1	
6	KP AF60 04	Bearing ball clearance & HN3	1	
7	39 2602 20	Bearing Ball (For Output Shaft)	1	
8	39 2180 06	Dowel Pin	2	
9	39 2601 20	Ball Bearing	1	(For Dr. Comp. Gear Shift)
10	DH 1014 87	Plate Stopper	1	

Crankcase LH

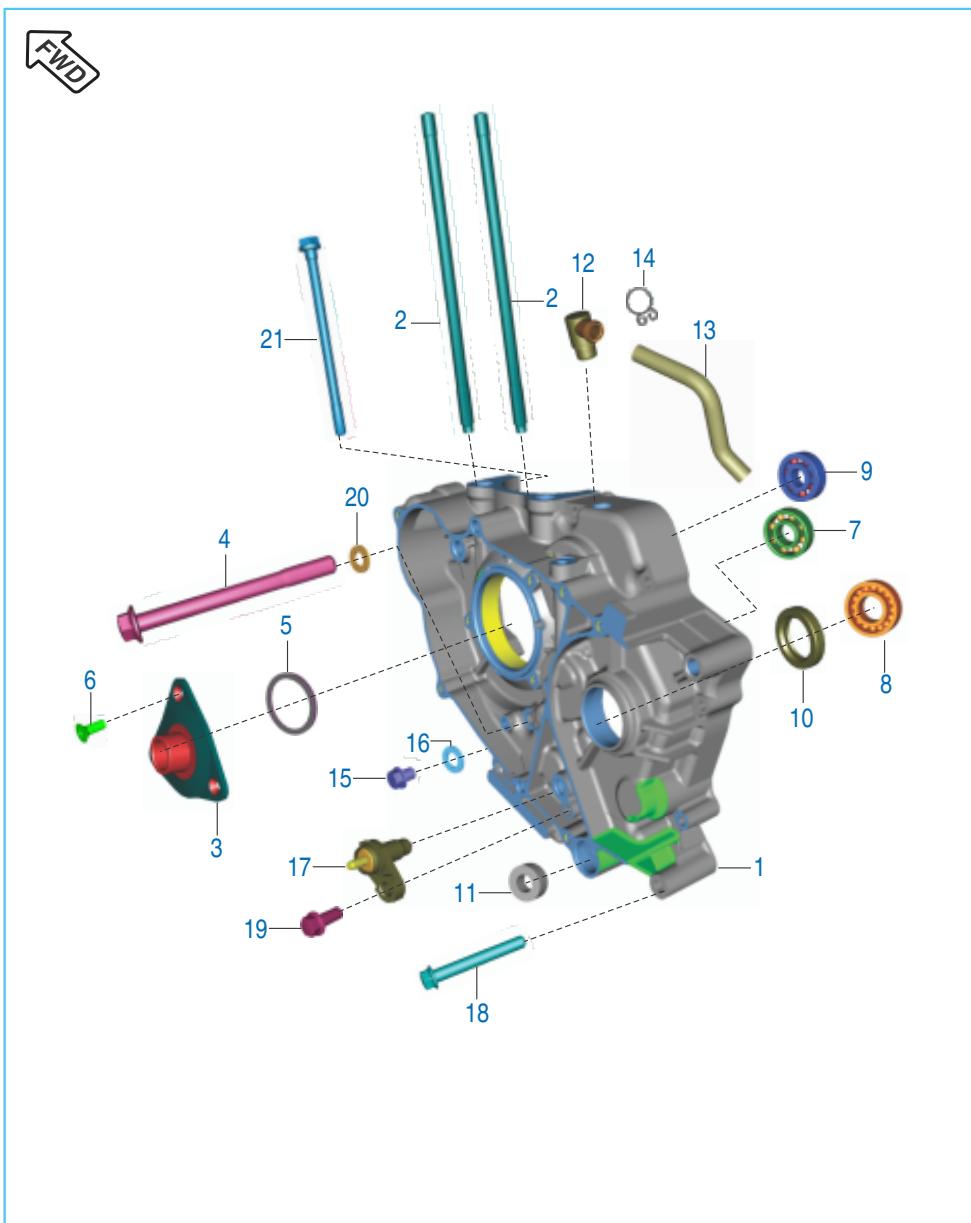

No.	Part No.	Description	Qty.	Remarks
1	36 DH42 47	Kit assembly C'Case LH	1	Refer kit list
2	59 0500 08	Stud	2	
3	DH 1022 00	Guide Starter Gear	1	
4	DH 1013 90	Bolt flanged - M8 x 1.25 x L82	1	
5	DJ 1017 05	Damper Crankshaft	1	
6	DH 1013 79	C' Sunk Head Screw	3	
7	39 2603 20	Bearing Ball (for Input Shaft)	1	
8	KP AF60 04	Bearing ball clearance & HN3	1	
9	59 2000 29	Balancer LH Bearing	1	
10	39 2189 19	Oil Seal (For Output Shaft)	1	
11	39 2190 19	Oil Seal (For Shift Lever)	1	
12	DH 1012 03	Breather Pipe	1	
13	DH 1017 19	Rubber Tube	1	
14	28 1011 74	Spring Clip	2	
15	DU 1012 23	Plug (Drain Bolt)	1	
16	DG 1014 98	Gasket	2	
17	DK 1013 80	Switch Complete (Neutral)	1	
18	KA ED06 45	Flanged Bolt	8	
19	DH 1013 85	Bolt flanged - M6	1	
20	39 2448 11	Plain Washer	1	
21	39 1845 04	Hex with Flanged Bolt	1	



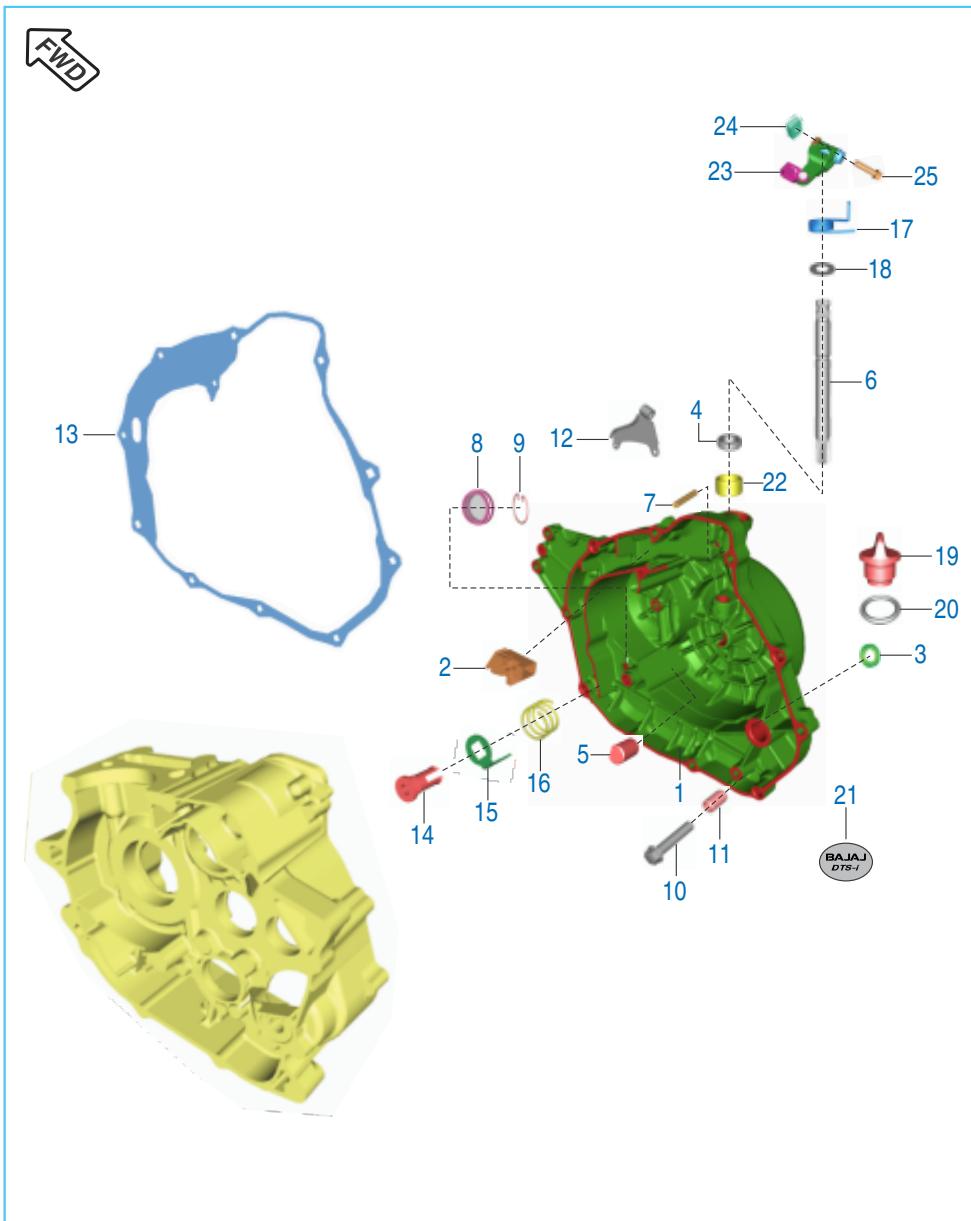



Plate No.: 13

Cover Clutch


No.	Part No.	Description	Qty.	Remarks
1	36 DH41 24	Clutch Cover	1	Refer kit list
2	DH 1011 97	Grommet Breather	1	
3	30 1011 42	Seal Kick Shaft	1	
4	39 1041 19	Seal Clutch Lever	1	
5	DH 1011 41	Rack	1	
6	DH 1011 42	Shaft Clutch Release	1	
7	39 2202 07	Parallel Pin	1	
8	DG 1014 18	Gauge	1	
9	DS 1012 15	Clip Wire	1	
10	LA E000 18	Bolt flanged M6 x 1 x 30L	10	
11	39 0999 06	Pin Dowel	2	
12	DH 1018 81	Bracket Clutch Cable	1	
13	DH 1011 54	Gasket Cover RH	1	
14	DK 1014 80	Plunger Oil	1	
15	DH 1210 11	Plate Plunger Oil	1	
16	DH 1210 12	Spring Joint 'A'	1	
17	DH 1015 44	Spring Torsion Clutch Lever	1	
18	JE 5412 13	Washer plain	1	
19	DS 1010 71	Cap Oil Filler	1	
20	DH 1011 52	O - Ring Cap Oil Filter	1	
21	DK 1017 38	Decal DTS-I	1	
22	DS 1012 01	Bushing	1	
23	DK 1016 36	Lever Assembly Clutch	1	
24	DH 1012 75	Special Nut	1	
25	KA ED06 25	Bolt flanged small	1	



Cover Magneto

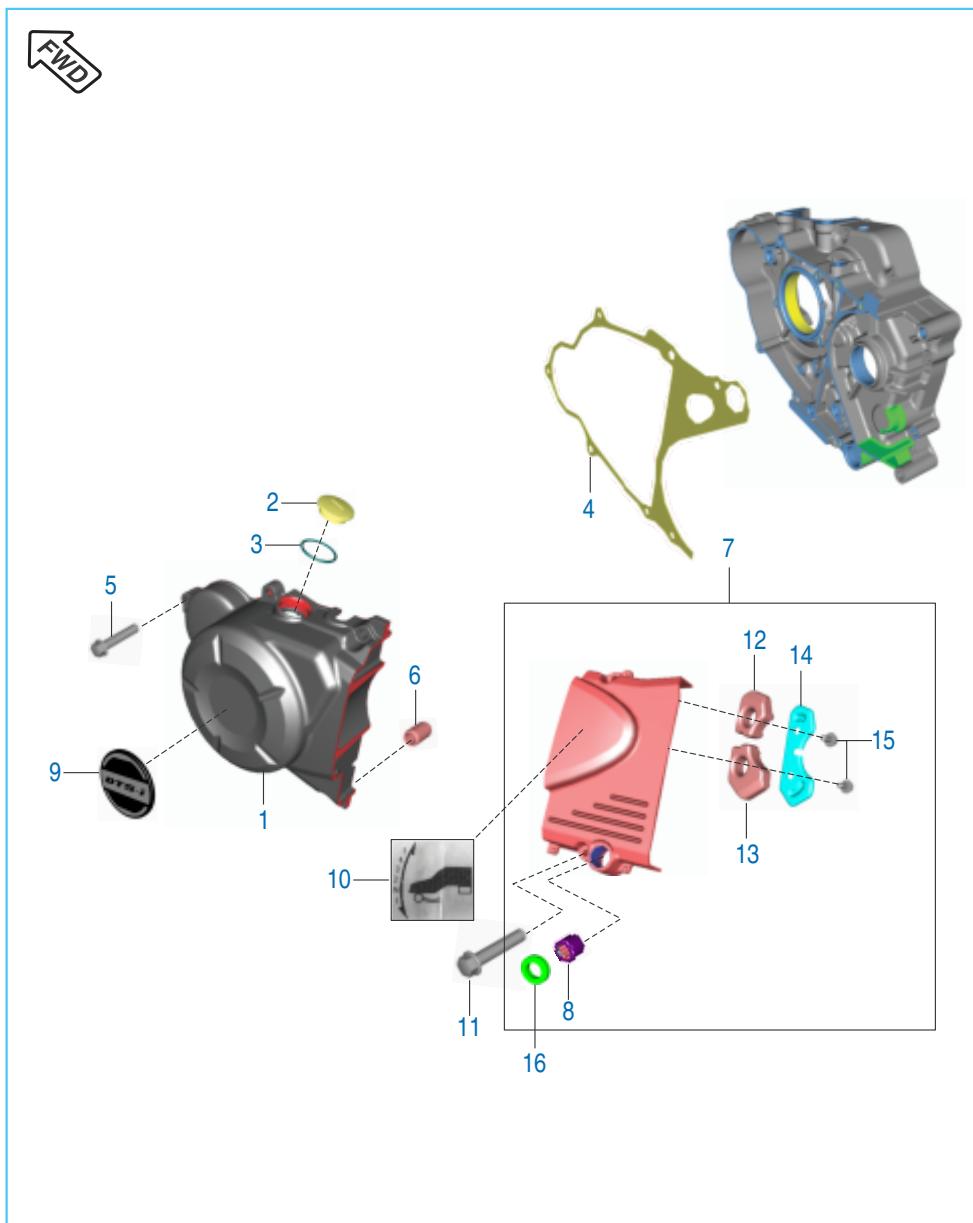

No.	Part No.	Description	Qty.	Remarks
1	52 DH13 17	Cover Magneto	1	
2	DG 1014 18	Gauge	1	
3	39 1283 21	'O' Ring	1	
4	PD 5412 91	Gasket Cover Magneto	1	
5	LA E000 18	Bolt flanged M6 x 1 x 30L	5	
6	39 0999 06	Pin Dowel	2	
7	52 DH14 12	Assembly Cover LH RR Slate Gray	1	
8	AP 1010 43	Bearing Needle Bendix	1	
9	JE 5412 12	Decal Magneto Cover	1	
10	DJ 1612 28	Gear shift label	1	
11	KA ED06 35	Bolt flanged small	2	
12	DH 1012 92	Damper A Cover LH RR	1	
13	DH 1012 94	Damper B Cover LH RR	1	
14	DH 1012 93	Plate Damper Cover	1	
15	DH 1013 88	Bolt flange - M5 x 0.8 x L10	2	
16	DH 1021 66	Seal dust	1	

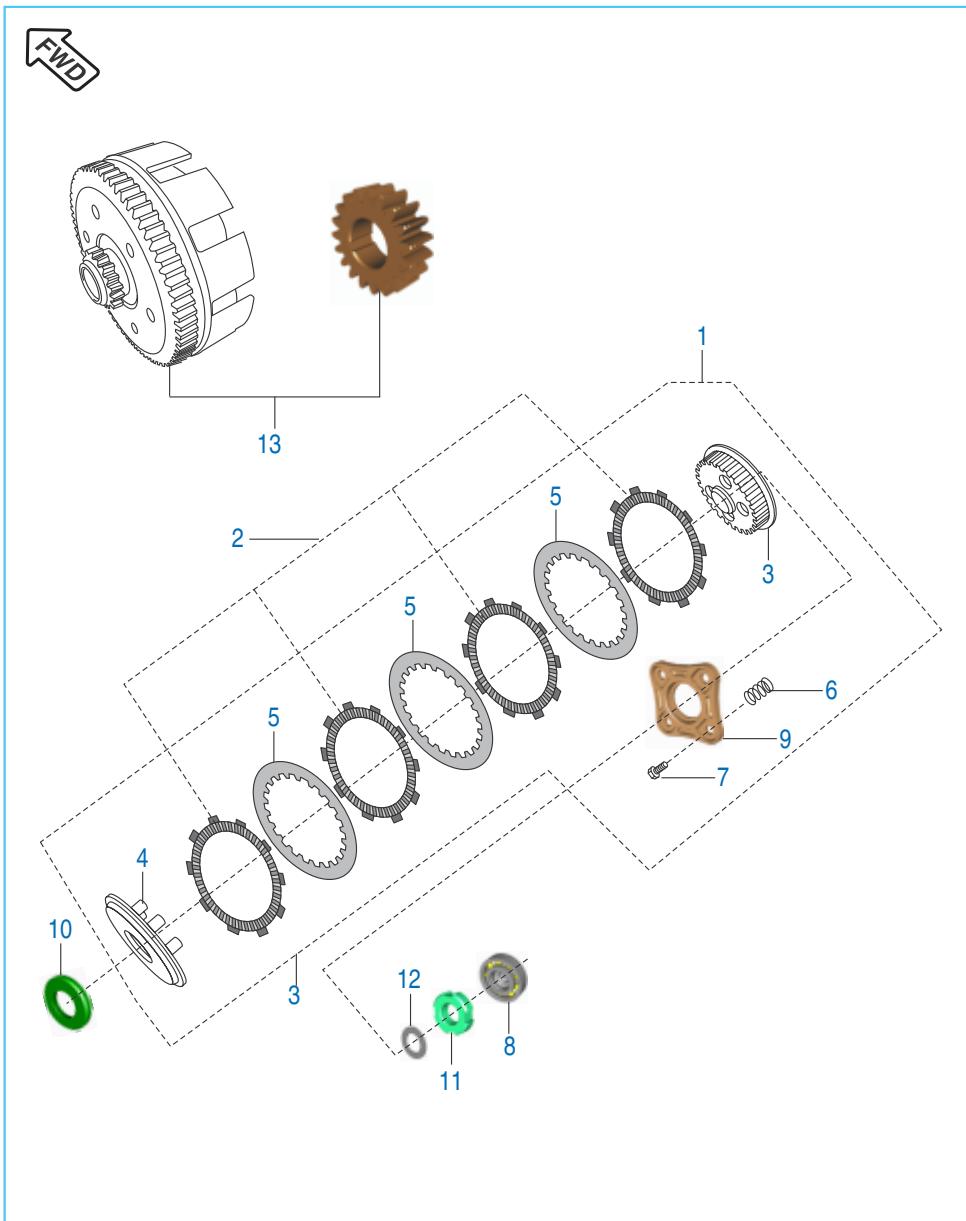


Clutch Assembly

No.	Part No.	Description	Qty.	Remarks
1	DH 1022 14	Clutch Assembly Complete	1	
2	36 DH41 17	Disc Clutch Friction	1	
3	DH 1022 10	Clutch Center	1	
4	DH 1022 11	Plate Clutch Pressure	1	
5	36 DH41 20	Kit Steel Clutch Plate	4	Refer kit list
6	DH 1022 12	Spring Clutch Capacity	4	
7	DK 1015 74	Bolt	4	
8	DH 1017 95	Clutch Lifter Bearing	1	
9	JG 5514 43	Holder Clutch	1	
10	DH 1021 98	Washer Clutch Hub	1	
11	DH 1016 48	Nut Primary Drive Lock	1	LH Thread
12	39 2200 11	Washer Primary Drive Gear	1	
13	36 DH41 16	Kit Primary Drive & Driven Gear	1	Refer Kit Details


Oil Pump Assembly

No.	Part No.	Description	Qty.	Remarks
1	52 DH01 69	Oil Pump Assembly	1	
2	KA ED06 25	Hex. Bolt With Flange	3	
3	DH 1210 10	Mesh Filter Oil Pump	1	
4	39 1686 06	Hollow Dowel Pin	2	
5	KB CA04 16	Screw CSK cross	2	
6	39 2194 21	'O' Ring	1	
7	KA AD05 20	Bolt	2	


FWD

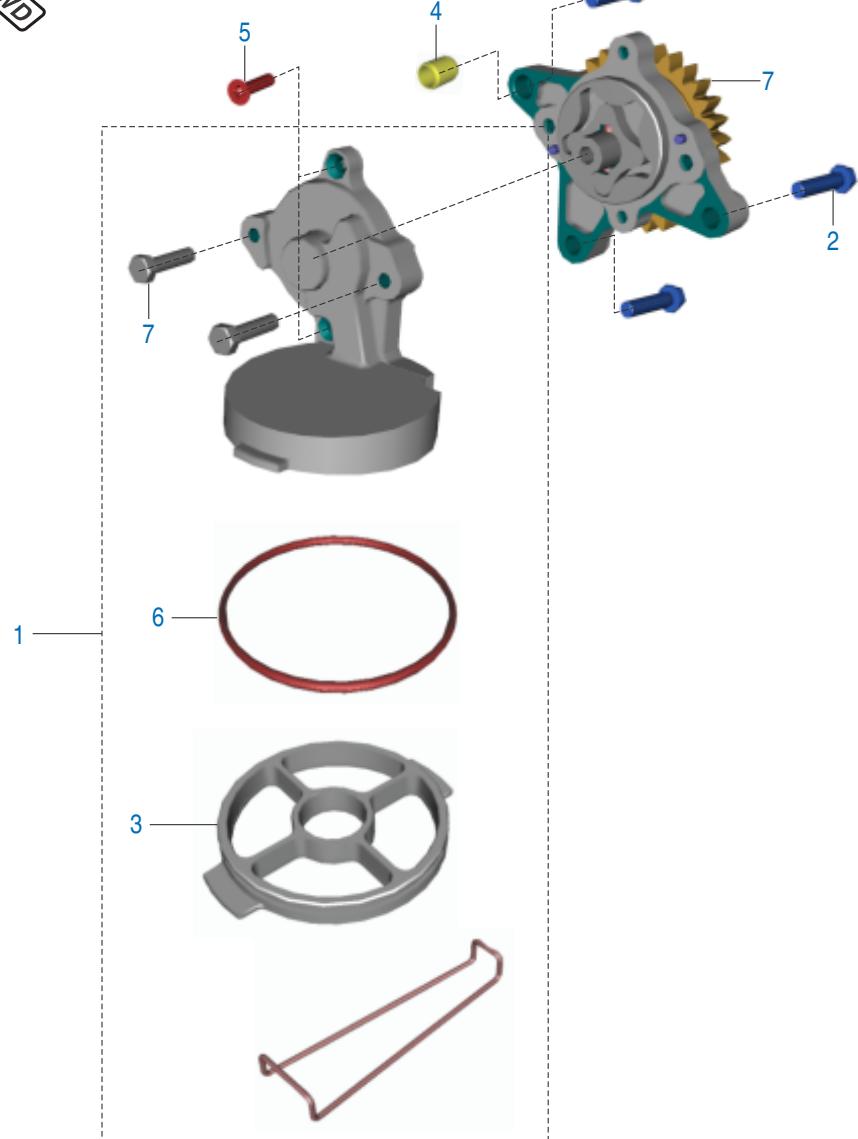

Carburetor Assembly

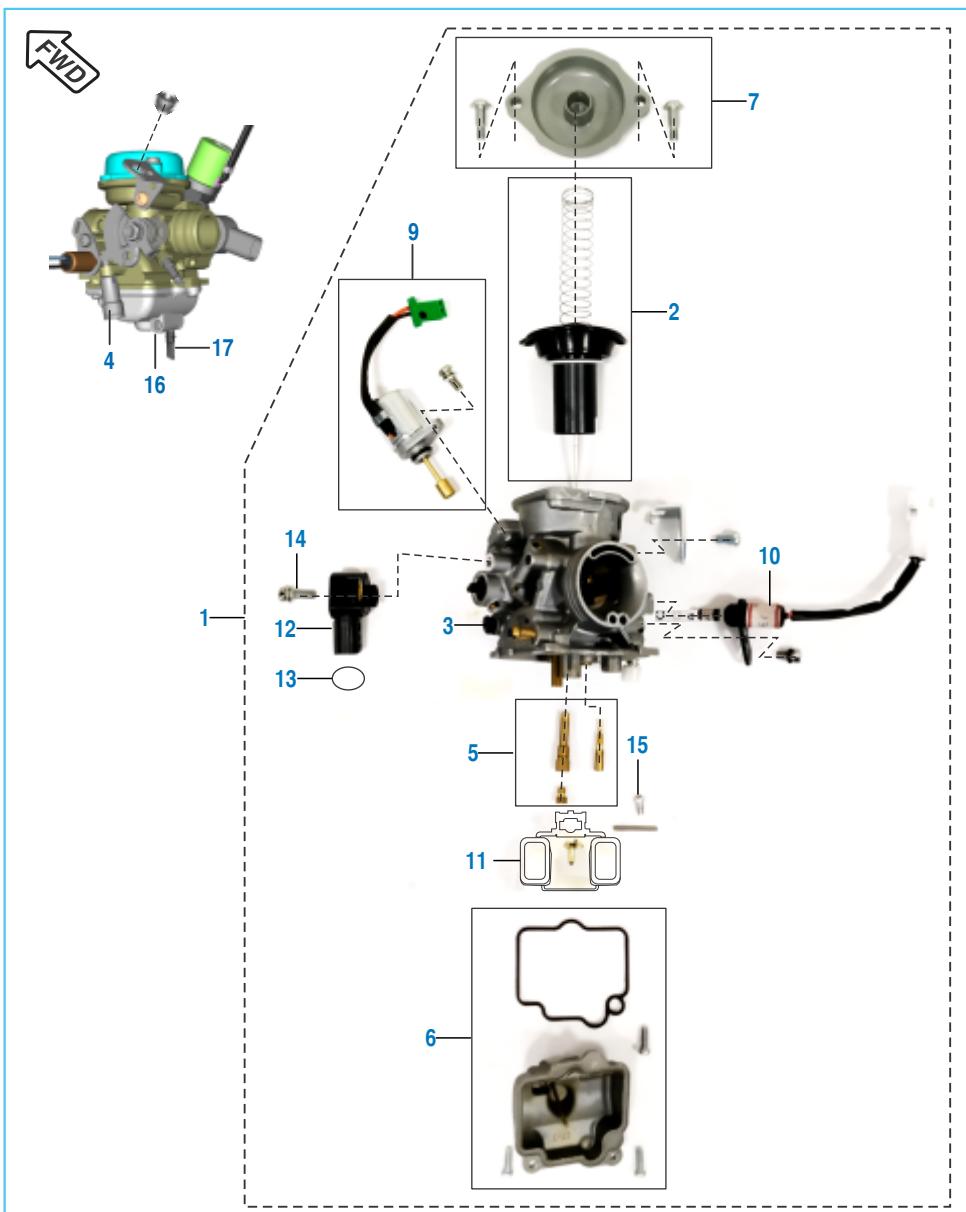


No.	Part No.	Description	Qty.	Remarks
1	PF 5812 71	Carburetor	1	
2	36 DU41 54	Piston Valve Assembly Kit	1	
3	36 DU41 55	Pilot Screw Kit	1	
4	36 PF01 67	Idling Adjuster Kit	1	
5	36 DU41 57	Jet Kit	1	
6	36 DU41 58	Float Body Assly Kit	1	
7	36 DU41 59	Top Cap Assly Kit	1	
8	36 DU41 60	O Ring & Gasket Kit	1	N.I.
9	36 DU41 61	Starter Kit	1	
10	36 DU41 62	Air Solenoid Kit	1	
11	DH 1211 62	Float Assembly	1	
12	JZ 3518 01	Sensor Throttle Position	1	
13	JE 5812 25	'O' Ring TPS	1	
14	JE 5812 20	Screw TPS	1	
15	DH 1210 64	Screw Float Pin	2	
16	JE 5812 18	Drain Screw	1	
17	DP 1210 65	Drain Hose	1	

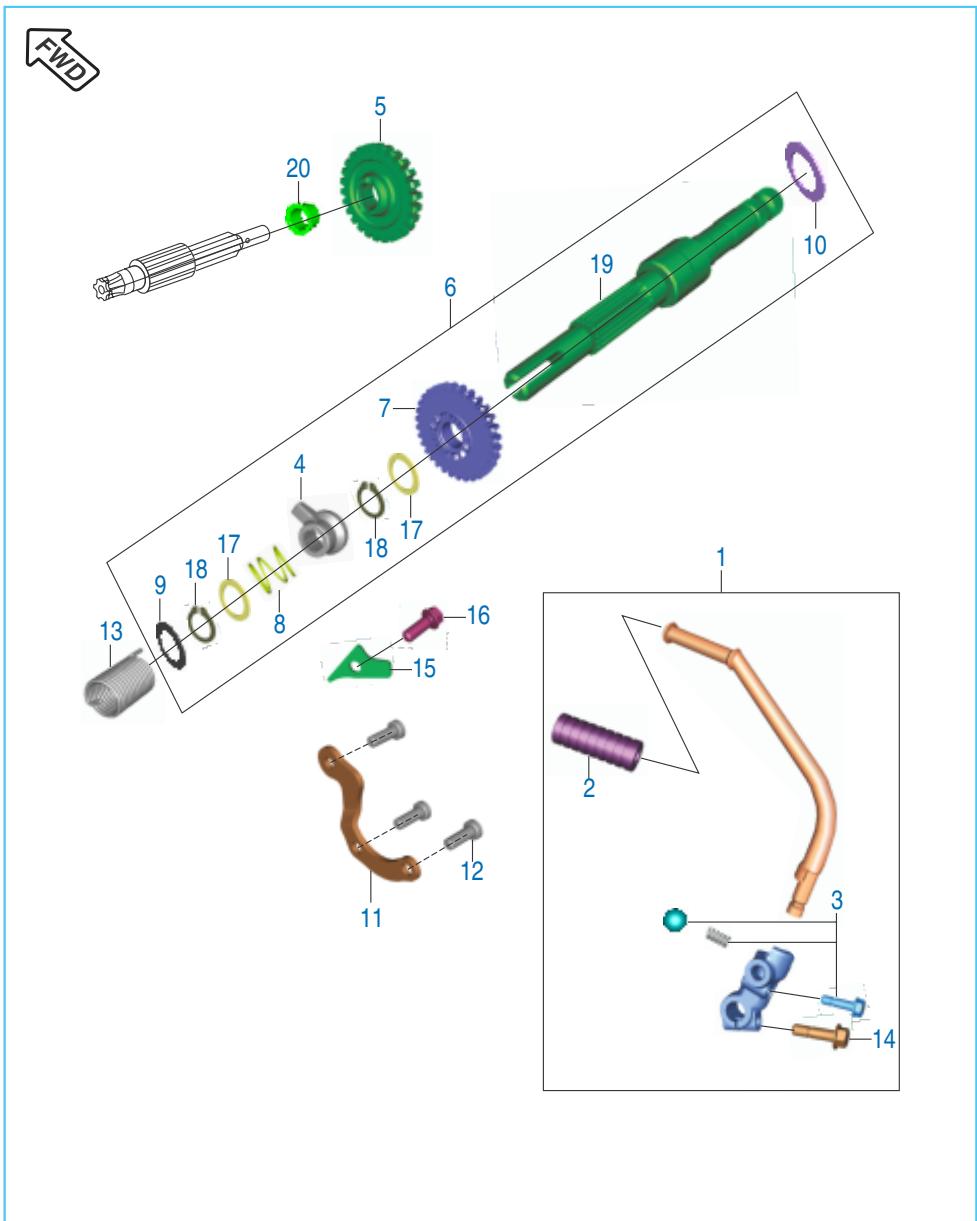

Kick Starter Mechanism


No.	Part No.	Description	Qty.	Remarks
1	DH 1024 77	Lever assembly kick	1	
2	DD 1010 97	Damper	1	
3	36 DH42 27	Boss Kick Set	1	Refer Kit List
4	DH 1015 37	Ratchet Kick Starter	1	
5	DH 1024 37	Gear Idler	1	
6	DH 1015 40	Spindle Kick Starter Assembly	1	
7	DH 1013 53	Pinion Kick Starter	1	
8	DH 1011 21	Spring For Kick Starter Ratchet	1	
9	39 0993 11	Washer Thrust	1	
10	39 2344 11	Plain Washer	1	
11	DH 1015 36	Guide Kick	1	
12	DH 1510 40	Bolt socket - M6	3	
13	JE 5410 08	Spring Kick Starter Return	1	
14	DH 1013 21	Bolt Flange	1	
15	DH 1015 38	Stopper	1	
16	DH 1013 85	Bolt Flanged	1	
17	39 2276 11	Washer	2	
18	KE AB16 10	External circlip type C	2	
19	DH 1015 39	Spindle Kick Shaft	1	
20	DH 1024 38	Collar	1	

Silencer Assembly

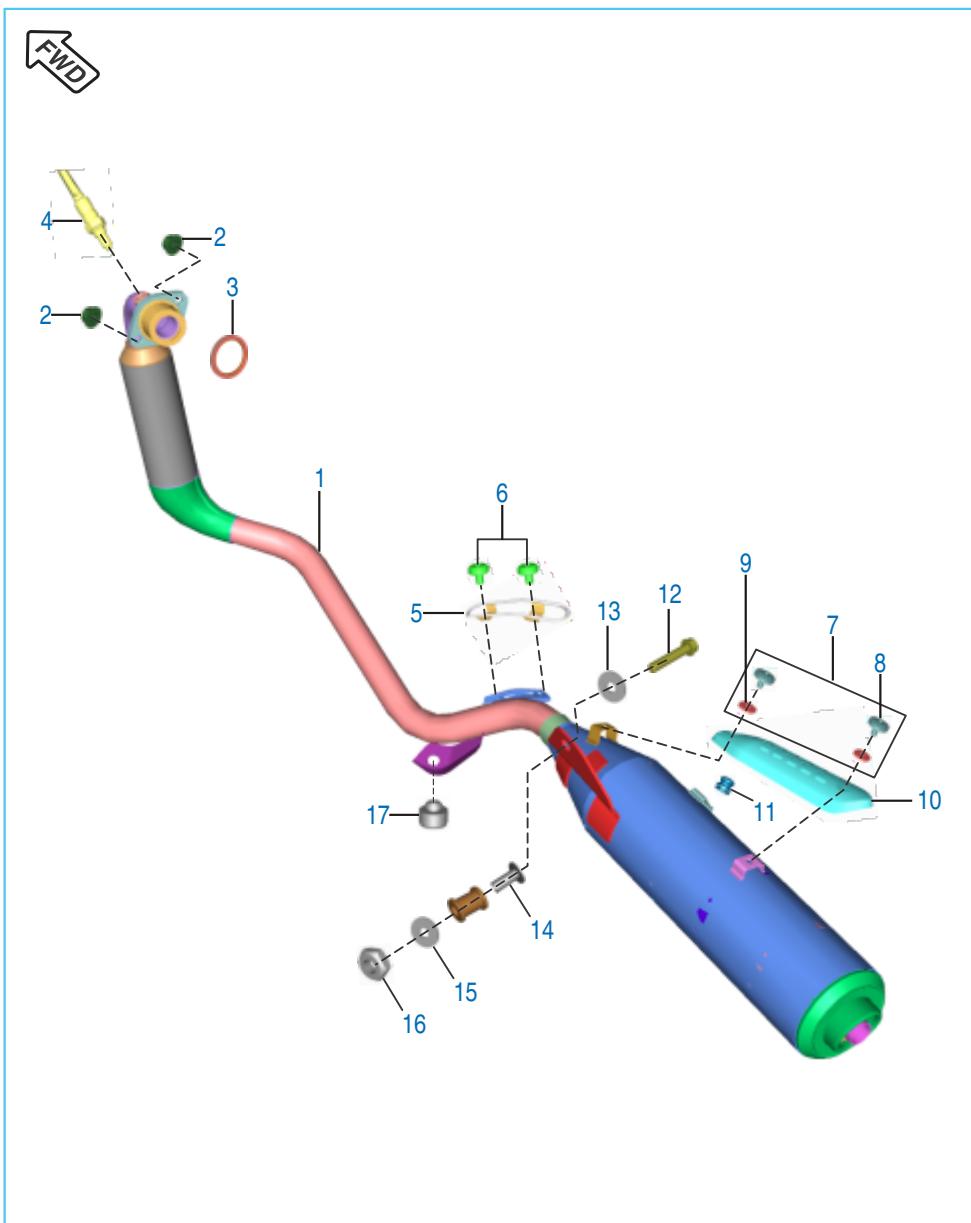


No.	Part No.	Description	Qty.	Remarks
1	DH 1025 29	Silencer assembly without shield	1	
2	KC GK08 08	Flanged Nut	2	
3	AZ 5910 64	Gasket Exhaust	1	
4	JB 5910 98	Sensor Oxygen	1	
5	DH 1025 66	Shield wire	1	
6	DH 1016 07	Truss Screw	2	
7	36 DH40 11	Kit Hardware Shield	1	Refer kit list
8	JW 5910 28	Truss screw - M5 x 0.8	2	
9	JB 5910 68	Washer nylon shield silencer	2	
10	DH 1037 56	Shield Muffler	1	
11	JB 5910 59	Damper	1	
12	KA DD10 50	Bolt flanged	1	
13	KD BA10 22	Washer Plain	1	
14	DJ 1612 78	Tube Silencer With Washer	1	
15	39 2425 11	Plain washer	1	
16	DD 1610 71	U - Nut - M10 x 1.25	1	
17	DG 1611 24	Damper (Main Stand)	1	
18	36 DK00 09	Kit Hardware Silencer	1	Refer kit list

Air Cleaner Assembly

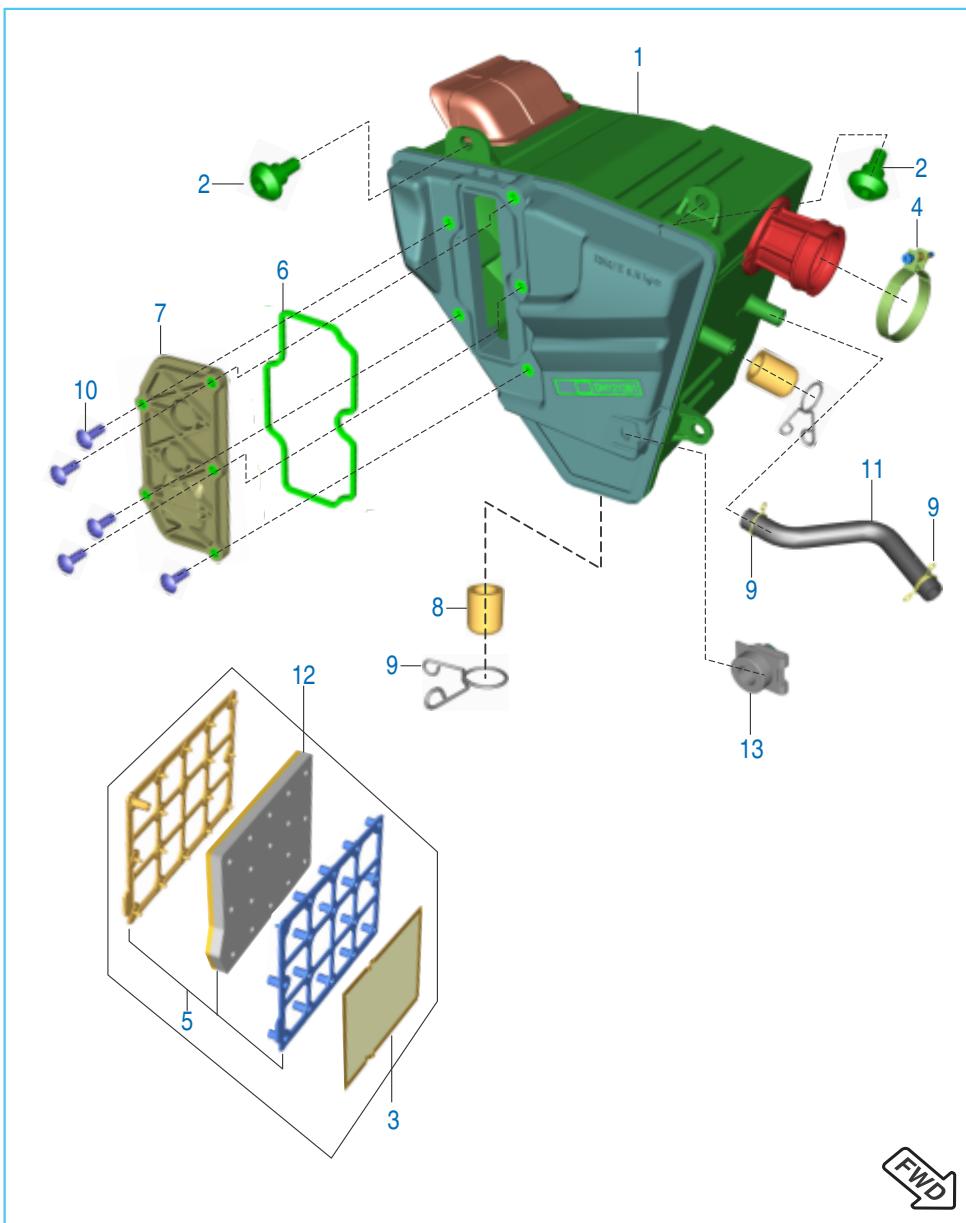


No.	Part No.	Description	Qty.	Remarks
1	DH 1212 71	Filter Assembly Air	1	
2	JY 1812 64	Step Bolt M6	1	
3	DH 1022 74	Arrester Complete Frame	1	
4	JG 5814 42	Clamp intake pipe	1	
5	DH 1023 89	Air filter element	1	
6	DH 1022 81	'O' ring Air Filter Cover	1	
7	DH 1022 76	cartridge assembly	1	
8	JP 5810 18	Tube Drain	2	
9	28 1011 74	Spring Clip	4	
10	KB UA05 14	Screw Pan Cross	5	
11	DH 1017 18	Pipe assembly breather	1	
12	DH 1023 90	Element filter air	1	
13	DH 1617 56	Nut Clip	1	

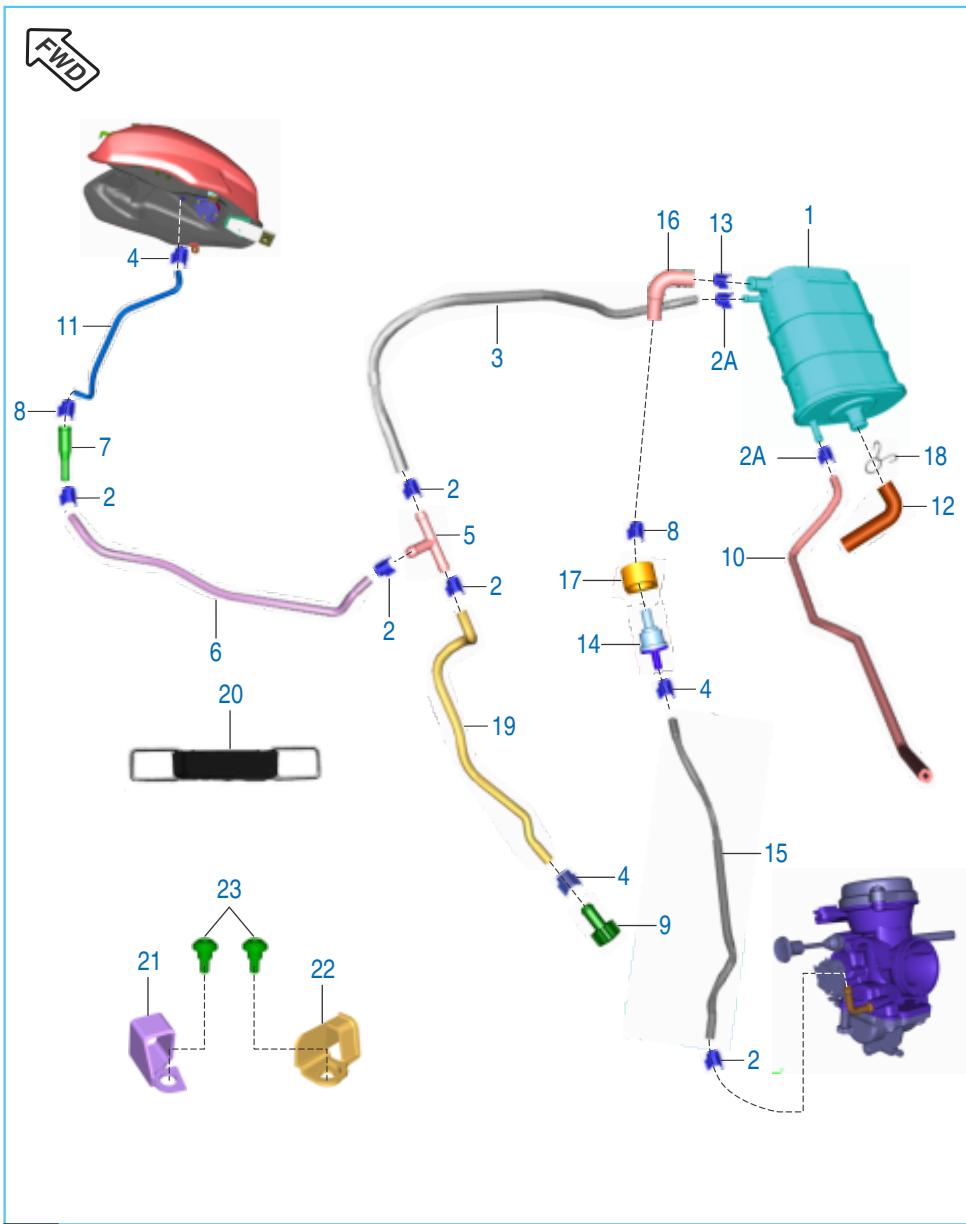

EVAP Mechanism


No.	Part No.	Description	Qty.	Remarks
1	JY 1710 77	Canister	1	
2	JY 1710 70	Spring Band Clamp 9 x 8.4	5	
2A	JL 1711 01	Clamp band spring 9.5 x 8.4	2	
3	DH 1410 70	Tube T Connector To Canister	1	
4	JG 1710 29	Spring Band Clamp 11.5 X 8.4	3	
5	GL 1710 36	Connect for breather & vapor tube	1	
6	DH 1411 03	Pipe Connector	1	
7	JG 1710 86	Tube Connector EVAP	1	
8	JL 1711 02	Clamp band spring 12.5 x 8	2	
9	JY 1718 25	Plug fuel drain	1	
10	DH 1410 73	Tube Canister Drain	1	
11	DH 1410 68	Tube Tank To Inline Connector	1	
12	DH 1410 74	Tube Canister Breather	1	
13	JY 1710 69	Spring Band Clamp 15 x 10	1	
14	PD 1716 16	Valve Purge	1	
15	DH 1410 72	Tube Purge Valve To Carburetor	1	
16	DH 1410 71	Tube Canister To Purge Valve	1	
17	JH 1710 48	Grommet Purge Valve	1	
18	DG 1210 40	Clamp	1	
19	DH 1410 75	Tube Drain	1	
20	DH 1614 29	Strap Canister	1	
21	DH 1615 16	Clamp tubes EVAP front	1	
22	DH 1615 17	Clamp evap routing rear	1	
23	JY 1812 64	Bolt socket - M6	2	

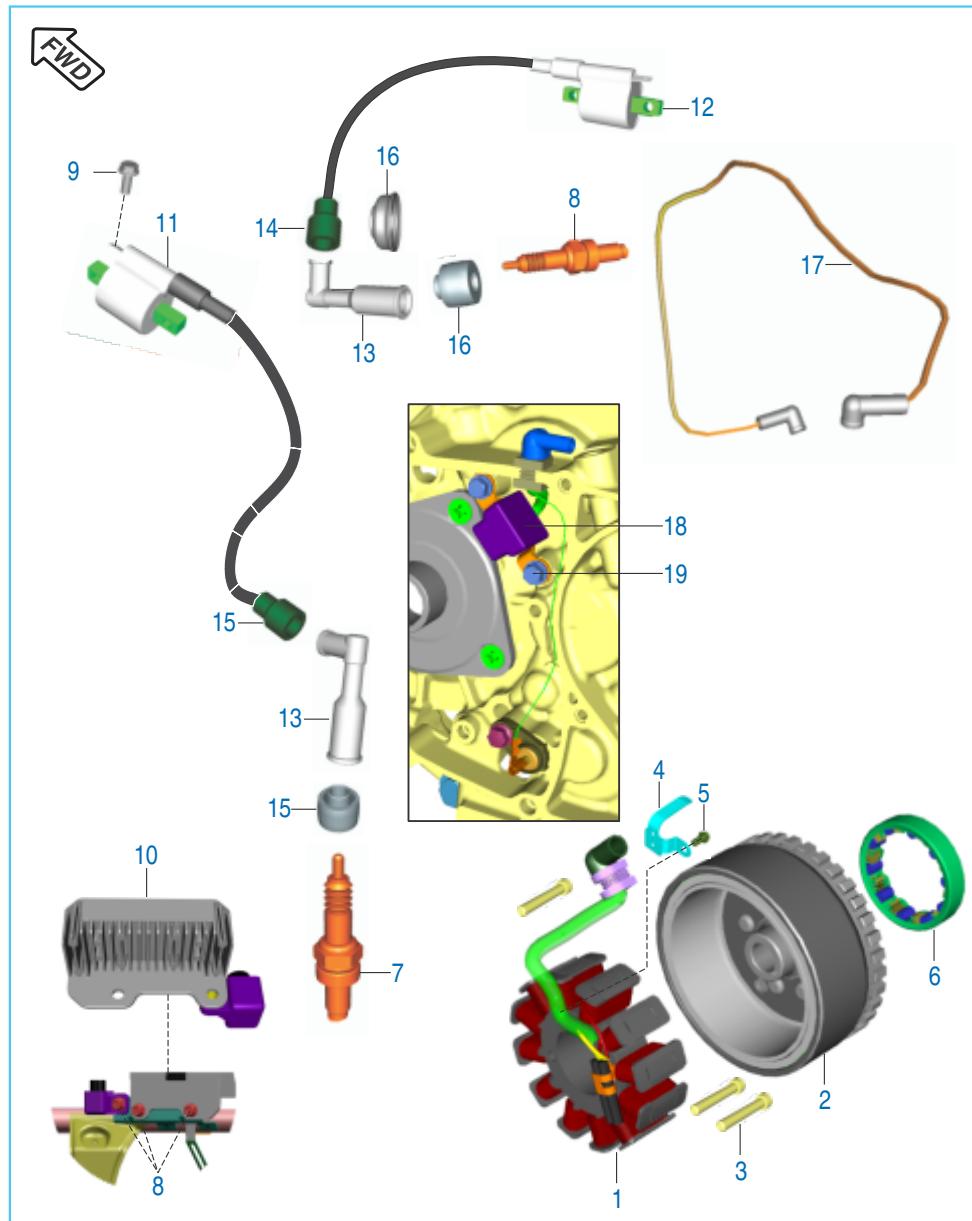

Magneto, Spark Plug & H.T. Coil


No.	Part No.	Description	Qty.	Remarks
1	DH 1111 48	Stator assembly	1	
2	DH 1111 23	Rotor assly. with one way clutch	1	
3	DK 1012 84	Bolt Socket - M5 x 0.8 x L34	3	Stator Mounting
4	PD 5412 92	Bracket Harness Stator	1	
5	LA E000 14	Bolt Flanged M5 x 10	1	
6	PD 5514 53	Clutch One Way	1	
7	DG 1110 08	Spark Plug	2	
8	KA DT06 16	Bolt Flanged - M6 x 1 x L16	3	
9	KA DD06 18	Bolt Flanged	4	
10	DH 2011 58	Unit Regulator	1	
11	DH 1111 11	H.T. Coil LH	1	
12	DH 1111 13	H.T. Coil RH	1	
13	DH 1110 15	Cap Spark Plug	2	
14	DD 1110 12	Grommet H.T. Cable	2	
15	DH 1110 13	Grommet Spark Plug Cape	2	
16	JD 3512 06	Grommet Sleeve Spark Plug	1	
17	JC 2010 27	Cbl. Assly St. Motor To St. Relay	1	
18	DH 1024 62	Sensor Assembly Pick Up	1	
19	AA 1014 37	Screw - Pre - Coated	2	

Starter Assembly

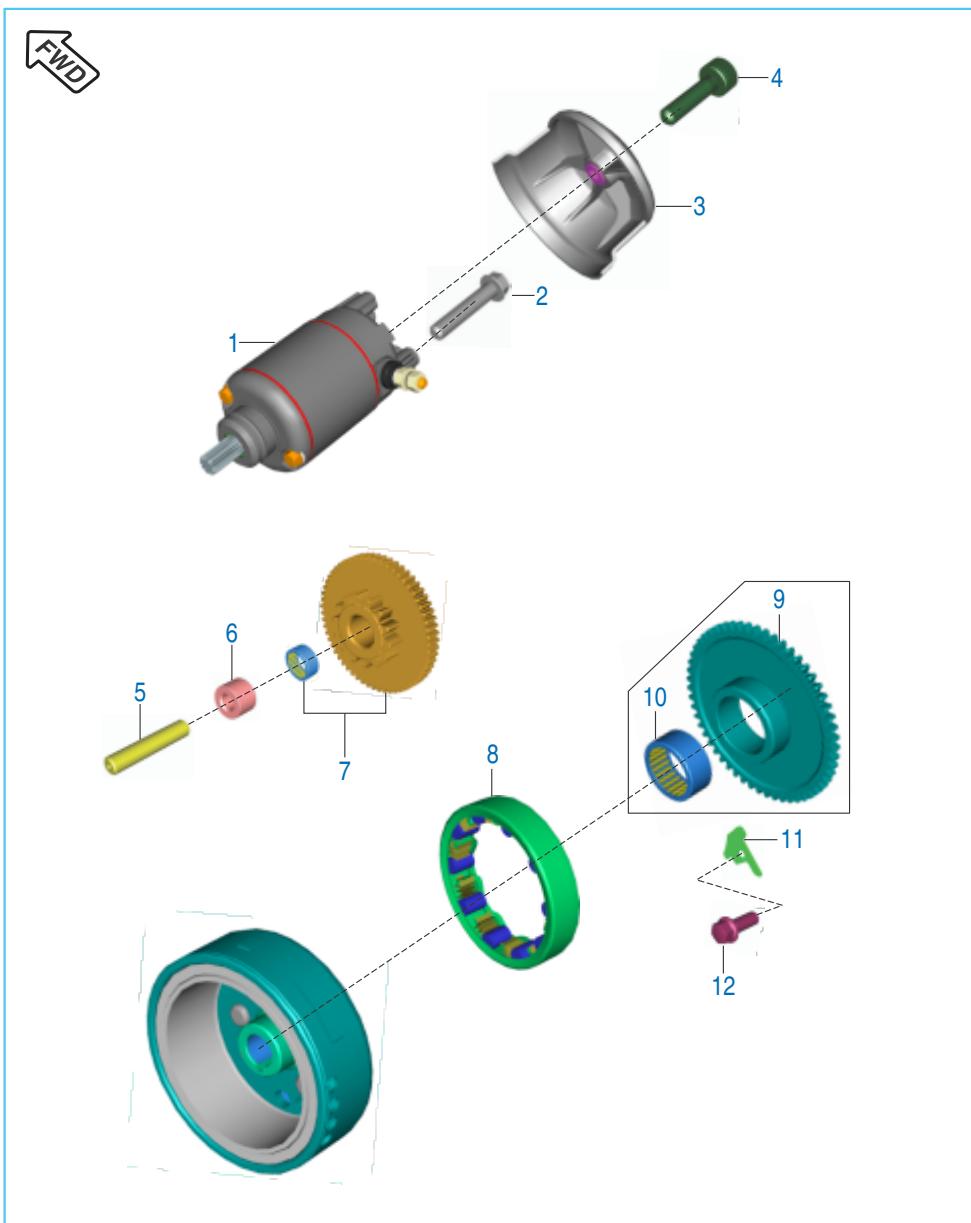


No.	Part No.	Description	Qty.	Remarks
1	DH 1111 14	Motor Assembly Starter	1	
2	LA E000 18	Bolt flanged M6 x 1 x 30L	2	
3	56 DJ4E 1Y	Cover Starter Motor	1	
4	39 2285 01	Countersunk head screw	1	
5	DK 1011 76	Shaft Starter Counter	1	
6	DH 1011 72	Bush	1	
7	JC 1011 45	Gear Assembly Starter Counter	1	
8	PD 5514 53	Clutch One Way	1	
9	PD 6212 03	Gear Assembly Clutch Starter	1	
10	59 2000 07	Needle Roller Bearing	1	
11	DH 1015 81	Plate Starter Clutch Gear Return	1	
12	DH 1013 85	Bolt	1	

FWD

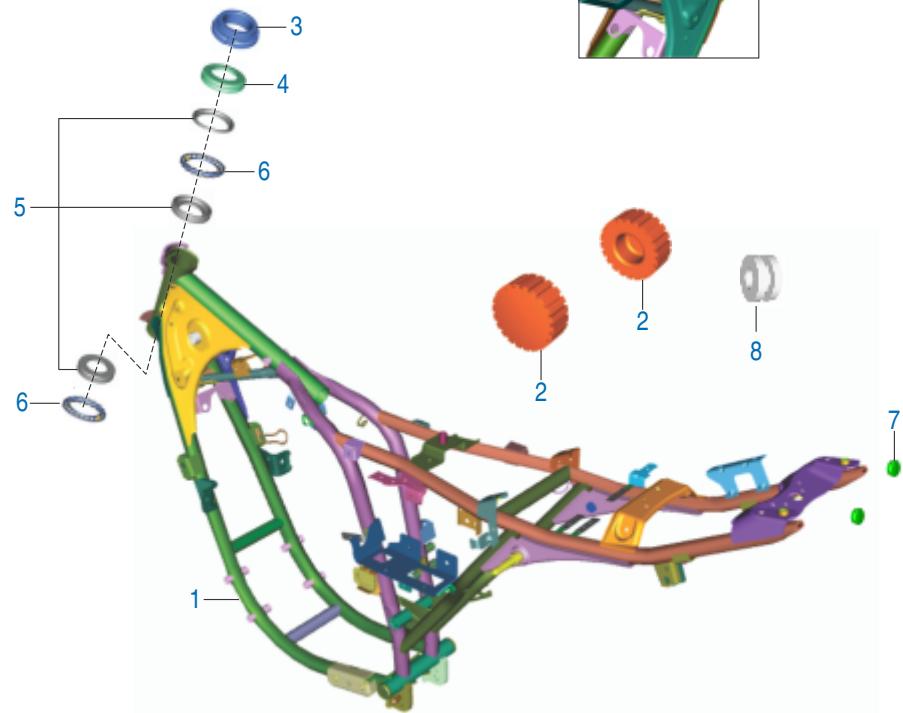


Frame and Frame Fittings

No.	Part No.	Description	Qty.	Remarks
1	DH 1617 68	Frame assembly	1	
2	DJ 1410 08	Damper Front	2	
3	DH 1811 22	Steering Nut	1	
4	JZ 1510 83	Cap Steering	1	
5	36 DS40 35	Kit Steering Cone with Grease	1	Refer kit list
6	DJ 1811 15	Cage bearing steering	2	
7	PA 1138 05	Cap Frame End	2	
8	DH 1910 95	Clamp	1	For Drum-Drum
9	KA ED06 10	Bolt Flanged Small	1	For Drum-Drum

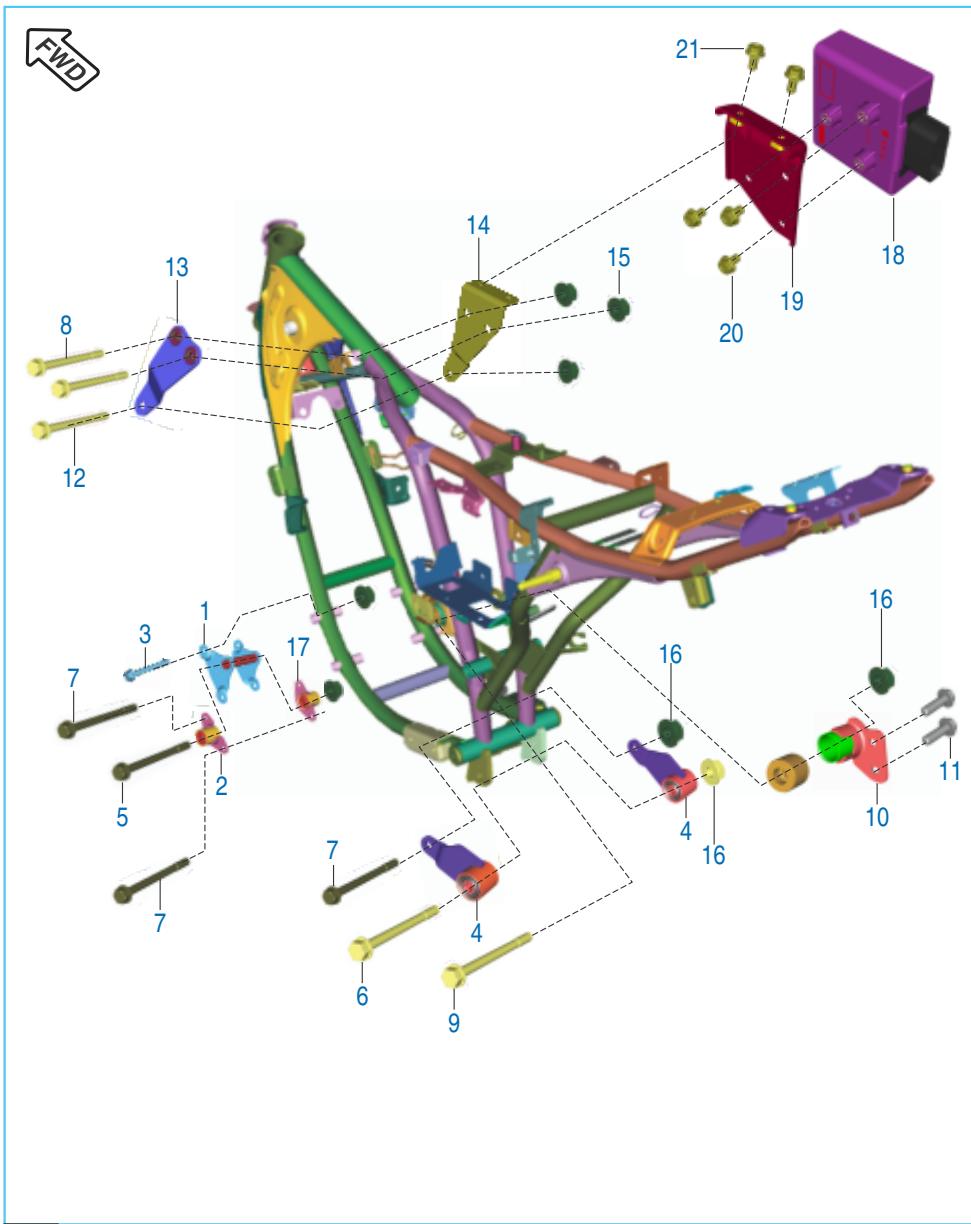

Engine Mountings & ECU EMS Assembly


No.	Part No.	Description	Qty.	Remarks
1	DH 1617 36	Hanger Engine Front	1	
2	DH 1617 32	Hanger Assembly Engine Front LH	1	
3	KA DD08 65	Hex HD bolt flange - M8	4	
4	DH 1614 97	Assly Bkt Engine Mtg Lower Rear	2	
5	39 2413 04	Bolt Flanged	1	
6	KA DD08 B0	Bolt flanged - M8	1	
7	KA DD08 A0	Bolt flanged - M8	3	
8	KA AD08 55	Bolt	2	
9	39 2414 04	Hex. Socket HD Cap Bolt	1	
10	DH 1613 01	Bracket Complete RH Engine Rear	1	
11	KA DD08 25	Bolt flanged	2	
12	KA DD08 65	Bolt flanged	1	
13	DH 1617 77	Hanger Engine LH	1	
14	DH 1617 45	Hanger Engine RH	1	
15	39 1970 15	Hex nut flange - M8	9	
16	DH 1612 45	U - NUT - M8	3	
17	DH 1617 34	Hanger Assembly Engine Front RH	1	
18	DH 1111 34	ECU EMS Assembly	1	
19	DH 1617 46	Bracket Unit Control	1	
20	KA DD06 10	Bolt Flanged	3	
21	KA DD06 12	Bolt Flanged	2	

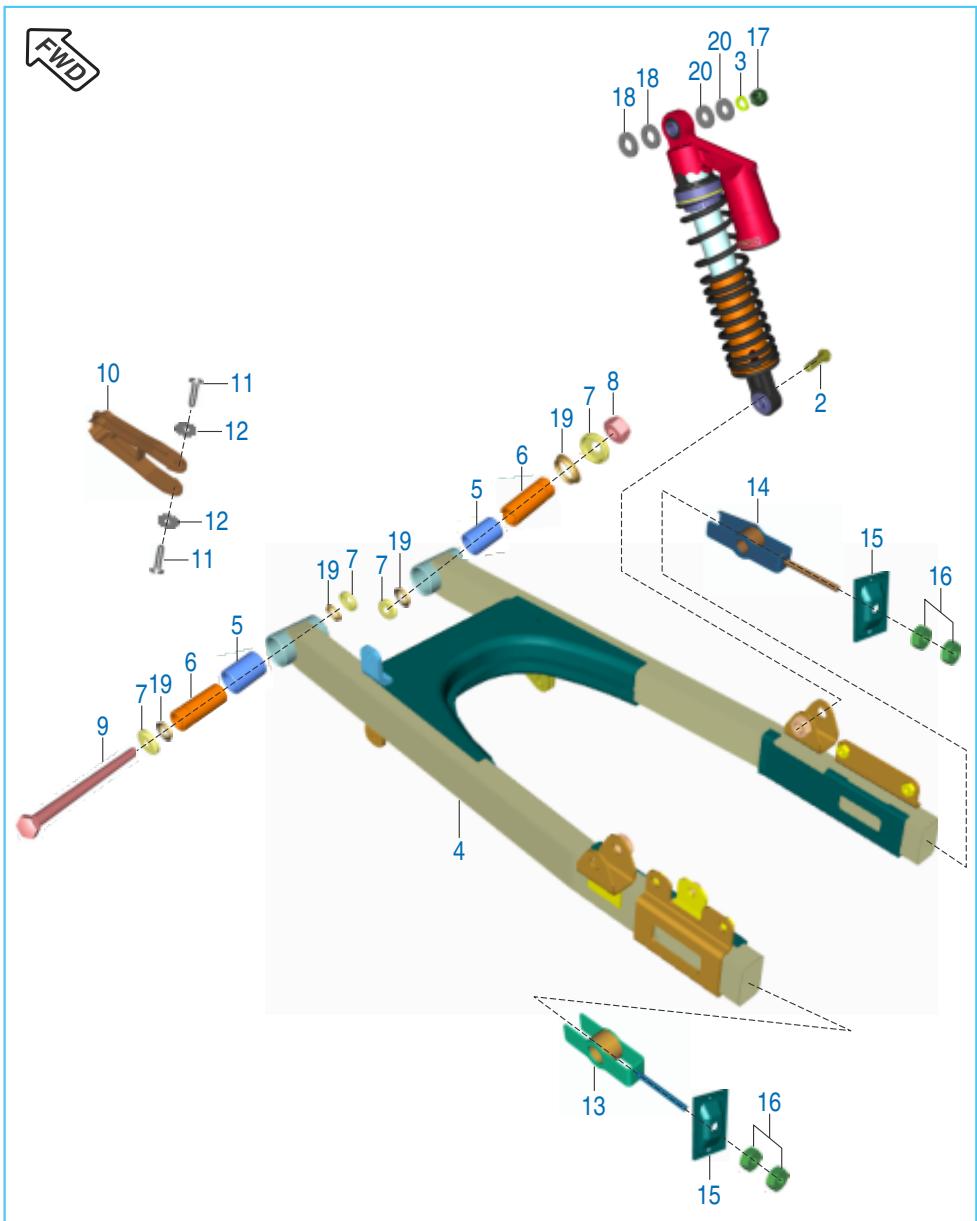

Swing Arm With Bush / Rear Shock Absorber


No.	Part No.	Description	Qty.	Remarks
1	DH 1710 39	Rear Shock Absorber	2	
2	JB 1220 16	Bolt Pre-coated	2	
3	KD DB10 18	Washer spring thin	2	
4	DH 1710 62	Arm assembly swing	1	
5	DH 1710 50	Bush	2	
6	DH 1710 13	Sleeve Swing Arm	2	
7	DH 1710 15	Dust Seal Swing Arm	4	
8	DH 1710 19	'U' Nut Swing Arm	1	
9	LA D002 53	Axle - M14	1	
10	DJ 1710 08	Chain Slider	1	
11	KB RC35 13	Screw	2	
12	39 0454 11	Plain Washer	2	
13	DJ 1510 36	Adjuster Chain LH	1	
14	DJ 1510 37	Adjuster Chain RH	1	
15	DJ 1510 47	Plate Chain Adjuster	2	
16	DH 1710 24	Hex nut (swing arm)	4	
17	39 2366 15	Nut Domed Cap	2	
18	39 0714 11	Washer	4	
19	JH 1220 09	Seal Dust	4	
20	DG 1710 25	Washer	4	

Pillion Foot Rest / Holder

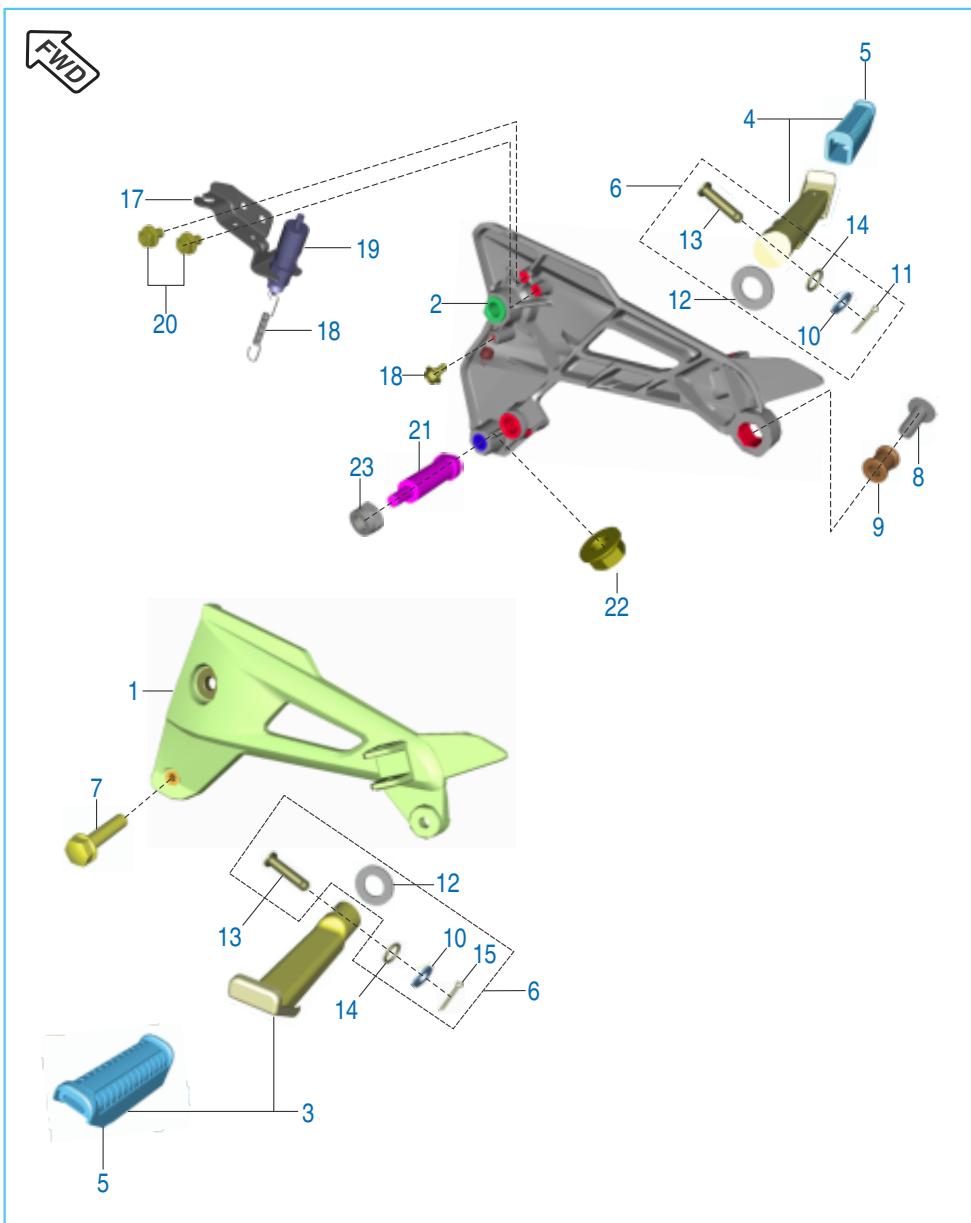


No.	Part No.	Description	Qty.	Remarks
1	56 DH3X 1Y	Holder Step LH Slate Gray	1	
2	56 DH5H 1Y	Holder Step RH Slate Gray	1	
3	DJ 1611 28	Pillion Step Assly. Complete LH	1	
4	DJ 1611 29	Pillion Step Assly. Complete RH	1	
5	DJ 1611 22	Rubber Pillion Step	2	
6	36 DK00 13	Kit Hardware Pillion	2	Refer Kit List
7	KA DD08 35	Bolt Flanged	1	
8	DJ 1612 78	Tube Silencer With Washer	1	
9	DH 1611 55	Damper Silencer Mounting	1	
10	LD B000 18	Washer plain	2	
11	KH AA25 20	Pin cotter	1	
12	DJ 1611 86	Washer	2	
13	DH 1610 61	Pin pillion step	2	
14	30 1410 31	Ring 'O'	2	
15	KH AA20 15	Pin cotter	1	
18	DP 1610 94	Bolt - Stepped - M6	1	For Drum-Drum
17	DH 1617 25	Bracket switch brake	1	
18	JL 1610 06	Spring rear brake switch	1	
19	DJ 2012 53	Rear brake switch	1	
20	LA D000 85	Bolt flanged - M6	2	
21	LA A000 56	Bolt - M10	1	
22	KC GD08 08	Nut Hex Flanged	1	For Drum-Drum
23	LC H000 01	Nut Nyloc - M10 x 1.25	1	

Rider Foot Rest

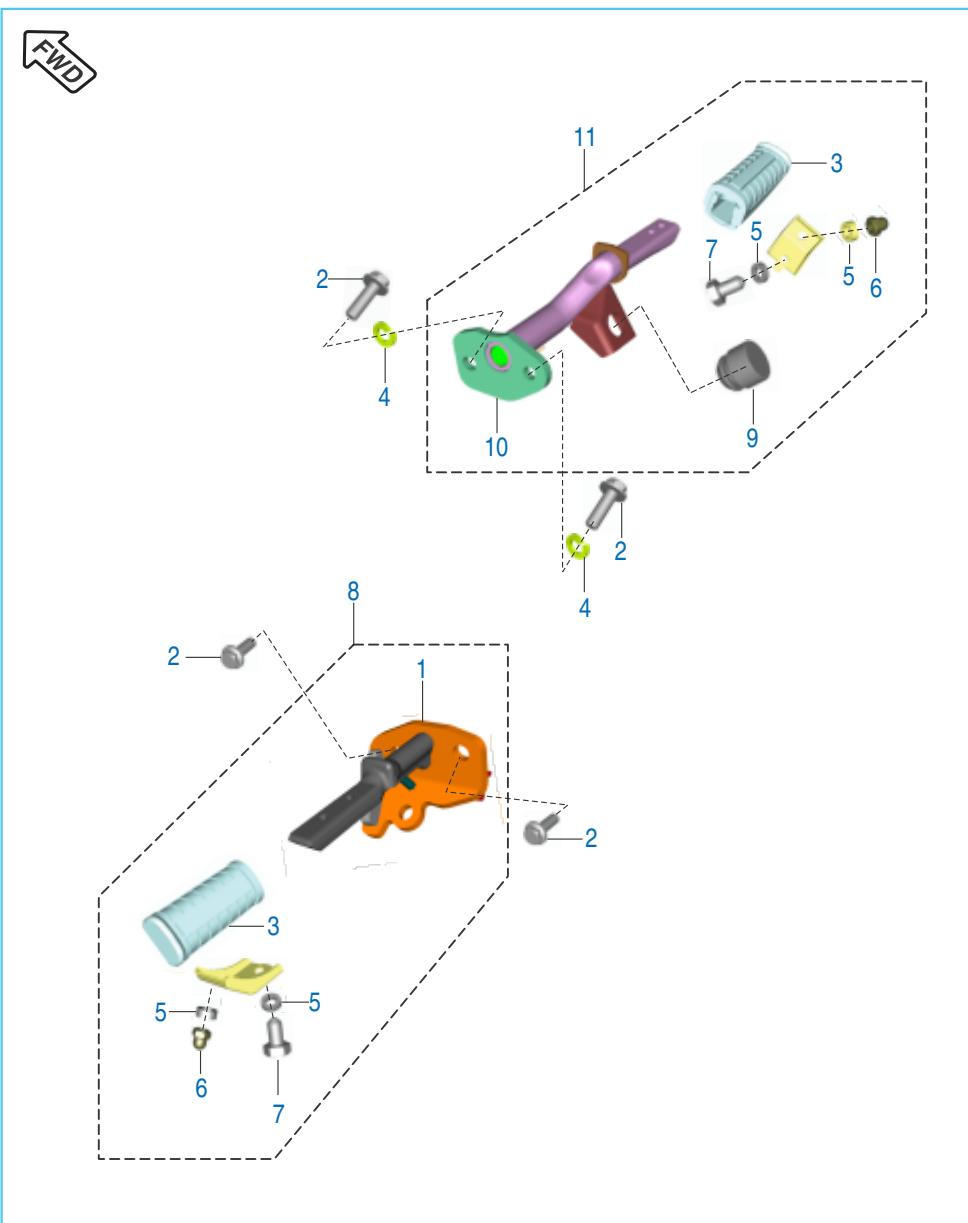

No.	Part No.	Description	Qty.	Remarks
1	DH 1617 19	Step assembly rider LH	1	
2	LA D002 61	Bolt Flanged M8 x 1.25	4	For Drum-Drum
3	DH 1610 53	Rubber Main Step	2	
4	39 0543 11	Washer Plain	2	For Drum-Drum
5	DH 1611 00	Spacer Main Step	4	
6	DJ 1612 85	Special bolt main step	2	
7	KA AD06 12	Bolt	2	
8	DH 1617 18	Main Step LH Assembly Complete	1	
9	JH 1132 03	Damper Kick Stopper	1	For Drum-Drum
10	DH 1617 21	Step assembly rider RH	1	
11	DH 1617 20	Assembly Step Rider RH	1	

FWD

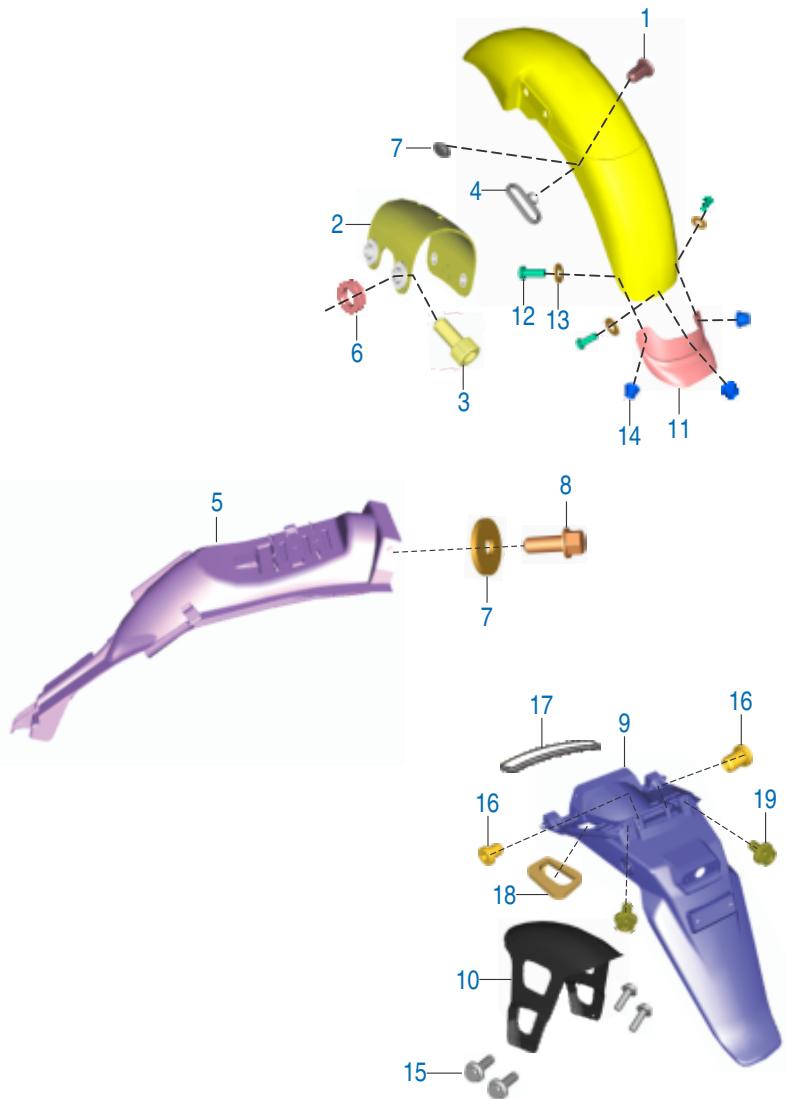

Mudguard - Front & Rear


No.	Part No.	Description	Qty.	Remarks
1	DJ 1610 69	Nail For Cable Guide	1	
2	DH 1616 30	Brace Fender	1	
3	DG 1810 08	Socket Bolt	4	
4	DS 1611 25	Cable Guide	1	
5	DH 1614 24	Fender rear front	1	
6	DJ 1610 91	Grommet Front Fender	4	
7	DT 1814 33	Plug Front Fender Rear	1	For Drum-Drum
8	KA ED06 16	Bolt Flanged Small	2	
9	DJ 1612 54	Fender Rear	1	
10	DJ 1612 21	Cover Mud Rear	1	
11	DH 1615 59	Flap Fender Front	1	
12	KB BA05 12	Screw Pan Cross	3	
13	KD AA05 10	Washer Plain	6	
14	39 0326 15	Nut nyloc M5 x 0.8	3	
15	DS 1612 24	Bolt stepped with flange	4	
16	DH 1613 30	Grommet	2	
17	22 1611 93	Strip foam	1	
18	DH 1615 10	Grommet Sari Guard	1	
19	KA DD06 12	Bolt Flanged	1	

FWD


Front Wheel Direction

Center & Side Stand Assembly

No.	Part No.	Description	Qty.	Remarks
1	DJ 1612 14	Stand Main	1	
2	30 1611 57	Shaft Stand	1	
3	KH AA32 25	Pin cotter	1	
4	DH 1612 39	Spring Main Stand with Cover	1	
4A	DH 1611 21	Spring tension	1	
5	DH 1614 71	Stand Side	1	
6	DH 1610 66	Spring Side Stand	1	
7	DH 1611 46	Cover Spring Side Stand	1	
8	DF 1611 02	Bolt	1	
9	LC H000 01	Nut nyloc - M10	1	
10	DH 2010 93	Side Stand Switch	1	
11	KC GA05 05	Nut hex flanged	1	
12	DH 1615 68	Cover switch stand side	1	
13	JL 4036 00	Magnet Holder	1	

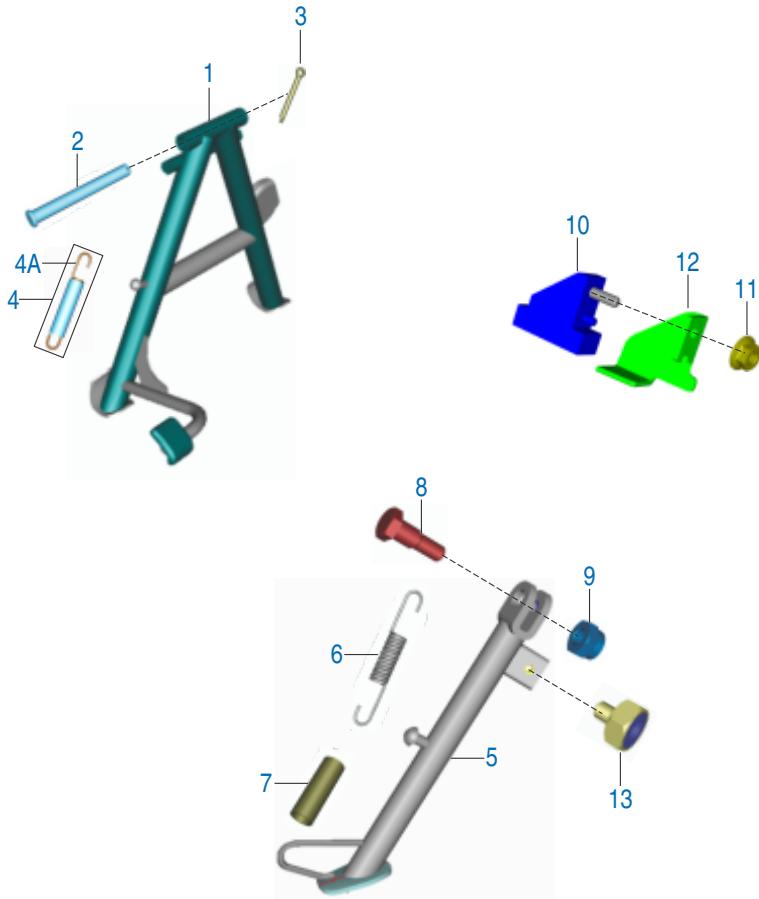


Tube / Tyre / Rim

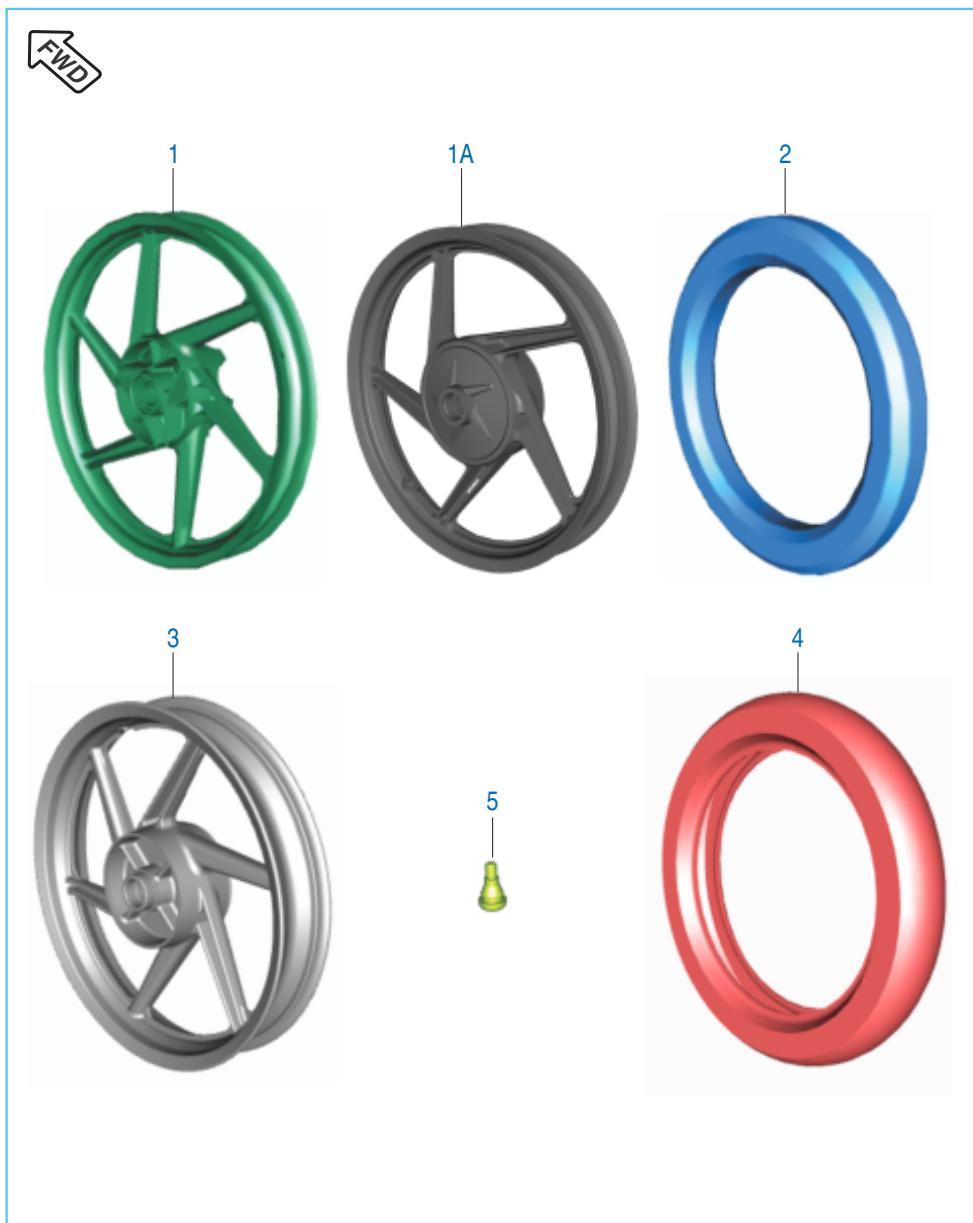

No.	Part No.	Description	Qty.	Remarks
1	DH 1510 77	Wheel Front 1.85 x 17 (Tubeless)	1	
1A	56 DH2Y 33	Wheel Front 1.85 x 17 (150 Dia)	1	For Drum-Drum
2	JF 1310 10	Tyre Front 80 / 100 - 17 Tubeless	1	
3	DH 1511 32	Wheel Rear 2.15 x 17 (Tubeless)	1	130 Dia.
4	JF 1312 11	Tyre Rear 100 / 90-17 (Tubeless)	1	
5	DK 1510 26	Valve Tubeless Tyre	2	


Tyre & Tubes are not supplied through spare parts.

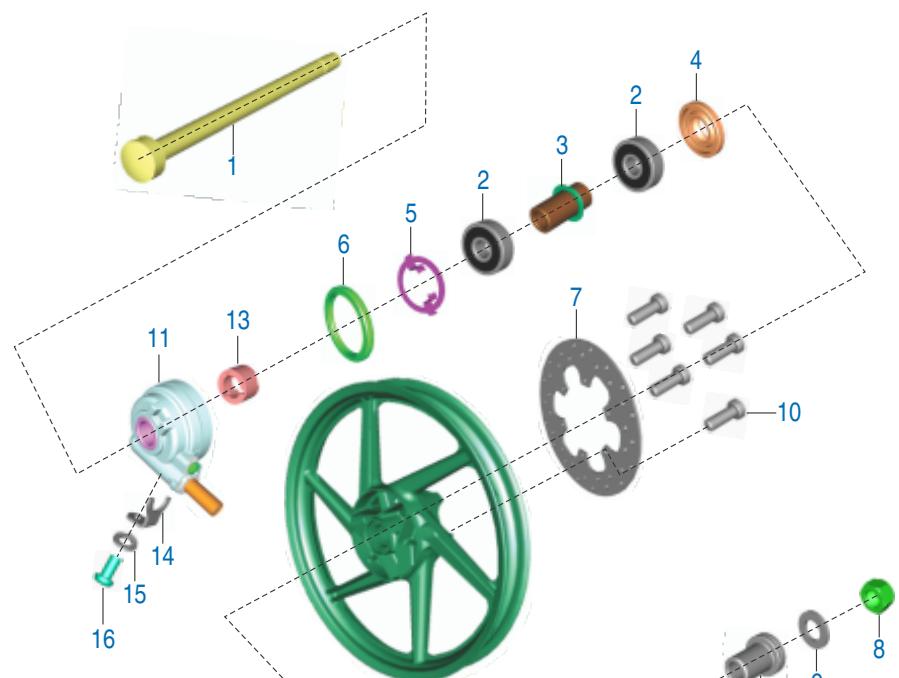

Front Wheel Assembly (Disc - Drum)

No.	Part No.	Description	Qty.	Remarks
1	JB 1310 17	Axle	1	
2	KP BC63 01	Bearing Ball	2	
3	DE 1510 06	Spacer Assembly	1	
4	30 1510 33	Seal Oil	1	
5	DE 1510 12	Plate Drive	1	
6	DE 1510 08	Seal Oil	1	
7	DH 1510 81	Disc	1	
8	59 1500 03	Nut U - M12	1	
9	JB 1310 18	Plain Washer	1	
10	DH 1510 40	Bolt Socket - M6	6	
11	DH 2010 79	Sensor speed assembly	1	
12	DS 1510 58	Spacer	1	
13	DJ 1510 94	Rotor Speedo +	1	
14	30 1511 18	Stopper For Bushing	1	
15	KD DB04 08	Washer Spring Thin	1	
16	KB BA04 08	Screw Pan Cross	1	

FWD

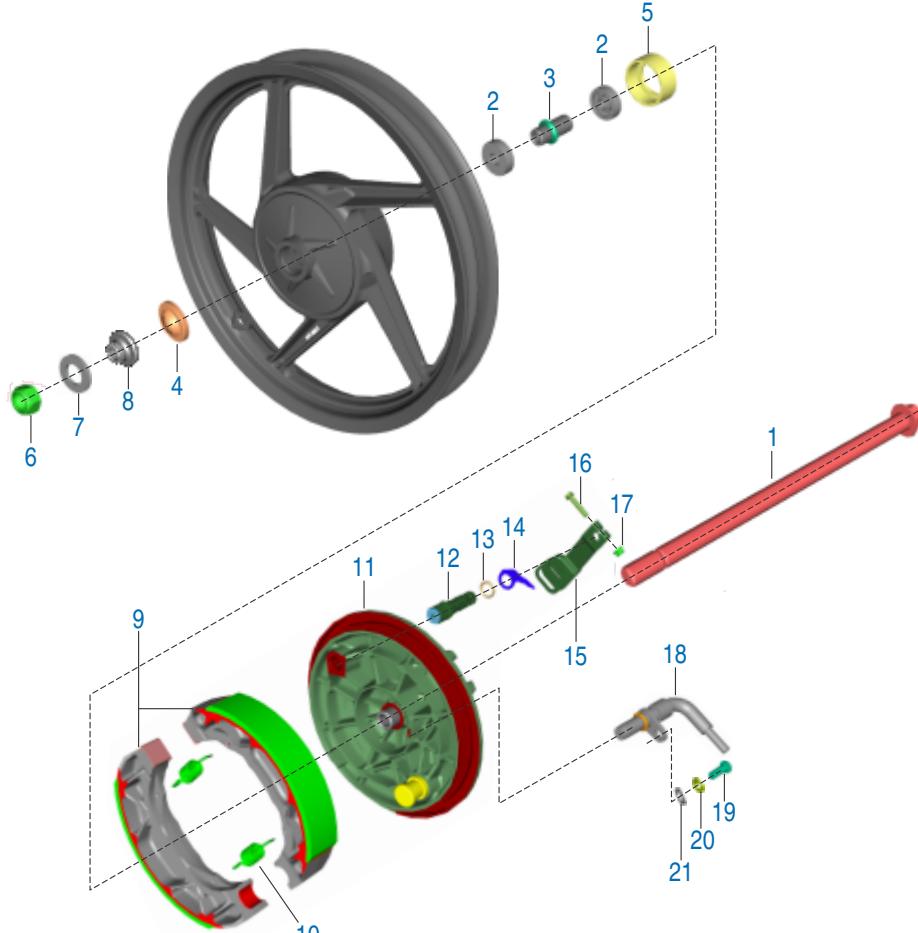

Front Wheel Assembly (Drum - Drum)

No.	Part No.	Description	Qty.	Remarks
1	JB 1310 17	Axle	1	
2	KP BB63 01	Bearing Ball	2	
3	30 1510 32	Collar Bearing	1	
4	30 1510 33	Seal Oil	1	
5	JB 1310 08	Ring Speed Sensor	1	
6	59 1500 03	Nut U - M12	1	
7	JB 1310 18	Plain Washer	1	
8	JB 1310 22	Spacer Assembly	1	
9	36 DH42 43	Kit Brake Shoes	1	
10	GL 1316 03	Spring Tension	2	
11	56 DH8Q 7B	Panel Brake Front	1	
12	DH 1511 15	Cam Assembly Brake Front	1	
13	01 1701 22	'O' Ring	1	
14	DH 1511 18	Indicator	1	
15	DH 1511 17	Lever Cam Brake	1	
16	KA EF06 30	Bolt Flange	1	
17	DS 1510 94	Flanged Nut	1	
18	DH 2011 57	Sensor Speed	1	
19	KB BA06 16	Screw Pan Cross	1	
20	KD DA06 12	Washer Spring Thin	1	
21	KD AA06 11	Washer Plain Small	1	

FWD


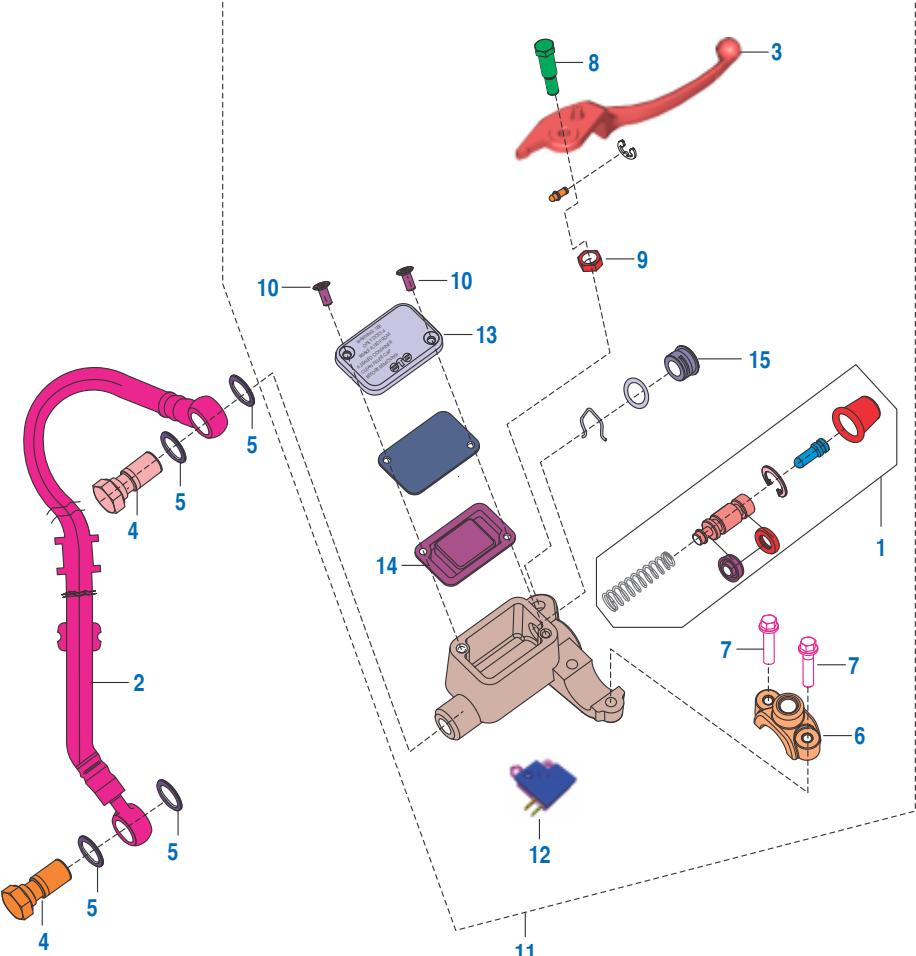


Plate No.: 34

Front Master Cylinder Assembly

No.	Part No.	Description	Qty.	Remarks
1	DJ 1910 23	Major Kit - M Cyl. with Grease	1	
2	36 JK01 02	Hose assembly	1	Refer kit list
3	JH 1610 32	Lever brake front	1	
4	GL 1318 27	Banjo Bolt	2	
5	DJ 1910 26	Washer Copper	4	
6	DJ 1910 27	Clamp Holder RH	1	
7	DJ 1910 28	Bolt Clamp Holder	2	
8	DJ 1910 29	Bolt Front Brake Lever	1	
9	DJ 1910 30	Nut Flanged	1	
10	DJ 1910 31	Screw	2	
11	JH 1318 50	Cylinder assembly master front	1	
12	DJ 2011 09	Front Brake Switch	1	
13	DJ 1910 34	Reservoir Cover	1	
14	DJ 1910 35	Diaphragm	1	
15	DJ 1910 38	Window Oil Level	1	




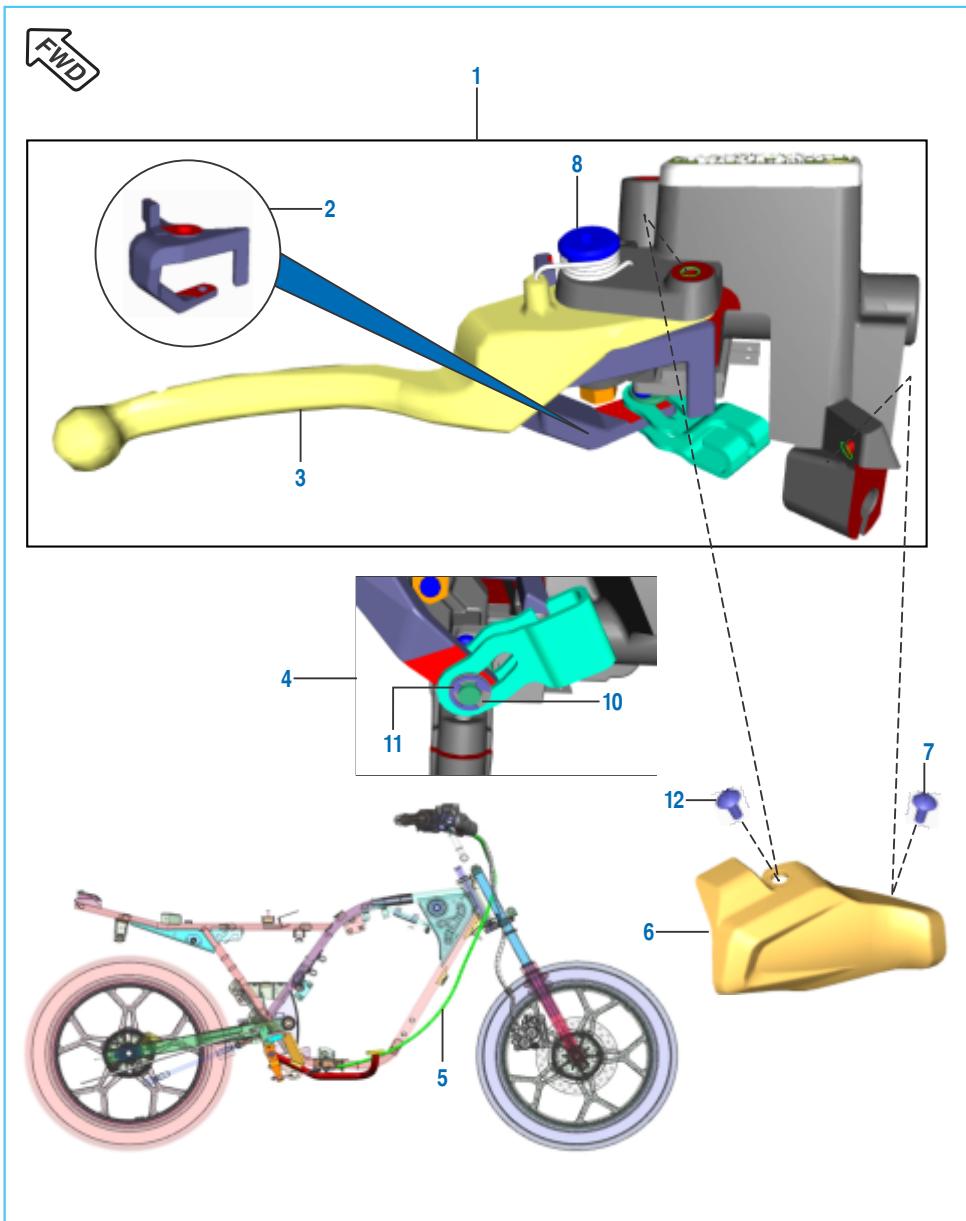

CBS - Combined Braking System - For Disc Brake

No.	Part No.	Description	Qty.	Remarks
1	JH 1318 50	Cylinder assembly master front	1	
2	JH 1610 31	Lever brake front	1	
3	JH 1610 32	Lever main brake front	1	
4	36 JD00 92	CBS Actuating Link Kit	1	Refer kit list
5	DH 1910 83	Cable pedal to cylinder master	1	
6	JH 1813 08	Cover lever brake	1	
7	LB U000 73	Screw truss - Stepped - M5	1	
8	36 JD00 91	Lever Spring Kit	1	Refer kit list
9	36 JD00 93	Fasting Cap with Screw	1	Refer kit list
10	KD AB06 11	Washer Plain Small - 6.5 x 11.5	1	
11	LE A000 03	Circlip External - 6 x 0.7	1	
12	KB UC05 10	Screw - Truss - KBU	1	

FWD

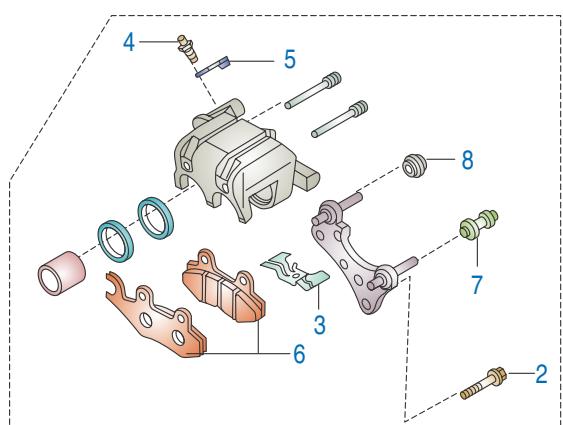

PISTON SEAL

DUST SEAL

INSULATOR

PROTECTION BOOT

BLEEDER CAP

CALIPER PISTON

BLEEDER SCREW

PAD SPRING


Plate No.: 36

Front Brake - Caliper & Disc

No.	Part No.	Description	Qty.	Remarks
1	PD 1318 53	Caliper assembly front	1	
2	DH 1510 39	Bolt Flanged	2	Caliper Mounting
3	DJ 1510 68	Spring Pad	1	
4	DJ 1510 69	Bleeder Screw	1	
5	DJ 1510 70	Bleeder Cap	1	
6	JW 1318 07	Brake Pad Set	1	
7	DJ 1510 72	Insulator	1	
8	DJ 1510 73	Protection Boot	1	
9	36 DJ40 32	Kit Minor Cal & Grease-End	1	Refer kit list
10	36 DJ40 33	Kit Major Cal & Grease-End	1	Refer kit list



Rear Wheel Assembly

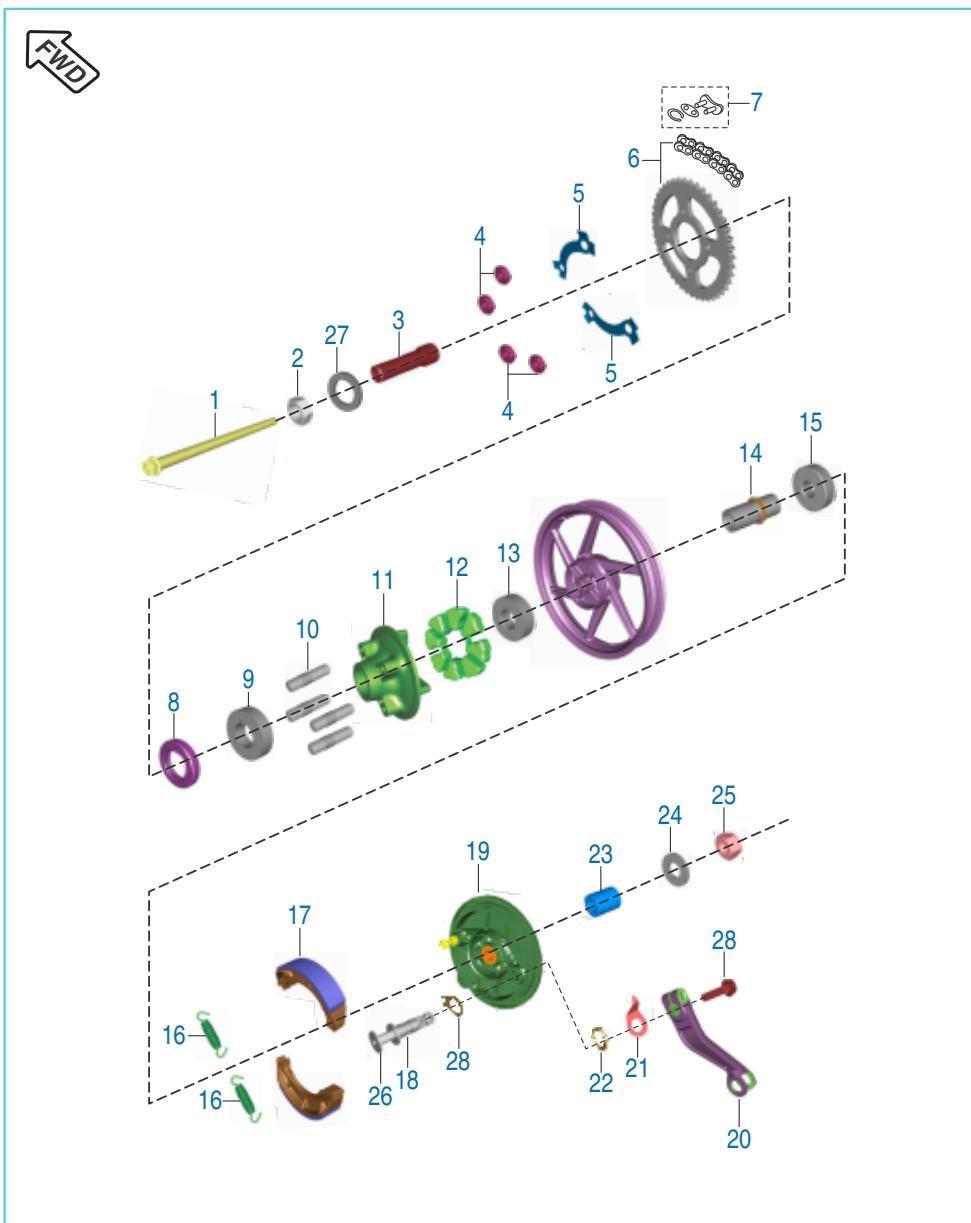


No.	Part No.	Description	Qty.	Remarks
1	DJ 1510 32	Axle	1	
2	LC A000 01	Nut hex thin M20 x 1	1	
3	DJ 1510 33	Sleeve	1	
4	LC B000 05	Nut Hex A/F 17 M10 x 1.25 x 6H	4	
5	PF 1312 20	Washer Lock For Nut A / F17	2	
6	36 DH42 32	Chain Sprocket Kit	1	Refer Kit List
7	DJ 1510 53	Drive Chain Lock	1	
8	30 1510 82	Seal Oil	1	
9	KP BC60 04	Bearing - Ball - C3 Clearance	1	
10	DS 1510 73	Stud	6	
11	DS 1510 68	Coupling	1	
12	DK 1510 94	Coupling Rubber	1	
13	KP BC62 02	Bearing - Ball - C3 Clearance	1	
14	30 1510 75	Collar Bearing	1	
15	KP BC63 02	Bearing - Ball - C3 Clearance	1	
16	30 1510 69	Spring	2	
17	30 1511 05	Shoe Brake Assembly	1	
18	JC 1510 04	Cam Brake Assembly	1	
19	DJ 1511 19	Panel Rear Brake	1	
20	JF 1316 00	Lever Cam Brake	1	
21	JC 1510 06	Indicator	1	
22	01 1701 22	'O' ring	1	
23	JZ 1312 91	Spacer	1	

Rear Wheel Assembly


No.	Part No.	Description	Qty.	Remarks
24	LD B000 01	Washer Plain 32 x 15.2 x 3	1	
25	DH 1710 19	'U' Nut	1	
26	39 0722 11	Plain Washer	1	
27	LD B000 02	Washer plain dia. 32 x 20.2 x 3	1	
28	KA DT06 25	Bolt flanged - M6	1	
29	JC 1510 12	Special washer panel RR	1	

FWD

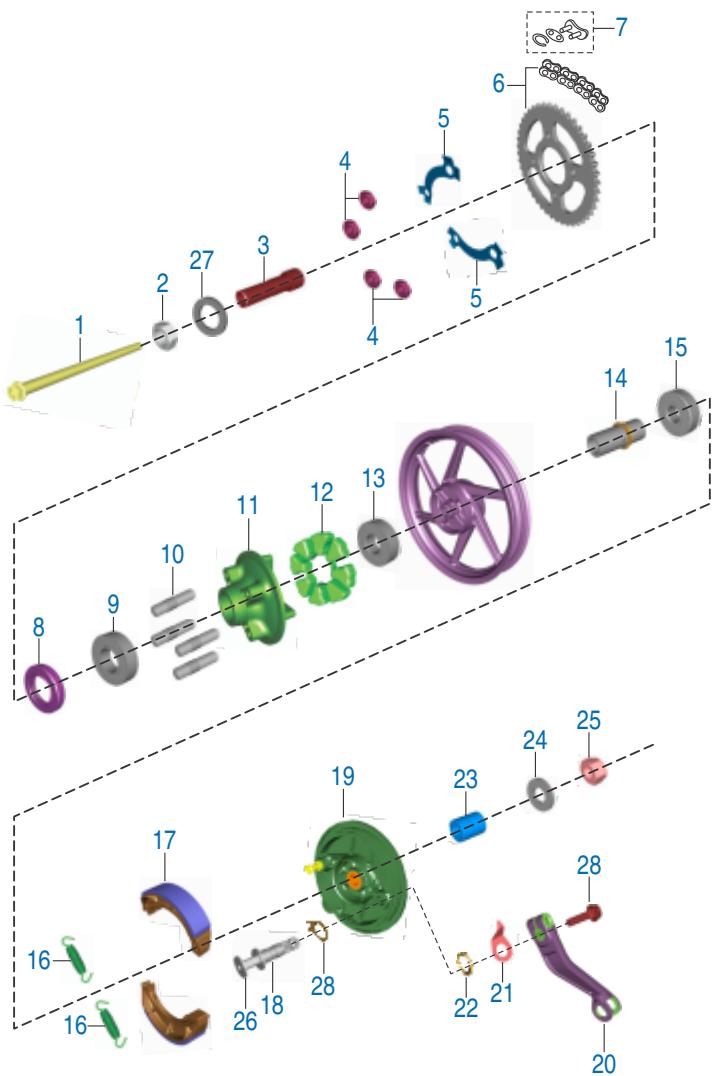

FWD

Front Wheel Direction

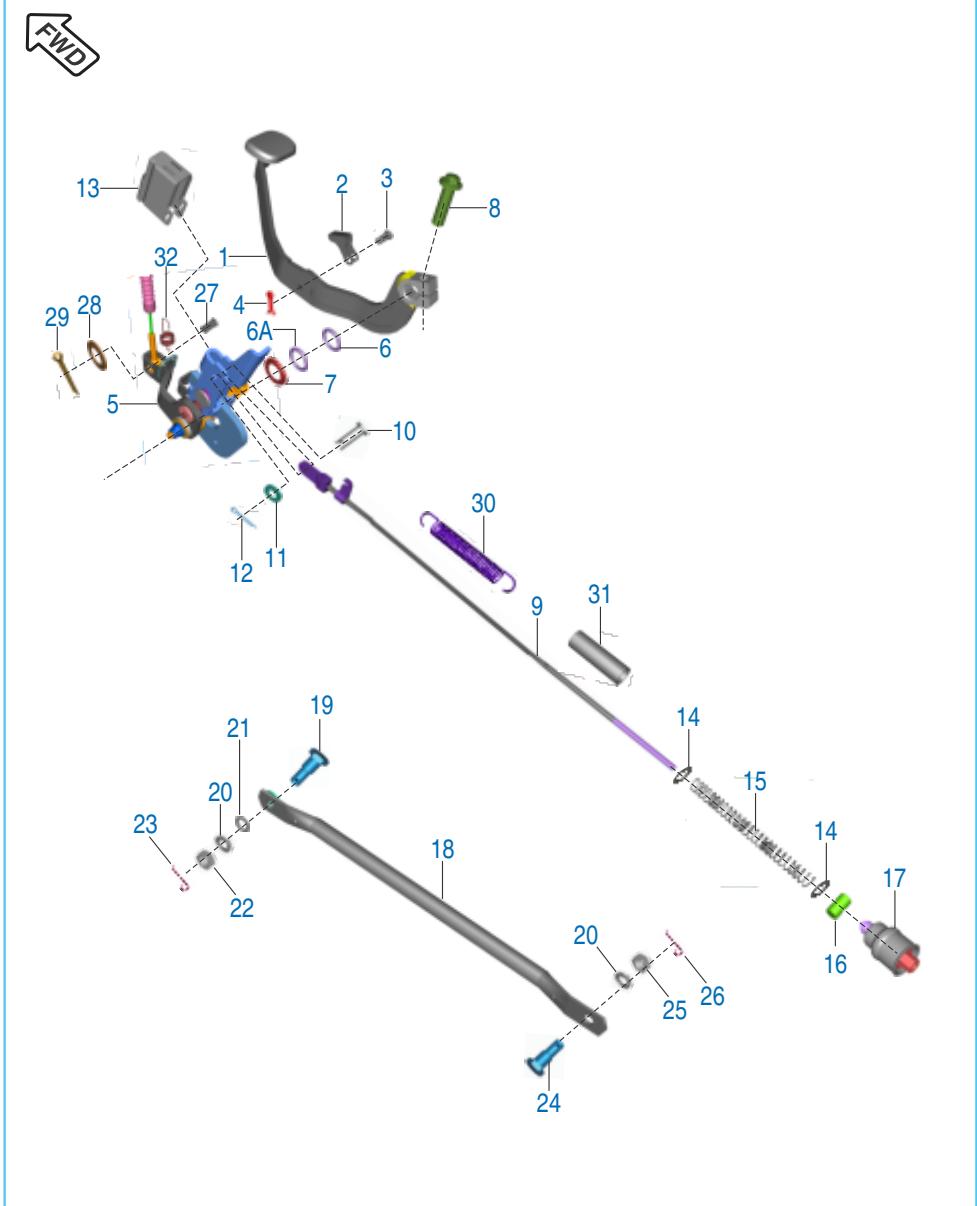


Rear Brake Pedal


No.	Part No.	Description	Qty.	Remarks
1	DH 1617 06	Pedal brake	1	
2	JD 1610 19	Damper pedal brake	1	
3	JZ 1318 75	Pin brake rod	1	
4	KH AA20 15	Pin Cotter	1	
5	DH 1617 05	Pedal assembly brake	1	
6	KJ AA14 24	'O' Ring	1	
6A	DJ 1910 66	'O' Ring	1	
7	DH 1910 23	Cup for brake shaft	1	
8	KA EG08 30	Bolt flanged small	1	
9	DH 1511 09	Rod brake	1	
10	30 1910 38	Pin	1	
11	LD B000 19	Washer plain	1	
12	KH AA20 15	Pin cotter	1	
13	DH 1617 17	Boot link equalizer	1	
14	LD A000 69	Washer	2	For Drum-Drum
15	30 1910 35	Spring	1	
16	JC 1910 11	Pin brake	1	
17	JH 1610 35	Assembly force distribution	1	
18	JK 1220 11	Rod torque	1	
19	JA 1210 05	Step bolt torque rod	1	
20	KD DB10 18	Washer spring thin	2	
21	39 1540 11	Plain washer	1	
22	39 0694 15	Hex lock nut - M8 x 1.25	1	

Rear Brake Pedal

No.	Part No.	Description	Qty.	Remarks
23	KH BA08 28	Pin snap	1	
24	DG 1910 48	Bolt	1	
25	LC L000 01	Nut hex flange - M10	1	
26	LH B000 01	Pin snap	1	
27	LH E000 17	Pin Clevis Dia - 11.5	1	For Drum-Drum
28	LD A000 32	Washer Plain	1	For Drum-Drum
29	KH AA20 18	Pin Cotter	1	For Drum-Drum
30	JD 1610 02	Spring brake pedal	1	
31	JD 1610 06	Sleeve brake return spring	1	
32	DH 1617 88	Spring Tension	1	For Drum-Drum
33	DP 1610 94	Bolt Stepped - M6 (For Spring)	1	For Drum-Drum


FWD

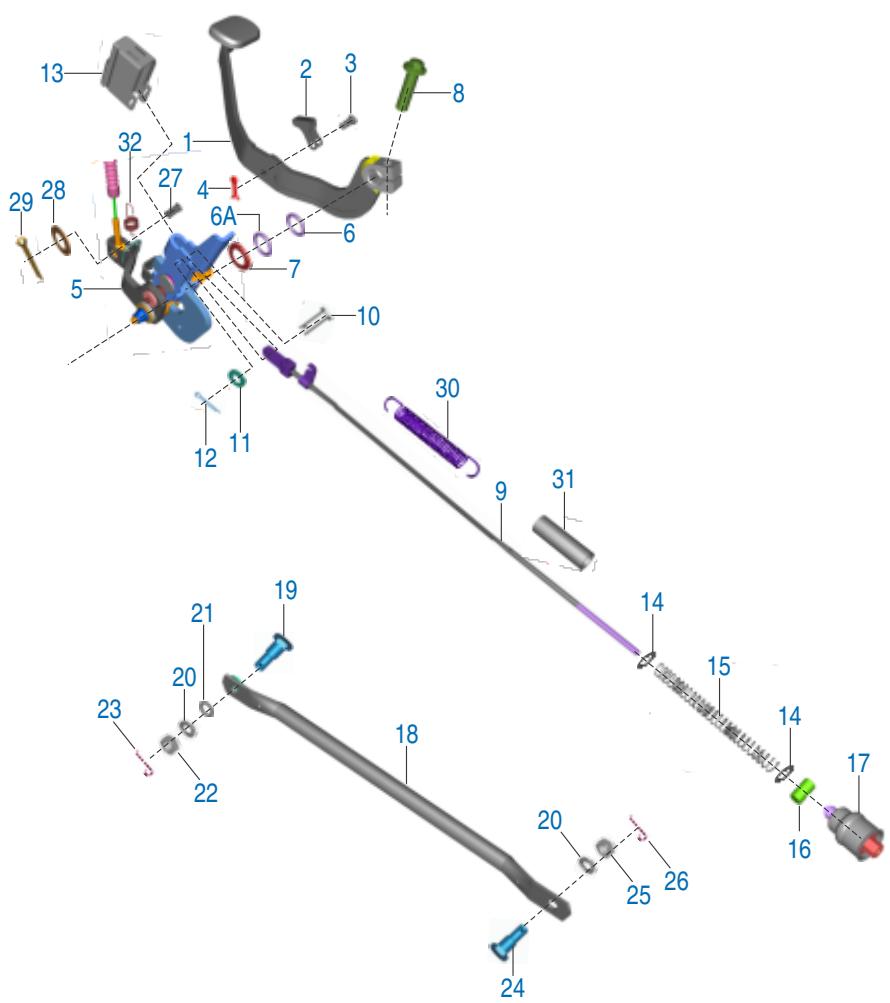

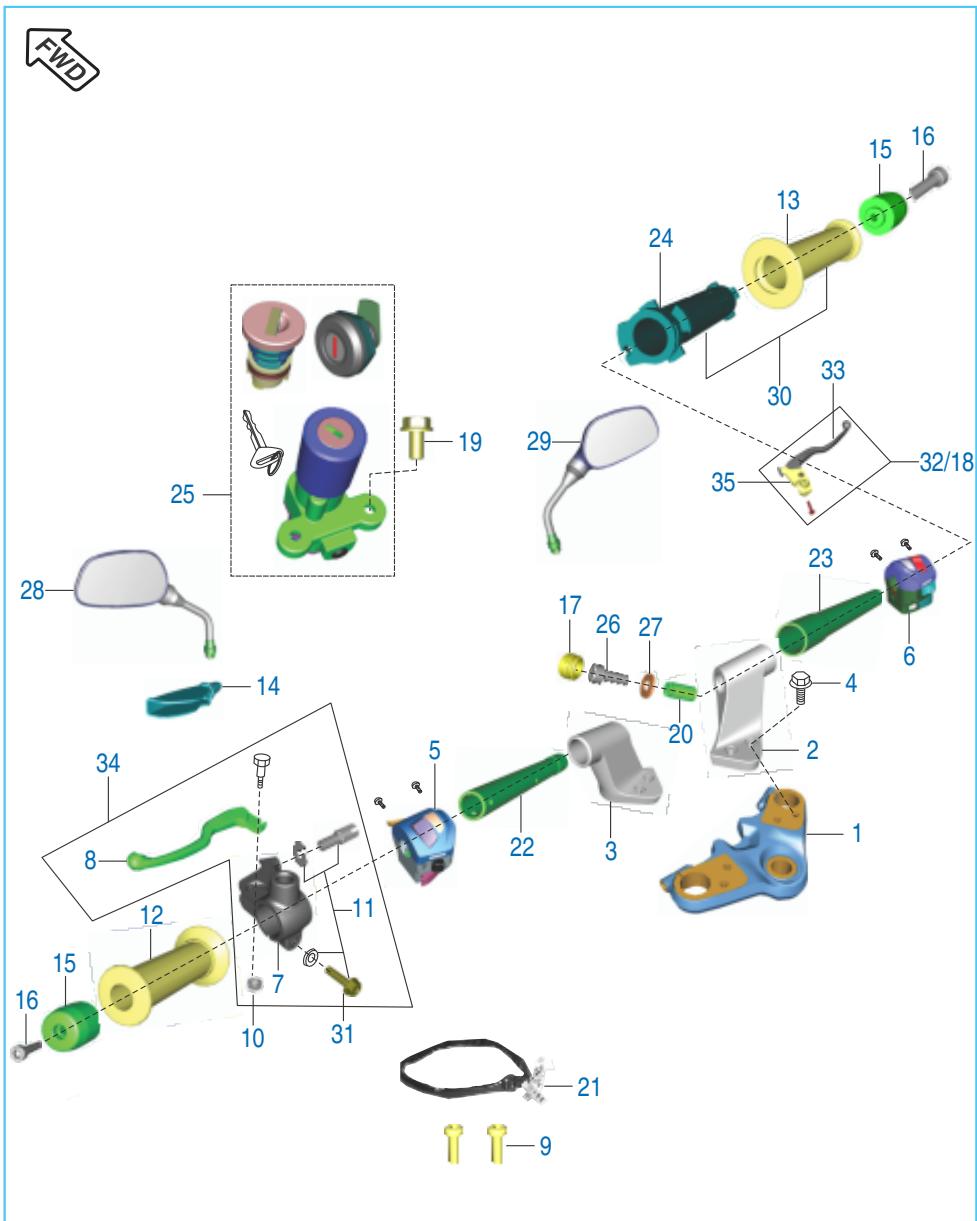

Handle Bar


No.	Part No.	Description	Qty.	Remarks
1	56 DH9X Y9	Bracket Upper	1	
2	56 DH9W Y9	Holder Handle RH	1	
3	56 DH9V Y9	Holder Handle LH	1	
4	LA C000 59	Bolt socket - M8 x 1.25 x L25	4	
5	DH 2011 11	Switch control LH	1	
6	DH 2011 12	Control Switch RH	1	
	DH 2011 56	Control Switch RH	1	For Drum-Drum
7	DJ 1910 81	Holder LH	1	
8	DJ 1910 83	Lever Grip LH	1	
9	LB U000 12	Screw	2	Clutch switch mtg.
10	39 1184 15	Nyloc nut - M5 x 0.8	1	
11	36 DU19 01	Cable Adjust Kit	1	Refer kit list
12	DH 1910 07	Grip LH	1	
13	DH 1910 08	Grip RH	1	
14	DH 1910 19	Lever Boot for Clutch Switch	1	
15	DK 1810 43	Handle bar weight	2	
16	KA CA06 50	Bolt master KAC	2	
17	DH 1810 99	Rubber Plug	2	
18	DD 2011 70	Switch Assembly With Lever	1	For Drum-Drum
19	LA D000 77	Bolt flanged M6	2	
20	DK 1810 83	Bush Silent	2	
21	DJ 2012 46	Switch clutch VB - Transil Diode	1	
22	DK 1810 82	Handle bar tube Assembly LH	1	

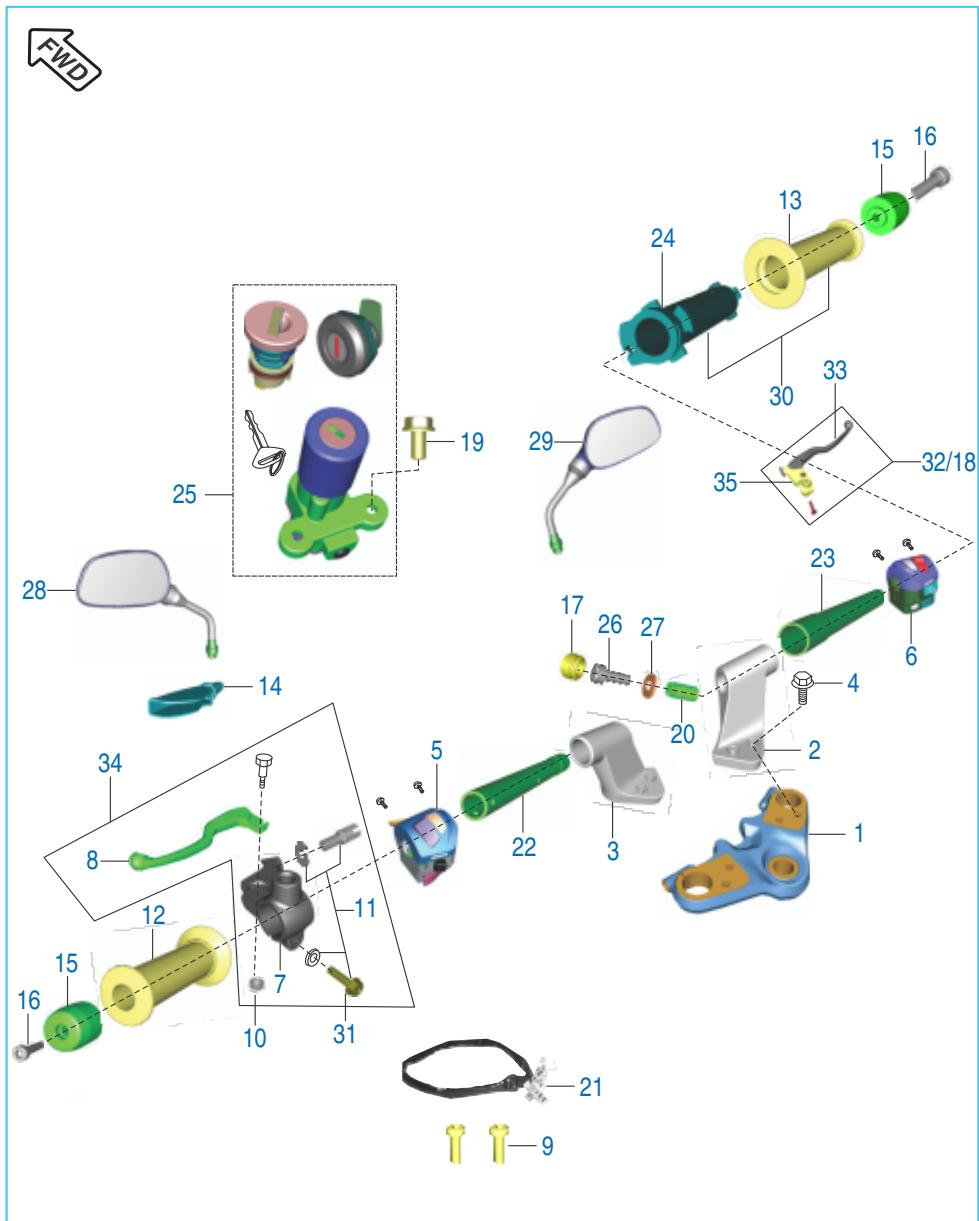

Handle Bar

No.	Part No.	Description	Qty.	Remarks
23	DK 1810 86	Handle bar tube Assembly RH	1	
24	DH 1910 17	Pipe throttle	1	
25	DH 1811 30	Set Lock 3 in 1 With Tank Cap	1	
26	LA C000 20	Bolt Socket	2	
27	39 1180 11	Washer	2	
28	DJ 2210 03	Mirror Assembly LH	1	
29	DJ 2210 04	Mirror Assembly RH	1	
30	DH 1910 14	Grip assembly RH	1	
31	KA DD06 25	Bolt flanged	1	
32	PF 1610 11	Assembly Lever Holder RH W/O Switch	1	For Drum-Drum
33	DD 1911 42	Lever Grip Right	1	For Drum-Drum
34	DJ 1910 82	Lever & Support Holder Assy LH	1	
35	PF 1610 12	Holder Lever RH	1	For Drum-Drum


Front Fork

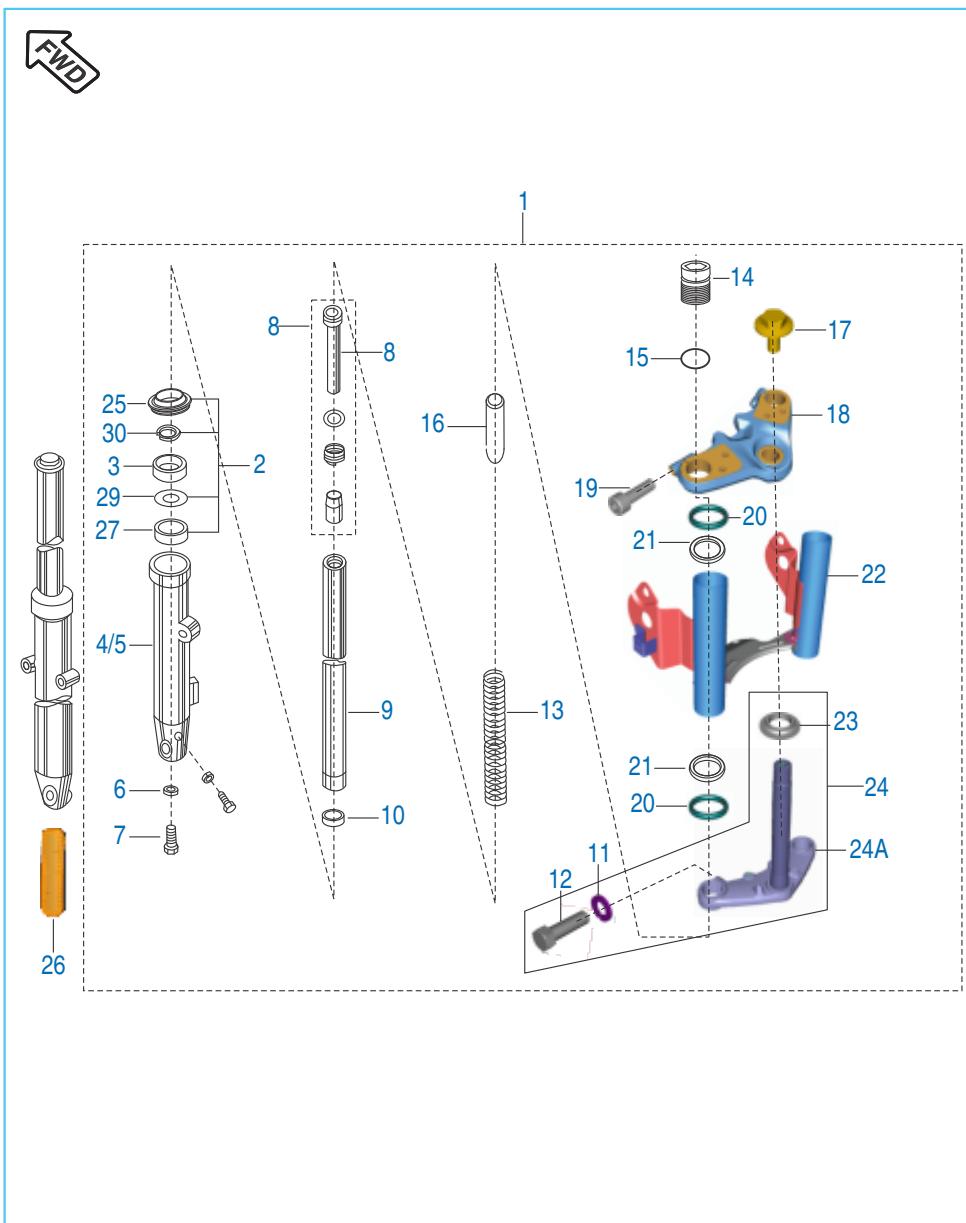

Front Wheel Direction


No.	Part No.	Description	Qty.	Remarks
1	DH 1710 63	Fork Front	1	For Disc-Drum
	DH 1710 53	Fork Front	1	For Drum-Drum
2	36 DK00 20	Kit Outer Tube	1	Refer Kit List
3	DU 1811 08	Oil Seal (SFN)	2	
	PF 1210 73	Oil Seal (HTA)	2	
4	YD H320 03	LH Outer Tube Endurance	1	For Disc-Drum
	YD H310 01	LH Outer Tube Endurance	1	For Drum-Drum
5	YD H320 04	RH Outer Tube Endurance	1	For Disc-Drum
	YD H310 02	RH Outer tube Endurance	1	For Drum-Drum
6	30 1810 26	Gasket	2	
7	KA CF08 30	Socket Head Bolt	2	
8	36 DH41 15	Cylinder Complete Fork	2	Refer Kit List
9	DH 1811 27	Fork Pipe Spinning	2	
10	DS 1810 71	Slide Bush	2	
11	KD DB10 18	Spring Washer	2	
12	KA AD10 35	Bolt	4	
13	DH 1811 29	Spring Main	2	
14	DH 1810 15	Bolt Fork	2	
15	30 1810 29	'O' Ring	2	
16	DH 1811 28	Spacer Tube	2	
17	DH 1811 15	Steering top bolt	1	
18	56 DH9X Y9	Holder Fork Upper Black Sprint	1	For Drum-Drum
19	DG 1810 08	Bolt Socket	2	
20	DJ 1810 85	Cushion Rubber	4	

Front Fork

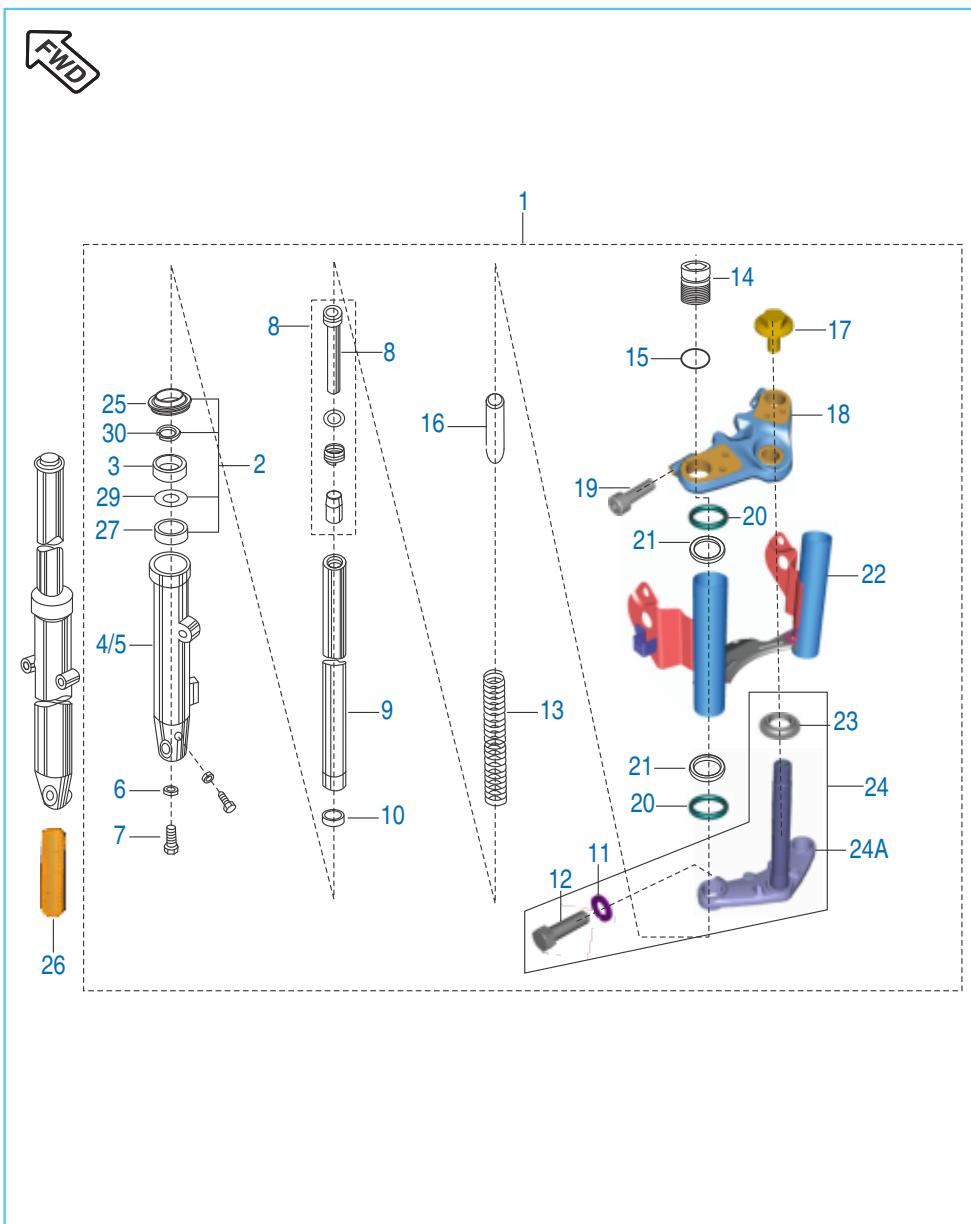


No.	Part No.	Description	Qty.	Remarks
21	DJ 1810 52	Cover Trail B	4	
22	DH 1810 92	Frame lamp head	1	
23	DH 1810 23	Bearing Cone	1	
24	DH 1710 56	Bracket Assembly Under	1	
25	DD 1810 32	Inner Dust Seal (SFN)	2	
26	JZ 4010 77	Reflector Reflex	2	
27	JK 1210 07	Guide bush	2	
28	DH 1811 26	Seat pipe	2	
29	JK 1210 09	Washer	2	
30	31 1811 08	Oil seal stopper	2	

Fuel Tank & Fuel Gauge

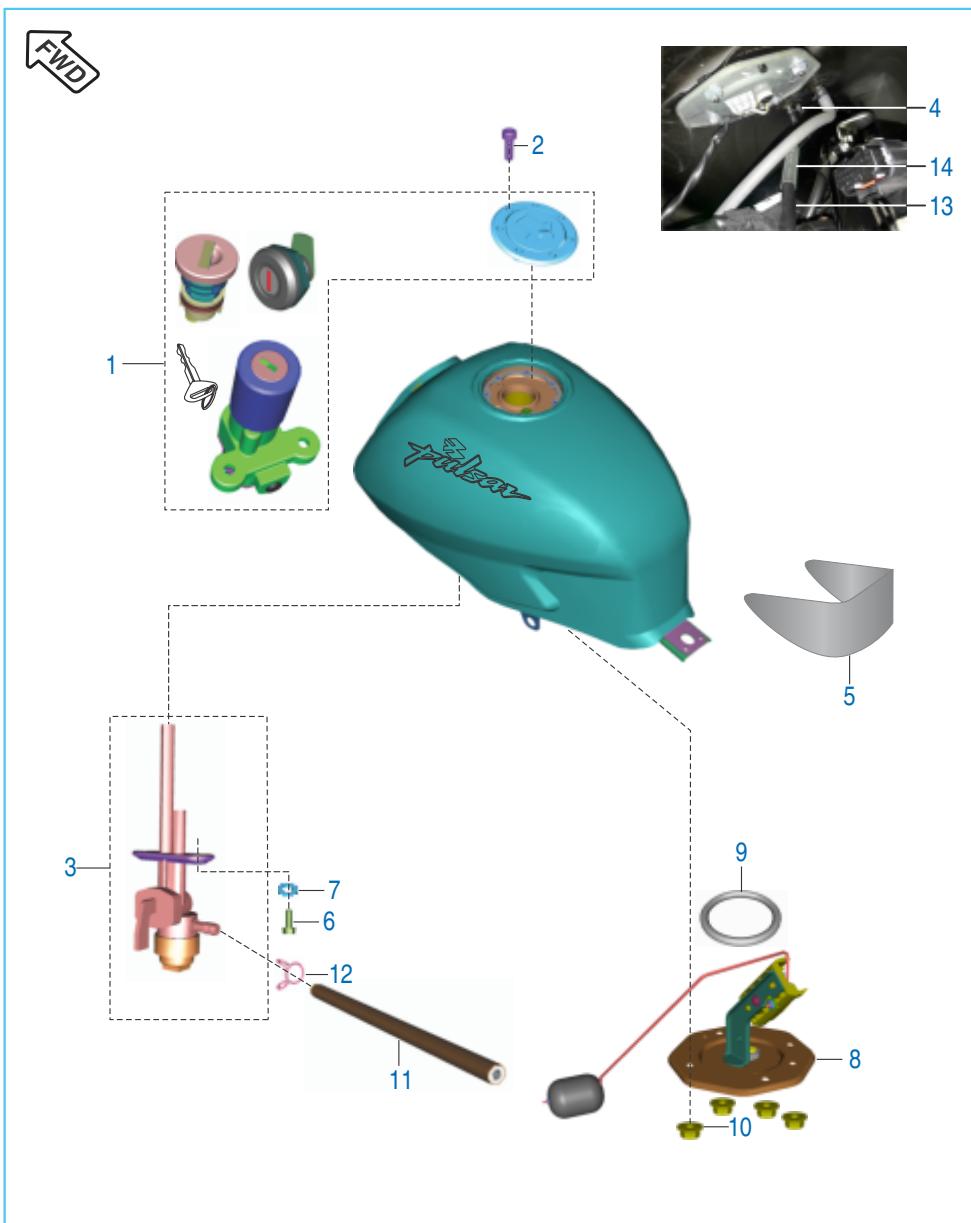

No.	Part No.	Description	Qty.	Remarks
1	DH 1811 30	Set Lock 3 in 1 + Tank Cap	1	
2	KA CA05 16	Bolt Master KAC	7	
3	JD 1716 02	Tap fuel (Iran export)	1	
4	DJ 1410 02	Clamp drain pipe	1	
5	DH 1410 20	Seat Tape	1	
6	DD 1412 27	Bolt Flanged	2	
7	39 0740 11	Washer (Non Metallic)	2	
8	DK 2011 61	Sensor level fuel	1	
9	JH 1710 17	'O' Ring fuel gauge	1	
10	KC GA05 05	Nut Hex Flanged	4	
11	JC 1410 28	Fuel pipe petrol with ethanol	1	
12	JL 1711 02	Clamp band spring 12.5 x 8	1	
13	DH 1410 24	Drain Pipe	1	
14	JC 1410 34	Spring drain pipe	1	


Fittings Petrol Tank, Side Cover & Cover Seat

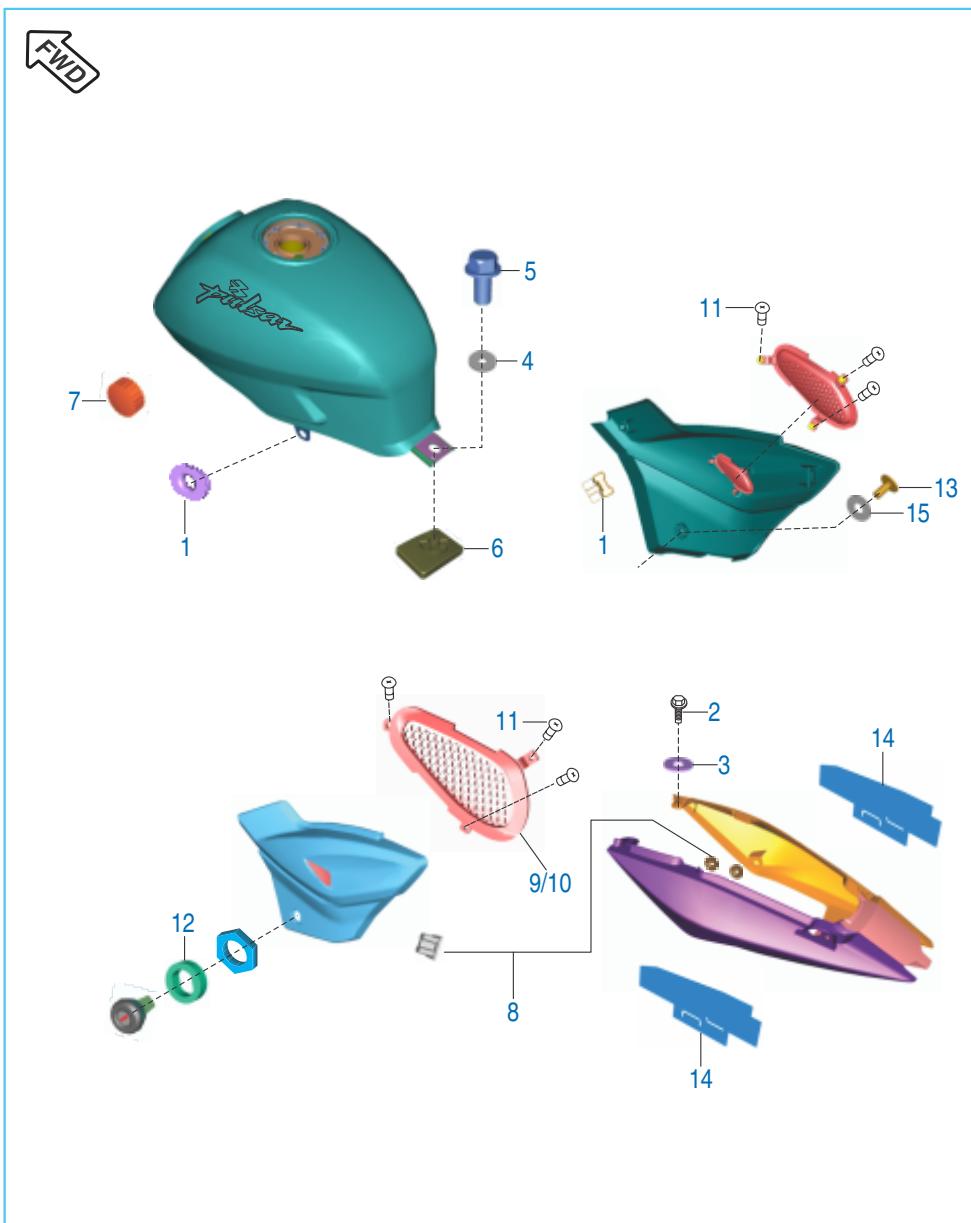


No.	Part No.	Description	Qty.	Remarks
1	JZ 1711 24	Grommet	2	
2	KA DD06 14	Bolt flanged	2	
3	LD B000 23	Washer plain	2	
4	LD B000 21	Washer Plain	1	
5	KA DD08 16	Bolt flanged	1	
6	DH 1410 23	Damper	1	
7	DJ 1410 08	Damper Front	2	
8	36 DH16 01	Grommet kit for side cover	2	Refer kit list
9	DK 1611 23	Cover Side Mesh LH	1	
10	DK 1611 24	Cover Side Mesh RH	1	
11	59 0200 01	Self Tap Screw	6	
12	31 1610 18	Damper	2	
13	DG 1611 21	Screw	1	
14	DK 1611 71	Rubber Flap	2	
15	39 1789 24	Washer nylon	1	

Seat Assembly & Seat Lock

No.	Part No.	Description	Qty.	Remarks
1	DJ 2110 07	Damper For Seat	3	
2	DK 2110 07	Damper Seat Front	1	
3	DJ 2110 06	Latch Assembly Seat	1	
4	KA DD06 22	Flanged Bolt	2	
5	DS 2110 05	Damper Seat II	6	
6	DH 1612 33	Reinf. Seat Lock	2	

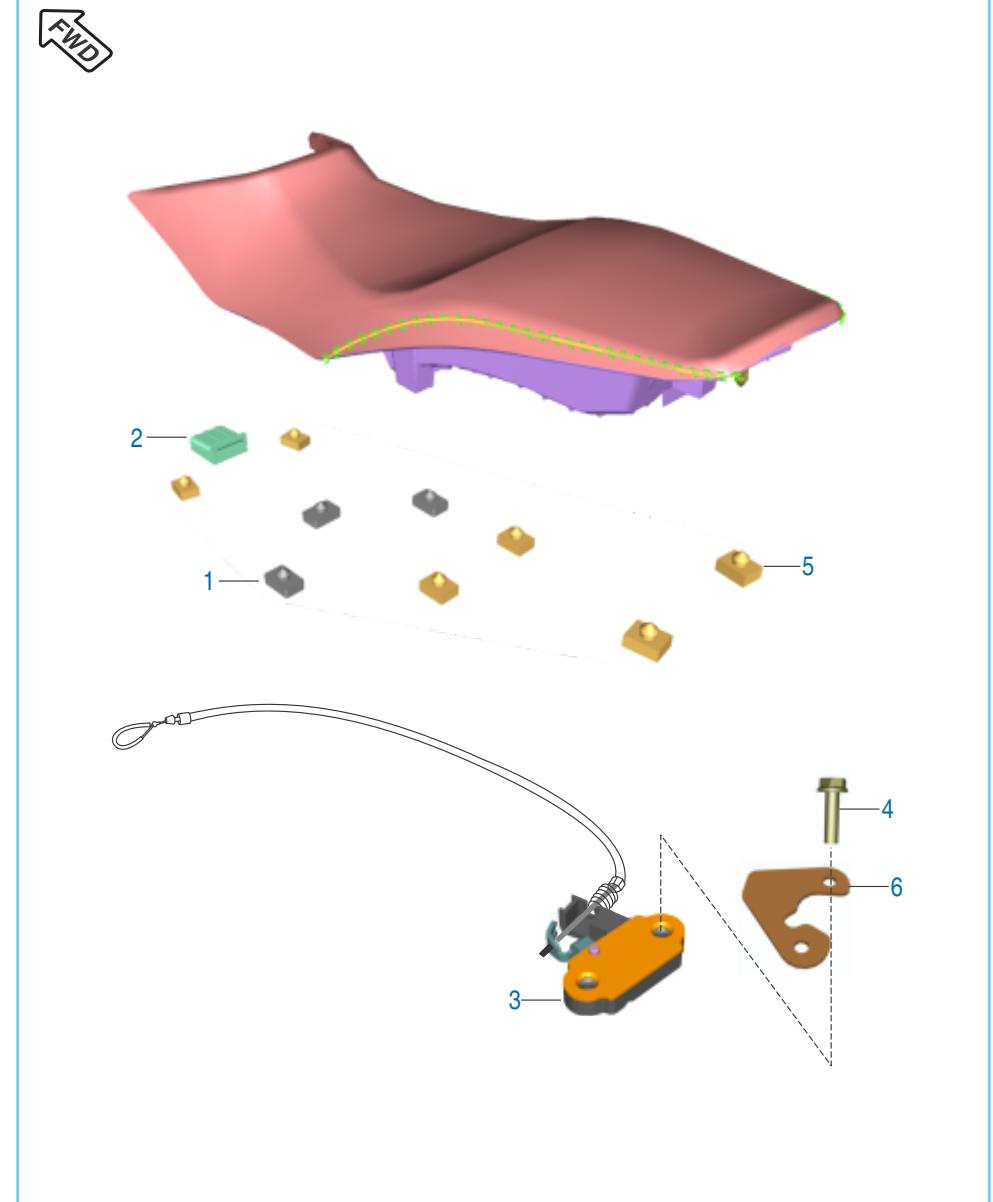


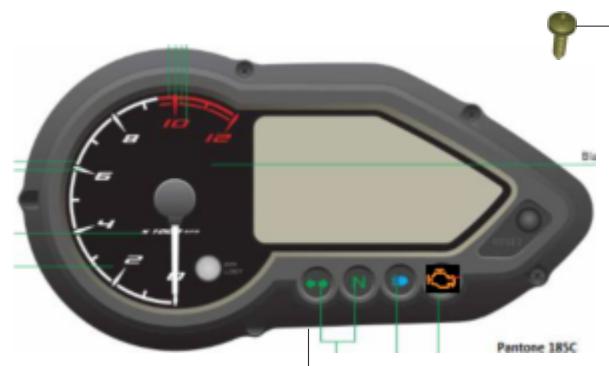

1



2

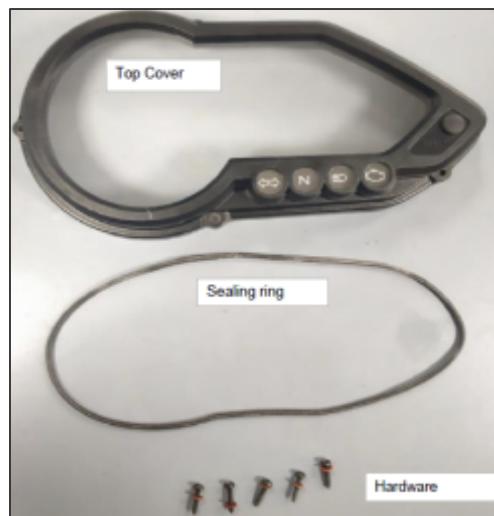


3

Plate No.: 44

Speedometer Assembly

No.	Part No.	Description	Qty.	Remarks
1	DH 1910 89	Speedometer	1	
2	39 1778 02	Self Tapping Screw	4	
3	YD H320 01	Top cover with Sealing ring & Icons film	1	Varroc
	YD H320 02	Top cover with Sealing ring & Icons film	1	Pricol




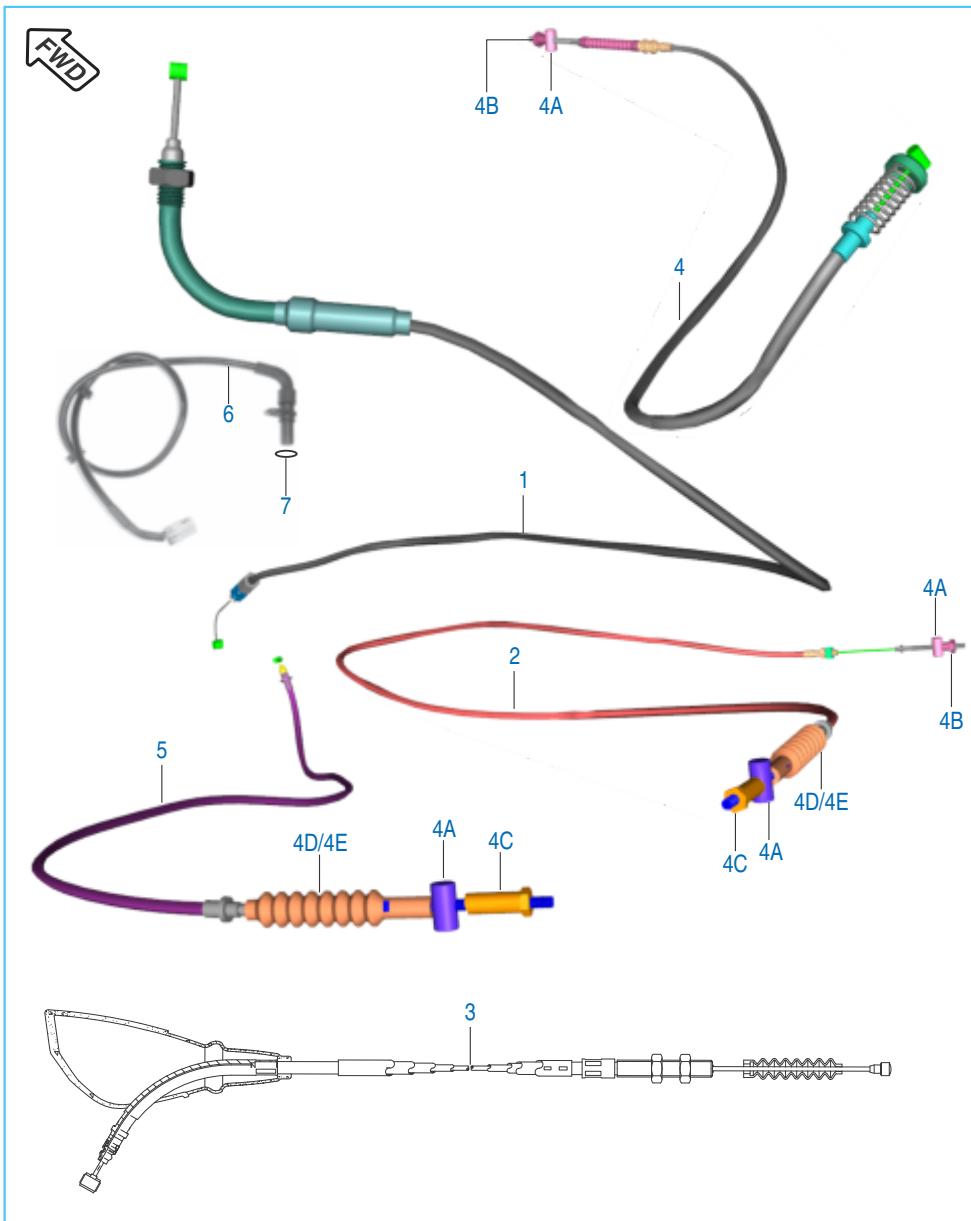

Cables

No.	Part No.	Description	Qty.	Remarks
1	DH 1910 87	Cable throttle	1	
	DH 1910 97	Cable throttle	1	For Drum-Drum
2	DH 1910 88	Cable Brake Pedal - Panel Front	1	For Drum-Drum
3	JC 1910 04	Cable clutch	1	
4	DH 1910 83	Cable brake	1	For Disc-Drum
4A	YD U220 04	End Rod	1	For Disc-Drum
4B	YJ K110 02	Adjuster Nut - Small	1	For Disc-Drum
5	DH 1910 94	Cable Brake Front	1	For Drum-Drum
4C	YD U220 03	Adjuster Nut - Long	2	For Drum-Drum
4A	YD U220 04	End Rod	3	For Drum-Drum
4D	YD H310 03	Grommet	2	For Drum-Drum
4E	YD H310 04	Spring	2	For Drum-Drum
4B	YJ K110 02	Adjuster Nut - Small	1	For Drum-Drum
6	DH 2010 79	Speed Sensor with Cable 'O' Ring	1	
7	59 2100 19	'O' Ring	1	

Leg Guards, Saree Guard & Grab Handle

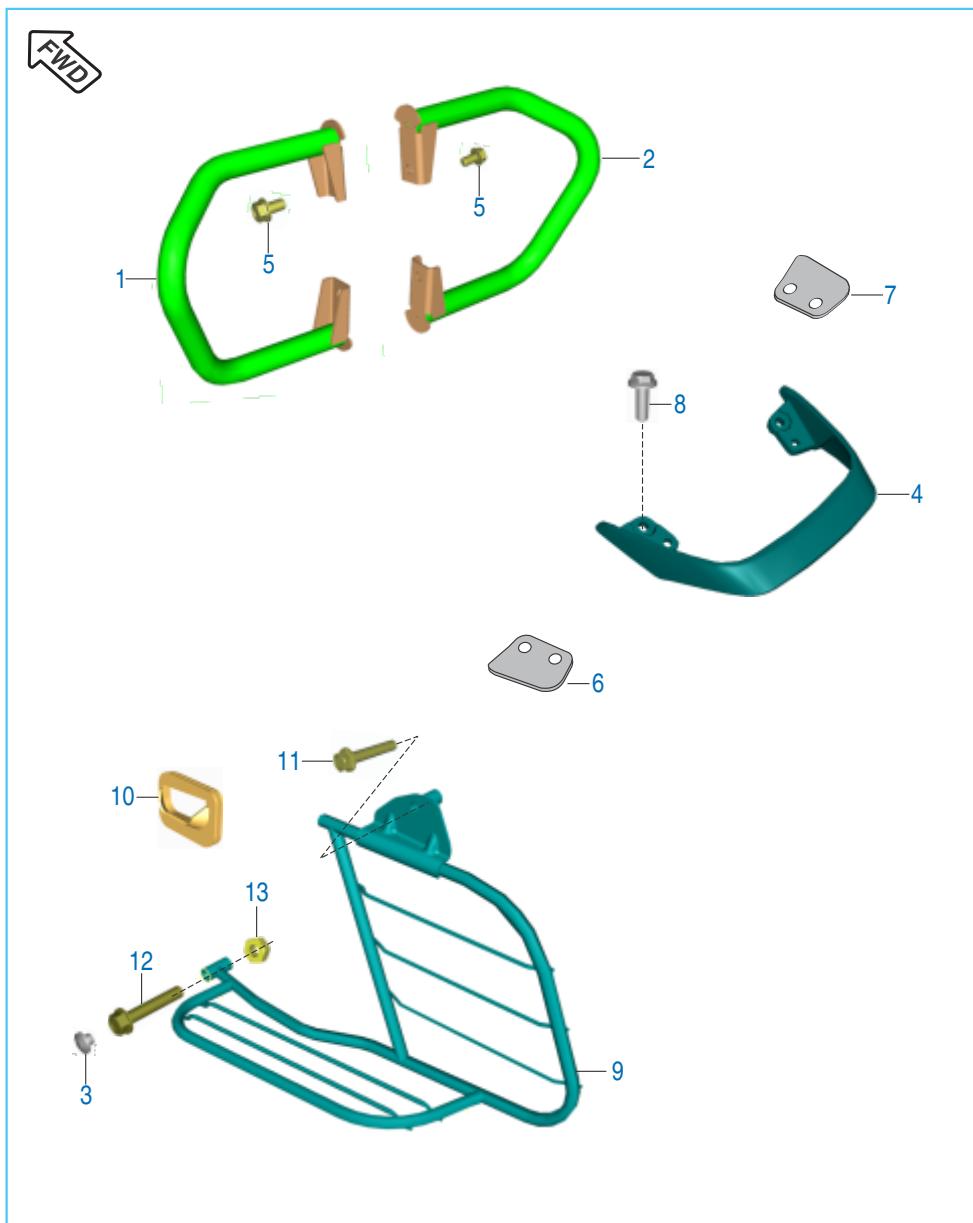


No.	Part No.	Description	Qty.	Remarks
1	DJ 2210 20	Guard leg LH	1	
2	DJ 2210 21	Guard leg RH	1	
3	DS 2210 01	Plug	1	
4	DH 1614 10	Grab Handle Assembly	1	
5	KA DA08 14	Bolt Flanged	4	
6	DJ 1610 79	Foam LH For Grab	1	
7	DJ 1610 80	Foam RH For Grab	1	
8	KA DD08 25	Bolt flanged	4	
9	DH 1615 09	Guard Lady Footrest	1	
10	DH 1615 10	Grommet Sari Guard	1	
11	KA DA08 45	Bolt Flanged	1	
12	LA D001 37	Bolt flanged - M10	1	
13	LC A000 10	Nut hex M10	1	

Chain Case


No.	Part No.	Description	Qty.	Remarks
1	52 DJ01 66	Case Chain Kit	1	Refer kit list
2	DH 1612 84	Rubber Beading	1	
3	15 1610 69	Rubber Cap	1	
4	DJ 1612 27	Instruction Label	1	
5	DH 1612 83	Bolt	4	Rear Side Mtg.



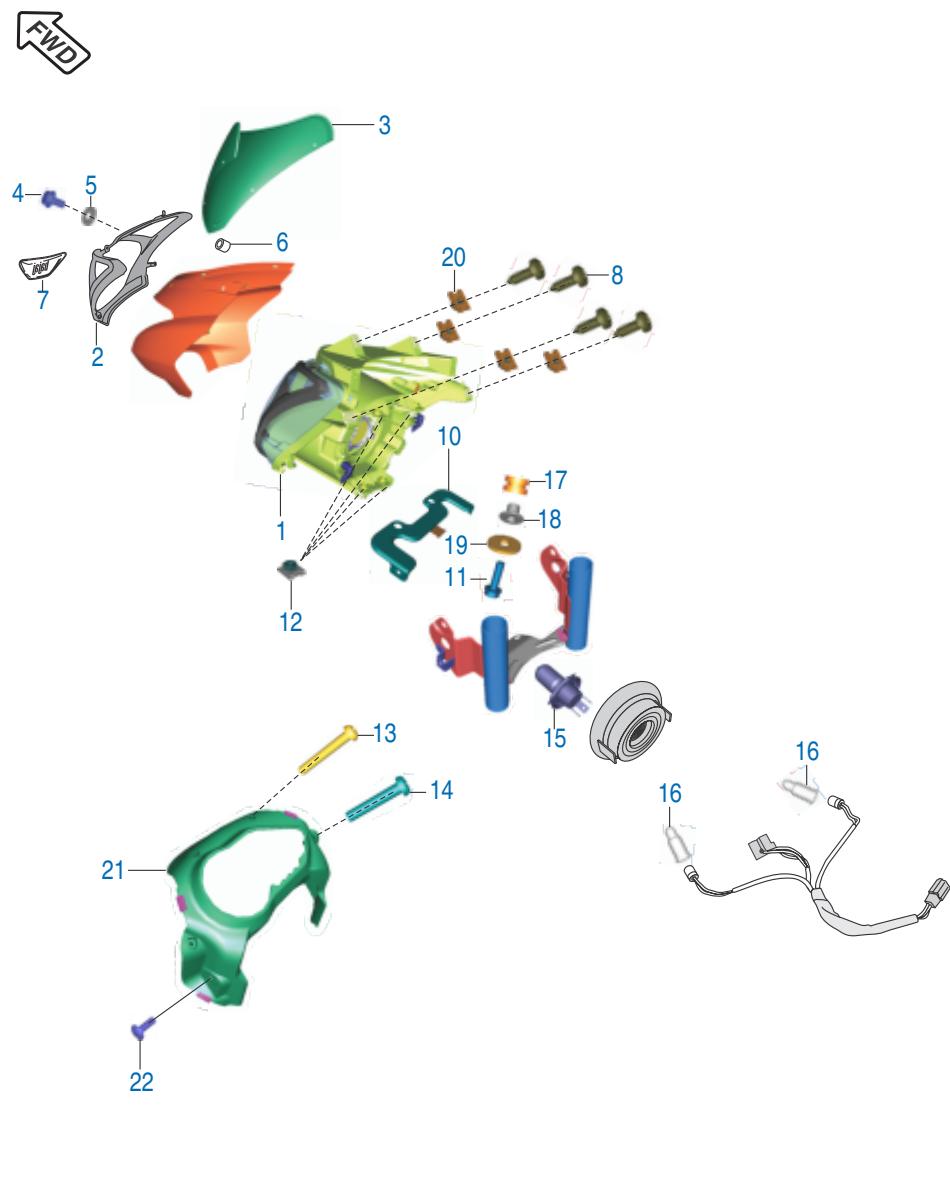

Head Lamp & Fairing


No.	Part No.	Description	Qty.	Remarks
1	YD H190 01	Head Lamp Without Bulb	1	
2	DJ 1811 20	Head Lamp Mask	1	
3	DJ 1810 33	Wind Shield	1	
4	DF 1810 98	Bolt	4	
5	39 2141 24	Washer Nylon	4	
6	DL 1810 10	Well Nut	4	
7	DJ 1810 37	Decal Wind Shield	1	
8	39 1778 02	Screw Tapping - 4 x 14	4	
9	KB BA04 16	Screw pan cross	4	
10	KB UA05 16	Screw Truss	2	
10	DH 1810 52	Fairing Mounting Upper Bracket	1	
11	KA DD06 25	Bolt Flanged	6	
12	DJ 1810 65	Clip Nut	4	
13	DJ 1811 30	Screw Pan Cross	2	
14	KB BA05 30	Screw pan cross	2	
15	CL 2010 23	Lamp 12V 35/35W-HS1	1	
16	DL 1910 20	Lamp 12V 3W	2	
17	JL 1810 29	Grommet Fairing	4	For Drum-Drum
18	DJ 1810 29	Collar Fairing Mounting	4	
19	39 0711 11	Plain washer	4	
20	JG 1710 31	Clip Nut M5	4	For Drum-Drum
21	DJ 1811 19	Back Cover	1	

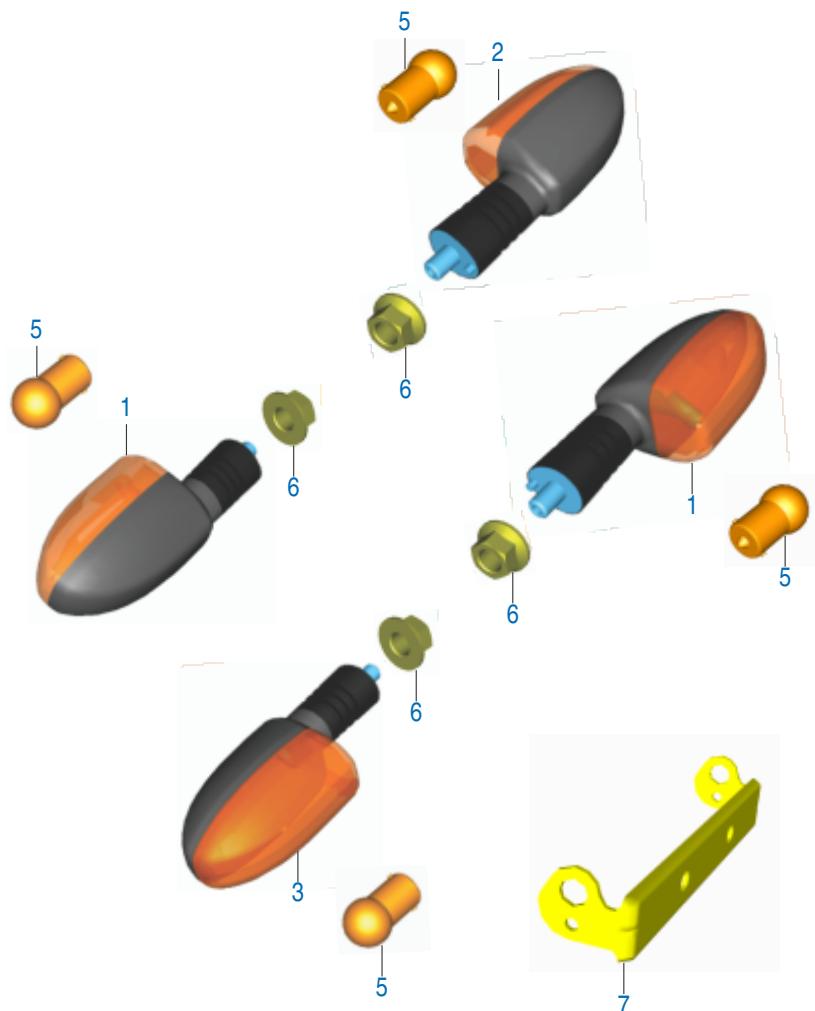

Indicator Light Assembly


No.	Part No.	Description	Qty.	Remarks
1	DJ 2012 08	Blinker FR LH With 2P Coupler	1	
2	DJ 2012 09	Blinker FR RH With 2P Coupler	1	
3	DJ 2012 06	Blinker RR LH With 2P Coupler	1	
4	DJ 2012 07	Blinker RR RH With 2P Coupler	1	
5	GH 2010 12	Lamp 12V / 10W	4	
6	KC GA10 10	Nut hex flange - M10	2	
7	DH 1612 97	Blinker Mounting Bracket	1	
	DK 1611 64	Indicator mtg. Bracket rear	1	
8	KC GD10 10	Nut Hex Flanged	2	

Tail Lamp Assembly & Front / Rear Number Plate

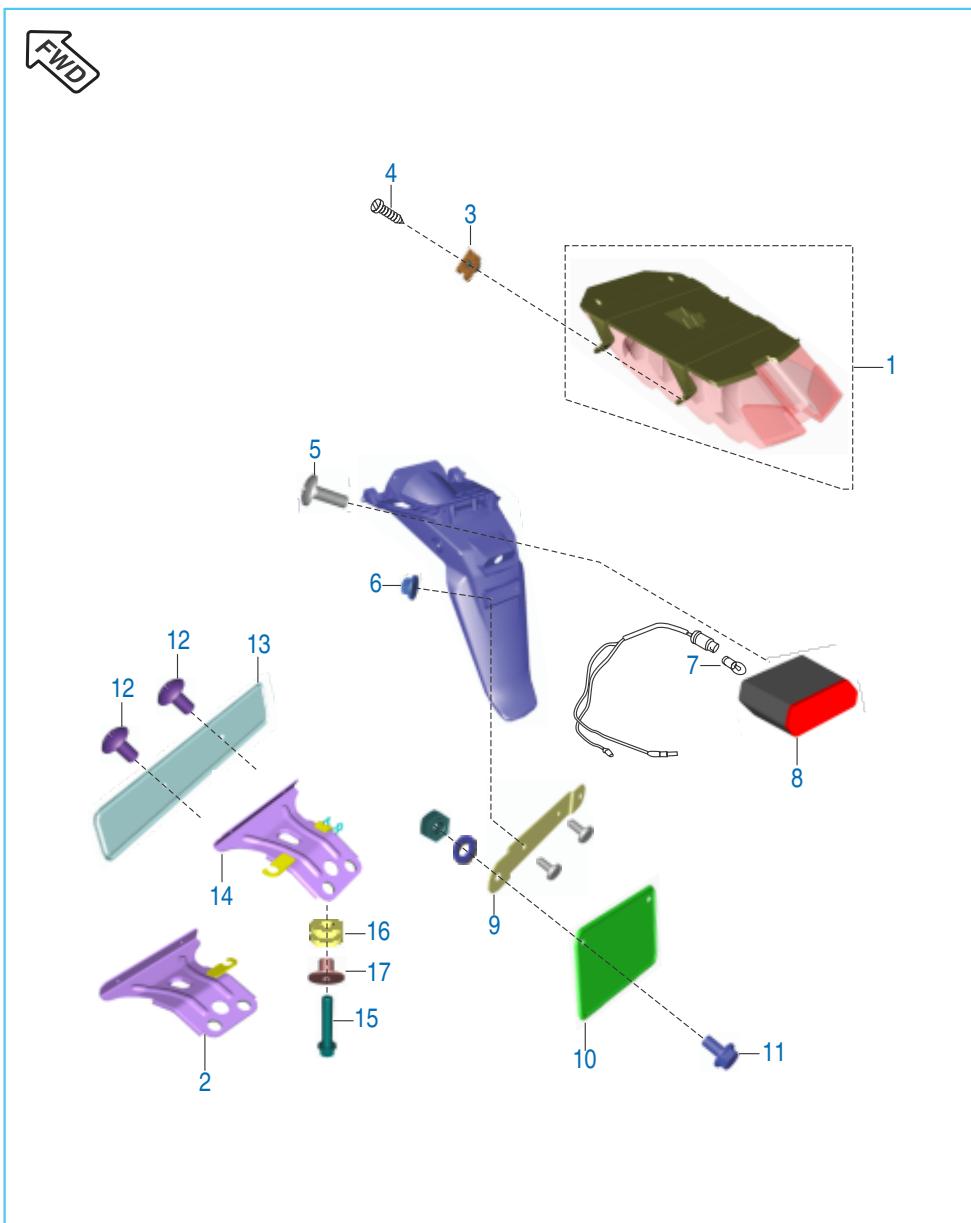

No.	Part No.	Description	Qty.	Remarks
1	DK 2010 03	Tail Light With Lamp	1	
2	DH 1617 53	Bracket Plate Number Front	1	For Drum-Drum
3	DK 1611 53	Clip Nut	4	
4	KB BA04 16	Screw Pan Cross	4	
5	KB UF05 12	Screw Truss - M5 x 0.8 x L12	2	
6	KC GA06 06	Nut hex flanged	2	
7	DL 1910 20	Lamp 12V-4W	1	
8	JW 4010 11	Number Plate Illumination	1	
9	PA 2328 06	Bracket plate number rear	1	
10	DP 1611 45	Number Plate Rear	1	
11	KA DD06 12	Hex Flanged Bolt	2	
12	39 1783 01	Truss Screw	2	
13	DP 1611 44	Number Plate Front	1	
14	DH 1616 81	Bracket plate number front	1	
15	KA DD06 30	Bolt Flanged	2	
16	DH 1612 93	Grommet for Number Plate Mtg.	2	
17	30 2110 05	Collar	2	

Electrical Equipments

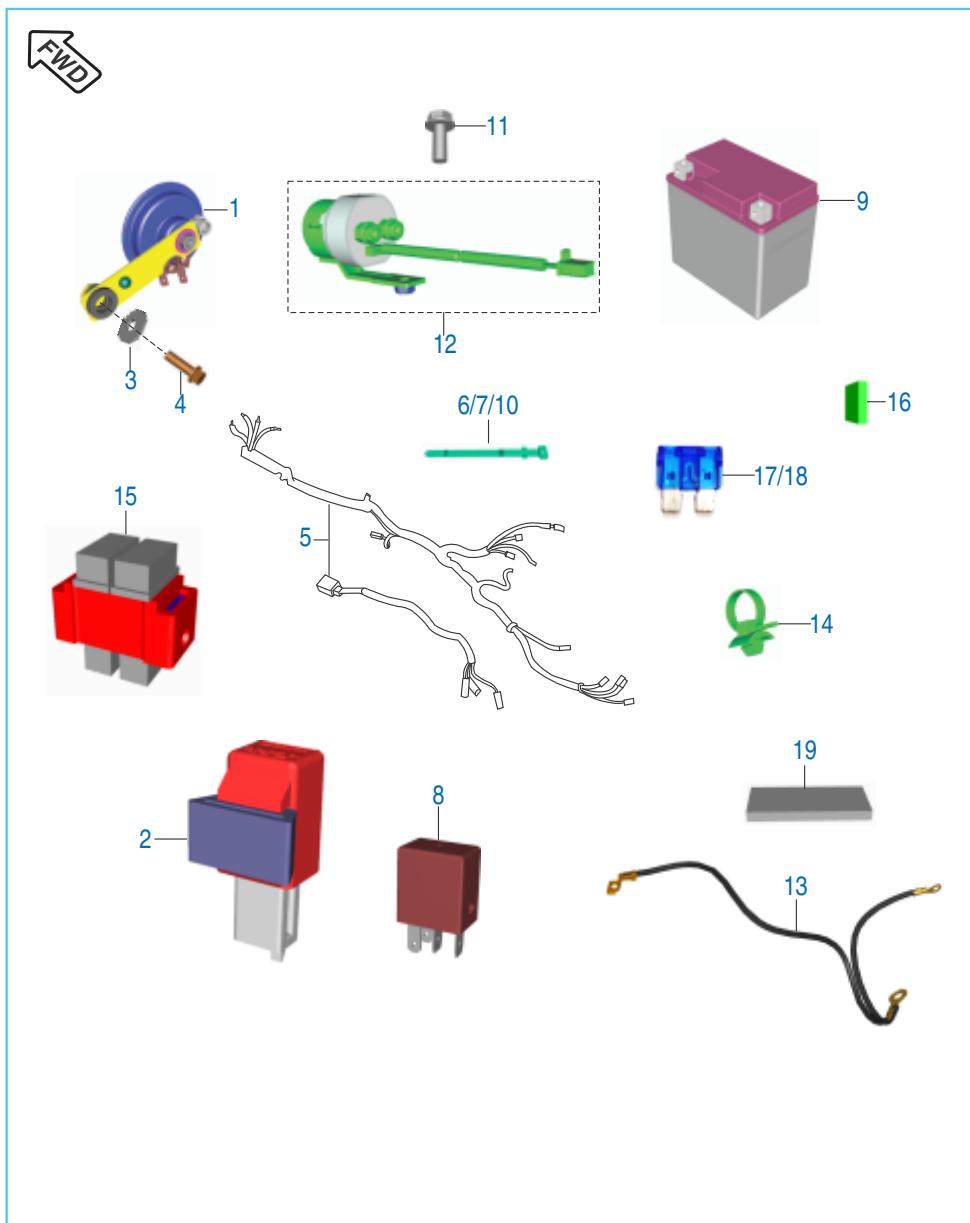

No.	Part No.	Description	Qty.	Remarks
1	DH 2011 63	Horn	1	
2	DS 2010 25	Assembly DC Flasher (SS)	1	
3	39 1507 11	Plain Washer	1	
4	KA ED08 12	Flange Bolt	2	
5	DH 2011 41	Harness wiring	1	
	DH 2011 62	Harness Wiring	1	For Drum-Drum
6	30 1910 48	Band	1	
7	JD 4022 17	Band (L150)	6	
8	JL 4030 00	Relay Interlock	1	
9	JF 4018 03	Battery VRLA 4AH	1	
10	JD 4022 16	Band 300MM	1	
11	KA DD06 10	Flange Bolt	1	
12	DK 2010 78	Starter Relay	1	
13	DH 2010 96	Cable earthing (Battery To Earth)	2	
14	60 1114 20	Cable Tie Lock	4	
15	JL 4022 07	Fuse Box Assembly with Fuse	1	
16	JZ 1813 20	Foam Number Plate Front	2	
17	AK 2010 12	Fuse 10A	2	
18	AP 2010 25	Fuse 15A blade type	2	
19	JG 4018 08	Foam Battery Bracket 35 x 15 x 3	3	
20	JA 4018 01	Strap	1	N.I.



1

2



Tool Kit

No.	Part No.	Description	Qty.	Remarks
1	DJ 2210 19	Tool Kit	1	
2	DK 2210 24	Band Tool Kit	2	



Plate No.: 53

Painted Parts & Decals

No.	Part No.	Description	Qty.	Remarks
1	52 DH31 12 52 DH36 94 52 DH31 14 52 DH36 98 52 DH29 83 52 DH36 96	Fuel Tank Eb Blk With Solar Red Tank Khi Eb Blk W So Red Dkl Fuel Tank Chr Blk Neon Blu Dkl Tank Ch Blk W Ne Blu Dkl Fuel Tank Eb Blk Sup Silver Dkl Tank Khi Eb Blk W PI Sil Dkl	1 1 1 1 1 1	
2	56 DH04 6D 56 DH04 7T	Fairing Charcoal Black Fairing Ebony Black	1 1	
3	56 DH05 7T 56 DH05 6D	Front Fender Ebony Black Front Fender Charcoal Black	1 1	
4	52 DH30 55 52 DH30 56 52 DH24 47	Side Cover LH Eb Blk Solar Red Side Cover LH Char Blk Neon Blu Side Cover LH Platinum Silver	1 1 1	
5	52 DH24 48 52 DH30 57 52 DH30 58	Side Cover RH Platinum Silver Side Cover RH Char Blk Neon Blu Side Cover RH Eb Blk Solar Red	1 1 1	
6	52 DH29 95 52 DH29 97 52 DH29 99	Seat Cowl+Decal Eb Blk Solar Red Seat Cowl+Decal Eb Blk PI Silver Seat Cowl+Decl Char Blk Neon Blu	1 1 1	
7	52 DH24 54 52 DH31 26 52 DH30 87	Grab Handle Asy Pla. Silver Satin Grab Handle Assembly Solar Red Grab Handle Assembly Neon Blue	1 1 1	
8	52 DH30 06 52 DH30 61 52 DH24 55	Seat Assly Solar Red Seat Assly Neon Blue Seat Assly Pla. Silver	1 1 1	
9	DH 0104 50 DH 0104 05 DH 0104 45	Decal 3D - Red Decal 3D - Platinum Silver Decal 3D - Blue	2 2 2	





Painted Parts & Decals

No.	Part No.	Description	Qty.	Remarks
10	DH 0104 48	Decal Wheel Matte Red	4	
	DH 0104 02	Decal Wheel Platinum Silver	4	
	DH 0104 43	Decal Wheel Blue	4	
11	DH 0104 51	Decal Dome Tank Red	1	
	DH 0104 03	Decal Dome Tank Platinum Silver	1	
	DH 0104 46	Decal Dome Tank Blue		
12	JE 5412 12	Decal Magneto Cover	1	
13	DK 1017 38	Decal Cover RH	1	
14	DH 0104 49	Decal Fairing E Black Red	1	
	DH 0104 01	Decal Fairing E Black Red	1	
	DH 0104 44	Decal Fairing E Black Red	1	
15	DH 0104 47	Decal Cowl Seat Red	1	
	DH 0104 52	Decal Cowl Seat P Silver	1	
	DH 0104 42	Decal Cowl Seat Blue	1	
16	DH 0105 66	Decal Flap Tank LH Red	1	
	DH 0105 64	Decal Flap Tank LH Blue	1	
	DH 0105 14	Decal Flap Tank LH Super Silver	1	
17	DH 0105 67	Decal Flap Tank RH Red	1	
	DH 0105 65	Decal Flap Tank RH Blue	1	
	DH 0105 15	Decal Flap Tank RH Super Silver	1	
18	52 DH36 88	Tank Flap LH Eb Blk W So Red Dkl	1	
	52 DH36 89	Tank Flap LH Eb Blk W Pl Sil Dkl	1	
	52 DH36 90	Tank Flap LH Ch Blk W Ne Blu Dkl	1	
19	52 DH36 91	Tank Flap RH Eb Blk W So Red Dkl	1	
	52 DH36 92	Tank Flap RH Eb Blk W Pl Sil Dkl	1	
	52 DH36 93	Tank Flap RH Ch Blk W Ne Blu Dkl	1	



Plate No.: 54

Consumable Parts

No.	Part No.	Description	Supply Unit	Application
1	83 0205 52 83 0205 54	Bajaj Genuine Oil 10W30 BS VI Bajaj Genuine Oil 10W30 BS VI	1 Ltr. 100 ML	Top up
2	36 0010 58	Bajaj Coolant Koolex*	1 Ltr.	Coolant Top-up/Replace
3	36 DH40 61	Brake Fluid DOT4	100 ml	Disc Brake Top-up/Replace
4	36 DH40 52	Silicon grease	3 gm	Caliper Pin
5	83 0204 73 36 DK00 45	Grease Petamo GHY 441 Grease Molycoat	3 gm 200 gm	Water Pump Seals For Starter Clutch Lubrication
6	36 JL01 81	Limaplex HTX 3 Grease	10 gm	Steering Race
7	83 0201 73	Multi Purpose Grease* (Local Purchase)	--	Lubrication of Clutch Lever, Brake Lever, Brake Pedal & Side Stand
8	36 0010 55	Chain Lubricant HP Make	1 kg	Non - Sealed Chain Lubrication
9	36 0010 62	Liquid gasket L5910	50 ml	Crankcase Joining
10	36 3140 04 36 JG00 87	Fork oil Fork oil 480 ml (Dominar UG)	160 ml 480 ml	Front Fork Top-up/Replace Front Fork Top-up/Replace
11	36 DH40 29	Kit Spray Chain Lub	100 ml	Sealed Drive Chain
12	36 DH40 71	Wonderfill Chain Spray	100 ml	Sealed Drive Chain

* Marked items to be arrange from vendor or local market. Not applicable against chassis number.



13		14		15	
16		17		18	
19		20		21	
22		23		24	

Plate No.: 54

Consumable Parts

No.	Part No.	Description	Supply Unit	Application
13	36 DH40 72	Rust Remover Spray Make - Zorric 88 & Wonder fill easiner	100 ml	For Removing Rust from Components
14	76 0109 36	Loctite Thread locker 243*	50 ml	For Screws & Bolts
15	76 0109 37	Loctite retaining compound 638*	50 ml	For Screws & Bolts
16	37 0043 52	Touch up paint slate grey*	440 ml	Touch up of Frame, Swing Arm & Step Holder
17	37 0043 53	Touch up paint Matte Silk black*	440 ml	Touch up of Grab Handle, Handle Bar & Handle Holder
18	36 0010 60	Kibatsu touch up paint*	400 cc	Touch up of Cylinder head, Block & Alloy Wheels
19	37 2240 18	Paint Bottle Schwartz Black*	--	P-200NS Frame Touch-up
20	75 6802 36 NA	Petroleum Jelly (Local Purchase) Distilled Water (Local Purchase)	1 Ltr.	For Battery Terminals For Battery Level Top-up
21	NA	SAE 90 oil (Local Purchase)	-	
22	62 3050 84	WD40 Spray (Local Purchase)	400 ml	Electrical Contact Cleaning Spray
23	36 0010 56	Carburetor Cleaning Spray*		For Cleaning Carburetor/ Throttle Body
24	37 2540 39	Corrosion Protection Spray* Proto quick LTP902	--	For Preventing vehicle parts from rusting

* Marked items to be arrange from vendor or local market. Not applicable against chassis number.



Kit List

BAJAJ
pulsar DTS-i 125

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
1	36DH4225	Valve Kit	DH102535	Valve intake	1
			DS101024	Valve exhaust	1
2	36DH4227	Boss Kick Set	DH101185	Spring Kick Starter Arm	1
			DH101068	Ball steel	1
			DH102518	Base kick lever	1
			DH101548	Hex. bolt with flange	1
			DH101320	Bolt	1
3	36DH4232	Chain sprocket kit	DH151056	Sprocket driven	1
			DJ151096	Chain 124 link - solid bush	1
			PD141001	Sprocket output	1
4	52DJ0166	Chain case kit	DJ161230	Case chain upper assly	1
			DJ161231	Case chain lower assly	1
5	36DH4102	Piston Ring Set	PD521210	Ring Piston Top	1
			PD521211	Ring Piston Second	1
			PD521212	Ring Piston Oil	1
6	36DH4120	Kit Steel Clutch Plate K1 BS IV	PD551433	Clutch Plate	4
7	36DH1601	Grommet kit for side cover	DH161158	Grommet side cover	4
			DH161133	Grommet side cover rear	2
8	36DS1001	Cyl. Head O Ring Kit	39239121	O Ring (Cover tappet)	2
			39128321	O ring	2
9	36DH4019	Kit centrifugal oil filter	39220011	Washer	1
			DH101234	Gasket centrifugal oil filter	1
			DH101640	Screw	1
			DH101066	Join oil dealivery	1
			DH101067	Spring oil delivery	1

Kit List

BAJAJ
pulsar DTS-i 125

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
			39219908	Pin oil delivery joint	1
10	36DH4116	Kit Primary Drive & Driven Gear	DH101628	Gear Primary Drive	1
			DH102206	Outer Complete Clutch	1
11	36DH4262	Kit Block - Piston	DH102536	Block Cylinder Assembly	1
			DH102479	Piston Assembly	1
12	36DH4245	Kit Cam Chain Guide	DH102538	Guide Chain Slack Side	1
			DH102539	Guide Chain Tight Side	1
13	36DH4244	Valve Repair Kit	JF511217	Valve Spring	2
			JU11214	Seal Stem Valve	2
			JF511214	Retainer Valve Spring	2
			JF511215	Seat Valve Spring	2
			DG101029	Collet	4
14	36DH4247	Kit Assembly C'case LH	DH102449	Crankcase LH	1
			KPAF6004	Bearing Ball	1
			CB101220	Plug - Taper :- 6 X 7	1
			DH101203	Pipe - Breather	1
			39260320	Bearing - Ball 6202-RS1	1
			59200029	balancer LH bearing 6204	1
			39218919	Seal - Oil	1
15	36DS4035	Kit St. Cone With Grease	36DS1802	Bearing cone kit	1
			36JL0181	Limaplex Grease 10 gm Pouch	1
			36314002	Kit Ball Steel Steering	1
16	36DK0020	Kit Outer Tube	DJ181089	Seal - Dust	2
			DJ181088	Stopper - Oil Seal	2
			DS181072	Washer - Guide Bush	2
			DS181070	Bush - Guide	2

Kit List

BAJAJ
pulsar DTS-i 125

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
17	36DH4248	Kit Assembly C'Case RH	KPAF6004	Bearing Ball	1
			DH102490	Crankcase RH	1
			DH102555	Nozzle Jet Oil	1
			39260120	Bearing - Ball 61905 (25 X 42 X 9)	1
			39260220	Bearing - Ball 6202/HN3	1
			39215220	Bearing - NRB	1
18	36DH4208	Kit tank dcl v red	DJ010144	Decal tank RH matte volcanic red	1
			DJ010143	Decal tank LH matte volcanic red	1
19	36DH4209	Kit tank dcl e blk blue	DJ010154	Decal tank RH ebony black-blue	1
			DJ010153	Decal tank LH ebony black-blue	1
20	36DH4210	Kit tank dcl e blk red	DJ010150	Decal tank RH ebony black	1
			DJ010149	Decal tank LH ebony black	1
21	36DH4211	Kit t flap dcl v red	DJ010142	Decal spoiler tank RH m v red	1
			DJ010141	Decal spoiler tank LH m v red	1
22	36DH4212	Kit tank flap dcl ebl red	DJ010148	Decal spoiler tank RH e black	1
			DJ010147	Decal spoiler tank LH ebony black	1
23	36DH4213	Kit tank flap dcl e b blue	DJ010156	Decal spoiler tank RH e b-blue	1
			DJ010155	Decal spoiler tank LH e b-blue	1
24	36DH4214	Kit fender dcl v red	DH010461	Decal fender RH matte v red	1
			DH010460	Decal fender LH matte v red	1
25	36DH4215	Kit fender dcl ebl blue	DH010467	Decal fender RH ebony black blue	1
			DH010466	Decal fender LH ebony black blue	1
26	36DH4216	Kit fender dcl ebl red	DH010455	Decal fender RH ebony black red	1
			DH010454	Decal fender LH ebony black red	1

Kit List

BAJAJ
pulsar DTS-i 125

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
27	36DH4217	Kit seat cowl dcl v red	DH010463	Decal cowl seat upr RH m v red	1
			DH010462	Decal cowl seat upr LH m v red	1
			DK010254	Decal cowl seat lower RH m v red	1
			DK010253	Decal cowl seat lower LH m v red	1
28	36DH4218	Kit seat cowl dcl ebl red	DH010457	Decal cowl seat upr RH e blk red	1
			DH010456	Decal cowl seat upr LH e blk red	1
			DK010241	Decal cowl seat lower RH e black	1
			DK010240	Decal cowl seat lower LH e black	1
29	36DH4219	Kit seat cowl dcl ebl blue	DH010468	Decal cowl seat upr LH e blk blue	1
			DH010469	Decal cowl seat upr RH e blk blue	1
			DK010267	Decal cowl seat lwr RH e b-blue	1
			DK010266	Decal cowl seat lwr LH e b-blue	1
30	36DH4220	Kit belly pan dcl v red	DH010465	Decal belly pan RH matte v red	1
			DH010464	Decal belly pan LH matte v red	1
31	36DH4221	Kit belly pan dcl blk red	DH010459	Decal belly pan RH e black red	1
			DH010458	Decal belly pan LH e black red	1
32	36DH4222	Kit belly pan dcl blk blue	DH010471	Decal belly pan RH e black blue	1
			DH010470	Decal belly pan LH e black blue	1

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
01 1701 22	13	66
01 1701 22	22	74
15 1610 69	3	102
22 1611 93	17	58
28 1011 74	14	24
28 1011 74	9	40
30 1010 61	21	14
30 1011 42	3	26
30 1410 31	14	54
30 1510 32	3	66
30 1510 33	4	64
30 1510 33	4	66
30 1510 69	16	74
30 1510 75	14	74
30 1510 82	8	74
30 1511 05	17	74
30 1511 18	14	64
30 1611 57	2	60
30 1810 26	6	86
30 1810 29	15	86
30 1910 35	15	78
30 1910 38	10	78
30 1910 48	6	110
30 2110 05	17	108
31 1011 73	4	12
31 1210 06	9	10
31 1610 18	12	92
31 1811 08	30	88
36 0010 55	8	118
36 0010 56	23	120
36 0010 58	2	118
36 0010 60	18	120
36 0010 62	9	118

Part Number	Figure No.	Page No.
36 3140 04	10	118
36 DH16 01	8	92
36 DH40 11	7	38
36 DH40 19	13	12
36 DH40 29	11	118
36 DH40 52	4	118
36 DH40 61	3	118
36 DH40 71	12	118
36 DH40 72	13	120
36 DH41 02	4	10
36 DH41 15	8	86
36 DH41 16	13	12
36 DH41 16	13	30
36 DH41 17	2	30
36 DH41 20	5	30
36 DH41 24	1	26
36 DH42 25	7	6
36 DH42 27	3	36
36 DH42 32	22	14
36 DH42 32	6	74
36 DH42 43	9	66
36 DH42 44	6	6
36 DH42 45	5	8
36 DH42 47	1	24
36 DH42 48	2	22
36 DH42 62	6	10
36 DJ40 32	9	72
36 DJ40 33	10	72
36 DK00 09	18	38
36 DK00 13	6	54
36 DK00 20	2	86
36 DK00 45	5	118
36 DS10 01	5	4

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
36 DS40 35	5	48
36 DU19 01	11	82
36 DU41 54	2	34
36 DU41 55	3	34
36 DU41 57	5	34
36 DU41 58	6	34
36 DU41 59	7	34
36 DU41 60	8	34
36 DU41 61	9	34
36 DU41 62	10	34
36 JD00 91	8	70
36 JD00 92	4	70
36 JD00 93	9	70
36 JG00 87	10	118
36 JK01 02	2	68
36 JL01 81	6	118
36 PF01 67	4	34
37 0043 52	16	120
37 0043 53	17	120
37 2240 18	19	120
37 2540 39	24	120
39 0326 15	14	58
39 0454 11	12	52
39 0543 11	4	56
39 0694 15	22	78
39 0711 11	19	104
39 0714 11	18	52
39 0722 11	26	76
39 0740 11	7	90
39 0993 11	9	36
39 0999 06	11	26
39 0999 06	6	28
39 1041 19	4	26

Part Number	Figure No.	Page No.
39 1180 11	27	84
39 1184 15	10	82
39 1283 21	11	4
39 1283 21	3	28
39 1507 11	3	110
39 1540 11	21	78
39 1620 11	9	16
39 1660 05	2	4
39 1686 06	8	16
39 1686 06	4	32
39 1778 02	2	96
39 1778 02	8	104
39 1783 01	12	108
39 1789 24	15	92
39 1845 04	21	24
39 1931 20	6	12
39 1970 15	15	50
39 2141 24	5	104
39 2152 20	5	16
39 2158 11	2	14
39 2159 11	13	14
39 2160 11	9	14
39 2165 11	3	12
39 2180 06	8	22
39 2181 06	2	10
39 2189 19	10	24
39 2190 19	11	24
39 2194 21	6	32
39 2199 08	16	12
39 2200 11	12	30
39 2202 07	7	26
39 2276 11	17	36
39 2285 01	4	46

Parts Index



Part Number	Figure No.	Page No.
39 2344 11	10	36
39 2354 04	6	20
39 2366 15	17	52
39 2391 21	3	2
39 2413 04	5	50
39 2414 04	9	50
39 2425 11	15	38
39 2440 11	9	6
39 2448 11	20	24
39 2532 04	8	2
39 2601 20	9	22
39 2602 20	7	22
39 2603 20	7	24
39 2608 01	9	4
39 2647 15	6	2
39 2669 21	4	8
52 DH01 69	1	32
52 DH01 77	10	16
52 DH13 17	1	28
52 DH14 12	7	28
52 DH24 47	4	114
52 DH24 48	5	114
52 DH24 54	7	114
52 DH24 55	8	114
52 DH29 83	1	114
52 DH29 95	6	114
52 DH29 97	6	114
52 DH29 99	6	114
52 DH30 06	8	114
52 DH30 55	4	114
52 DH30 56	4	114
52 DH30 57	5	114
52 DH30 58	5	114

Part Number	Figure No.	Page No.
52 DH30 61	8	114
52 DH30 87	7	114
52 DH31 12	1	114
52 DH31 14	1	114
52 DH31 26	7	114
52 DH36 88	18	116
52 DH36 89	18	116
52 DH36 90	18	116
52 DH36 91	19	116
52 DH36 92	19	116
52 DH36 93	19	116
52 DH36 94	1	114
52 DH36 96	1	114
52 DH36 98	1	114
52 DJ01 66	1	102
52 JN01 36	2	2
56 DH04 6D	2	114
56 DH04 7T	2	114
56 DH05 6D	3	114
56 DH05 7T	3	114
56 DH2Y 33	1A	62
56 DH3X 1Y	1	54
56 DH5H 1Y	2	54
56 DH8Q 7B	11	66
56 DH9V Y9	3	82
56 DH9W Y9	2	82
56 DH9X Y9	1	82
56 DH9X Y9	18	86
56 DJ4E 1Y	3	46
59 0200 01	11	92
59 0500 08	3	22
59 0500 08	2	24
59 1500 03	8	64

Parts Index



Part Number	Figure No.	Page No.
59 1500 03	6	66
59 2000 07	10	46
59 2000 28	12	16
59 2000 29	13	16
59 2000 29	9	24
59 2100 19	7	98
60 1114 20	14	110
62 3050 84	22	120
75 6802 36	20	120
76 0109 36	14	120
76 0109 37	15	120
83 0201 73	7	118
83 0204 73	5	118
83 0205 52	1	118
83 0205 54	1	118
AA 1014 37	4	22
AA 1014 37	19	44
AK 2010 12	17	110
AP 1010 43	8	28
AP 2010 25	18	110
AZ 5910 64	3	38
CL 2010 23	15	104
CS 1011 28	1	8
DD 1010 62	3	8
DD 1010 97	2	36
DD 1110 12	14	44
DD 1210 07	3	10
DD 1412 27	6	90
DD 1610 71	16	38
DD 1810 32	25	88
DD 1911 42	33	84
DD 2011 70	18	82
DE 1510 06	3	64

Part Number	Figure No.	Page No.
DE 1510 08	6	64
DE 1510 12	5	64
DF 1611 02	8	60
DF 1810 98	4	104
DG 1010 29	4	6
DG 1014 18	8	26
DG 1014 18	2	28
DG 1014 98	11	2
DG 1014 98	16	24
DG 1110 08	7	44
DG 1210 40	18	42
DG 1611 21	13	92
DG 1611 24	17	38
DG 1710 25	20	52
DG 1810 08	3	58
DG 1810 08	19	86
DG 1910 48	24	80
DH 0104 01	14	116
DH 0104 02	10	116
DH 0104 03	11	116
DH 0104 05	9	114
DH 0104 42	15	116
DH 0104 43	10	116
DH 0104 44	14	116
DH 0104 45	9	114
DH 0104 46	11	116
DH 0104 47	15	116
DH 0104 48	10	116
DH 0104 49	14	116
DH 0104 50	9	114
DH 0104 51	11	116
DH 0104 52	15	116
DH 0105 14	16	116

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
DH 0105 15	17	116
DH 0105 64	16	116
DH 0105 65	17	116
DH 0105 66	16	116
DH 0105 67	17	116
DH 1010 06	5	22
DH 1010 64	10	12
DH 1010 66	7	12
DH 1010 67	14	12
DH 1010 72	2	16
DH 1010 78	3	14
DH 1010 79	4	14
DH 1010 80	6	14
DH 1011 10	14	14
DH 1011 11	15	14
DH 1011 21	8	36
DH 1011 41	5	26
DH 1011 42	6	26
DH 1011 46	3	18
DH 1011 52	20	26
DH 1011 54	13	26
DH 1011 72	6	46
DH 1011 95	11	12
DH 1011 97	2	26
DH 1012 03	12	24
DH 1012 34	15	12
DH 1012 35	5	14
DH 1012 75	24	26
DH 1012 92	12	28
DH 1012 93	14	28
DH 1012 94	13	28
DH 1012 95	8	6
DH 1013 19	18	14

Part Number	Figure No.	Page No.
DH 1013 21	14	36
DH 1013 34	20	14
DH 1013 36	11	14
DH 1013 53	7	36
DH 1013 55	12	12
DH 1013 73	14	16
DH 1013 79	6	24
DH 1013 85	3	16
DH 1013 85	19	24
DH 1013 85	12	46
DH 1013 85	16	36
DH 1013 88	15	28
DH 1013 89	6	18
DH 1013 90	4	24
DH 1013 92	10	8
DH 1013 93	7	20
DH 1013 94	10	20
DH 1013 96	2	12
DH 1013 97	1	20
DH 1014 12	7	8
DH 1014 14	7	10
DH 1014 16	10	14
DH 1014 24	6	16
DH 1014 87	10	22
DH 1014 93	4	18
DH 1014 96	9	18
DH 1015 08	4	4
DH 1015 09	5	20
DH 1015 36	11	36
DH 1015 37	4	36
DH 1015 38	15	36
DH 1015 39	19	36
DH 1015 40	6	36

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
DH 1015 44	17	26
DH 1015 81	11	46
DH 1016 07	6	38
DH 1016 40	8	12
DH 1016 48	11	30
DH 1016 71	5	10
DH 1017 14	2	20
DH 1017 18	11	40
DH 1017 19	13	24
DH 1017 95	8	30
DH 1018 81	12	26
DH 1019 16	10	2
DH 1020 13	8	14
DH 1020 22	19	14
DH 1020 52	4	16
DH 1020 53	15	16
DH 1021 18	7	4
DH 1021 25	8	8
DH 1021 66	16	28
DH 1021 89	8	18
DH 1021 98	10	30
DH 1022 00	3	24
DH 1022 01	5	2
DH 1022 10	3	30
DH 1022 11	4	30
DH 1022 12	6	30
DH 1022 14	1	30
DH 1022 30	3	4
DH 1022 74	3	40
DH 1022 76	7	40
DH 1022 81	6	40
DH 1023 29	8	4
DH 1023 89	5	40

Part Number	Figure No.	Page No.
DH 1023 90	12	40
DH 1024 37	5	36
DH 1024 38	20	36
DH 1024 48	8	10
DH 1024 62	18	44
DH 1024 75	1	16
DH 1024 77	1	36
DH 1025 01	1	2
DH 1025 01	1	4
DH 1025 08	1	14
DH 1025 11	7	14
DH 1025 13	16	14
DH 1025 14	17	14
DH 1025 26	1	22
DH 1025 29	1	38
DH 1025 40	1	12
DH 1025 46	2	8
DH 1025 66	5	38
DH 1025 68	25	14
DH 1025 76	12	14
DH 1037 28	6	4
DH 1037 56	10	38
DH 1110 13	15	44
DH 1110 15	13	44
DH 1111 11	11	44
DH 1111 13	12	44
DH 1111 14	1	46
DH 1111 23	2	44
DH 1111 34	18	50
DH 1111 48	1	44
DH 1210 10	3	32
DH 1210 11	15	26
DH 1210 12	16	26

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
DH 1210 64	15	34
DH 1211 62	11	34
DH 1212 71	1	40
DH 1410 20	5	90
DH 1410 23	6	92
DH 1410 24	13	90
DH 1410 68	11	42
DH 1410 70	3	42
DH 1410 71	16	42
DH 1410 72	15	42
DH 1410 73	10	42
DH 1410 74	12	42
DH 1410 75	19	42
DH 1411 03	6	42
DH 1510 39	2	72
DH 1510 40	12	36
DH 1510 40	10	64
DH 1510 77	1	62
DH 1510 81	7	64
DH 1511 09	9	78
DH 1511 15	12	66
DH 1511 17	15	66
DH 1511 18	14	66
DH 1511 32	3	62
DH 1610 53	3	56
DH 1610 61	13	54
DH 1610 66	6	60
DH 1611 00	5	56
DH 1611 21	4A	60
DH 1611 46	7	60
DH 1611 55	9	54
DH 1612 33	6	94
DH 1612 39	4	60

Part Number	Figure No.	Page No.
DH 1612 45	16	50
DH 1612 83	5	102
DH 1612 84	2	102
DH 1612 93	16	108
DH 1612 97	7	106
DH 1613 01	10	50
DH 1613 30	16	58
DH 1614 10	4	100
DH 1614 24	5	58
DH 1614 29	20	42
DH 1614 71	5	60
DH 1614 97	4	50
DH 1615 09	9	100
DH 1615 10	18	58
DH 1615 10	10	100
DH 1615 16	21	42
DH 1615 17	22	42
DH 1615 59	11	58
DH 1615 68	12	60
DH 1616 30	2	58
DH 1616 81	14	108
DH 1617 05	5	78
DH 1617 06	1	78
DH 1617 17	13	78
DH 1617 18	8	56
DH 1617 19	1	56
DH 1617 20	11	56
DH 1617 21	10	56
DH 1617 25	17	54
DH 1617 32	2	50
DH 1617 34	17	50
DH 1617 36	1	50
DH 1617 45	14	50

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
DH 1617 46	19	50
DH 1617 53	2	108
DH 1617 56	13	40
DH 1617 68	1	48
DH 1617 77	13	50
DH 1617 88	32	80
DH 1710 13	6	52
DH 1710 15	7	52
DH 1710 19	8	52
DH 1710 19	25	76
DH 1710 24	16	52
DH 1710 39	1	52
DH 1710 50	5	52
DH 1710 53	1	86
DH 1710 56	24	88
DH 1710 62	4	52
DH 1710 63	1	86
DH 1810 15	14	86
DH 1810 23	23	88
DH 1810 52	10	104
DH 1810 92	22	88
DH 1810 99	17	82
DH 1811 15	17	86
DH 1811 22	3	48
DH 1811 26	28	88
DH 1811 27	9	86
DH 1811 28	16	86
DH 1811 29	13	86
DH 1811 30	25	84
DH 1811 30	1	90
DH 1910 07	12	82
DH 1910 08	13	82
DH 1910 14	30	84

Part Number	Figure No.	Page No.
DH 1910 17	24	84
DH 1910 19	14	82
DH 1910 23	7	78
DH 1910 83	5	70
DH 1910 83	4	98
DH 1910 87	1	98
DH 1910 88	2	98
DH 1910 89	1	96
DH 1910 94	5	98
DH 1910 95	8	48
DH 1910 97	1	98
DH 2010 79	11	64
DH 2010 79	6	98
DH 2010 93	10	60
DH 2010 96	13	110
DH 2011 11	5	82
DH 2011 12	6	82
DH 2011 41	5	110
DH 2011 56	6	82
DH 2011 57	18	66
DH 2011 58	10	44
DH 2011 62	5	110
DH 2011 63	1	110
DJ 1017 05	5	24
DJ 1410 02	4	90
DJ 1410 08	2	48
DJ 1410 08	7	92
DJ 1510 32	1	74
DJ 1510 33	3	74
DJ 1510 36	13	52
DJ 1510 37	14	52
DJ 1510 47	15	52
DJ 1510 53	7	74

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
DJ 1510 68	3	72
DJ 1510 69	4	72
DJ 1510 70	5	72
DJ 1510 72	7	72
DJ 1510 73	8	72
DJ 1510 94	13	64
DJ 1511 19	19	74
DJ 1610 69	1	58
DJ 1610 79	6	100
DJ 1610 80	7	100
DJ 1610 91	6	58
DJ 1611 22	5	54
DJ 1611 28	3	54
DJ 1611 29	4	54
DJ 1611 86	12	54
DJ 1612 14	1	60
DJ 1612 21	10	58
DJ 1612 27	4	102
DJ 1612 28	10	28
DJ 1612 54	9	58
DJ 1612 78	14	38
DJ 1612 78	8	54
DJ 1612 85	6	56
DJ 1710 08	10	52
DJ 1810 29	18	104
DJ 1810 33	3	104
DJ 1810 37	7	104
DJ 1810 52	21	88
DJ 1810 65	12	104
DJ 1810 85	20	86
DJ 1811 15	6	48
DJ 1811 19	21	104
DJ 1811 20	2	104

Part Number	Figure No.	Page No.
DJ 1811 30	13	104
DJ 1910 23	1	68
DJ 1910 26	5	68
DJ 1910 27	6	68
DJ 1910 28	7	68
DJ 1910 29	8	68
DJ 1910 30	9	68
DJ 1910 31	10	68
DJ 1910 34	13	68
DJ 1910 35	14	68
DJ 1910 38	15	68
DJ 1910 66	6A	78
DJ 1910 81	7	82
DJ 1910 82	34	84
DJ 1910 83	8	82
DJ 2011 09	12	68
DJ 2012 06	3	106
DJ 2012 07	4	106
DJ 2012 08	1	106
DJ 2012 09	2	106
DJ 2012 46	21	82
DJ 2012 53	19	54
DJ 2110 06	3	94
DJ 2110 07	1	94
DJ 2210 03	28	84
DJ 2210 04	29	84
DJ 2210 19	1	112
DJ 2210 20	1	100
DJ 2210 21	2	100
DK 1010 63	1	10
DK 1011 59	1	18
DK 1011 60	2	18
DK 1011 76	5	46

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
DK 1012 53	9	20
DK 1012 84	3	44
DK 1013 80	17	24
DK 1014 80	14	26
DK 1015 74	7	30
DK 1016 36	23	26
DK 1017 22	3	20
DK 1017 25	8	20
DK 1017 33	4	20
DK 1017 38	21	26
DK 1017 38	13	116
DK 1017 48	1	6
DK 1017 51	2	6
DK 1017 55	3	6
DK 1019 57	5	18
DK 1510 26	5	62
DK 1510 94	12	74
DK 1611 23	9	92
DK 1611 24	10	92
DK 1611 53	3	108
DK 1611 64	7	106
DK 1611 71	14	92
DK 1810 43	15	82
DK 1810 82	22	82
DK 1810 83	20	82
DK 1810 86	23	84
DK 2010 03	1	108
DK 2010 78	12	110
DK 2011 61	8	90
DK 2110 07	2	94
DK 2210 24	2	112
DL 1810 10	6	104
DL 1910 20	16	104

Part Number	Figure No.	Page No.
DL 1910 20	7	108
DP 1210 65	17	34
DP 1610 94	18	54
DP 1610 94	33	80
DP 1611 44	13	108
DP 1611 45	10	108
DS 1010 71	19	26
DS 1010 84	7	2
DS 1011 54	5	12
DS 1011 66	4	2
DS 1012 01	22	26
DS 1012 15	9	26
DS 1013 55	24	14
DS 1510 58	12	64
DS 1510 68	11	74
DS 1510 73	10	74
DS 1510 94	17	66
DS 1611 25	4	58
DS 1612 24	15	58
DS 1810 71	10	86
DS 2010 25	2	110
DS 2110 05	5	94
DS 2210 01	3	100
DT 1814 33	7	58
DU 1012 23	15	24
DU 1811 08	3	86
GH 2010 12	5	106
GL 1316 03	10	66
GL 1318 27	4	68
GL 1710 36	5	42
JA 1210 05	19	78
JA 4018 01	20	110
JB 1220 16	2	52

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
JB 1310 08	5	66
JB 1310 17	1	64
JB 1310 17	1	66
JB 1310 18	9	64
JB 1310 18	7	66
JB 1310 22	8	66
JB 5910 59	11	38
JB 5910 68	9	38
JB 5910 98	4	38
JC 1010 34	11	8
JC 1011 45	7	46
JC 1410 28	11	90
JC 1410 34	14	90
JC 1510 04	18	74
JC 1510 06	21	74
JC 1510 12	29	76
JC 1910 04	3	98
JC 1910 11	16	78
JC 2010 27	17	44
JD 1610 02	30	80
JD 1610 06	31	80
JD 1610 19	2	78
JD 1716 02	3	90
JD 3512 06	16	44
JD 4022 16	10	110
JD 4022 17	7	110
JE 3514 07	10	10
JE 5112 37	6	8
JE 5410 08	13	36
JE 5412 12	9	28
JE 5412 12	12	116
JE 5412 13	18	26
JE 5812 18	16	34

Part Number	Figure No.	Page No.
JE 5812 20	14	34
JE 5812 25	13	34
JF 1310 10	2	62
JF 1312 11	4	62
JF 1316 00	20	74
JF 4018 03	9	110
JF 5112 14	10	6
JG 1710 29	4	42
JG 1710 31	20	104
JG 1710 86	7	42
JG 4018 08	19	110
JG 5514 43	9	30
JG 5814 42	4	40
JH 1132 03	9	56
JH 1220 09	19	52
JH 1318 50	11	68
JH 1318 50	1	70
JH 1610 31	2	70
JH 1610 32	3	68
JH 1610 32	3	70
JH 1610 35	17	78
JH 1710 17	9	90
JH 1710 48	17	42
JH 1813 08	6	70
JH 5512 02	23	14
JK 1210 07	27	88
JK 1210 09	29	88
JK 1220 11	18	78
JL 1610 06	18	54
JL 1711 01	2A	42
JL 1711 02	8	42
JL 1711 02	12	90
JL 1810 29	17	104

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
JL 4022 07	15	110
JL 4030 00	8	110
JL 4036 00	13	60
JP 5810 18	8	40
JU 5112 14	5	6
JW 1318 07	6	72
JW 4010 11	8	108
JW 5910 28	8	38
JY 1710 69	13	42
JY 1710 70	2	42
JY 1710 77	1	42
JY 1718 25	9	42
JY 1812 64	2	40
JY 1812 64	23	42
JZ 1312 91	23	74
JZ 1318 75	3	78
JZ 1510 83	4	48
JZ 1711 24	1	92
JZ 1813 20	16	110
JZ 3518 01	12	34
JZ 4010 77	26	88
KA AD05 20	7	32
KA AD06 12	7	56
KA AD08 55	8	50
KA AD10 35	12	86
KA CA05 16	2	90
KA CA06 50	16	82
KA CF08 30	7	86
KA DA08 14	5	100
KA DA08 45	11	100
KA DD06 10	20	50
KA DD06 10	11	110
KA DD06 12	21	50

Part Number	Figure No.	Page No.
KA DD06 12	19	58
KA DD06 12	11	108
KA DD06 14	2	92
KA DD06 18	9	44
KA DD06 22	4	94
KA DD06 25	31	84
KA DD06 25	11	104
KA DD06 30	15	108
KA DD08 16	5	92
KA DD08 25	11	50
KA DD08 25	8	100
KA DD08 35	7	54
KA DD08 65	3	50
KA DD08 65	12	50
KA DD08 A0	7	50
KA DD08 B0	6	50
KA DD10 50	12	38
KA DT06 16	8	44
KA DT06 25	28	76
KA ED06 10	9	48
KA ED06 16	8	58
KA ED06 20	12	8
KA ED06 25	11	16
KA ED06 25	25	26
KA ED06 25	2	32
KA ED06 35	9	2
KA ED06 35	11	28
KA ED06 45	18	24
KA ED08 12	4	110
KA EF06 30	16	66
KA EG08 30	8	78
KB BA04 08	16	64
KB BA04 16	8	104

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
KB BA04 16	4	108
KB BA05 12	12	58
KB BA05 30	14	104
KB BA06 16	19	66
KB CA04 16	5	32
KB RC35 13	11	52
KB UA05 14	10	40
KB UA05 16	9	104
KB UC05 10	12	70
KB UF05 12	5	108
KC GA05 05	11	60
KC GA05 05	10	90
KC GA06 06	6	108
KC GA10 10	6	106
KC GD08 08	22	54
KC GD10 10	8	106
KC GK08 08	2	38
KD AA05 10	13	58
KD AA06 11	21	66
KD AB06 11	10	70
KD BA10 22	13	38
KD DA06 12	20	66
KD DB04 08	15	64
KD DB10 18	3	52
KD DB10 18	20	78
KD DB10 18	11	86
KE AB10 10	7	16
KE AB16 10	18	36
KH AA20 15	15	54
KH AA20 15	4	78
KH AA20 15	12	78
KH AA20 18	29	80
KH AA25 20	11	54

Part Number	Figure No.	Page No.
KH AA32 25	3	60
KH BA08 28	23	80
KH DA04 08	7	18
KJ AA14 24	6	78
KJ AC18 24	10	4
KP AF60 04	6	22
KP AF60 04	8	24
KP BB63 01	2	66
KP BC60 04	9	74
KP BC62 02	13	74
KP BC63 01	2	64
KP BC63 02	15	74
LA A000 56	21	54
LA C000 20	26	84
LA C000 59	4	82
LA D000 77	19	82
LA D000 85	20	54
LA D001 37	12	100
LA D002 53	9	52
LA D002 61	2	56
LA E000 14	5	44
LA E000 18	10	26
LA E000 18	5	28
LA E000 18	2	46
LB U000 12	9	82
LB U000 73	7	70
LC A000 01	2	74
LC A000 10	13	100
LC B000 05	4	74
LC H000 01	23	54
LC H000 01	9	60
LC L000 01	25	80
LD A000 32	28	80

Parts Index

BAJAJ
pulsar DTS-i 125

Part Number	Figure No.	Page No.
LD A000 69	14	78
LD B000 01	24	76
LD B000 02	27	76
LD B000 18	10	54
LD B000 19	11	78
LD B000 21	4	92
LD B000 23	3	92
LE A000 03	11	70
LH B000 01	26	80
LH E000 17	27	80
NA	20	120
NA	21	120
PA 1138 05	7	48
PA 2328 06	9	108
PD 1318 53	1	72
PD 1716 16	14	42
PD 5110 84	9	8
PD 5412 91	4	28
PD 5412 92	4	44
PD 5514 53	6	44
PD 5514 53	8	46
PD 6212 03	9	46
PF 1210 73	3	86
PF 1312 20	5	74
PF 1610 11	32	84
PF 1610 12	35	84
PF 5812 71	1	34
YD H190 01	1	104
YD H310 01	4	86
YD H310 02	5	86
YD H310 03	4D	98
YD H310 04	4E	98
YD H320 01	3	96

Part Number	Figure No.	Page No.
-------------	------------	----------