

BAJAJ
pulsar DTS-i
180
UG, BS IV

Bajaj Auto Limited
Akurdi, Pune - 411 035. India.
Tel : +91 20 27472851
Fax : +91 20 27407385
Toll Free : 1800 233 2453
Website : www.bajajauto.com
CIN L65993PN2007PLC130076



BAJAJ
pulsar DTS-i
180
UG, BS IV

Spare Parts Catalogue



Notice



All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO. : 71112583

REV. 08, AUG 17

Copy rights : All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Bajaj Auto LTD.

Foreword



We have pleasure in presenting the Spare Parts Catalogue for '**Pulsar 180 UG, (BS IV)**' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Service Department
Akurdi, Pune 411 035 India

Instructions



- How to Read the Catalogue :** Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

- How to Order Spare Parts :** The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

- Part Number System :** We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

- Abbreviations :** The following abbreviations are used in this catalogue.

| | | | |
|--------|-----------------|-------|-------------|
| Assly | Assembly | V | Volts |
| N.I. | Not illustrated | W | Watts |
| C'case | Crankcase | Accl. | Accelerator |
| Cyl | Cylinder | Comp. | Complete |
| O/s | Over size | Fr. | Front |
| Rr. | Rear | Std. | Standard |
| L | Length | A/t. | Alternate |
| R.H. | Right hand | L.H. | Left hand |
| Hex. | Hexagonal | AR | As required |

Revision No. & Change Details

BAJAJ
pulsar **DTS-i 180 UG, BS IV**

Revision No. & Change Details

BAJAJ
pulsar DTS-i 180 UG, BS IV

Revision No. & Change Details

BAJAJ
pulsar DTS-i 180 UG, BS IV

Revision No. & Change Details

BAJAJ
pulsar DTS-i 180 UG, BS IV

Index



| Plate No. | Description | Page No. |
|-----------|--|----------|
| 1 | Cover Cylinder Head | 2 |
| 2 | SAI System | 4 |
| 3 | Cylinder Head | 6 |
| 4 | Valve | 8 |
| 5 | Camshaft & Tensioner | 10 |
| 6 | Cylinder & Piston | 12 |
| 7 | Crankshaft | 14 |
| 8 | Transmission | 16 |
| 9 | Balancer & Balancer Idler Gear | 18 |
| 10 | Change Drum & Shaft Fork | 20 |
| 11 | Gear Change Mechanism | 22 |
| 12 | Engine Assembly & Crankcase RH | 24 |
| 13 | Crankcase LH | 26 |
| 14 | Cover Clutch | 28 |
| 15 | Cover Magneto | 30 |
| 16 | Clutch Assembly | 32 |
| 17 | Oil Pump Assembly | 34 |
| 18 | Carburettor Assembly | 36 |
| 19 | Silencer Assembly | 38 |
| 20 | Air Cleaner Assembly | 40 |
| 21 | EVAP Mechanism | 42 |
| 22 | Magneto, CDI & H.T. Coil | 44 |
| 23 | Starter Assembly | 46 |
| 24 | Frame and Frame Fittings | 48 |
| 25 | Engine Mountings | 50 |
| 26 | Swing Arm & Rear Shock Absorber | 52 |
| 27 | Rider, Pillion Foot Rest & Step Holder | 54 |
| 28 | Mudguard - Front & Rear | 56 |
| 29 | Center & Side Stand Assembly | 58 |





Index



| Plate No. | Description | Page No. |
|-----------|---|-----------|
| 30 | Tube / Tyre / Rim | 60 |
| 31 | Front Wheel Assembly | 62 |
| 32 | Front Master Cylinder Assembly | 64 |
| 33 | Front Brake - Caliper & Disc | 66 |
| 34 | Rear Wheel Assembly | 68 |
| 35 | Rear Disc Brake System | 70 |
| 36 | Rear Dist Brake - Master Cylinder & Caliper | 72 |
| 37 | Rear Brake Pedal | 74 |
| 38 | Handle Bar | 76 - 78 |
| 39 | Front Fork | 80 |
| 40 | Fuel Tank, Fuel Cock, Cap Tank & Fuel Gauge | 82 |
| 41 | Fittings Petrol Tank Spoiler, Side Cover & Cover Seat | 84 |
| 42 | Seat Assembly & Seat Lock | 86 |
| 43 | Speedometer Assembly | 88 |
| 44 | Cables | 90 |
| 45 | Leg Guards, Saree Guard & Grab Handle | 92 |
| 46 | Chain Case | 94 |
| 47 | Head Lamp & Fairing | 96 |
| 48 | Indicator Light Assembly | 98 |
| 49 | Tail Lamp Assembly & Front / Rear Number Plate | 100 |
| 50 | Electrical Equipments | 102 |
| 51 | Tool Kit | 104 |
| 52 | Painted Parts & Decals | 106 - 108 |
| 53 | Consumable Parts | 111 - 114 |
| | Kit List | 115 - 118 |
| | Amended Sheet (Part Added) | 119 |
| | Amended Sheet (Part Deleted) | 120 |
| | Part Index | 121 - 132 |





Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

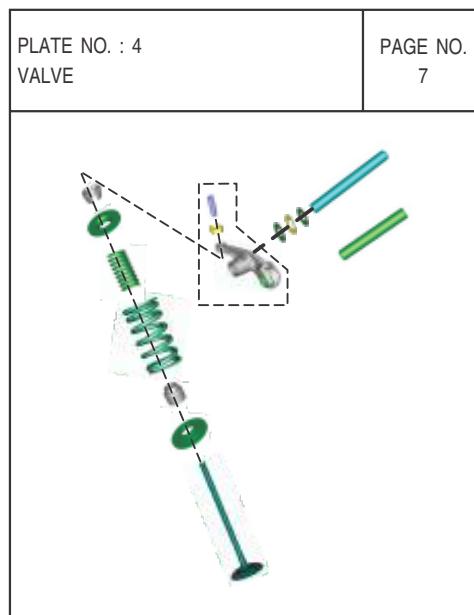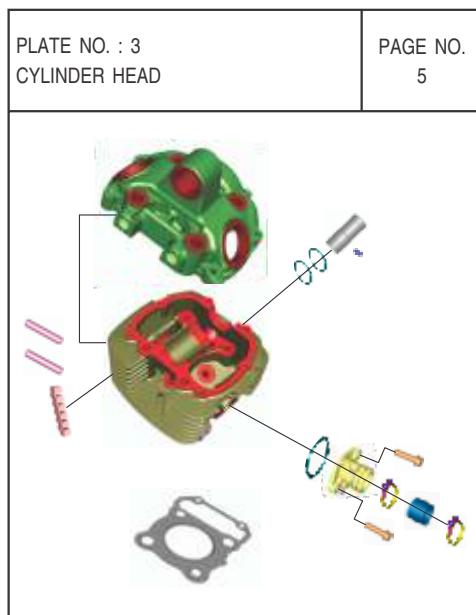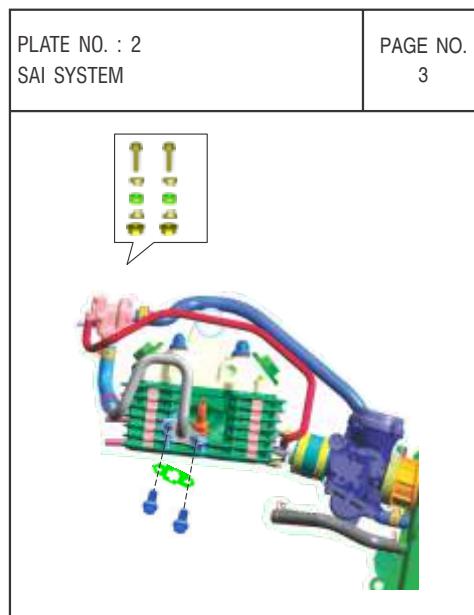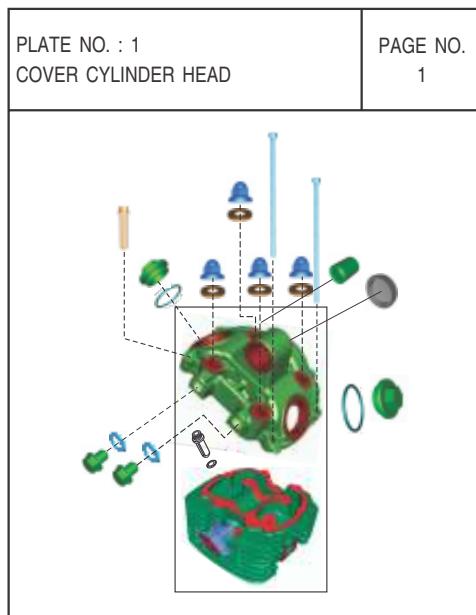




Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

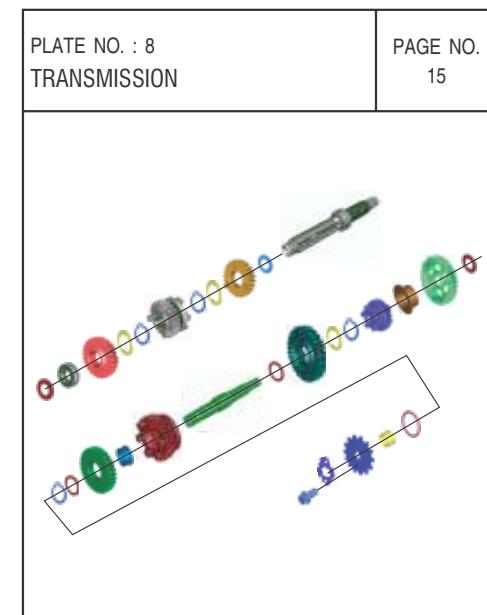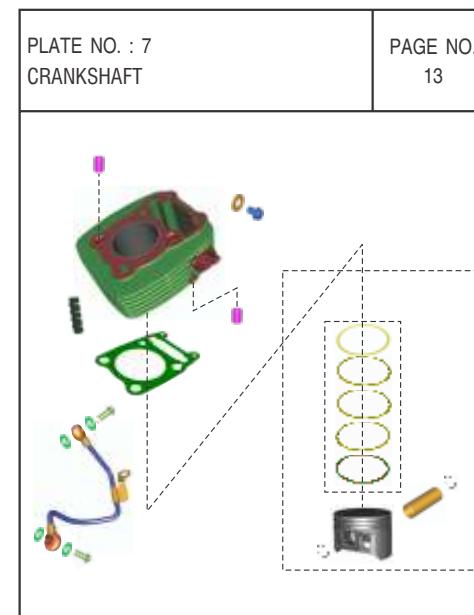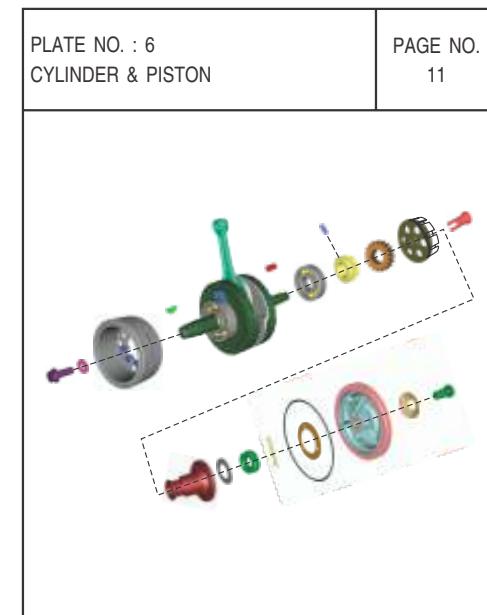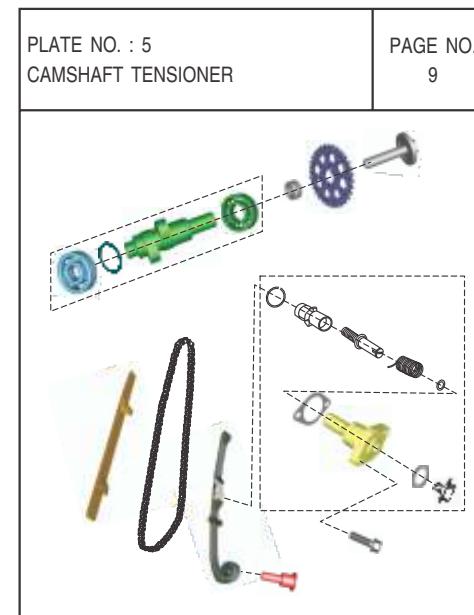




Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

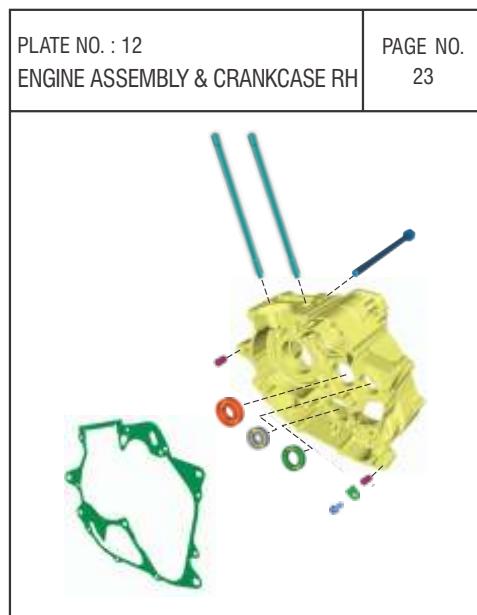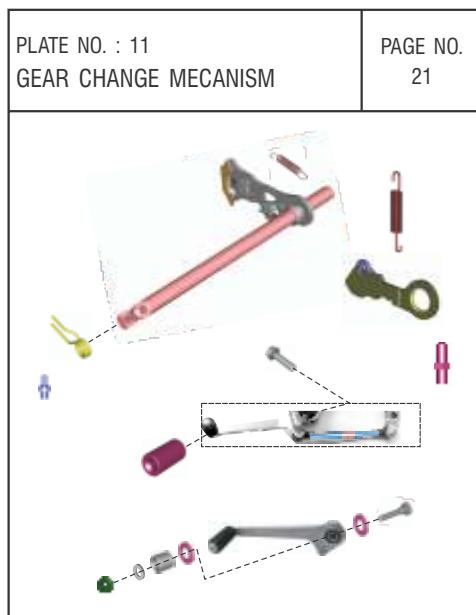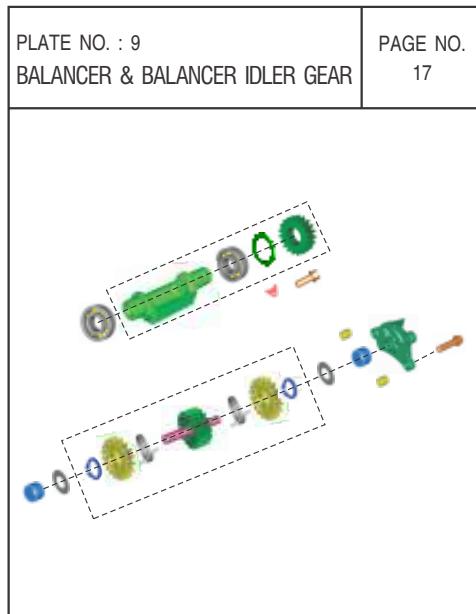




Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

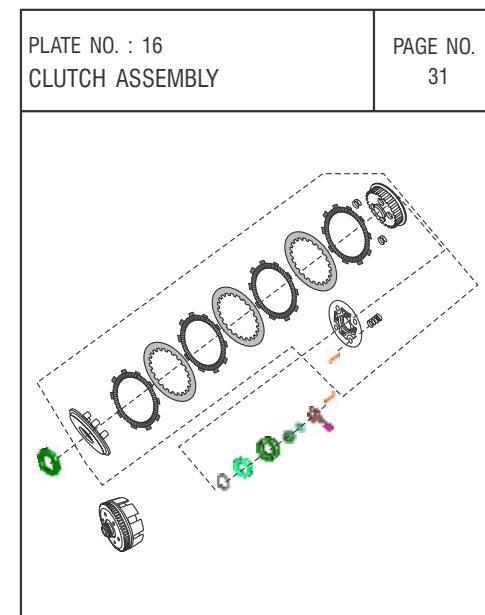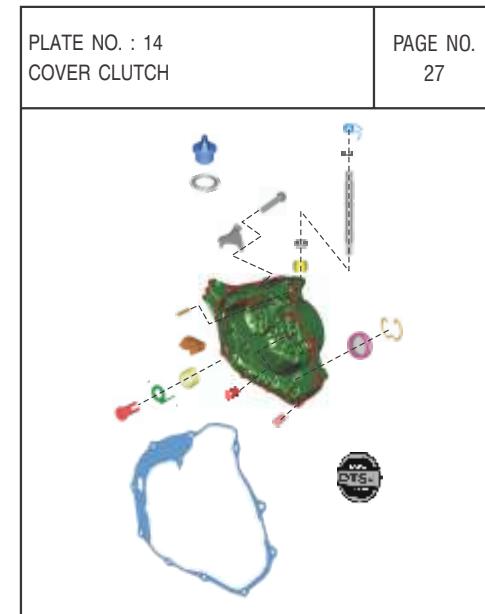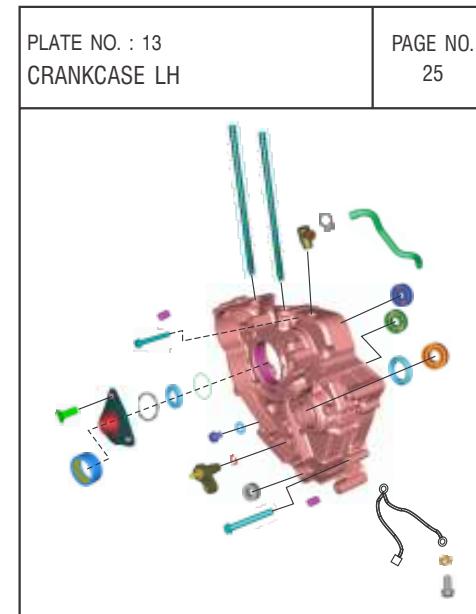





Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

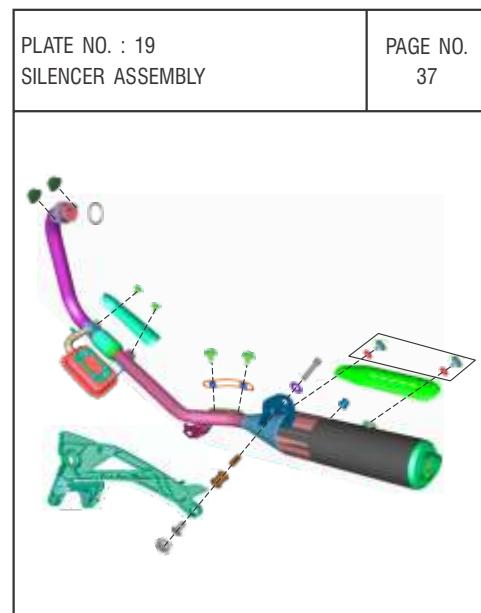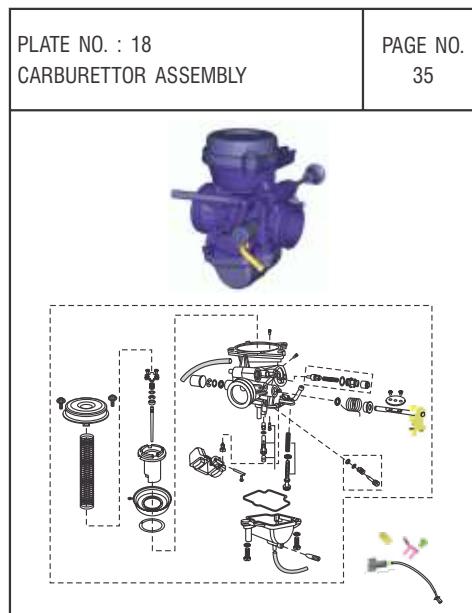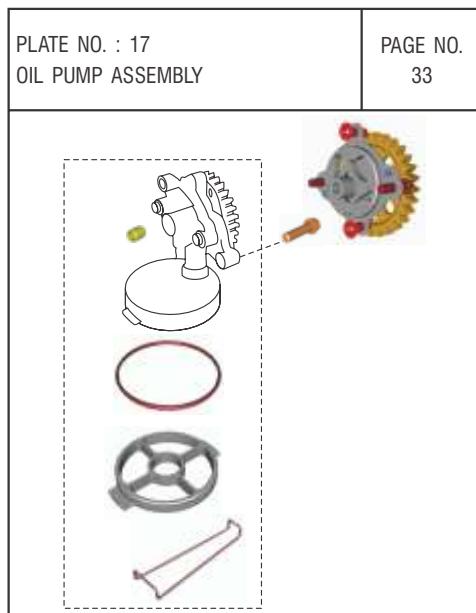

Pictorial Index


BAJAJ
pulsar DTS-i 180 UG, BS IV

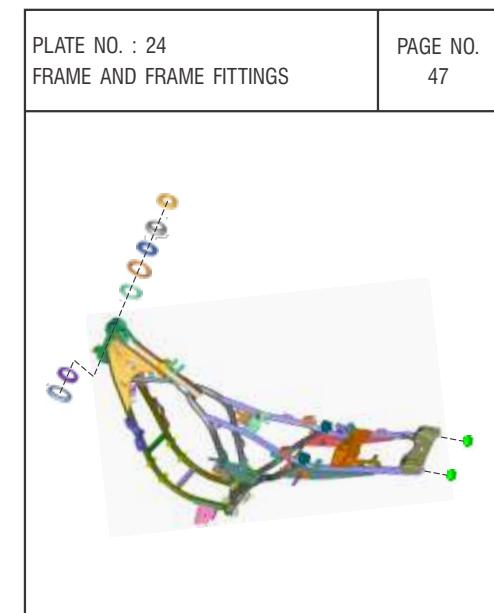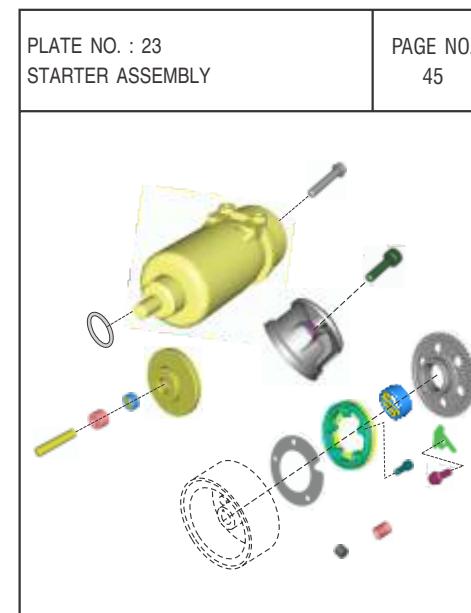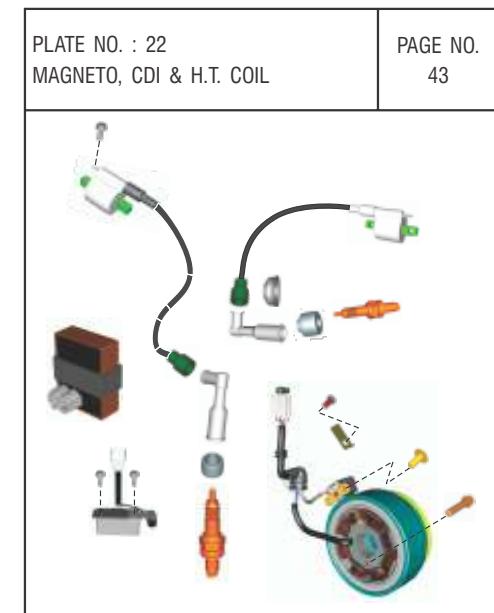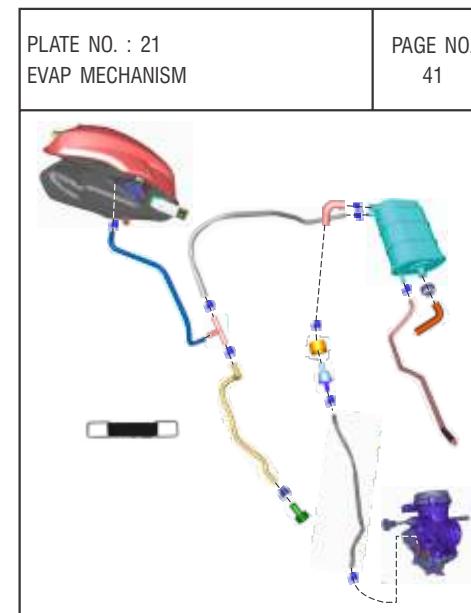


Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| | |
|------------------------------------|----------------|
| PLATE NO. : 25 ENGINE MOUNTINGS | PAGE NO. 49 |
|------------------------------------|----------------|

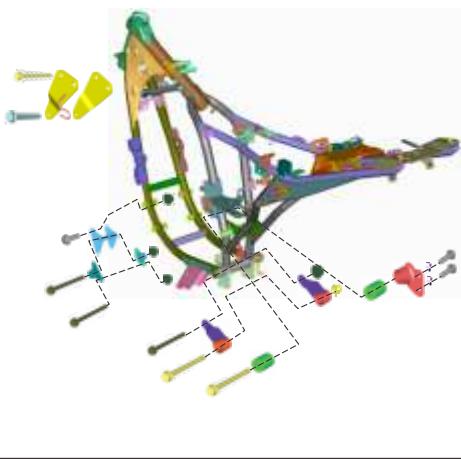


| | |
|--|----------------|
| PLATE NO. : 26 SWING ARM & REAR SHOCK ABSORBER | PAGE NO. 51 |
|--|----------------|

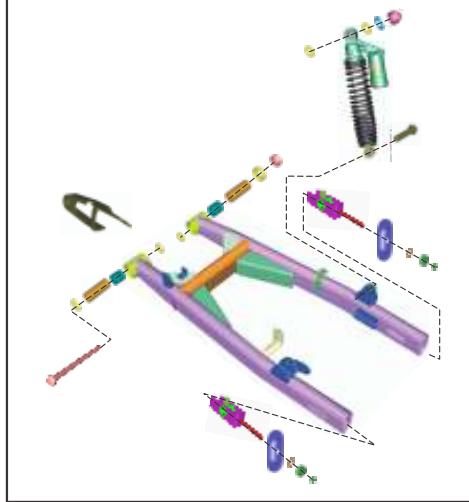

| | |
|---|----------------|
| PLATE NO. : 27 RIDER, PILLION FOOT REST & STEP HOLDER | PAGE NO. 53 |
|---|----------------|

| | |
|---|----------------|
| PLATE NO. : 28 MUDGUARD - FRONT & REAR | PAGE NO. 55 |
|---|----------------|

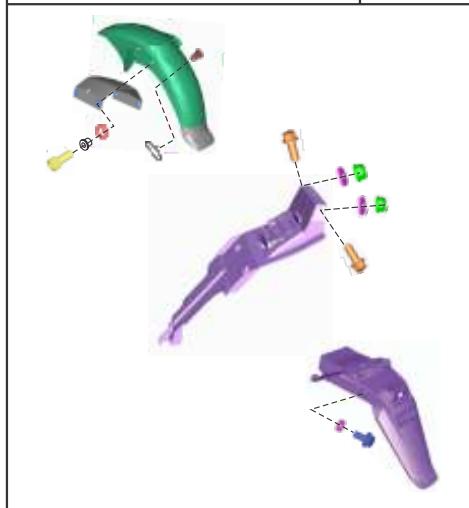

Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV


| | |
|--|----------------|
| PLATE NO. : 29 CENTER & SIDE STAND ASSEMBLY | PAGE NO. 57 |
|--|----------------|




| | |
|-------------------------------------|----------------|
| PLATE NO. : 30 TUBE / TYRE / RIM | PAGE NO. 59 |
|-------------------------------------|----------------|



| | |
|--|----------------|
| PLATE NO. : 31 FRONT WHEEL ASSEMBLY | PAGE NO. 61 |
|--|----------------|




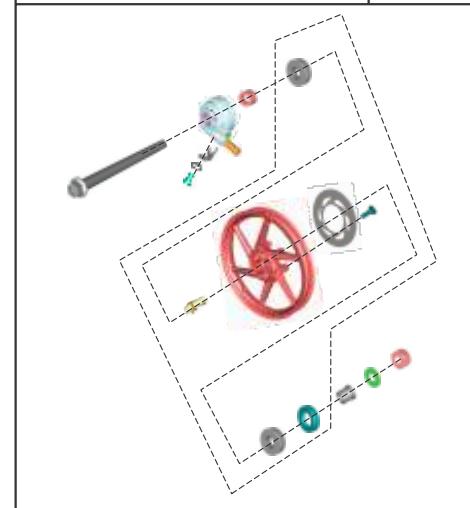


| | |
|--|----------------|
| PLATE NO. : 32 FRONT MASTER CYLINDER ASSEMBLY | PAGE NO. 63 |
|--|----------------|

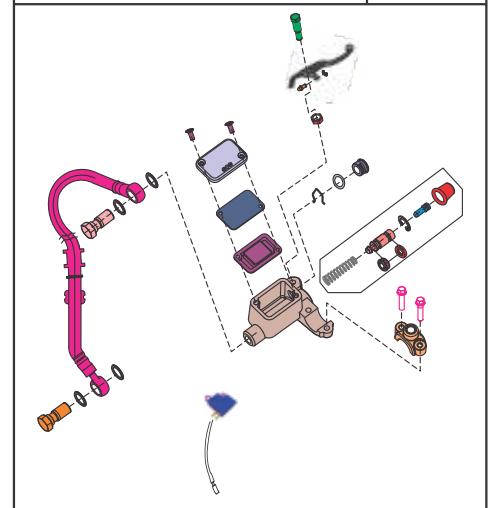





Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

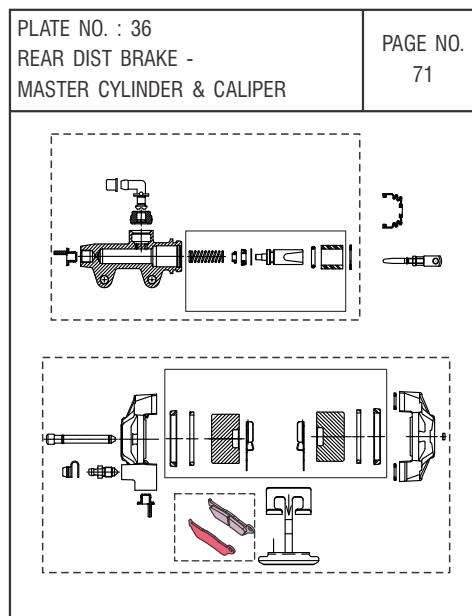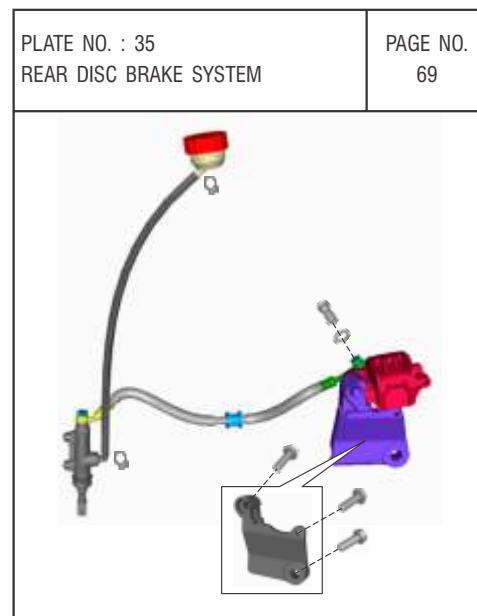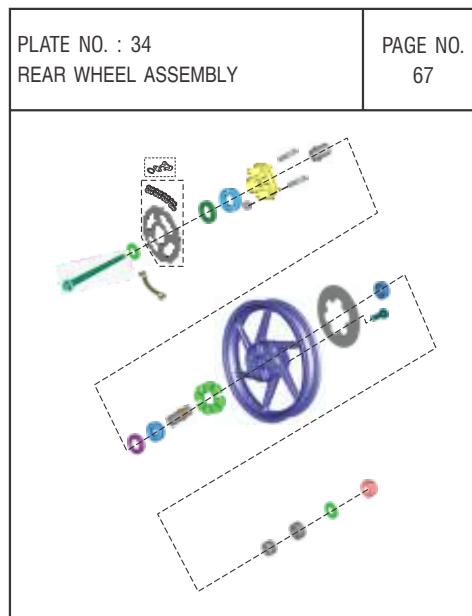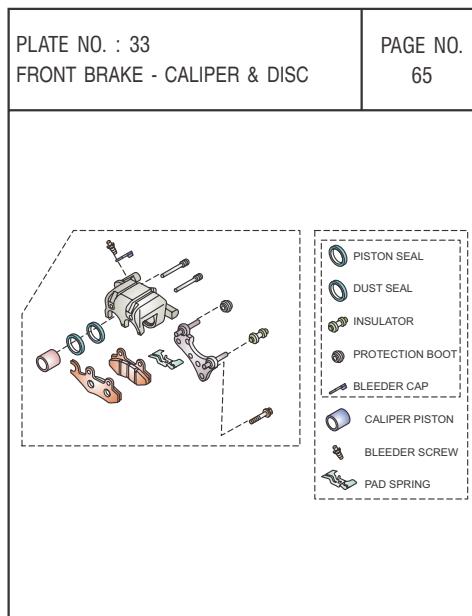




Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

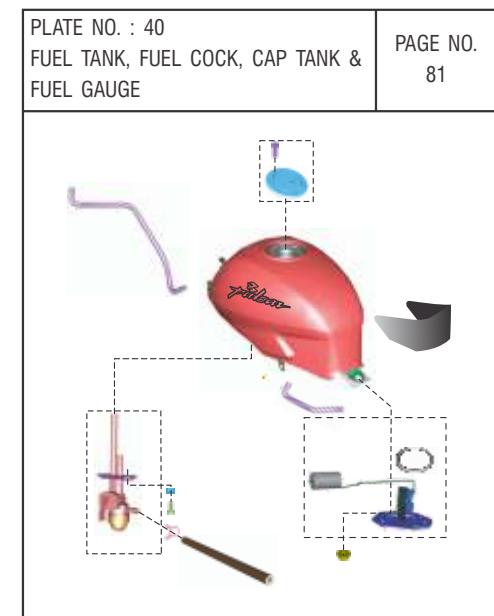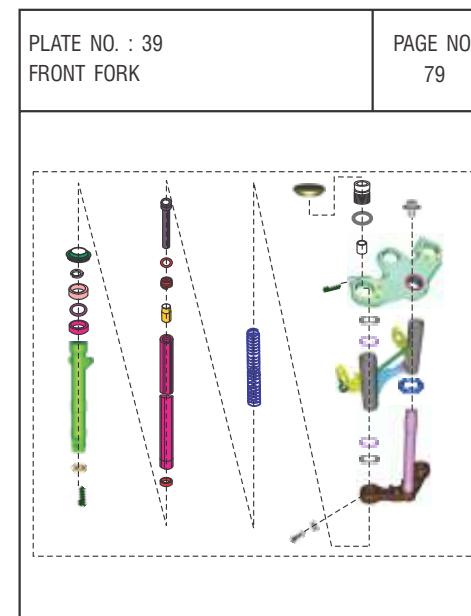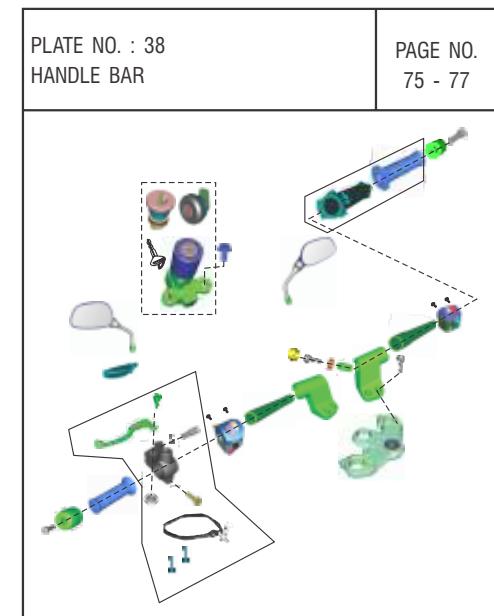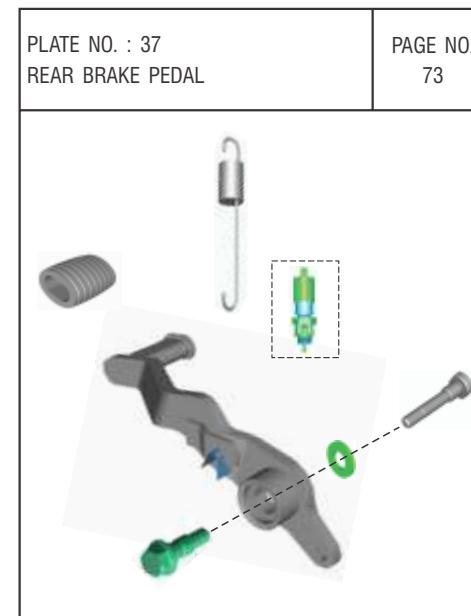





Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

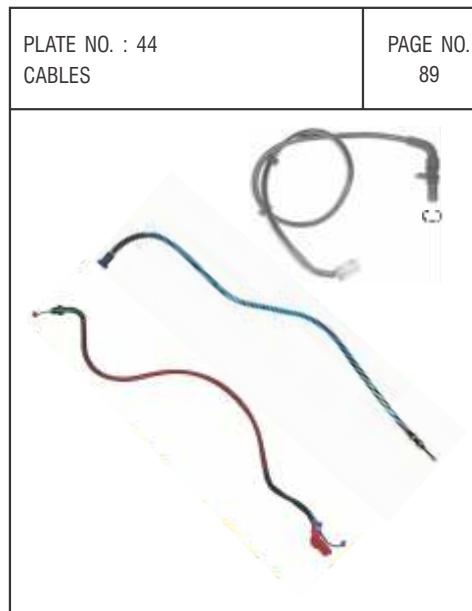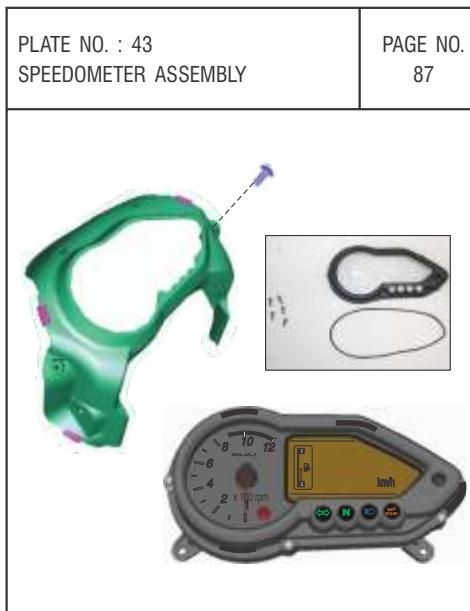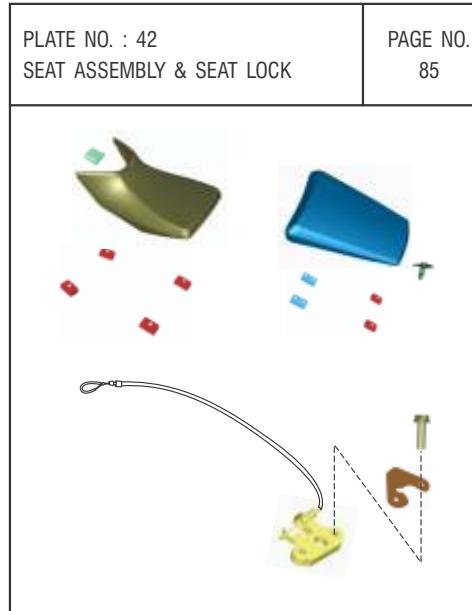

Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

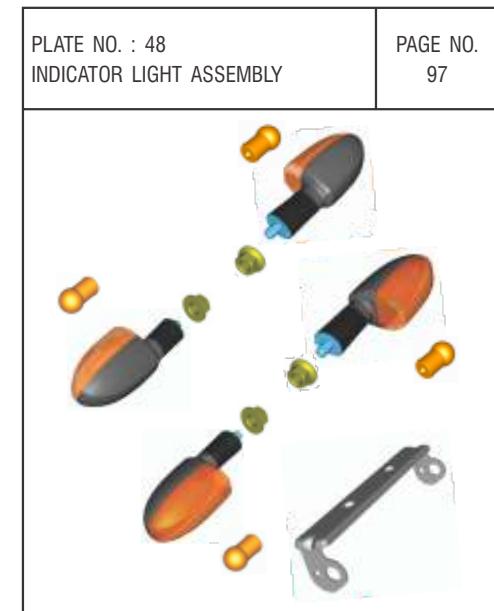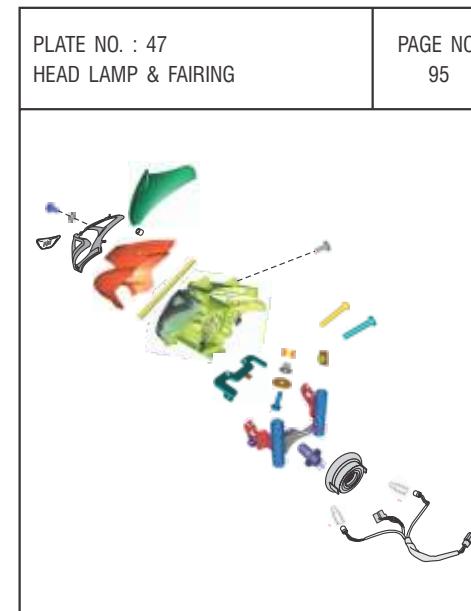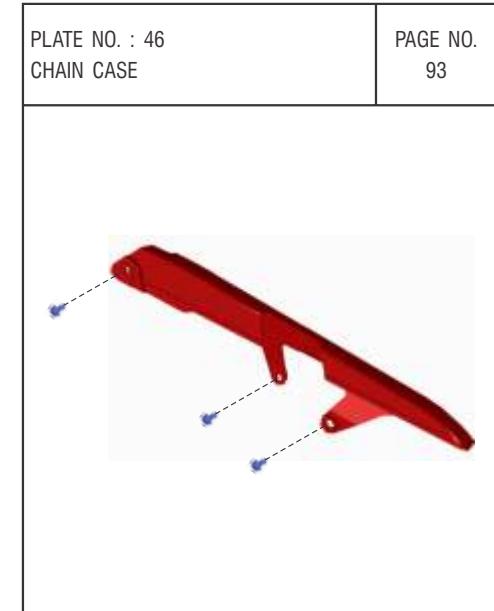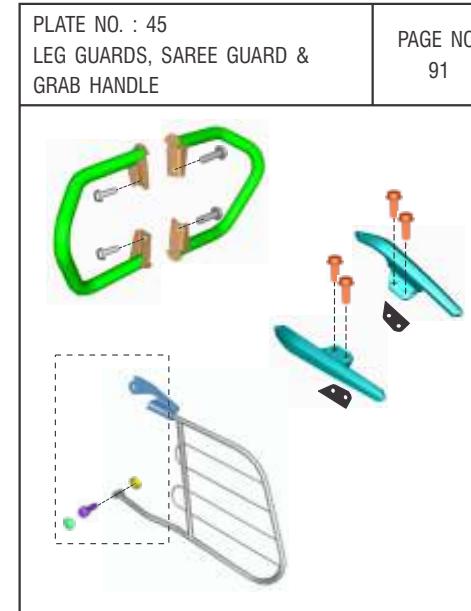

Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

PLATE NO. : 49
TAIL LAMP ASSEMBLY & FRONT /
REAR NUMBER PLATE

PAGE NO.
99

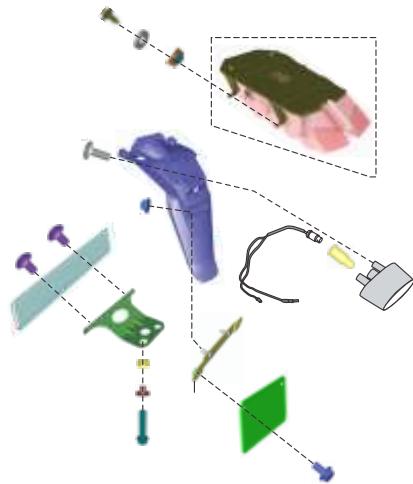


PLATE NO. : 50
ELECTRICAL EQUIPMENTS

PAGE NO.
101

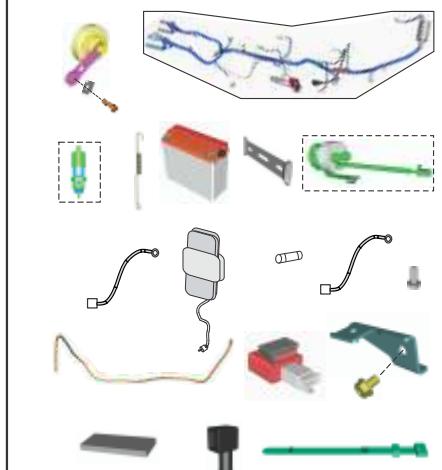


PLATE NO. : 51
TOOL KIT

PAGE NO.
103



PLATE NO. : 52
PAINTED PARTS & DECALS

PAGE NO.
105 - 107



Pictorial Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

PLATE NO. : 53
CONSUMABLE PARTS

PAGE NO.
111



PLATE NO. : 53
CONSUMABLE PARTS

PAGE NO.
113



Plate No.: 1

Cover Cylinder Head

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------------|------|---------|
| 1 | DJ 1017 11 | Assembly Head Mach. With Cover | 1 | |
| 2 | DJ 1012 17 | Cover Tappet | 2 | |
| 3 | 39 2391 21 | 'O' Ring | 2 | |
| 4 | DS 1011 66 | Silent Bush | 1 | |
| 5 | DH 1022 01 | Camshaft Cap | 1 | |
| 6 | 39 2647 15 | Domed Cap Nut | 4 | |
| 7 | DS 1010 84 | Copper Washer | 4 | |
| 8 | 39 2532 04 | Hex. Bolt with Flange | 2 | |
| 9 | 39 1075 04 | Hex. Bolt / Flange | 4 | |
| 10 | DH 1012 72 | Plug | 2 | |
| 11 | DG 1014 98 | Gasket | 2 | |

FWD

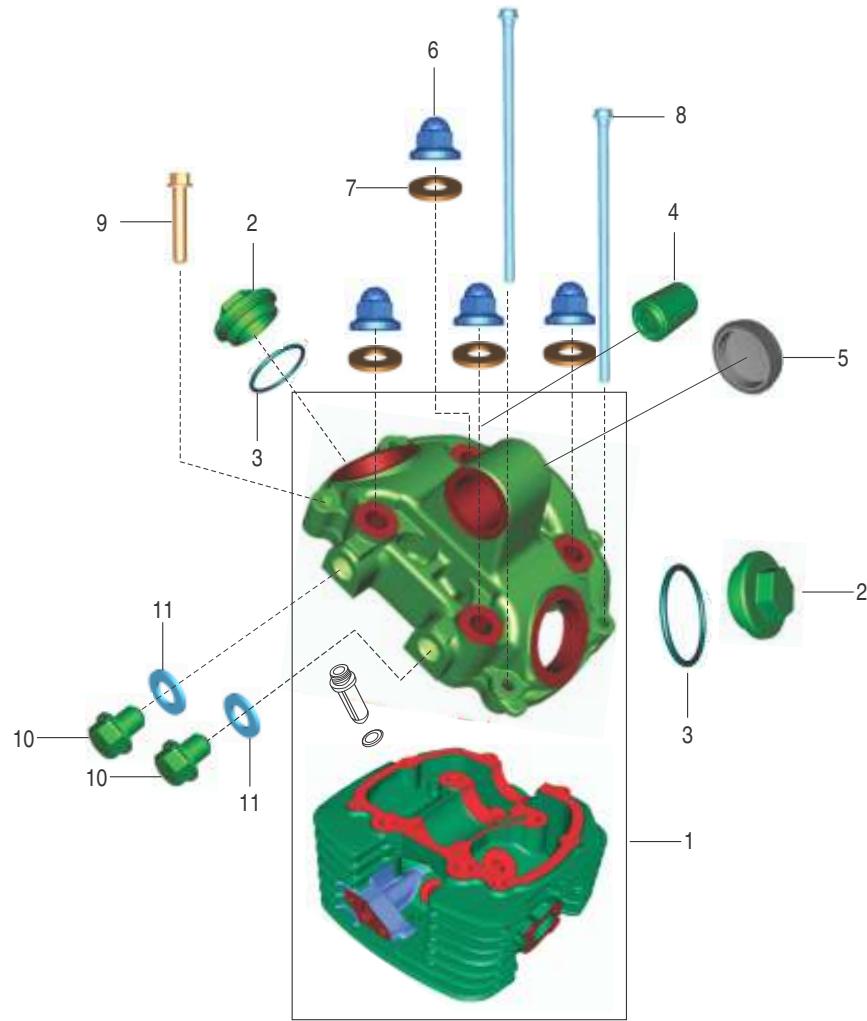


Plate No.: 2

SAI System

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---|------|---------|
| 1 | PD 5822 00 | SAI Unit | 1 | |
| 2 | JL 5810 66 | Clamp SAI Pipe | 2 | |
| 3 | 33 1410 08 | Clamp | 2 | |
| 4 | JL 5810 65 | Clamp Hose SAI | 2 | |
| 5 | DJ 1210 89 | Tube SAI Air Filter | 1 | |
| 6 | DK 1210 91 | Hose SAI Unit To Manifold | 1 | |
| 7 | DH 1021 74 | Metal Pipe With Flange SAI | 1 | |
| 8 | DH 1021 75 | Hose SAI Unit To SAI Pipe | 1 | |
| 9 | DH 1021 80 | Gasket Metal Pipe With Flange SAI | 1 | |
| 10 | KA EG06 14 | Flanged Bolt | 2 | |
| 11 | JD 1138 14 | Grommet SAI Unit | 2 | |
| 12 | JD 1138 15 | Sleeve SAI Unit | 4 | |
| 13 | KA DF06 30 | Bolt Flanged | 2 | |
| 14 | KC GF06 06 | Nut Hex Flanged - M6 x 1 x CL 8 x Green | 2 | |



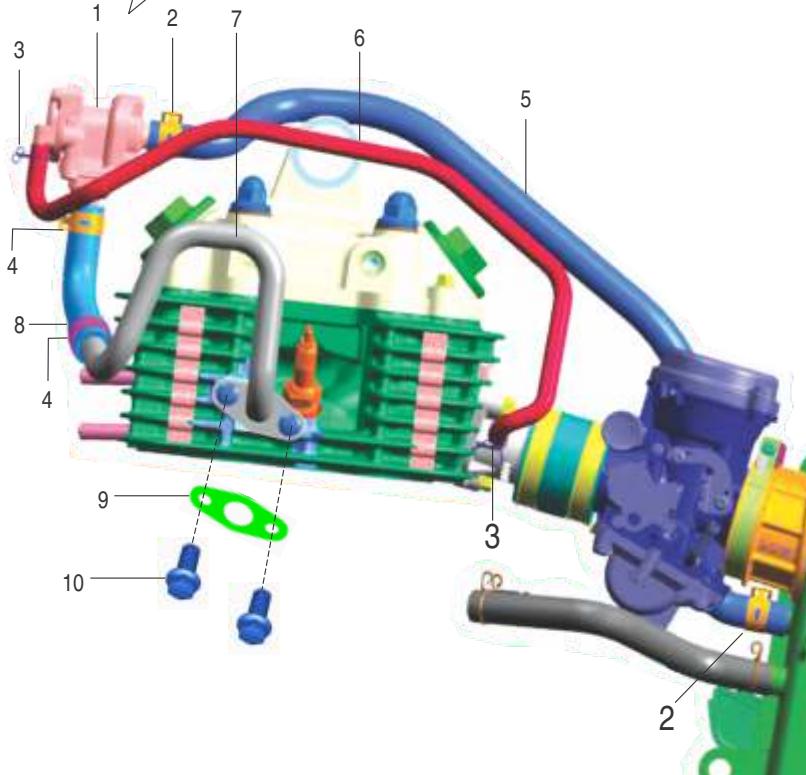


Plate No.: 3

Cylinder Head

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------------|------|----------------|
| 1 | 36 DS10 01 | 'O' Ring Kit for Cover Cyl. Head | 1 | Refer Kit List |
| 2 | 39 1660 05 | Stud (Exhaust) | 2 | |
| 3 | DJ 1010 12 | Gasket Cylinder Head | 1 | |
| 4 | DH 1015 08 | Damper Cylinder Head | 5 | |
| 5 | DJ 1210 90 | Assembly Manifold With Nipple | 1 | |
| 6 | 39 2539 21 | 'O' Ring (Intake Pipe) | 1 | |
| 7 | DJ 1210 22 | Carburettor Insulator | 1 | |
| 8 | DH 1210 38 | Clamp for Insulator | 2 | |
| 9 | 39 1674 04 | Hex. Bolt / Flange | 2 | |
| 10 | DH 1110 12 | Sleeve - Spark Plug | 1 | |
| 11 | 39 2608 01 | Grub Screw | 1 | |
| 12 | DJ 1017 11 | Assembly Head Mach. With Cover | 1 | |

FWD

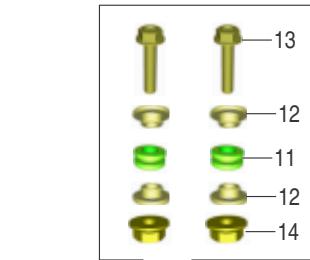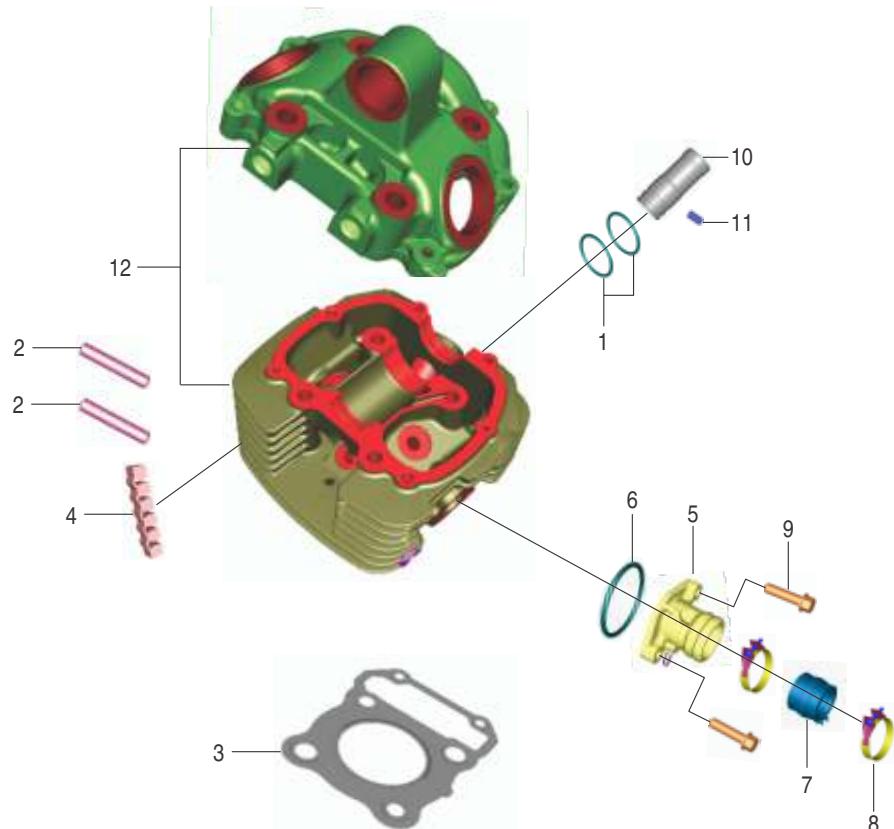

Valve

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------|------|----------------|
| 1 | DK 1017 48 | Rocker Arm Shaft - Intake | 1 | |
| 2 | DK 1017 51 | Rocker Arm Shaft - Exhaust | 1 | |
| 3 | DK 1017 55 | Rocker Arm without roller | 2 | |
| 4 | DG 1010 29 | Cotter valve | 4 | |
| 5 | 39 2017 19 | Seal valve stem | 2 | |
| 6 | DK 1013 26 | Valve Repair Kit | 1 | Refer Kit List |
| 7 | 36 DJ10 04 | Valve Kit | 1 | Refer Kit List |
| 8 | DH 1012 95 | Wave washer | 2 | |
| 9 | 39 2440 11 | Plain washer | 4 | |

FWD

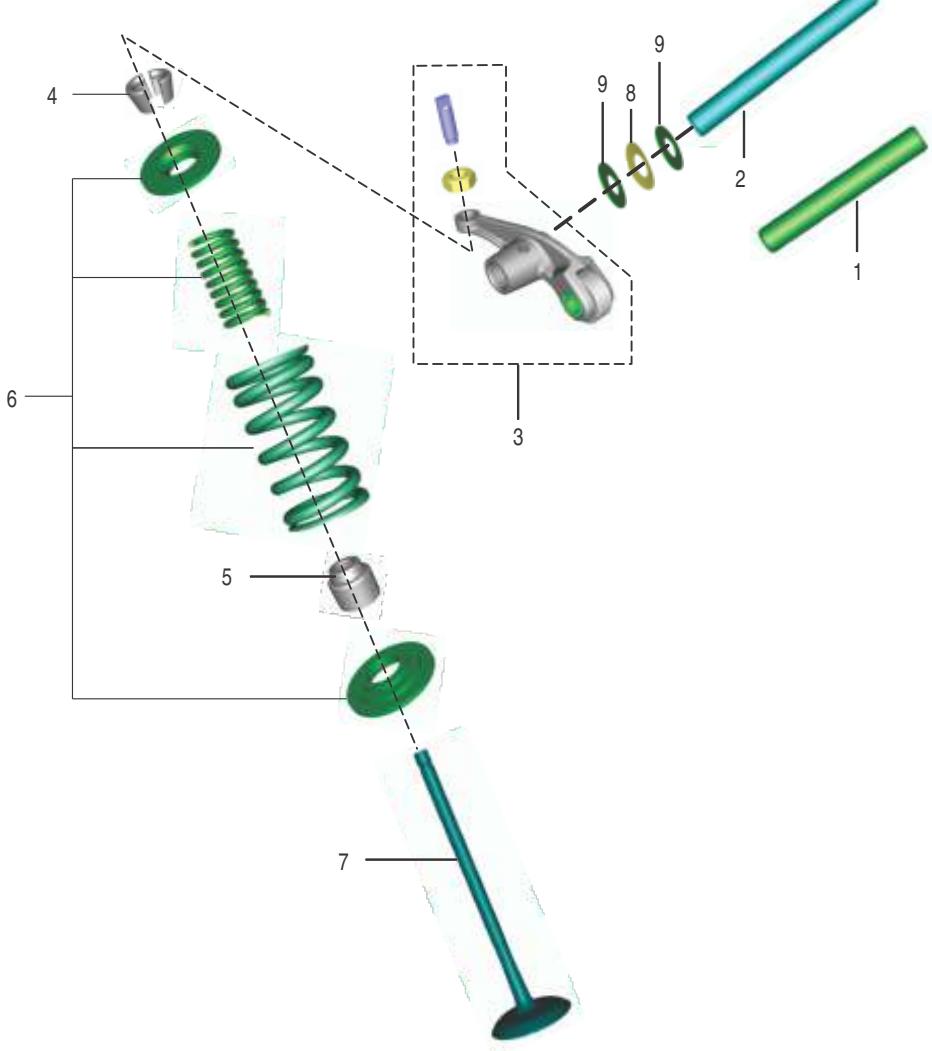


Plate No.: 5

Camshaft & Tensioner

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------------|------|---------|
| 1 | CS 1011 28 | Gasket Tensioner Assembly | 1 | |
| 2 | DJ 1013 73 | Camshaft Assembly With Bearings | 1 | |
| 3 | 36 DH40 30 | Guide Chain Kit | 1 | |
| 4 | PD 5112 29 | Sprocket Cam Driver | 1 | |
| 5 | DH 1014 12 | Collar Cam Sprocket | 1 | |
| 6 | DH 1021 25 | Bolt Special Camshaft | 1 | |
| 7 | JC 1010 35 | Cam Chain | 1 | |
| 8 | DH 1013 92 | Cam Chain Tensioner Pivot Bolt | 1 | |
| 9 | JC 1010 34 | Tensioner Assembly | 1 | |
| 10 | 39 1673 04 | Hex Bolt / Flange | 2 | |
| 11 | DD 1010 62 | Bolt | 1 | |
| 12 | DK 1010 59 | Guide Chain (Slack) | 1 | |

FWD


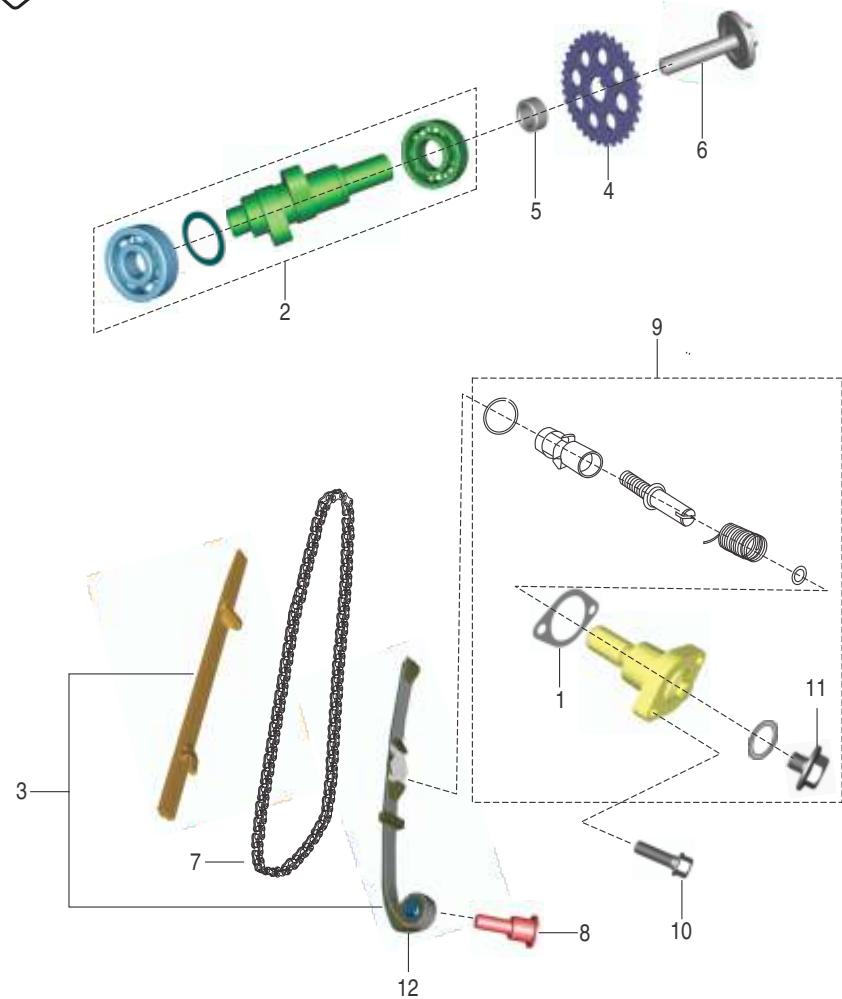



Plate No.: 6

Cylinder and Piston

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------------|------|---------|
| 1 | DJ 1010 04 | Gasket Cylinder | 1 | |
| 2 | 39 2181 06 | Pin Dowel | 4 | |
| 3 | DJ 1011 58 | Piston Assembly Std. | 1 | |
| 4 | DK 1810 12 | Ring Set Piston | 1 | |
| 5 | 39 2132 17 | Ring Snap | 2 | |
| 6 | DJ 1013 71 | Cylinder Block & Piston | 1 | |
| 7 | DH 1014 14 | Damper Cylinder Block | 4 | |
| 8 | DK 1015 92 | Assembly Oil Pipe | 1 | |
| 9 | 31 1210 06 | Gasket | 4 | |
| 10 | DD 1210 07 | Bolt | 2 | |
| 11 | 39 1689 04 | Bolt (dummy for Temp sensor) | 1 | |
| 12 | 39 2448 11 | Washer (dummy for Temp sensor) | 1 | |

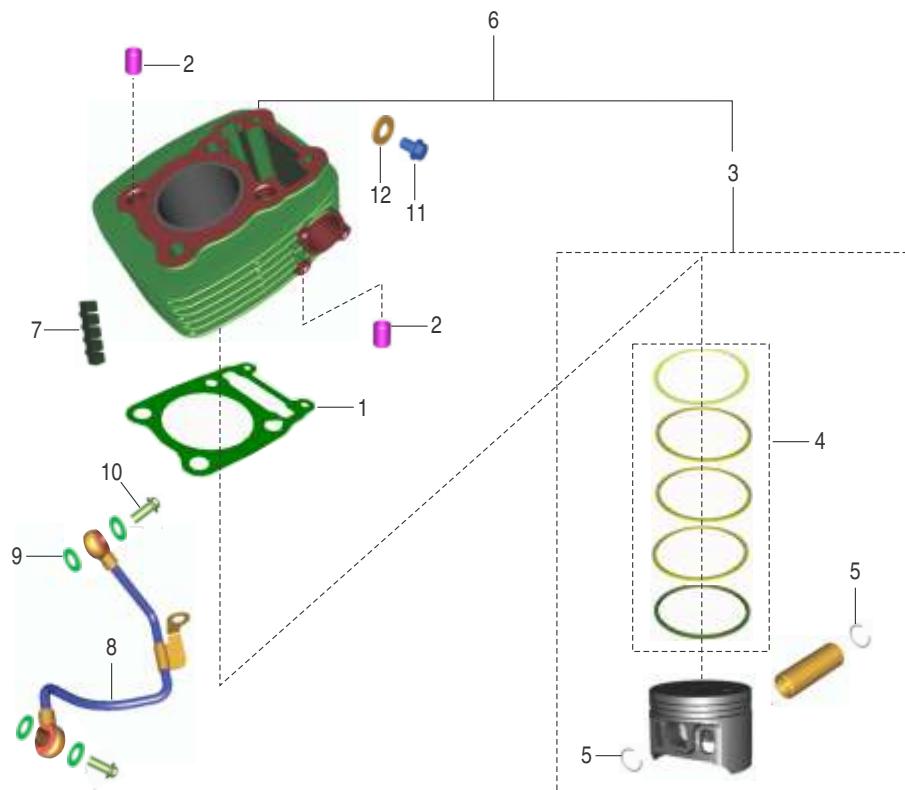

Crankshaft

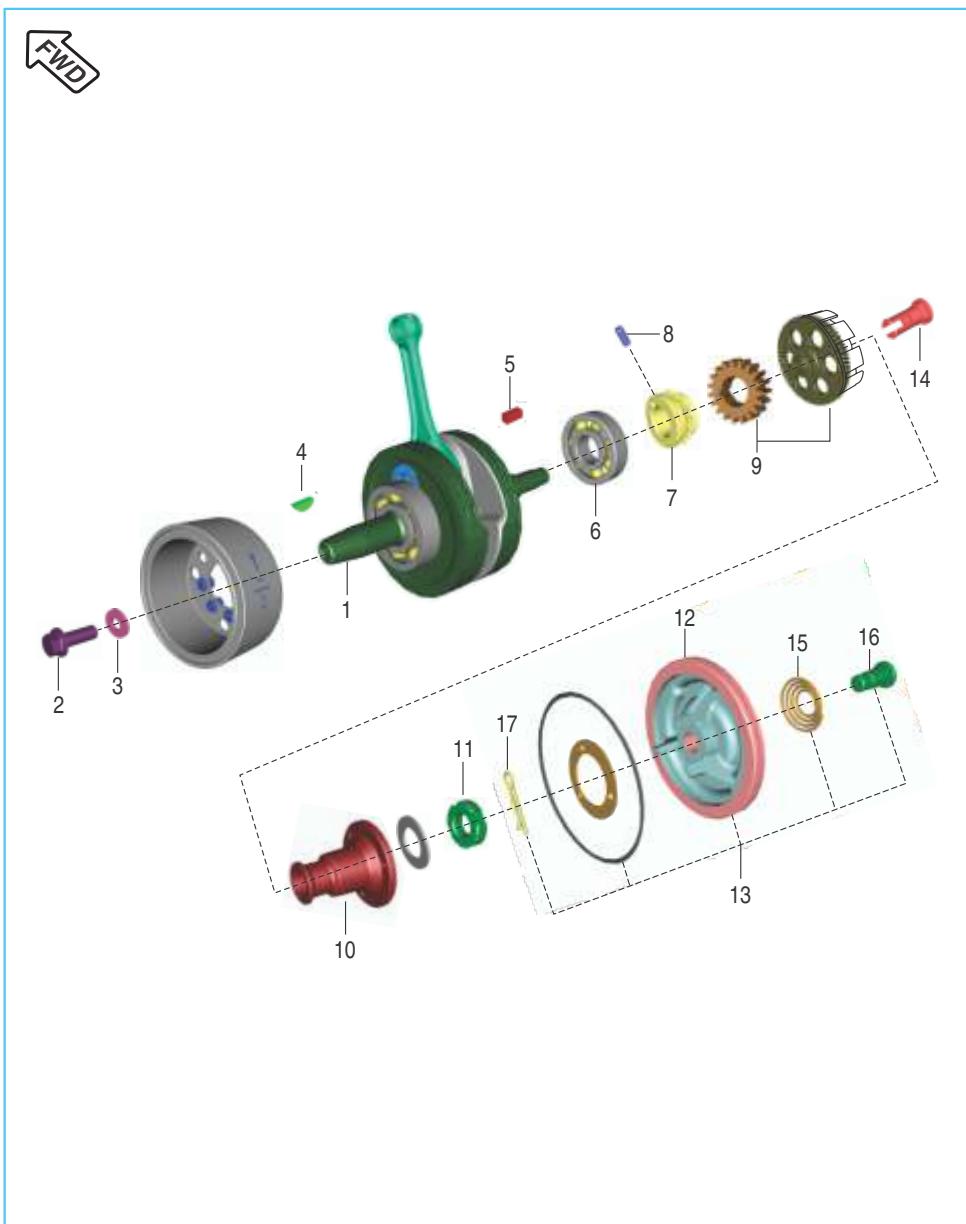


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|------------------------------|------|-----------------|
| 1 | JC 1010 01 | Crankshaft Assembly Complete | 1 | |
| 2 | DH 1013 96 | Bolt | 1 | |
| 3 | 39 2165 11 | Plain Washer | 1 | |
| 4 | 31 1011 73 | Key Woodruff | 1 | |
| 5 | DS 1011 54 | Square Key | 1 | |
| 6 | 39 1931 20 | Bearing Ball | 1 | |
| 7 | PD 5310 29 | Sprocket Crankshaft | 1 | |
| 8 | 39 2203 07 | Parallel Pin | 1 | |
| 9 | 36 DK00 38 | Set Primary Driver & Driven | 1 | Refer Kit List |
| 10 | DH 1021 51 | Body Centrifugal Oil Filter | 1 | |
| 11 | DH 1011 95 | Nut | 1 | 7mm. (Height) Z |
| 12 | DH 1021 53 | Cover Centrifugal Oil Filter | 1 | |
| 13 | 36 DH40 19 | Kit Centrifugal Oil Filter | 1 | Refer Kit List |
| 14 | DK 1014 80 | Oil plunger | 1 | |
| 15 | DH 1010 67 | Spring Oil Delivery B | 1 | |
| 16 | DH 1010 66 | Joint Oil Delivery B | 1 | |
| 17 | 39 2199 08 | Pin Snap | 1 | |

Transmission

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------|------|---------|
| 1 | DK 1014 71 | Shaft Input Transmission | 1 | |
| 2 | 39 2158 11 | Plain Washer | 1 | |
| 3 | DK 1011 03 | Gear 4th Drive | 1 | |
| 4 | DH 1010 79 | Washer Spline | 3 | |
| 5 | DH 1012 35 | External Circlip | 4 | |
| 6 | DK 1011 02 | Gear 3rd Drive | 1 | |
| 7 | DK 1011 04 | Gear 5th drive | 1 | |
| 8 | DH 1010 84 | Gear 2nd Drive | 1 | |
| 9 | 39 2160 11 | Plain Washer | 1 | |
| 10 | DK 1011 44 | Shaft Output Transmission | 1 | |
| 11 | 39 2166 11 | Washer Plain | 2 | |
| 12 | DK 1011 05 | Gear 3rd Driven | 1 | |
| 13 | 39 2159 11 | Plain Washer | 1 | |
| 14 | DK 1017 18 | Gear 4th Driven | 1 | |
| 15 | DH 1011 11 | Bush 1st Driven | 1 | |
| 16 | DK 1011 18 | Gear 1st driven | 1 | |
| 17 | DK 1016 61 | Gear 5th Driven | 1 | |
| 18 | DH 1013 19 | Bush 2nd Driven | 1 | |
| 19 | DK 1016 60 | Gear 2nd Driven | 1 | |
| 20 | DK 1012 45 | Collar Sprocket | 1 | |
| 21 | DK 1013 52 | 'O' Ring Sprocket Coller | 1 | |
| 22 | DV 1010 48 | Sprocket Drive | 1 | |
| 23 | DJ 1010 63 | Plate Drive Sprocket | 1 | |
| 24 | AA 1014 37 | Screw Pre - Coated | 2 | |


FWD

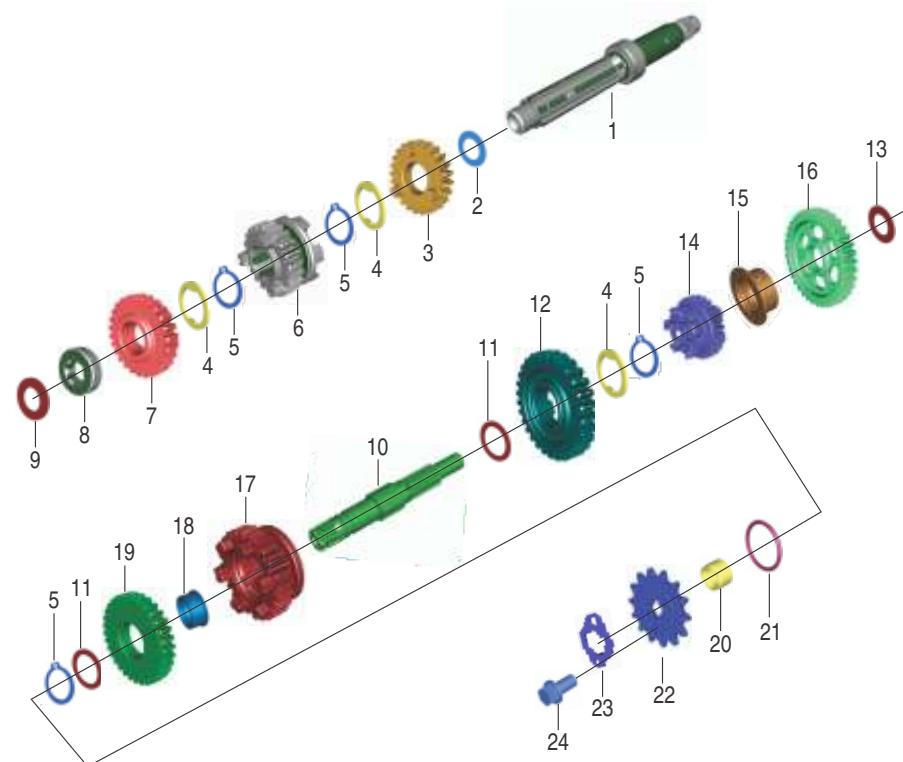

Balancer & Balancer Idler Gear

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--|------|---------|
| 1 | DJ 9025 03 | Body Balancer Assembly | 1 | |
| 2 | DH 1010 72 | Bearing Stopper | 1 | |
| 3 | 39 1672 04 | Bolt | 1 | |
| 4 | DH 1020 52 | Assembly Balancer Idler Gear Complete | 1 | |
| 5 | 39 2152 20 | Needle Roller Bearing | 2 | |
| 6 | DH 1014 24 | Spring Torsion Balancer | 2 | |
| 7 | 39 2557 17 | Circlip Ext. | 2 | |
| 8 | 39 1686 06 | Dowel Pin | 2 | |
| 9 | 39 1620 11 | Thrust Washer | 2 | |
| 10 | 52 DH01 77 | Balancer Idler Holder | 1 | |
| 11 | 39 1674 04 | Bolt | 3 | |
| 12 | 59 2000 29 | Bearing Ball Balancer LH 20*47*14 (6204) | 1 | |
| 13 | 59 2000 28 | Bearing Ball Balancer RH | 1 | |
| 14 | DH 1020 52 | Assembly Balancer Idler Gear | 1 | |

FWD

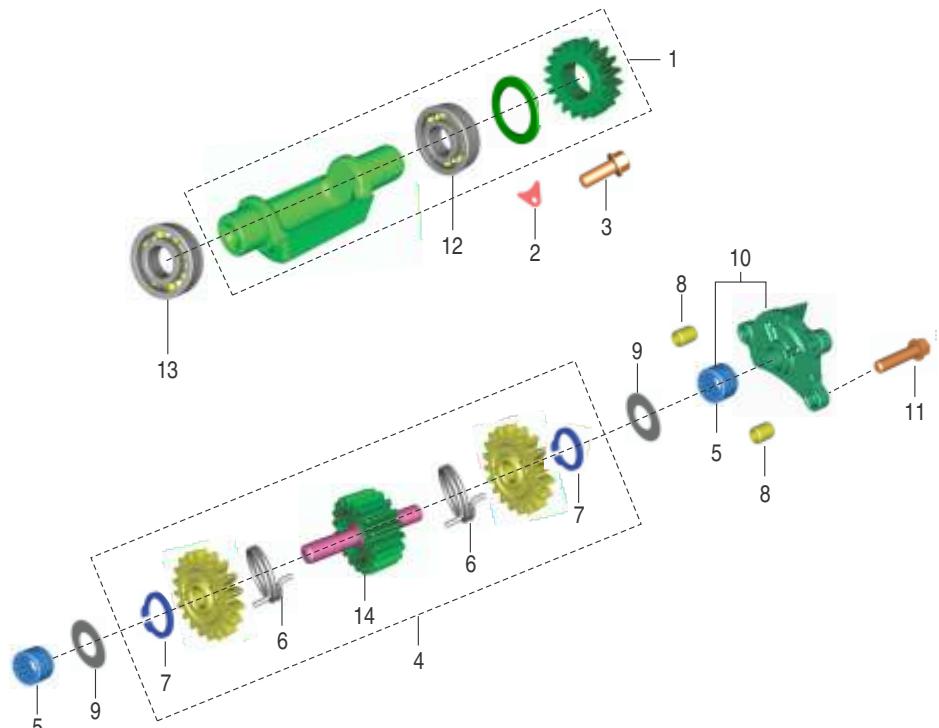


Change Drum & Shaft Fork

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------|------|---------|
| 1 | DK 1011 59 | Fork Gear Shift Input | 1 | |
| 2 | DK 1011 60 | Fork Gear Shift output | 2 | |
| 3 | DH 1011 46 | Shaft Gear Shift Fork | 1 | |
| 4 | DH 1014 93 | Shaft Gear Shift Fork | 1 | |
| 5 | DK 1017 32 | Drum Complete Gear Shift | 1 | |
| 6 | 39 2639 04 | Bolt Socket | 1 | |
| 7 | 39 2606 07 | Parallel Pin | 1 | |
| 8 | DH 1021 89 | Guide Gear Shifter | 1 | |
| 9 | DH 1014 96 | Spacer | 1 | |
| 10 | DK 1011 35 | Bush Fork Gear Shift | 3 | |



Gear Change Mechanism

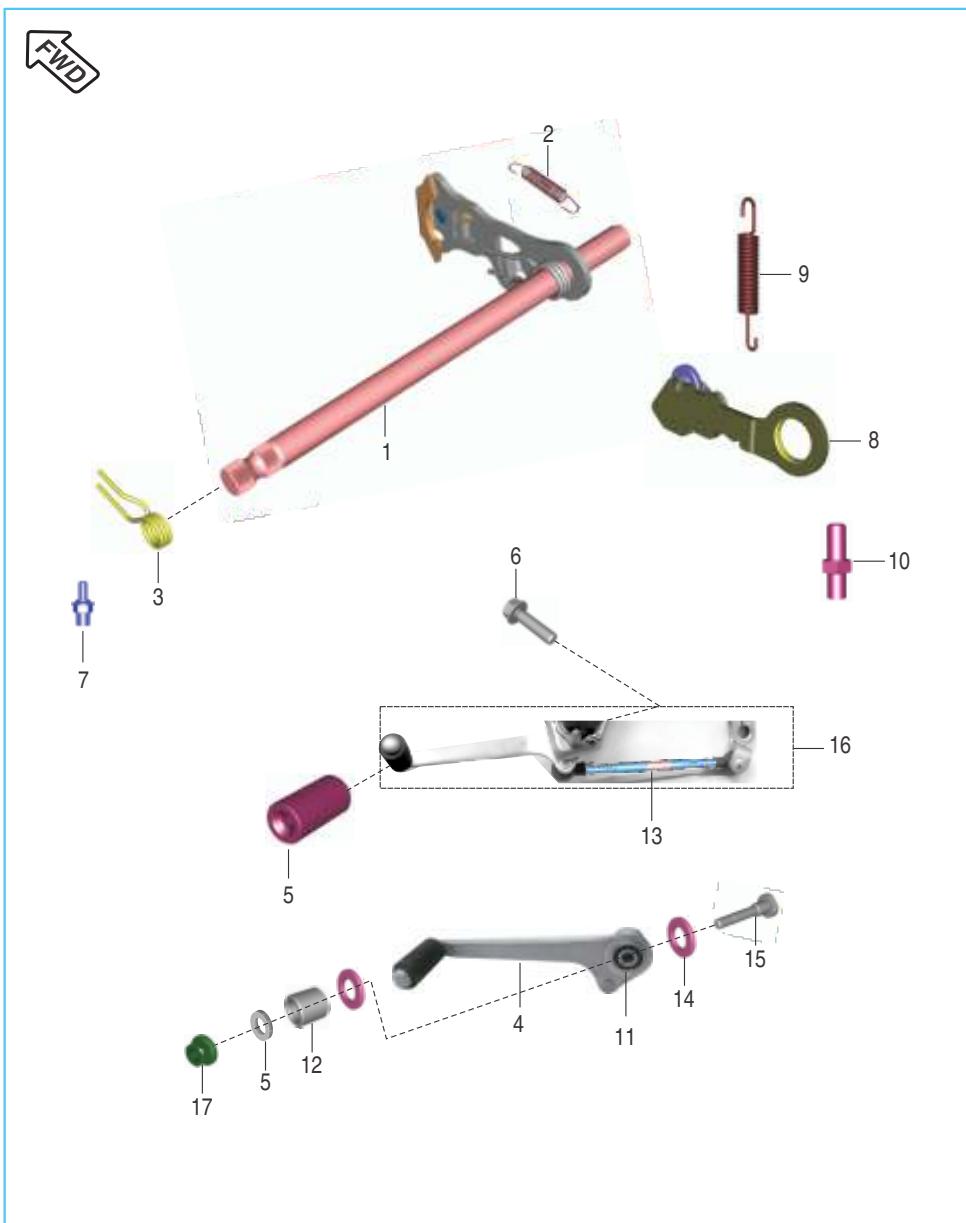


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------------|------|---------|
| 1 | DK 1017 22 | Lever comp. Gear Shifter | 1 | |
| 2 | DH 1017 14 | Spring Slider Arm Reset | 1 | |
| 3 | DK 1017 22 | Spring Gear Shifter Return | 1 | |
| 4 | DK 1011 82 | Lever gear shift | 1 | |
| 5 | DH 1015 09 | Damper | 1 | |
| 6 | 39 2453 04 | Flanged Bolt | 1 | |
| 7 | DH 1013 93 | Bolt Gear Shift drum Stopper | 1 | |
| 8 | DK 1017 25 | Stopper Drum | 1 | |
| 9 | DK 1012 53 | Spring Gear Shifter Drum Stopper | 1 | |
| 10 | DH 1013 94 | Bolt Shift Change | 1 | |
| 11 | 39 1998 19 | Oil seal | 2 | |
| 12 | DK 1011 87 | Collar | 1 | |
| 13 | DK 1011 80 | Assembly tie rod | 1 | |
| 14 | DK 1011 85 | Washer pivot | 1 | |
| 15 | DK 1011 86 | Pivot bolt | 1 | |
| 16 | DK 1011 83 | Assembly lever change arm | 1 | |
| 17 | 39 2383 15 | Flange Nut | 1 | |




Plate No.: 12

Engine Assembly & Crankcase RH

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------------|------|---------|
| 1 | DJ 1017 12 | Engine Assly Complete | 1 | N.I. |
| 2 | JC 1010 29 | Crankcase RH | 1 | |
| 3 | 59 0500 08 | Stud | 2 | |
| 4 | AA 1014 37 | Screw Pre - Coated | 1 | |
| 5 | DH 1018 96 | Gasket Crankcase (K1UG5) | 1 | |
| 6 | 39 2583 20 | Bearing Ball (For Input Shaft) | 1 | |
| 7 | 59 2000 27 | Bearing Ball (For Output shaft) | 1 | |
| 8 | 39 2180 06 | Dowel Pin | 2 | |
| 9 | 39 2601 20 | Ball Bearing | 1 | |
| 10 | DH 1014 87 | Plate Stopper | 1 | |
| 11 | 39 1845 04 | Flange Bolt | 1 | |

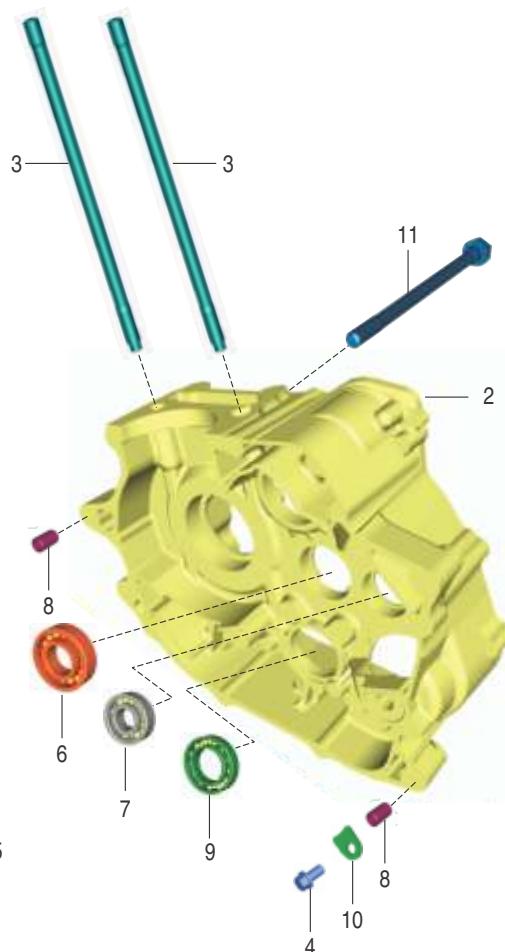

Crankcase LH

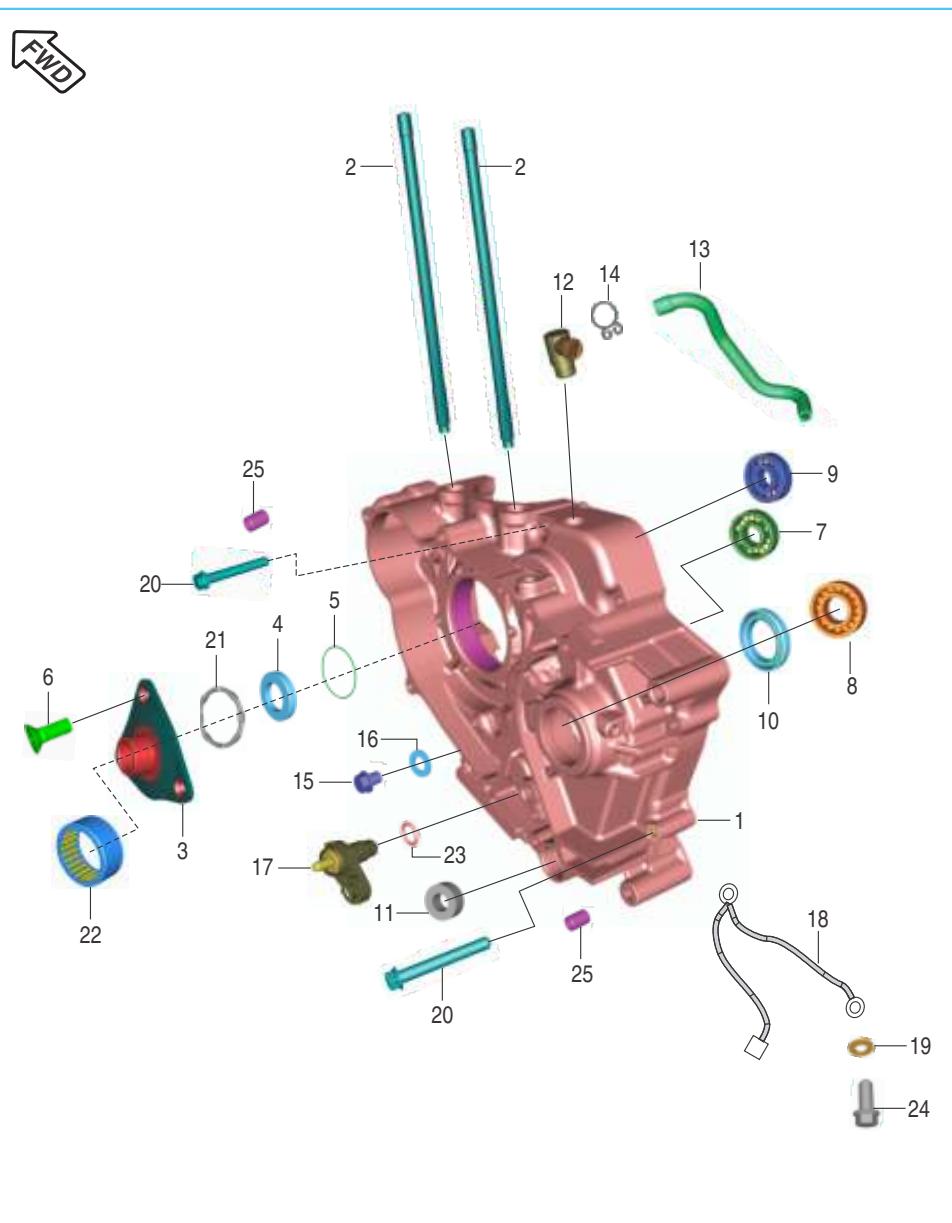

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-----------------------------------|------|---------|
| 1 | JC 1010 45 | Crankcase LH | 1 | |
| 2 | 59 0500 08 | Stud | 2 | |
| 3 | DK 1010 94 | Guide Starter Assembly | 1 | |
| 4 | 39 2188 19 | Oil Seal | 1 | |
| 5 | 59 2100 06 | O' Ring | 1 | |
| 6 | 39 0752 01 | C' Sunk Head Screw | 3 | |
| 7 | 39 2603 20 | Bearing Ball (for Input Shaft) | 1 | |
| 8 | 59 2000 06 | Bearing Ball (for Output Shaft) | 1 | |
| 9 | 59 2000 28 | Balancer LH Bearing | 1 | |
| 10 | DG 1014 56 | Oil Seal (For Output Shaft) | 1 | |
| 11 | 39 2190 19 | Oil Seal (For Shift Lever) | 1 | |
| 12 | DH 1012 03 | Breather Pipe | 1 | |
| 13 | DH 1017 18 | Rubber Tube | 1 | |
| 14 | DS 1012 34 | Spring Clip | 1 | |
| 15 | DH 1016 61 | Plug Drain Bolt | 1 | |
| 16 | 31 1011 06 | Gasket (For Drain Bolt) | 1 | |
| 17 | DK 1013 80 | Neutral Switch Complete | 1 | |
| 18 | DJ 2011 40 | Cable Assembly (Battery To Earth) | 1 | |
| 19 | 39 1940 04 | Plain Washer | 1 | |
| 20 | 39 1677 04 | Bolt | 8 | |
| 21 | DK 1010 97 | Damper | 1 | |
| 22 | 59 2000 07 | Needle Roller Bearing (30*37*16) | 1 | |
| 23 | KJ AB10 19 | O Ring | 1 | |
| 24 | 39 2181 06 | Hollow Dowel Pin | 2 | |

Cover Clutch

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|------------------------------------|------|---------|
| 1 | 36 DJ40 82 | Kit Assembly Cyl. Cover Slate Gray | 1 | |
| 2 | DH 1011 97 | Grommet Breather | 1 | |
| 3 | DH 1011 42 | Shaft Clutch Release | 1 | |
| 4 | 39 1041 19 | Seal Clutch Lever | 1 | |
| 5 | DH 1011 41 | Rack | 1 | |
| 6 | DH 1011 52 | 'O' Ring | 1 | |
| 7 | DK 1012 51 | Parallel Pin | 1 | |
| 8 | DG 1014 18 | Gauge | 1 | |
| 9 | DS 1012 15 | Clip Wire | 1 | |
| 10 | DS 1013 53 | Bolt | 10 | |
| 11 | 39 0999 06 | Pin Dowel | 2 | |
| 12 | DH 1010 18 | Bracket Clutch Cable | 1 | |
| 13 | DH 1011 54 | Gasket Cover RH | 1 | |
| 14 | DK 1014 80 | Plunger Oil | 1 | |
| 15 | DH 1210 11 | Plate Plunger Oil | 1 | |
| 16 | DH 1210 12 | Spring Joint 'A' | 1 | |
| 17 | DH 1015 44 | Spring Torsion Clutch Lever | 1 | |
| 18 | 39 2443 11 | Washer | 1 | |
| 19 | DK 1017 38 | Decal DTS-I | 1 | |
| 20 | 39 1990 20 | Bearing Needle | 1 | |
| 21 | DS 1010 71 | Cap Oil Filler | 1 | |


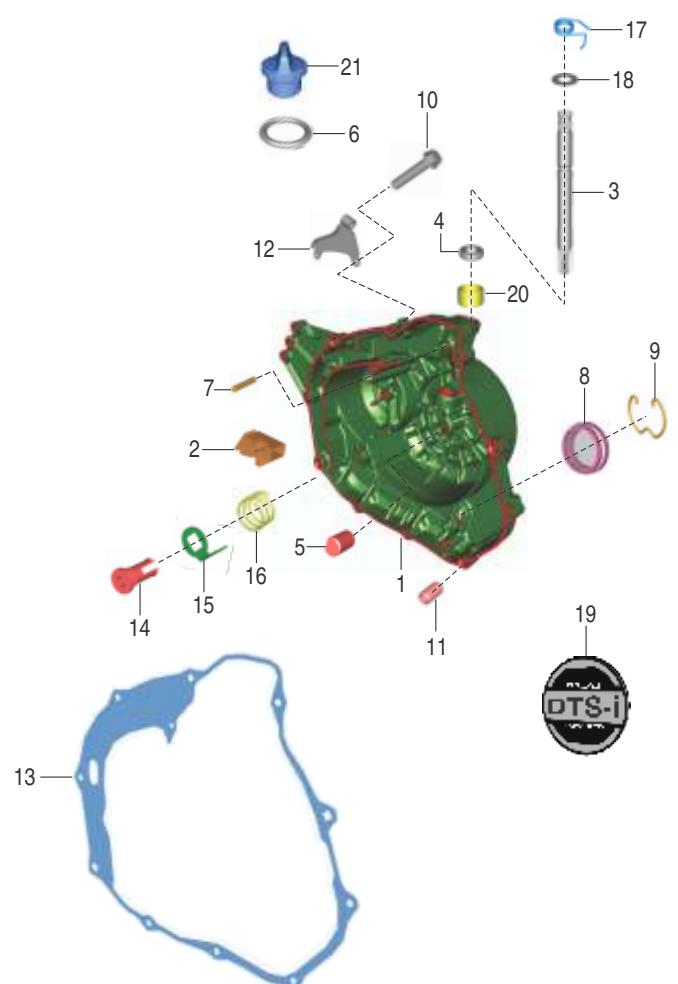


Plate No.: 15

Cover Magneto

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------------|------|---------|
| 1 | 52 DH13 17 | Cover LH (Magneto) Slate Gray | 1 | |
| 2 | DG 1014 18 | Gauge | 1 | |
| 3 | DV 1010 42 | Gasket Magneto Cover | 1 | |
| 4 | DS 1013 53 | Bolt | 7 | |
| 5 | 39 0999 06 | Pin Dowel | 2 | |
| 6 | 56 DJ3Z 1Y | Cover LH RR | 1 | |
| 7 | DH 1013 88 | Flanged Bolt | 2 | |
| 8 | JE 5412 12 | Decal DTS-I | 1 | |
| 9 | DH 1012 93 | Plate Damper Cover LH RR | 1 | |
| 10 | DJ 1612 28 | Gear Shift Label (Sticker) | 1 | |
| 11 | DH 1012 92 | Damper A Cover LH RR | 1 | |
| 12 | DH 1012 94 | Damper B Cover LH RR | 1 | |
| 13 | AP 1010 43 | Bearing Needle Bendix | 1 | |


FWD

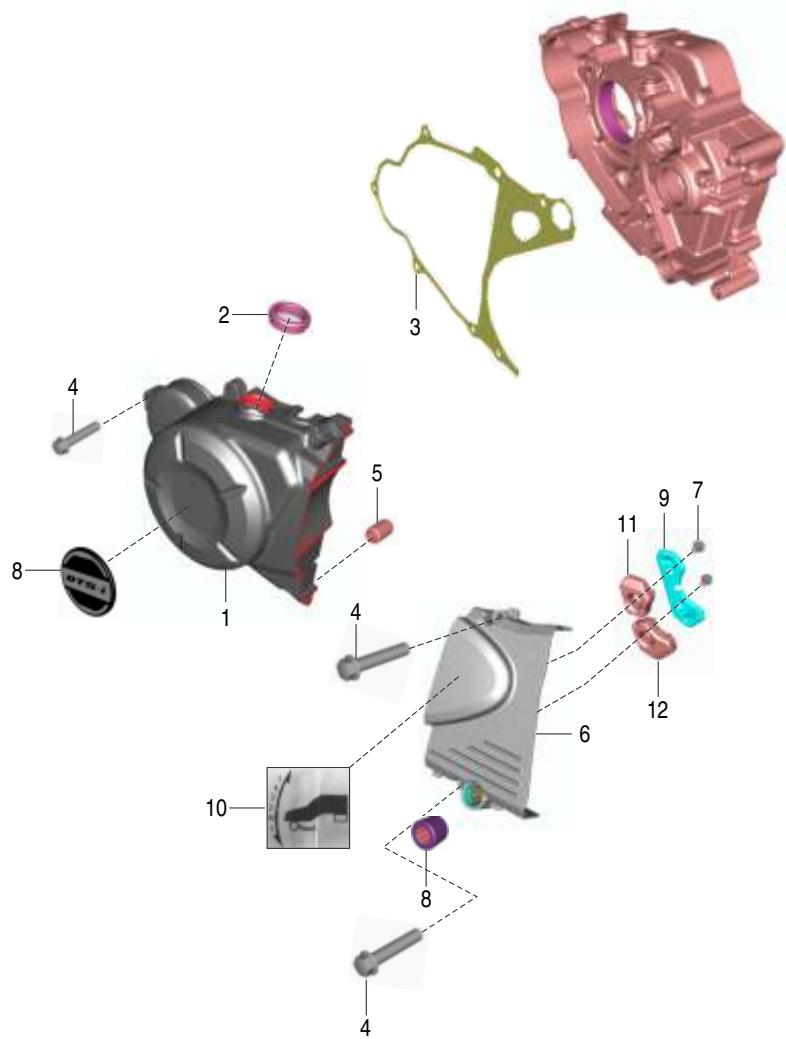

Clutch Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|------------------------------|------|-----------|
| 1 | DJ 1013 50 | Clutch Assembly Complete | 1 | |
| 2 | 36 PD00 30 | Friction Plate Kit | 1 | |
| 3 | DK 1015 64 | Clutch Center | 1 | |
| 4 | DK 1015 69 | Plate Clutch Pressure | 1 | |
| 5 | DH 1012 75 | Special Nut | 1 | |
| 6 | DK 1015 65 | Plate Clutch | 4 | |
| 7 | PD 5514 27 | Spring Clutch | 5 | |
| 8 | DK 1015 74 | Bolt | 5 | |
| 9 | 39 2617 20 | Bearing Clutch Lifter Thrust | 1 | |
| 10 | DK 1015 73 | Holder Clutch | 1 | |
| 11 | DK 1010 72 | Rod Clutch Lifter | 1 | |
| 12 | DK 1011 26 | Spacer Clutch | 1 | |
| 13 | DH 1016 48 | Nut Primary Drive Lock | 1 | LH Thread |
| 14 | DK 1016 36 | Lever Assembly Clutch | 1 | |
| 15 | 39 2200 11 | Washer Primary Drive Gear | 1 | |
| 16 | DK 1015 70 | Seat Judder Spring | 1 | |
| 17 | DK 1015 71 | Spring Judder | 1 | |


FWD

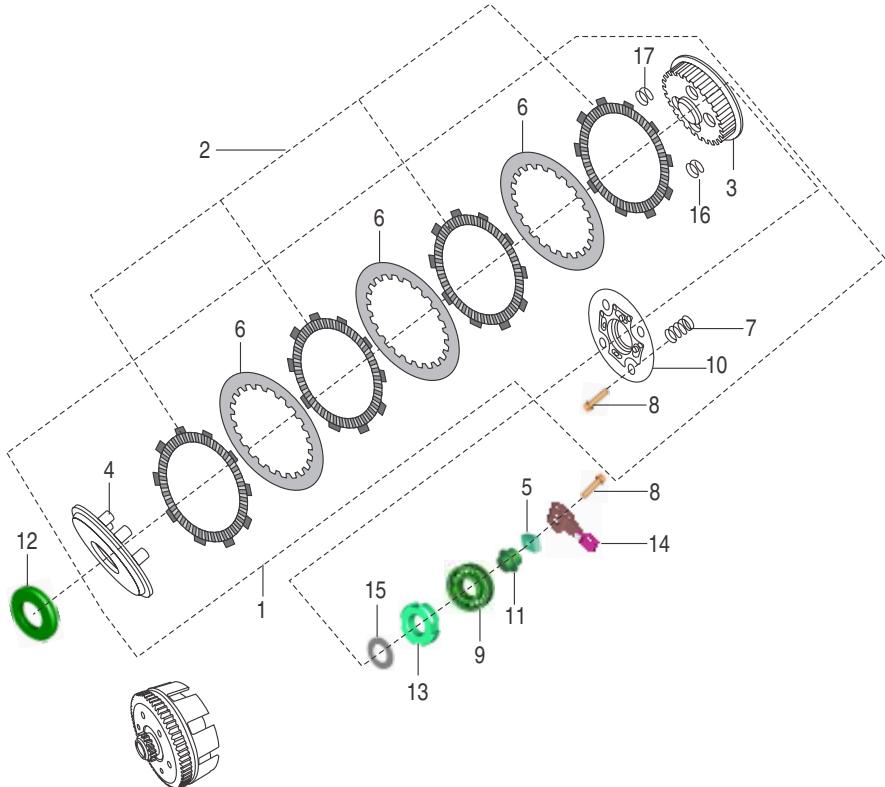

Oil Pump Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-----------------------|------|---------|
| 1 | 52 DH01 69 | Oil Pump Assembly | 1 | |
| 2 | 39 1674 04 | Hex. Bolt With Flange | 3 | |
| 3 | DH 1210 10 | Mesh Filter Oil Pump | 1 | |
| 4 | 39 1686 06 | Hollow Dowel Pin | 1 | |
| 5 | DH 1210 35 | Clip Mesh Oil Filter | 1 | |
| 6 | 39 2194 21 | 'O' Ring | 1 | |


FWD

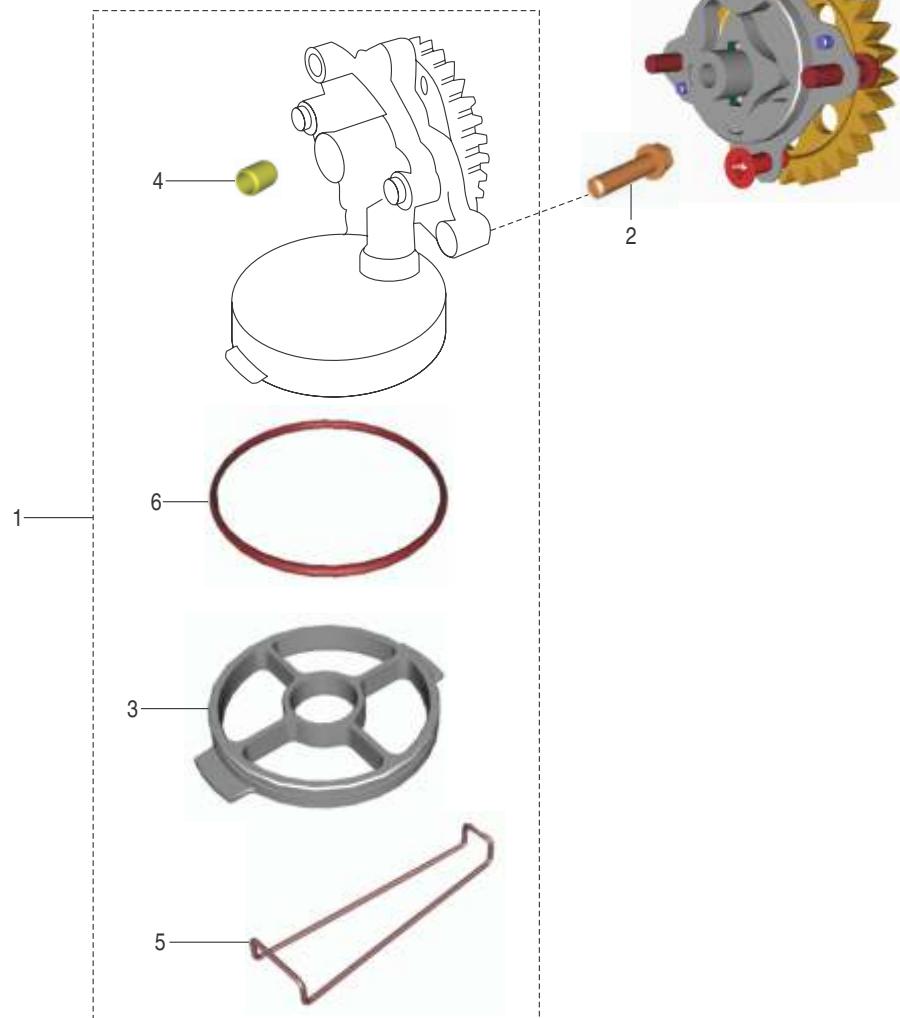


Carburetor Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------|------|---------|
| 1 | DJ 1210 91 | Carburetor Assembly | 1 | |
| 2 | DH 1211 71 | Vacuum Piston Kit | 1 | |
| 3 | DH 1211 68 | Idling Screw Kit | 1 | |
| 4 | DJ 1210 44 | Jet Needle (JN) | 1 | |
| 5 | DJ 1210 53 | "O" Ring | 1 | |
| 6 | DJ 1210 54 | Screw | 2 | |
| 7 | DJ 1210 55 | Float Assembly | 1 | |
| 8 | DJ 1210 56 | Jet Holder Kit | 1 | |
| 9 | DJ 1210 57 | Needle Assembly | 1 | |
| 10 | DH 1211 69 | Set Adjuster (PS) | 1 | |
| 11 | DJ 1210 59 | Set Plunger Assembly | 1 | |

FWD

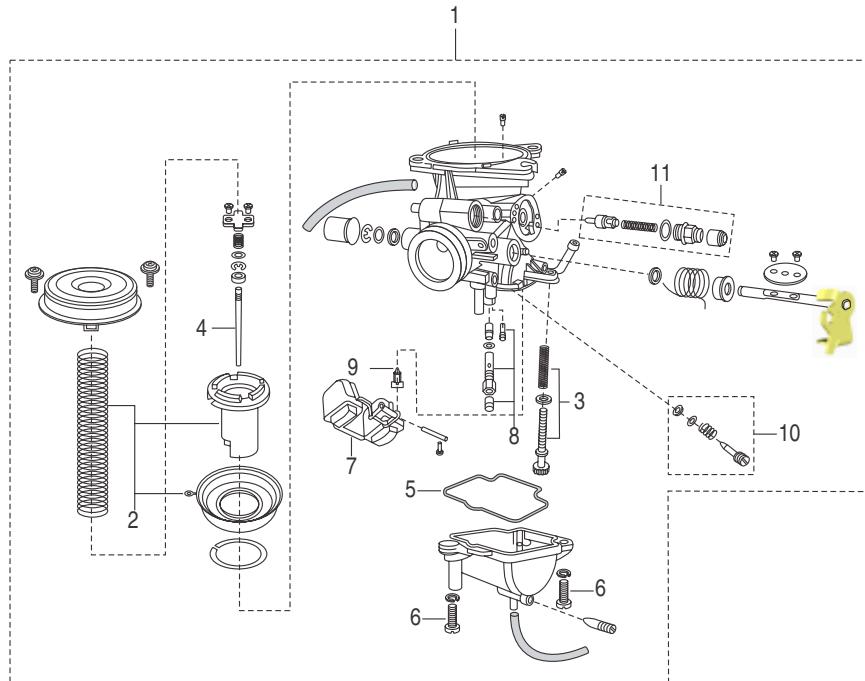


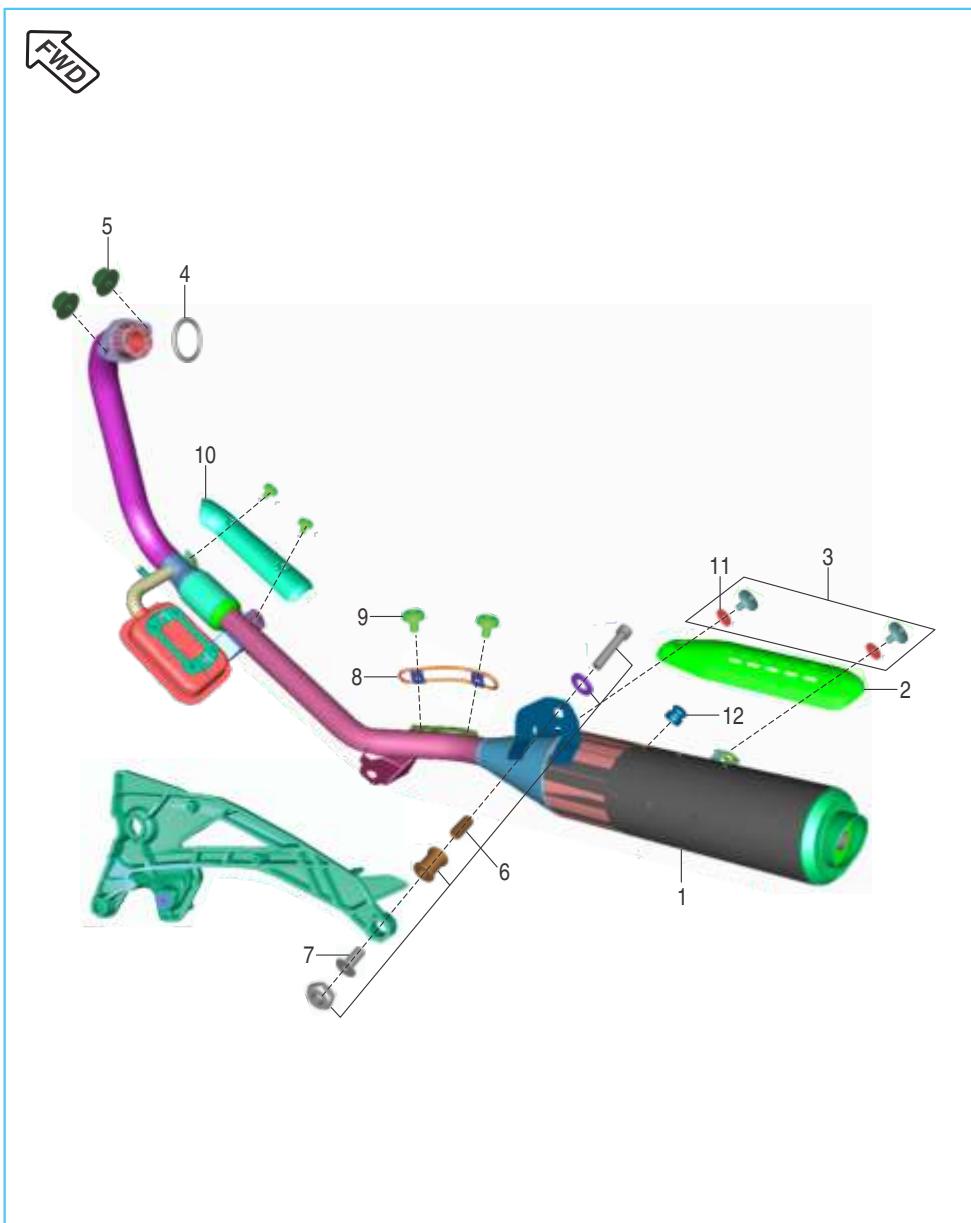

Silencer Assembly


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------------|------|--------------|
| 1 | YD J080 01 | Kit Assembly Silencer W/O Shield | 1 | |
| 2 | DH 1022 72 | Shield Silencer | 1 | |
| 3 | 36 DH40 11 | Kit Hardware Shield | 1 | Ref Kit List |
| 4 | DJ 1010 64 | Gasket Exhaust | 1 | |
| 5 | 39 1970 15 | Hex Nut / Flange M8 | 2 | |
| 6 | 36 DK00 09 | Kit Hardware Silencer | 1 | Ref Kit List |
| 7 | DJ 1612 78 | Tube Silencer With Washer | 1 | |
| 8 | DH 1022 63 | Wire Shield Assembly | 1 | |
| 9 | DH 1016 07 | Truss Screw | 4 | |
| 10 | DH 1016 08 | Silencer front (Cat) Shield | 2 | |
| 11 | JB 5910 68 | Washer Nylon Shield Silencer | 2 | |
| 12 | JB 5910 59 | Damper Shield Muffler Disco - M | 1 | |

Air Cleaner Assembly

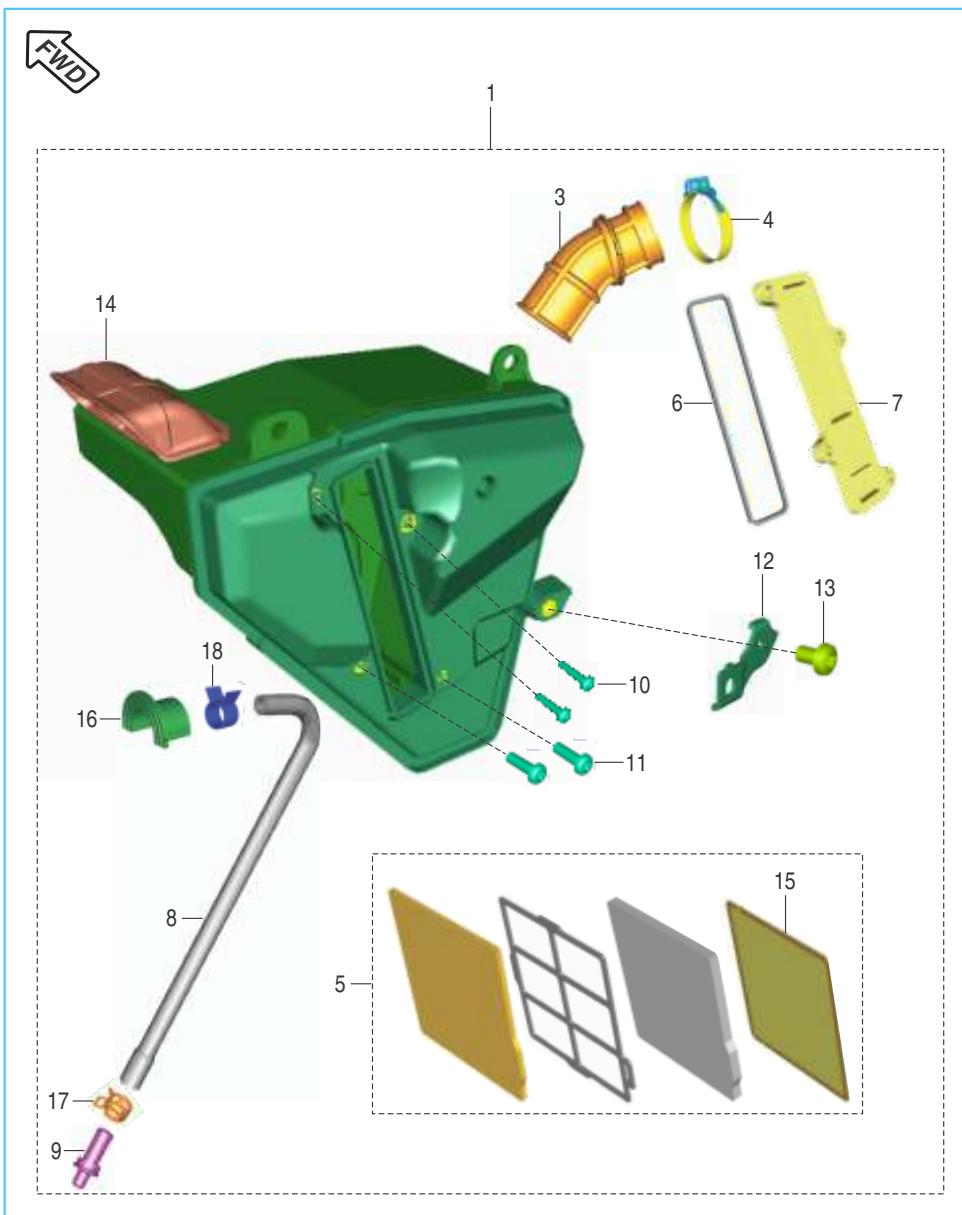


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|------------------------------|------|------------------|
| 1 | DJ 1210 87 | Air Cleaner Complete | 1 | |
| 2 | 36 DH40 10 | Kit Hardware Air Cleaner | 1 | Ref Page No. 101 |
| 3 | DJ 1210 81 | Connecting Tube | 1 | |
| 4 | DH 1211 90 | Clamp | 1 | |
| 5 | DK 1210 09 | Assembly Element Filter | 1 | |
| 6 | DK 1210 15 | 'O' ring Air Filter Cover | 1 | |
| 7 | DK 1210 07 | Filter Air Element Cover | 1 | |
| 8 | DS 1211 17 | Drain Tube | 1 | |
| 9 | DS 1211 26 | Plug | 1 | |
| 10 | KB BA05 25 | Screw Pan Cross | 2 | |
| 11 | KB BA05 16 | Screw Pan Cross | 2 | |
| 12 | DH 1614 16 | Bracket Lock | 1 | |
| 13 | 39 1780 01 | Screw Pan - M5 | 1 | |
| 14 | DS 1211 16 | Duct | 1 | |
| 15 | DH 1022 74 | Flame Arrester Complete | 1 | |
| 16 | DK 1210 11 | Cap Breather Pipe | 1 | |
| 17 | DG 1210 02 | Clamp (Hose C'case Breather) | 1 | |
| 18 | AA 1410 48 | Spring Band Clip 10 MM | 1 | |

EVAP Mechanism

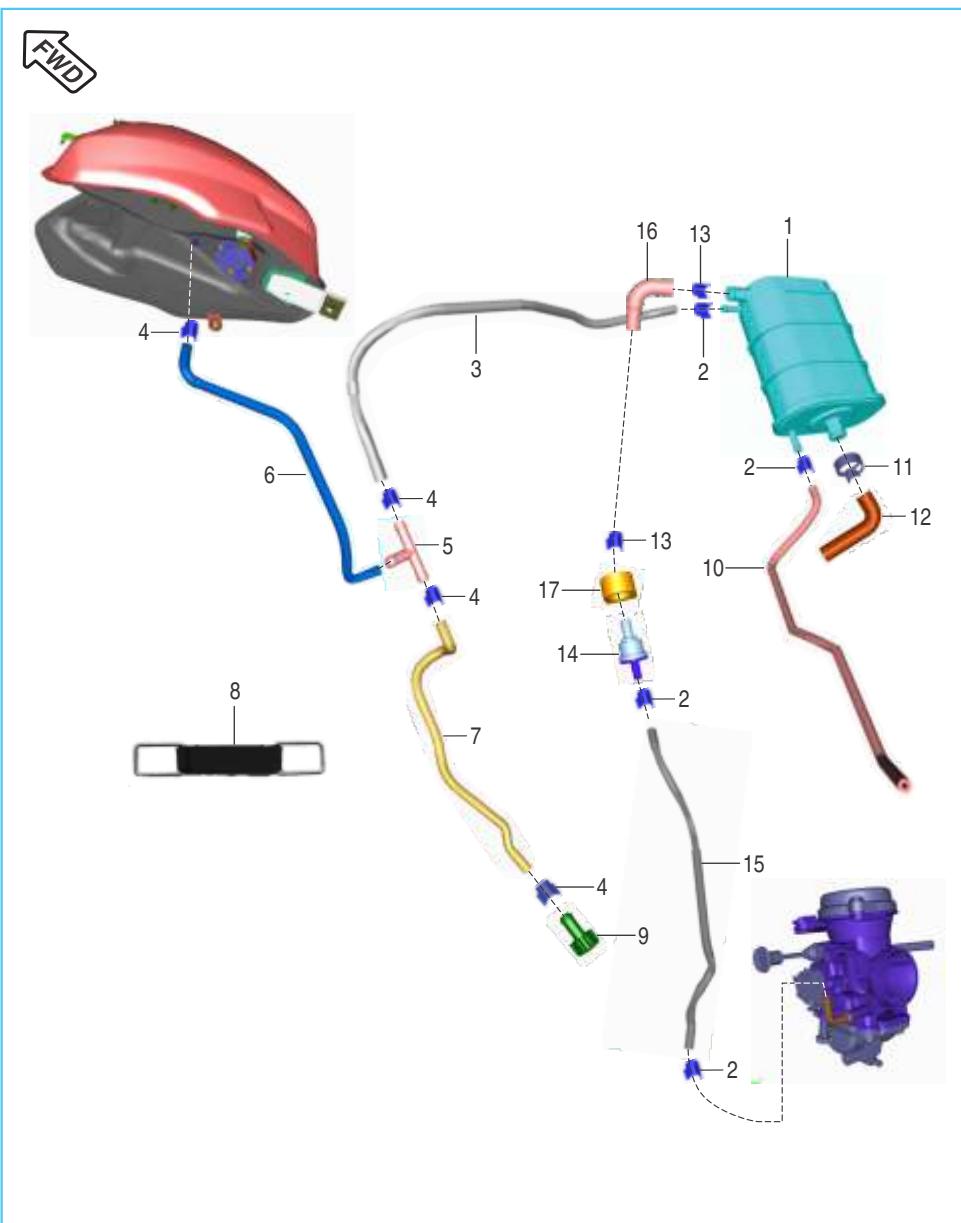

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------------------|------|---------|
| 1 | JY 1710 77 | Canister | 1 | |
| 2 | JY 1710 70 | Spring Band Clamp 9 x 8.4 | 5 | |
| 3 | DJ 1410 73 | Tube T Connector To Canister | 1 | |
| 4 | JG 1710 29 | Spring Band Clamp 11.5 X 8.4 | 5 | |
| 5 | GL 1710 36 | Connector For Breather And Vapor Tube | 1 | |
| 6 | DJ 1410 72 | Tube Tank To T Connector | 1 | |
| 7 | DJ 1410 74 | Tube Condensate Fuel Drain | 1 | |
| 8 | DH 1614 29 | Strap Canister | 1 | |
| 9 | JY 1718 25 | Plug Fuel Drain | 1 | |
| 10 | DH 1410 73 | Tube Canister Drain | 1 | |
| 11 | JH 1716 02 | Clamp - Canister Breather | 1 | |
| 12 | DH 1410 74 | Tube Canister Breather | 1 | |
| 13 | JY 1710 69 | Spring Band Clamp 15 x 10 | 1 | |
| 14 | PD 1716 16 | Valve Purge | 1 | |
| 15 | DJ 1410 71 | Tube Purge Valve To Carburetor | 1 | |
| 16 | DJ 1410 77 | Tube Connector To Purge Valve | 1 | |
| 17 | JH 1710 48 | Grommet Purge Valve | 1 | |

Magneto, CDI & H.T. Coil

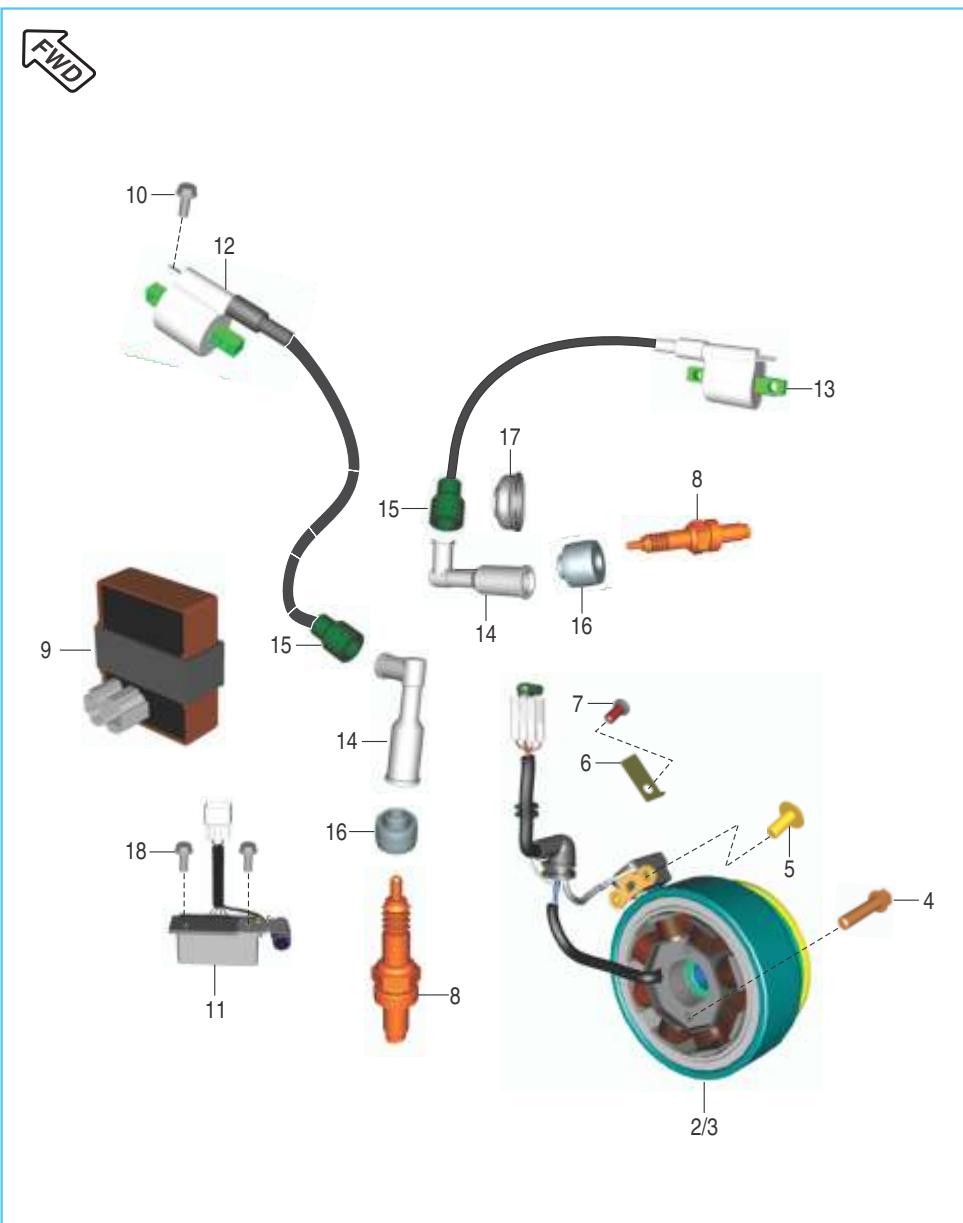


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------------|------|---------|
| 1 | 59 1000 02 | Spring Dowel Sleeve | 1 | N.I. |
| 2 | DH 1110 80 | Stator Assembly Complete | 1 | |
| 3 | DH 1110 82 | Rotor Assembly | 1 | |
| 4 | DH 1013 86 | Hex. Bolt With Flange | 2 | |
| 5 | DH 1013 81 | Pan Head Screw | 2 | |
| 6 | DH 1011 99 | Stopper Plate (Wiring Harness) | 1 | |
| 7 | DH 1013 80 | Screw Pan Head | 1 | |
| 8 | DG 1110 08 | Spark Plug | 2 | |
| 9 | DJ 1110 98 | CDI Non TPS Assembly K2 | 1 | |
| 10 | 39 1944 04 | Flange Bolt | 4 | |
| 11 | DJ 2012 02 | Regulator | 1 | |
| 12 | JC 1110 22 | H.T. Coil LH With Cable | 1 | |
| 13 | JC 1110 23 | H.T. Coil RH With Cable | 1 | |
| 14 | DH 1110 15 | Cap Spark Plug | 2 | |
| 15 | DD 1110 12 | Grommet H.T. Cable | 2 | |
| 16 | DH 1110 13 | Grommet Spark Plug | 2 | |
| 17 | DH 1110 16 | Grommet Sleeve Spark Plug | 1 | |
| 18 | 39 1944 04 | Flange Bolt | 2 | |

Starter Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--|------|-------------------|
| 1 | DK 1015 95 | Body Complete Starter Clutch | 1 | |
| 2 | DK 1016 05 | Plate Roller Clutch | 1 | |
| 3 | JC 1011 12 | Gear Starter Clutch (55T) | 1 | |
| 4 | DH 1015 81 | Plate Starter Clutch Gear Return | 1 | |
| 5 | DH 1013 85 | Bolt | 1 | For Stopper Plate |
| 6 | DK 1011 76 | Shaft Starter Counter | 1 | |
| 7 | DH 1011 72 | Collar Starter Counter | 1 | |
| 8 | JC 1011 15 | Gear Complete Starter Counter Assembly | 1 | |
| 9 | 59 2000 07 | Needle Roller Bearing | 1 | |
| 10 | 39 0972 04 | Bolt Socket M6 | 3 | |
| 11 | DH 1110 84 | Motor Assembly Starter Clutch | 1 | |
| | DH 1111 15 | Starter Motor Assembly - 325 W | 1 | |
| 12 | DS 1013 53 | Bolt | 2 | |
| 13 | 56 DJ4E 1Y | Cover Starter Motor | 1 | |
| 14 | DH 1013 89 | Slotted C' Sunk Screw | 1 | |
| 15 | DK 1015 96 | Spring | 5 | |
| 16 | DH 1011 63 | Roller | 5 | |


FWD

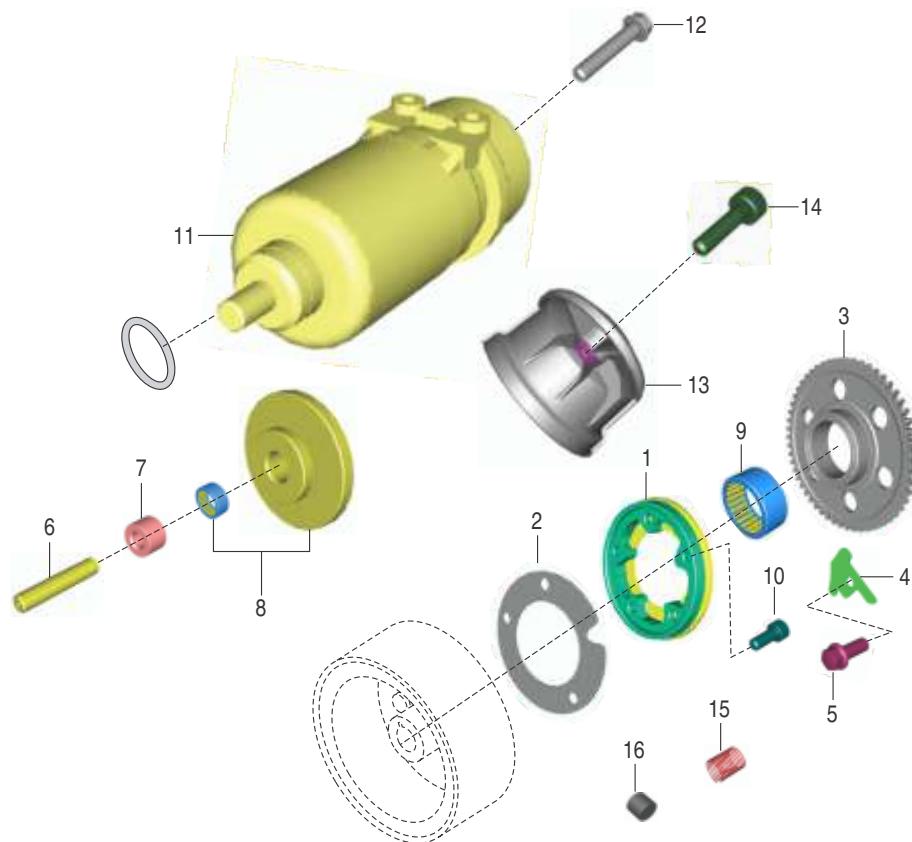


Frame and Frame Fittings

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|------------------------------|------|----------------|
| 1 | DJ 1614 00 | Frame Assembly Complete | 1 | |
| 2 | DH 1611 12 | Cup Rear | 2 | |
| 3 | DK 1810 75 | Nut | 1 | |
| 4 | PD 1510 06 | Cap Steering | 1 | |
| 5 | 36 JG00 11 | Bearing Cone Kit | 1 | Refer Kit List |
| 6 | KM AA08 00 | Ball Steel | 39 | |
| 7 | DK 1810 50 | Cage steering bearing top | 1 | |
| 8 | DK 1810 51 | Cage steering bearing bottom | 1 | |

FWD

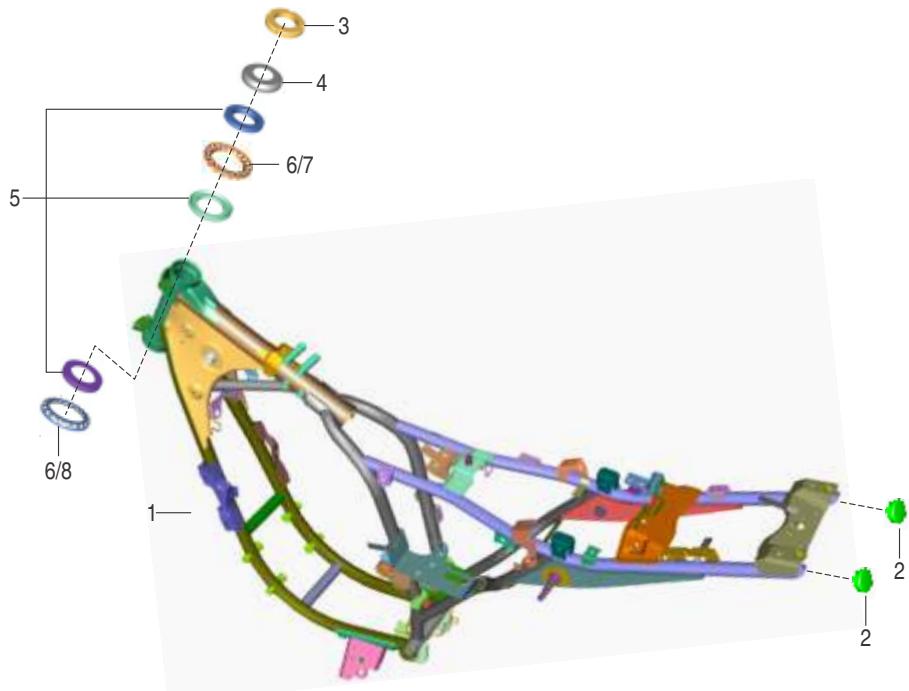

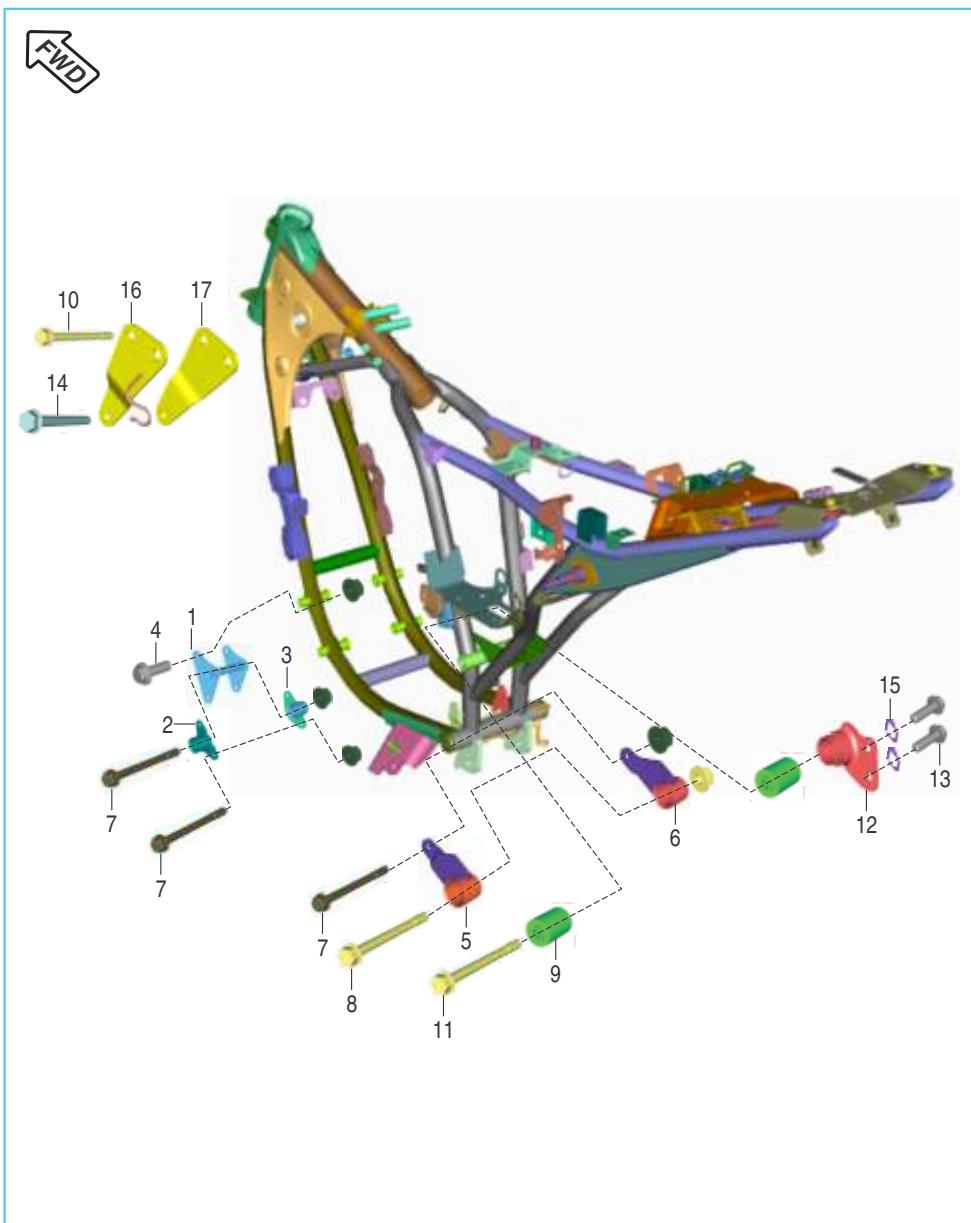


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--|------|-----------------|
| 1 | DK 1610 96 | Bracket Assembly Engine Mounting Front | 2 | |
| 2 | DH 1611 89 | Bracket Complete LH Engine Mounting Frt. | 1 | |
| 3 | DH 1611 90 | Bracket Complete RH Engine Mounting Frt. | 1 | |
| 4 | 39 2312 04 | Hex Hd Bolt / Flange - M8 | 4 | |
| 5 | DJ 1611 14 | Bracket Complete LH Engine Mtg. Lower | 1 | |
| 6 | DJ 1611 15 | Bracket Complete RH Engine Mtg. Lower | 1 | |
| 7 | 39 2157 04 | Bolt Flanged | 3 | |
| 8 | 39 2412 04 | Bolt Flanged | 1 | Alt. 39 2311 04 |
| 9 | DH 1611 61 | Bush In Frame | 1 | |
| 10 | 39 1967 04 | Bolt | 2 | |
| 11 | 59 0400 41 | Hex Hd Bolt / Flange - M8 x 180L | 1 | |
| 12 | DK 1611 61 | Bracket Complete RH Engine Rear | 1 | |
| 13 | 39 2310 04 | Flanged Bolt | 2 | |
| 14 | 59 0400 17 | Hex Hd Bolt Flanged - M8 | 1 | |
| 15 | 39 1040 11 | Washer | 1 | |
| 16 | DK 1614 15 | Assembly Engine Mounting Bracket Top LH | 1 | |
| 17 | DK 1614 16 | Assembly Engine Mounting Bracket Top RH | 1 | |
| 18 | DJ 1612 90 | Chassis No. Protection Tape | 1 | |

Swing Arm & Rear Shock Absorber

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------|------|---------|
| 1 | DK 1710 14 | Rear Shock Absorber | 2 | |
| 2 | DG 1710 38 | Bolt Pre-coated | 2 | |
| 3 | 39 1829 12 | Spring Washer | 2 | |
| 4 | DK 1710 11 | Swing Arm Assembly | 1 | |
| 5 | DG 1710 18 | Swing Arm Bearing | 2 | |
| 6 | DK 1710 06 | Collar Swing Arm | 2 | |
| 7 | DG 1710 19 | Oil Seal Swing Arm | 4 | |
| 8 | DH 1710 19 | 'U' Nut Swing Arm | 1 | |
| 9 | DK 1710 03 | Shaft Swing Arm | 1 | |
| 10 | DG 1710 34 | Chain Slider | 1 | |
| 11 | DJ 1710 44 | Adjuster Chain | 2 | |
| 12 | JM 1710 04 | Plate Chain Adjuster | 2 | |
| 13 | 39 1224 11 | Plain Washer | 2 | |
| 14 | 39 1997 15 | Hexagon Nut | 2 | |
| 15 | DG 1710 22 | Small nut | 2 | |
| 16 | 39 2366 15 | Domed Cap Nut - M12 | 2 | |
| 17 | 39 0714 11 | Washer Plain | 4 | |


FWD

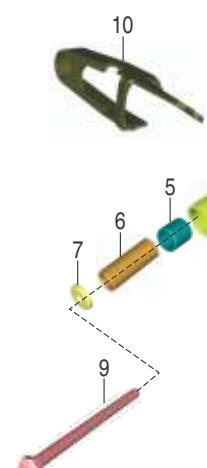

FWD

Front Wheel Direction

Rider, Pillion Foot Rest & Step Holder

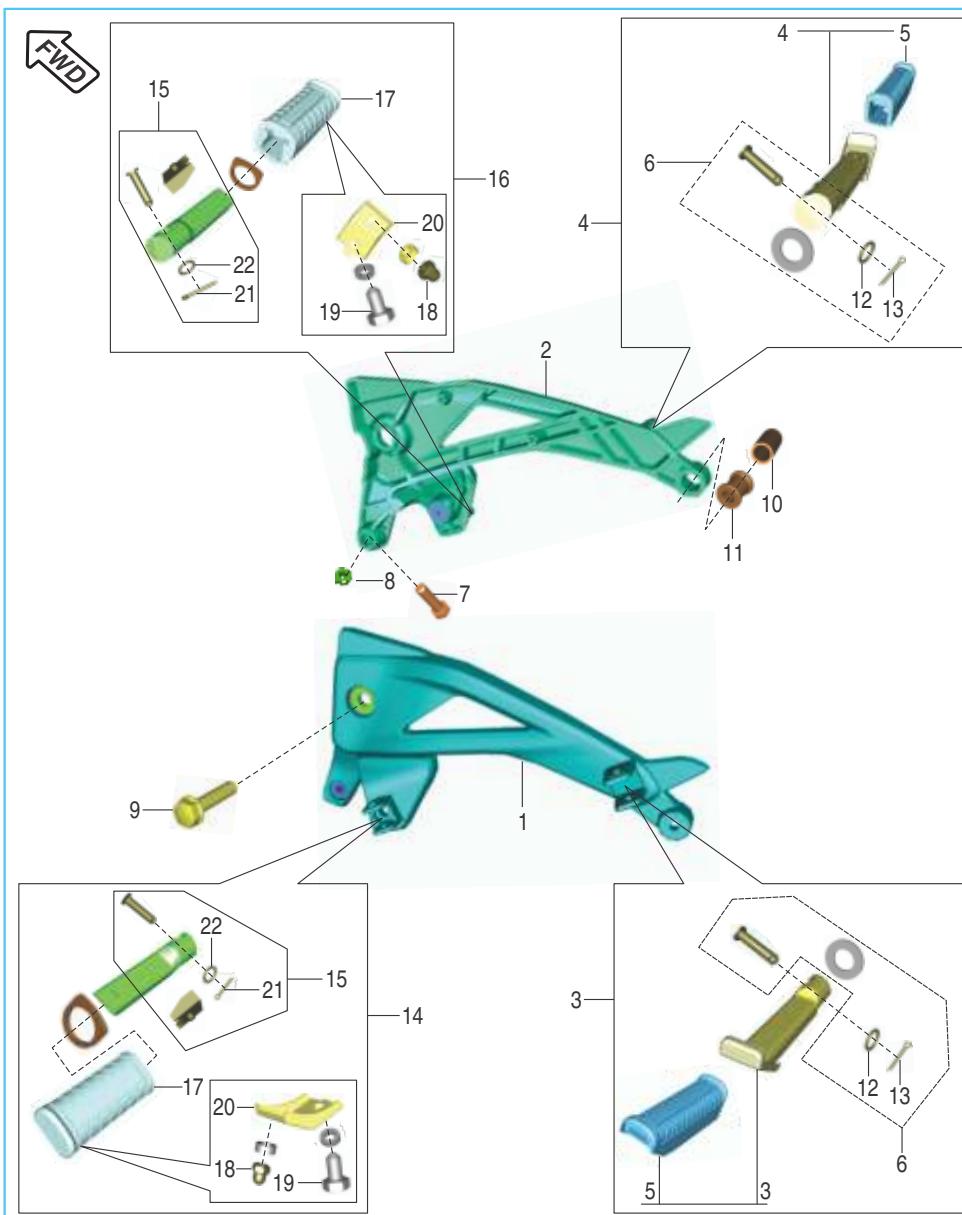


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-----------------------------------|------|---------|
| 1 | 56 DJ3X 1Y | Holder LH Step | 1 | |
| 2 | 56 DJ3Y 1Y | Holder RH Step | 1 | |
| 3 | DJ 1611 28 | Pillion Step Assembly Complete LH | 1 | |
| 4 | DJ 1611 29 | Pillion Step Assembly Complete RH | 1 | |
| 5 | DJ 1611 22 | Rubber Pillion Step | 2 | |
| 6 | 36 DK00 13 | Kit Hardware Pillion | 2 | |
| 7 | 39 1069 01 | Hexagon Head Screw | 2 | |
| 8 | 39 0292 15 | Nut | 2 | |
| 9 | 39 1714 04 | Flanged Bolt | 2 | |
| 10 | DH 1611 57 | Tube Silencer Mounting | 1 | |
| 11 | DH 1611 55 | Damper Silencer Mounting | 1 | |
| 12 | 30 1410 31 | Ring O | 2 | |
| 13 | KH AA32 25 | Pin Cotter | 2 | |
| 14 | DJ 1611 26 | Main Step LH Assembly | 1 | |
| 15 | 36 DK00 13 | Kit Hardware Main Step | 2 | |
| 16 | DJ 1611 27 | Main Step RH Assembly | 1 | |
| 17 | DH 1610 53 | Rubber Main Step | 2 | |
| 18 | 39 0963 15 | Domed Cap Nut M-8 | 2 | |
| 19 | 22 1504 51 | Bolt Hexagon Head | 2 | |
| 20 | DH 1610 56 | Plate Complete Low Main step | 2 | |
| 21 | 39 0784 08 | Pin Split | 2 | |
| 22 | 30 1410 31 | O Ring | 2 | |

Mudguard - Front & Rear

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------|------|------------|
| 1 | DJ 1610 69 | Nail For Cable Guide | 1 | |
| 2 | DK 1610 98 | Brace Fender Front | 1 | |
| 3 | 59 0400 40 | Step Bolt | 4 | |
| 4 | DS 1611 25 | Cable Guide | 1 | For Cables |
| 5 | DK 1613 38 | Fender Rear Front | 1 | |
| 6 | 39 1672 04 | Flange Bolt M6 | 2 | |
| 7 | 39 0711 11 | Plain Washer | 4 | |
| 8 | 39 0798 15 | Nut Hexagon With Flange M6 | 2 | |
| 9 | DK 1610 85 | Fender Rear | 1 | |
| 10 | 39 1680 04 | Flange Bolt | 2 | |


FWD

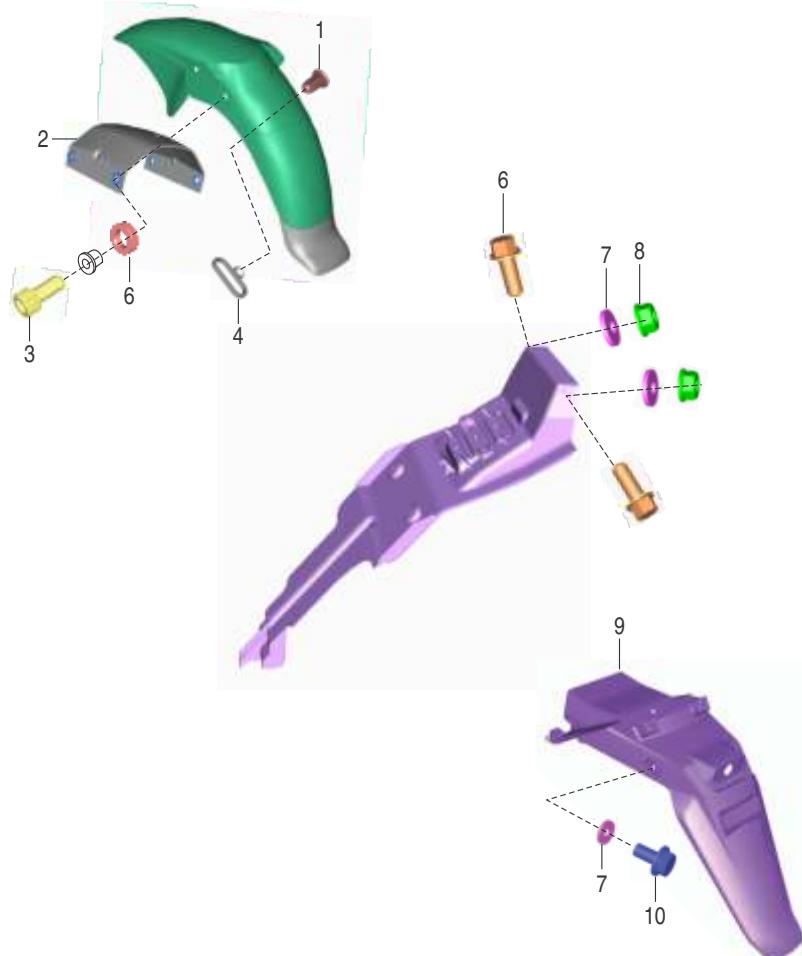

Center & Side Stand Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------|------|---------|
| 1 | DK 1611 22 | Stand Center | 1 | |
| 2 | 30 1611 57 | Shaft Stand | 1 | |
| 3 | 39 0787 08 | Pin Cotter | 1 | |
| 4 | DH 1611 21 | Spring Main Stand | 1 | |
| 5 | DH 1612 39 | Cover Spring Center Stand | 1 | |
| 6 | JC 1610 17 | Stand Side | 1 | |
| 7 | DH 1610 66 | Spring Side Stand | 1 | |
| 8 | DH 1612 40 | Cover Spring Side Stand | 1 | |
| 9 | DF 1611 02 | Bolt | 1 | |
| 10 | 39 0422 15 | Nut Nyloc M10 | 1 | |
| 11 | JC 2010 39 | Side Stand Switch | 1 | |
| 12 | 39 2060 04 | Flanged Bolt M5 | 2 | |
| 13 | DH 2010 65 | Magnet Assembly | 1 | |

FWD

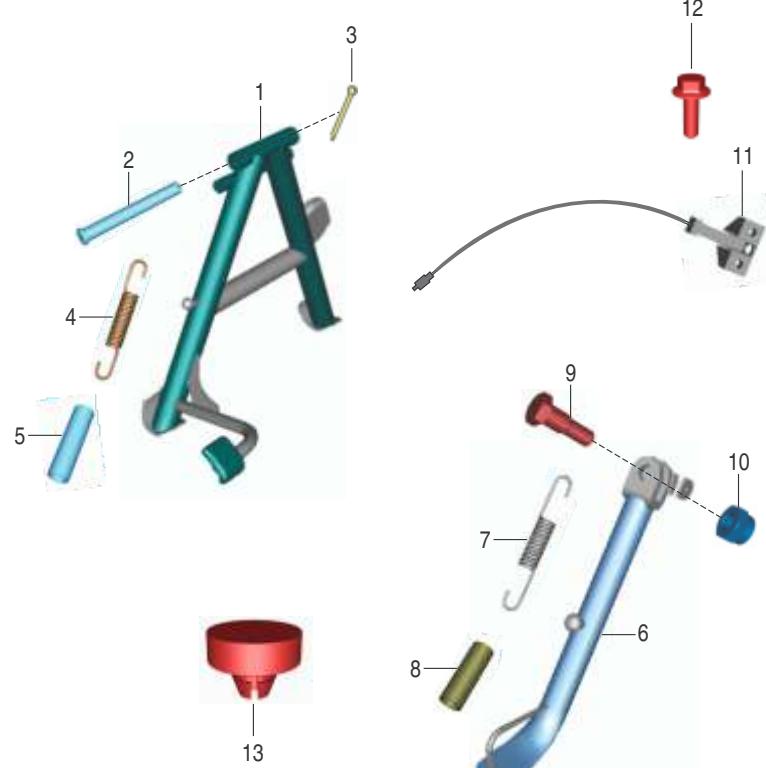

Tube / Tyre / Rim

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------|------|-----------------|
| 1 | JC 1510 13 | Wheel Rim Front 1.85 x 17 | 1 | |
| 2 | DK 1510 39 | Tyre Front Tubeless | 1 | Not Serviceable |
| 3 | DK 1510 50 | Wheel Rim Rear 2.5 x 17 | 1 | |
| 4 | DK 1510 40 | Tyre Rear Tubeless | 1 | Not Serviceable |
| 5 | DK 1510 26 | Valve Tubeless Tyre | 2 | |




Front Wheel Direction

Front Wheel Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------------|------|---------|
| 1 | JC 1510 13 | Wheel Rim Front 1.85 x 17 | 1 | |
| 2 | DK 1510 95 | Front Axle | 1 | |
| 3 | JC 1510 19 | Vehicle Speed Sensor Assembly | 1 | |
| 4 | KB BA04 08 | Screw Pan Cross | 1 | |
| 5 | KD DB04 08 | Washer Spring Thin | 1 | |
| 6 | JC 2010 46 | Stopper plate | 1 | |
| 7 | KP BC62 02 | Bearing Ball | 2 | |
| 8 | DK 1510 28 | Spacer Assembly | 1 | |
| 9 | DK 1510 27 | Disc | 1 | |
| 10 | PD 1318 03 | Disc Mounting Bolt | 6 | |
| 11 | DG 1510 05 | Seal Oil | 1 | |
| 12 | DG 1510 07 | Collar | 1 | |
| 13 | DG 1510 08 | Plain Washer | 1 | |
| 14 | DH 1710 19 | U Nut | 1 | |
| 15 | JC 1510 17 | Front Wheel Assembly | 1 | |


FWD

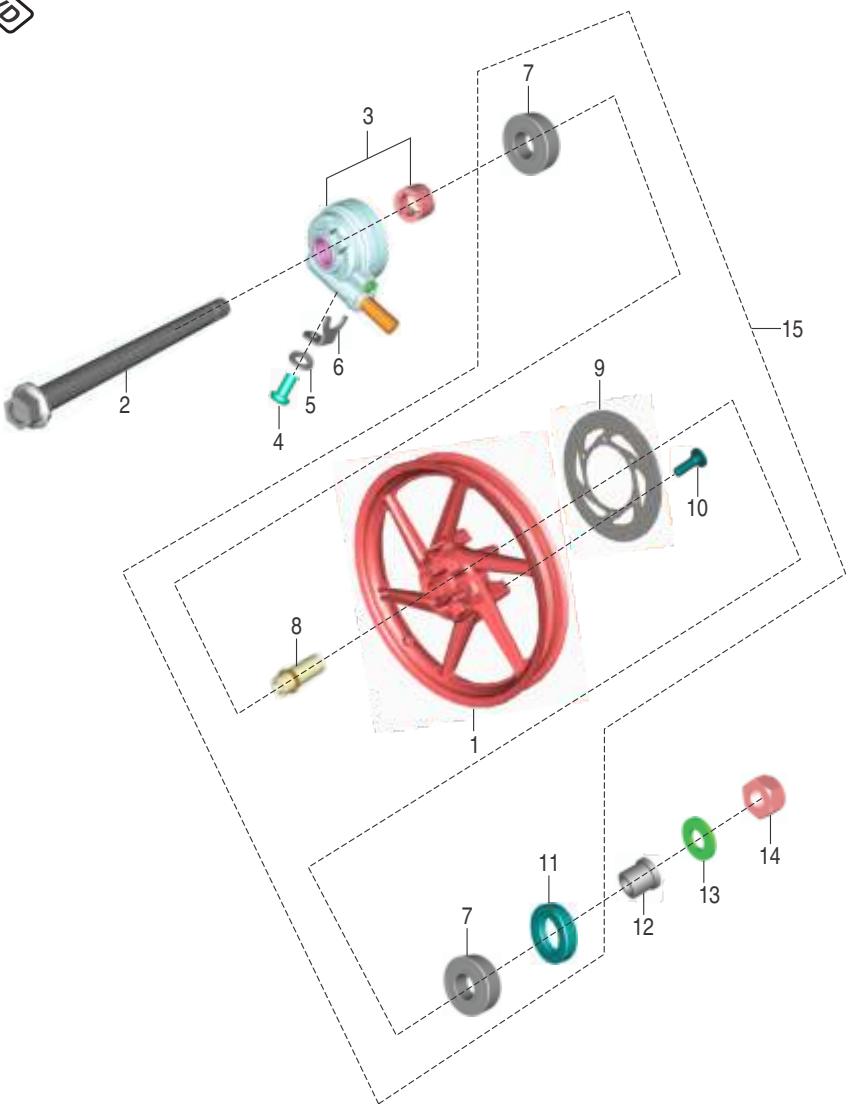

FWD


Front Wheel Direction

Front Master Cylinder Assembly

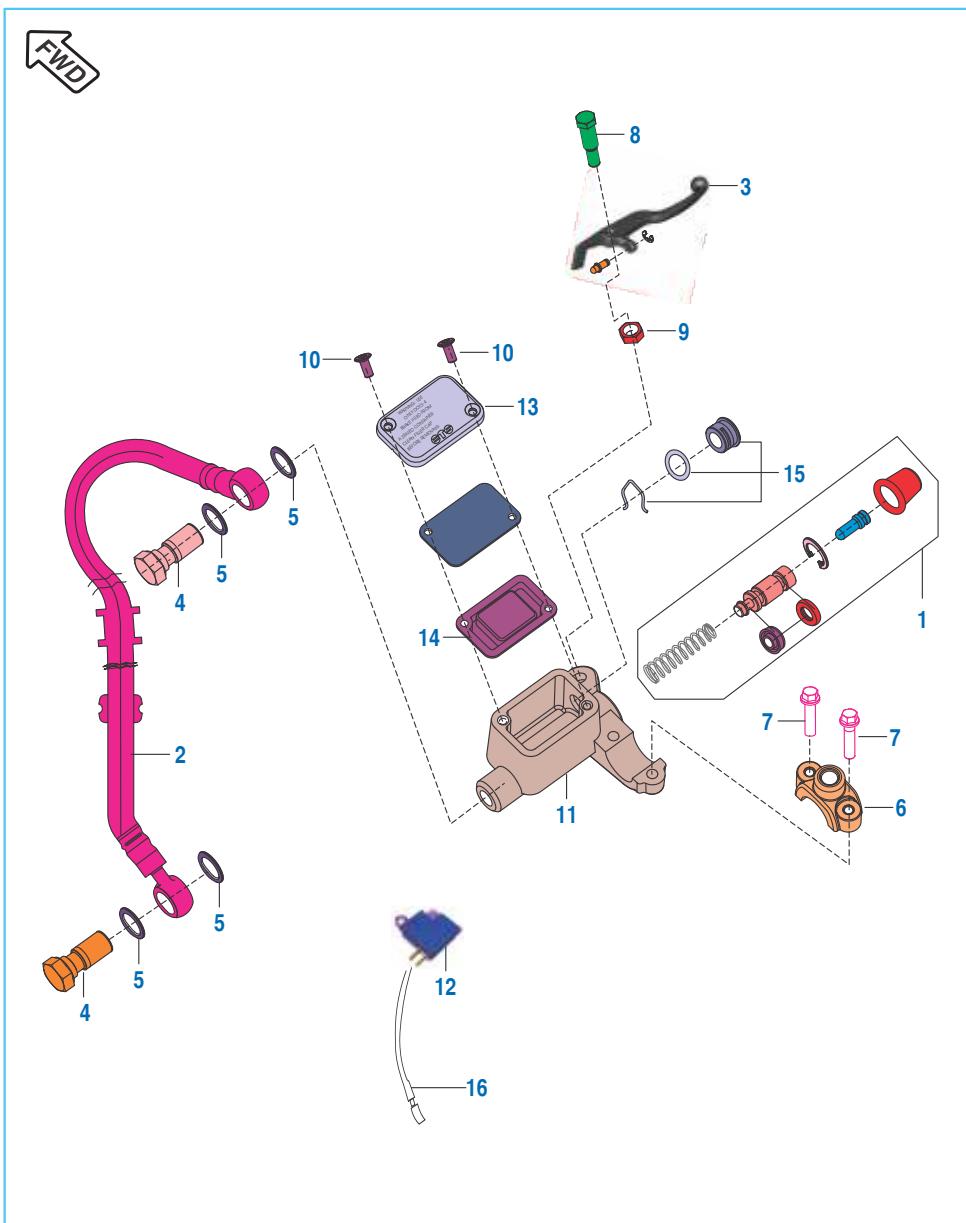

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------------------|------|----------------|
| 1 | 36 DJ40 31 | Major Kit - Master Cylinder | 1 | Endurance Make |
| | 36 DH40 48 | Major Kit - Master Cylinder | 1 | Brembo Make |
| 2 | DJ 1511 14 | Hose Assembly | 1 | |
| 3 | DK 1910 12 | Brake Lever RH | 1 | |
| 4 | DK 1510 69 | Banjo Bolt | 2 | |
| 5 | DE 1910 10 | Washer Copper | 4 | |
| 6 | DJ 1910 27 | Clamp Holder RH | 1 | Endurance Make |
| | DE 1910 33 | Clamp Holder RH | 1 | Brembo Make |
| 7 | DJ 1910 28 | Bolt | 2 | |
| 8 | DJ 1910 29 | Bolt Front Brake Lever | 1 | |
| 9 | DJ 1910 30 | Nut Flanged | 1 | |
| 10 | DJ 1910 31 | Screw | 2 | |
| 11 | DJ 1910 56 | Master Cylinder Assembly With Lever | 1 | |
| 12 | DJ 2011 09 | Front Brake Switch (Minda) | 1 | |
| 13 | DJ 1910 34 | Reservoir Cover | 1 | |
| 14 | DJ 1910 35 | Diaphragm | 1 | Endurance Make |
| | DE 1910 28 | Diaphragm | 1 | Brembo Make |
| 15 | 36 DH19 02 | Oil Window Kit | 1 | Endurance Make |
| | DE 1910 36 | Oil Window | 1 | Brembo Make |
| 16 | DJ 2011 08 | Cable Assembly for switch | 1 | |


Front Brake - Caliper & Disc

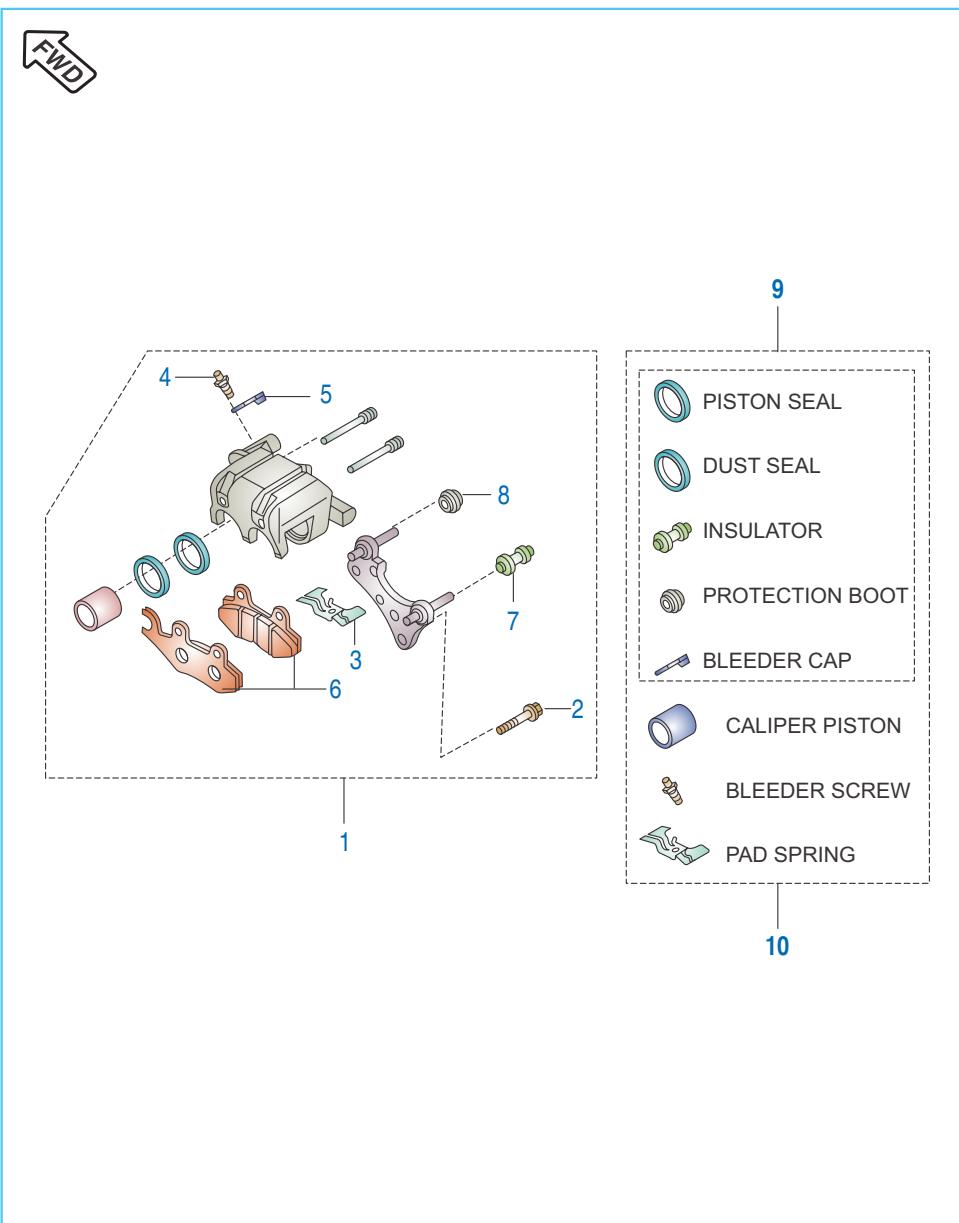

Rear Wheel Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------------|------|---------|
| 1 | DK 1510 50 | Wheel Rim Rear 2.5 x 17 | 1 | |
| 2 | DK 1510 09 | Axel rear | 1 | |
| 3 | DS 1510 74 | Washer lock | 2 | |
| 4 | 36 DK00 36 | Chain sprocket Kit | 1 | |
| 5 | DK 1510 36 | Drive chain lock | 1 | |
| 6 | DK 1510 12 | Oil Seal | 1 | |
| 7 | KP AC60 05 | Ball Bearing | 1 | |
| 8 | JC 1510 16 | Coupling | 1 | |
| 9 | 39 1997 15 | Nut hex small | 4 | |
| 10 | DS 1510 73 | Stud | 4 | |
| 11 | DK 1510 15 | Sleeve | 1 | |
| 12 | 30 1510 82 | Seal oil | 1 | |
| 13 | KP BC62 02 | Ball bearing | 1 | |
| 14 | DK 1510 22 | Collar bearing Assembly | 1 | |
| 15 | JG 1312 19 | Coupling rubber | 1 | |
| 16 | DK 1510 24 | Rear disc | 1 | |
| 17 | 39 2038 04 | Hexagon Socket Head Bolt - M6 | 6 | |
| 18 | KP BC63 02 | Ball bearing | 1 | |
| 19 | DK 1510 81 | Spacer I | 1 | |
| 20 | DK 1510 82 | Spacer II | 1 | |
| 21 | DG 1510 08 | Washer | 2 | |
| 22 | DH 1710 19 | "U" nut | 1 | |

FWD

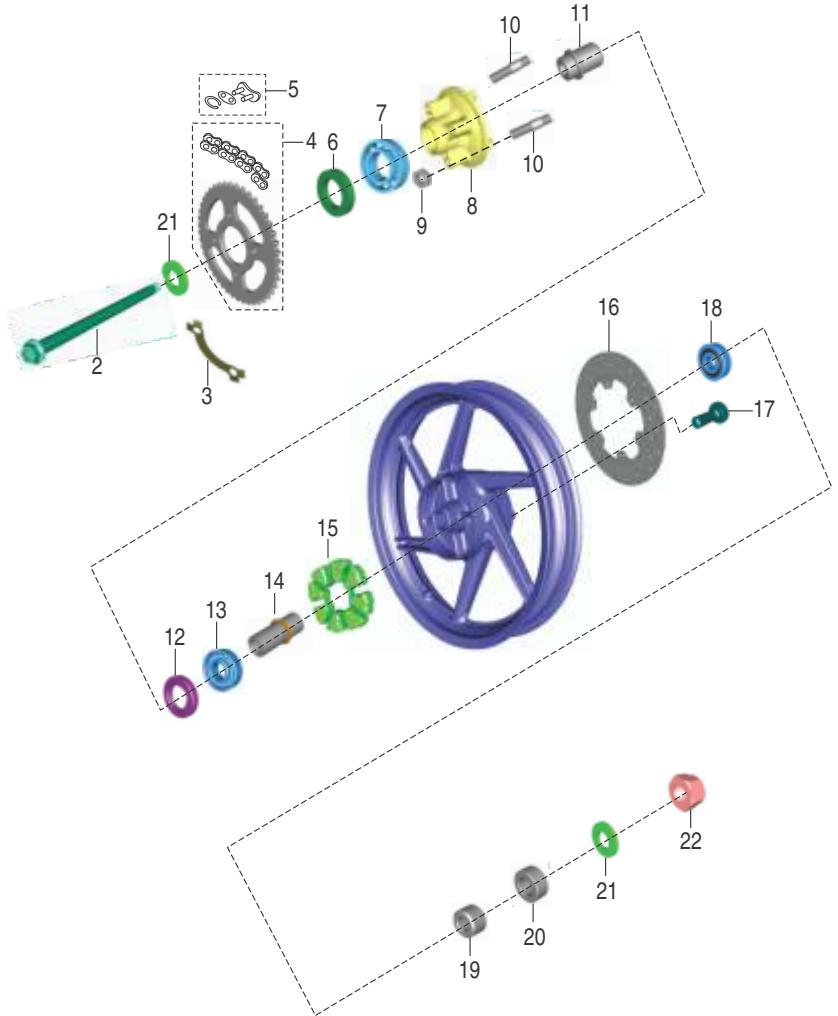


FWD

Front Wheel Direction


Rear Disc Brake System

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------------|------|---------|
| 1 | DK 1510 33 | Reservoir Rear Disc Brake | 1 | |
| 2 | DK 1510 34 | Reservoir Tube Rear Disc | 1 | |
| 3 | 39 2310 04 | Flange Bolt | 2 | |
| 4 | DK 1510 86 | Caliper Bracket | 1 | |
| 5 | 39 2481 04 | Bolt Hexagon Head With Flange M8 | 1 | |
| 6 | DK 1510 63 | Clip For Reservoir Tube | 2 | |
| 7 | DK 1510 69 | Banjo Bolt | 1 | |
| 8 | DE 1910 10 | Copper Washer | 1 | |
| 9 | DK 1510 84 | Hose Brake Rear | 1 | |
| 10 | DK 1510 45 | Reservoir Cap | 1 | |

FWD

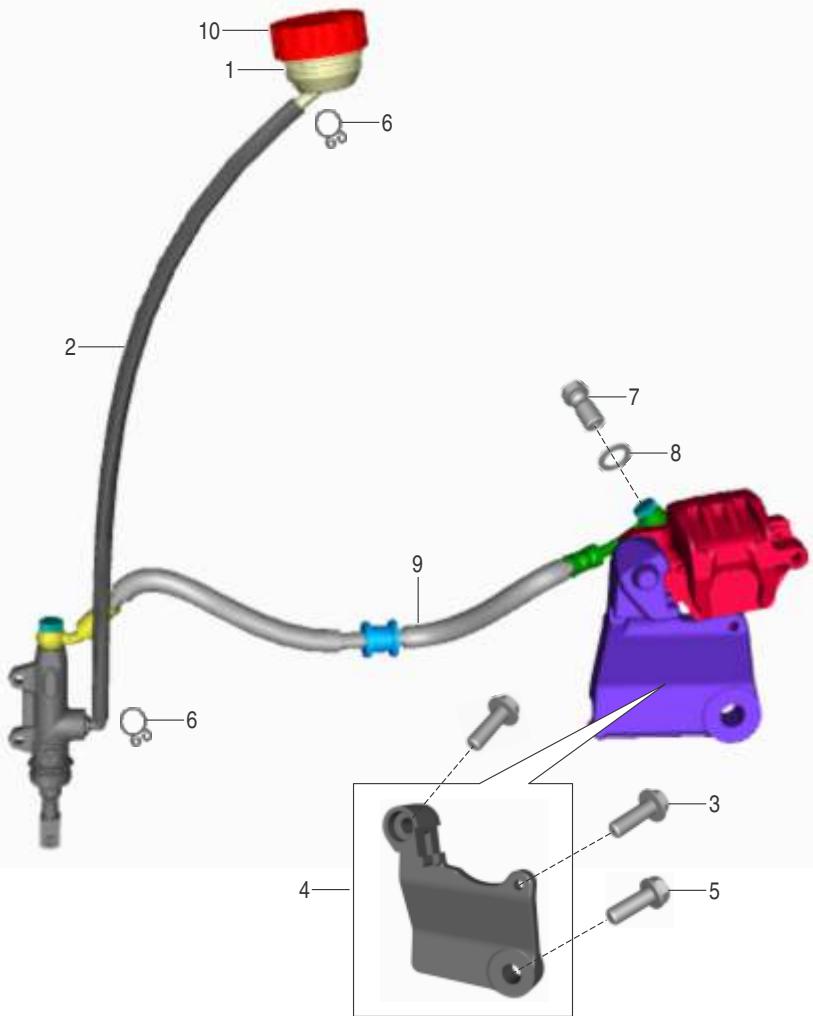


Rear Disc Brake - Master Cylinder & Caliper

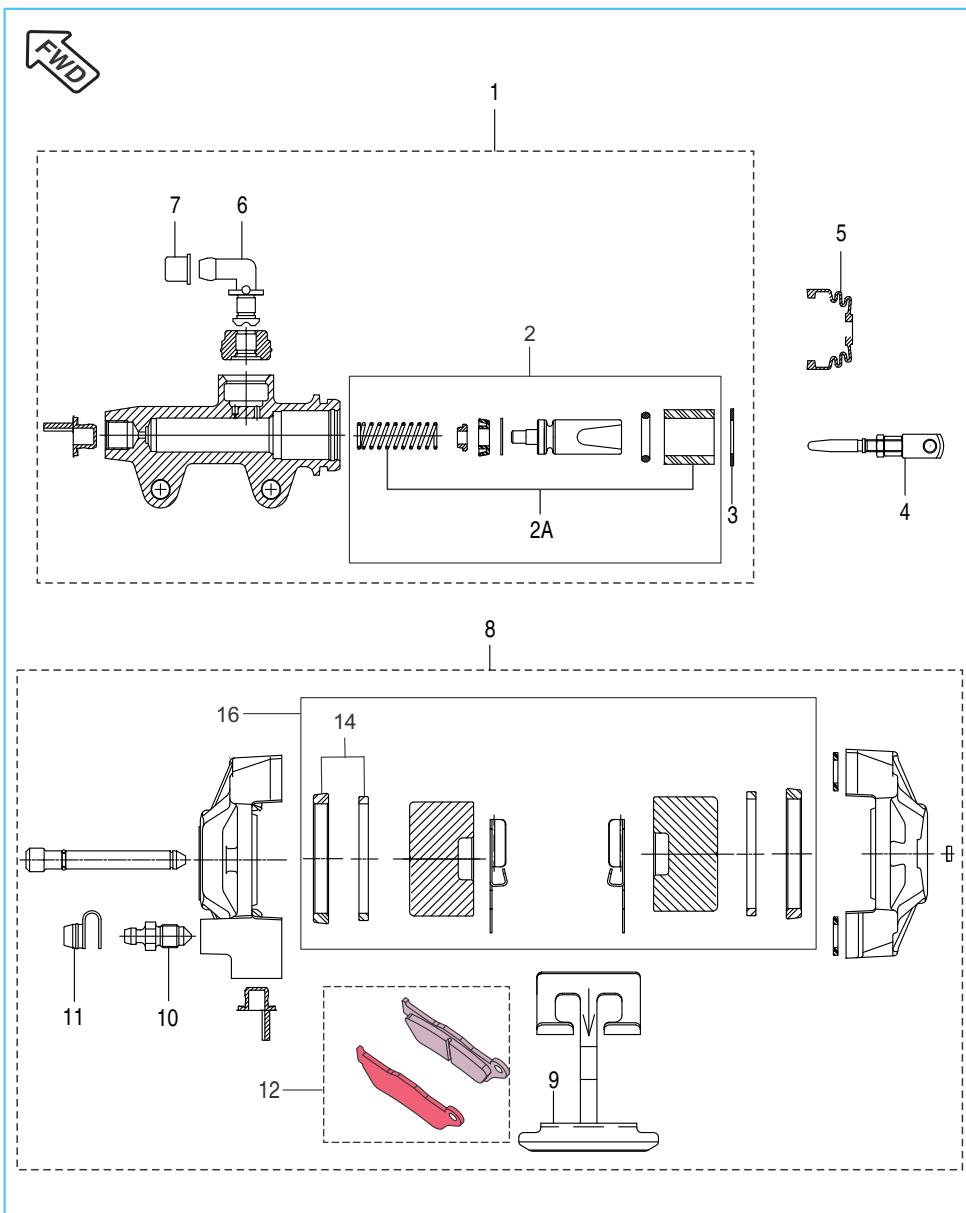


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---|------|------------------|
| 1 | DK 1510 31 | Master Cylinder | 1 | |
| 2 | 36 DK00 69 | Major kit caliper | 1 | |
| 2A | 36 DK00 70 | Minor kit caliper | 1 | |
| 3 | DK 1510 78 | Circlip | 1 | |
| 4 | 36 DK00 71 | Push Rod | 1 | |
| 5 | DK 1510 42 | Boot | 1 | |
| 6 | DK 1510 76 | Connector | 1 | |
| 7 | DK 1510 77 | Cap | 1 | |
| 8 | DK 1510 83 | Caliper Assembly. Rear | 1 | |
| 9 | DK 1510 41 | Spring Pad | 1 | |
| 10 | DE 1510 46 | Bleeder Screw | 1 | |
| 11 | DE 1510 47 | Bleeder cap | 1 | |
| 12 | DK 1510 85 | Disc Pad Set | 1 | |
| 13 | DK 1510 88 | Piston Kit (major kit) floating caliper | 1 | |
| 14 | DK 1510 89 | Kit Piston Seal (Minor Kit) | 1 | |
| 15 | 36 DK00 67 | Kit Caliper Minor with Grease | 1 | F-31- 03.12.2012 |
| 15 | DK 1510 90 | Insulator Kit floating caliper | 1 | |
| 16 | 36 DK00 68 | Kit Caliper Major with Grease | 1 | F-31- 03.12.2012 |

Rear Brake Pedal

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------|------|---------|
| 1 | DK 1910 12 | Lever Brake Pedal | 1 | |
| 2 | 31 2010 79 | Brake Switch Rear | 1 | |
| 3 | DG 1013 39 | Damper | 1 | |
| 4 | DK 1011 86 | Bolt Pivot Lever Change | 1 | |
| 5 | DK 1011 85 | Washer Pivot Bolt | 1 | |
| 6 | DK 1011 87 | Collar Pivot Bolt | 1 | |
| 7 | DK 1910 13 | Spring Brake Pedal | 1 | |

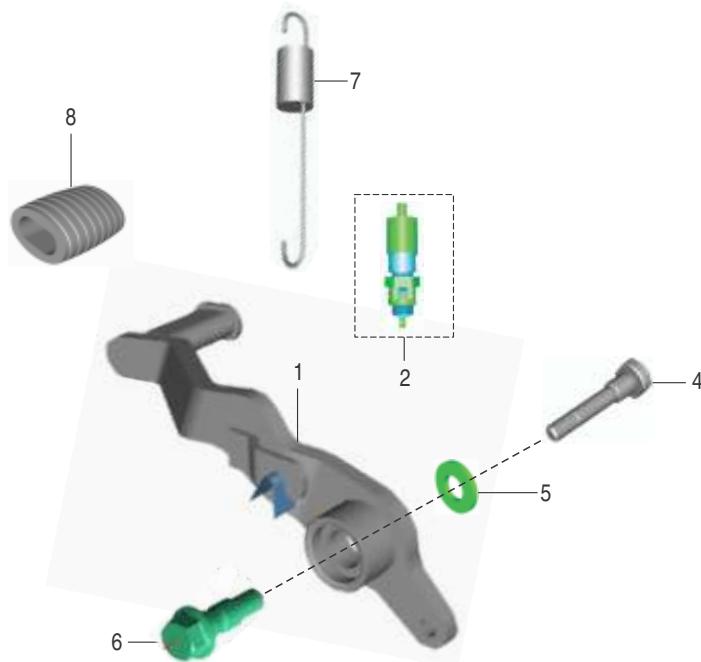


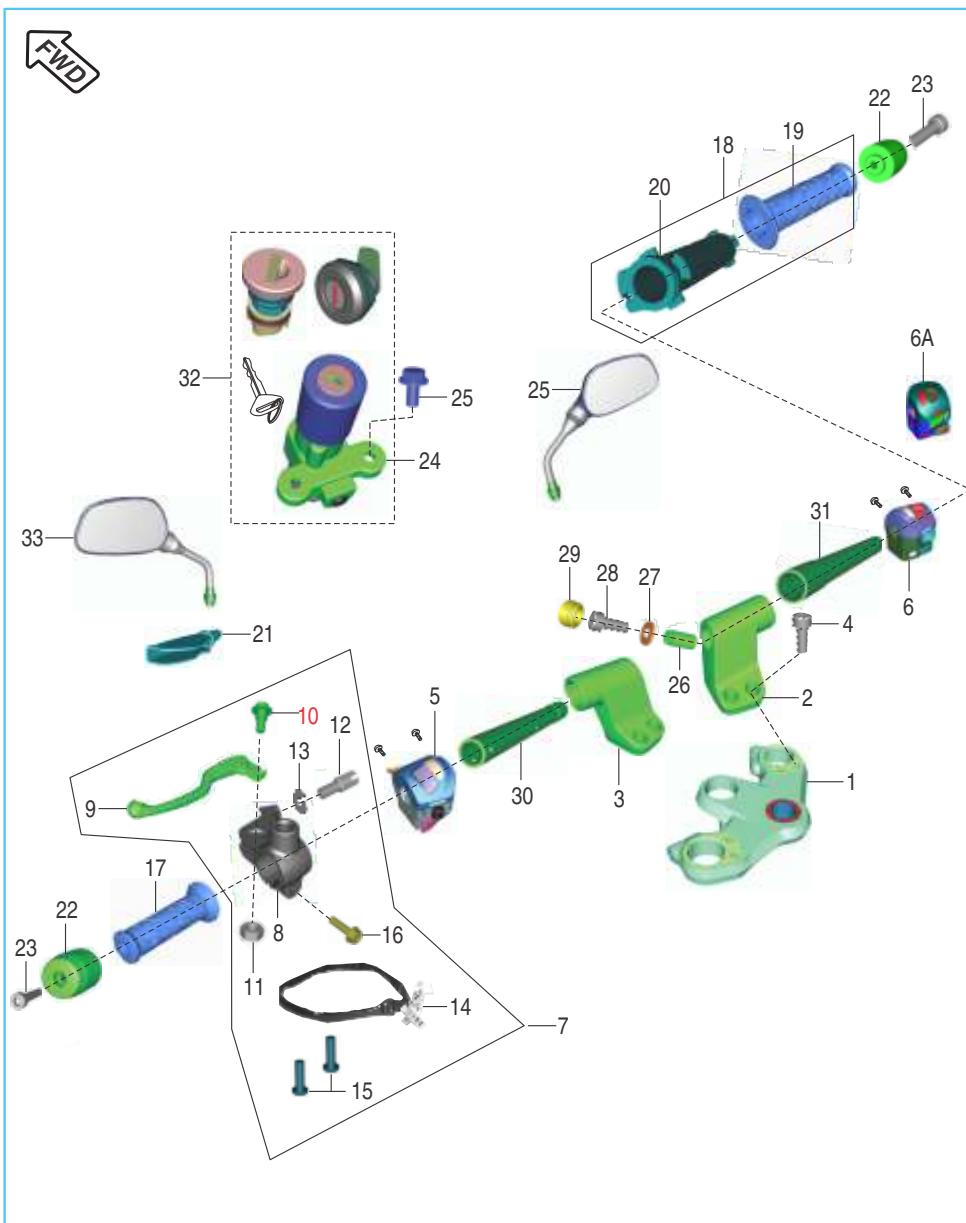

FWD


Front Wheel Direction

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------------|------|-----------|
| 1 | 56 DK33 Y9 | Upper Bracket | 1 | |
| 2 | 56 DK31 Y9 | Holder handle RH Black | 1 | |
| 3 | 56 DK32 Y9 | Holder handle LH Black | 1 | |
| 4 | DG 1810 08 | Socket Bolt | 4 | |
| 5 | JF 4014 00 | Control Switch LH | 1 | |
| 6 | JF 4014 01 | Control Switch RH | 1 | |
| 6A | JD 4014 00 | Control Switch RH | 1 | AHO Model |
| 7 | DJ 1910 82 | Lever & Support Holder Assembly | 1 | |
| 8 | DJ 1910 81 | Holder LH | 1 | |
| 9 | DJ 1910 83 | Lever LH | 1 | |
| 10 | DL 1910 14 | Stud Lever Handle | 1 | |
| 11 | 39 1184 15 | Nyloc Nut - M5 x 0.8 | 1 | |
| 12 | 36 DU19 01 | Cable Adjust Kit | 1 | |
| 13 | 30 1910 17 | Check Nut | 1 | |
| 14 | DJ 2012 46 | Clutch Switch | 1 | |
| 15 | LB U000 12 | Screw For Clutch Switch | 2 | |
| 16 | KA DD06 25 | Bolt Flanged | 1 | |
| 17 | DH 1910 67 | Grip LH | 1 | |
| 18 | DH 1910 69 | Grip Assembly RH | 1 | |
| 19 | DH 1910 68 | Grip RH | 1 | |
| 20 | DH 1910 17 | Pipe throttle | 1 | |

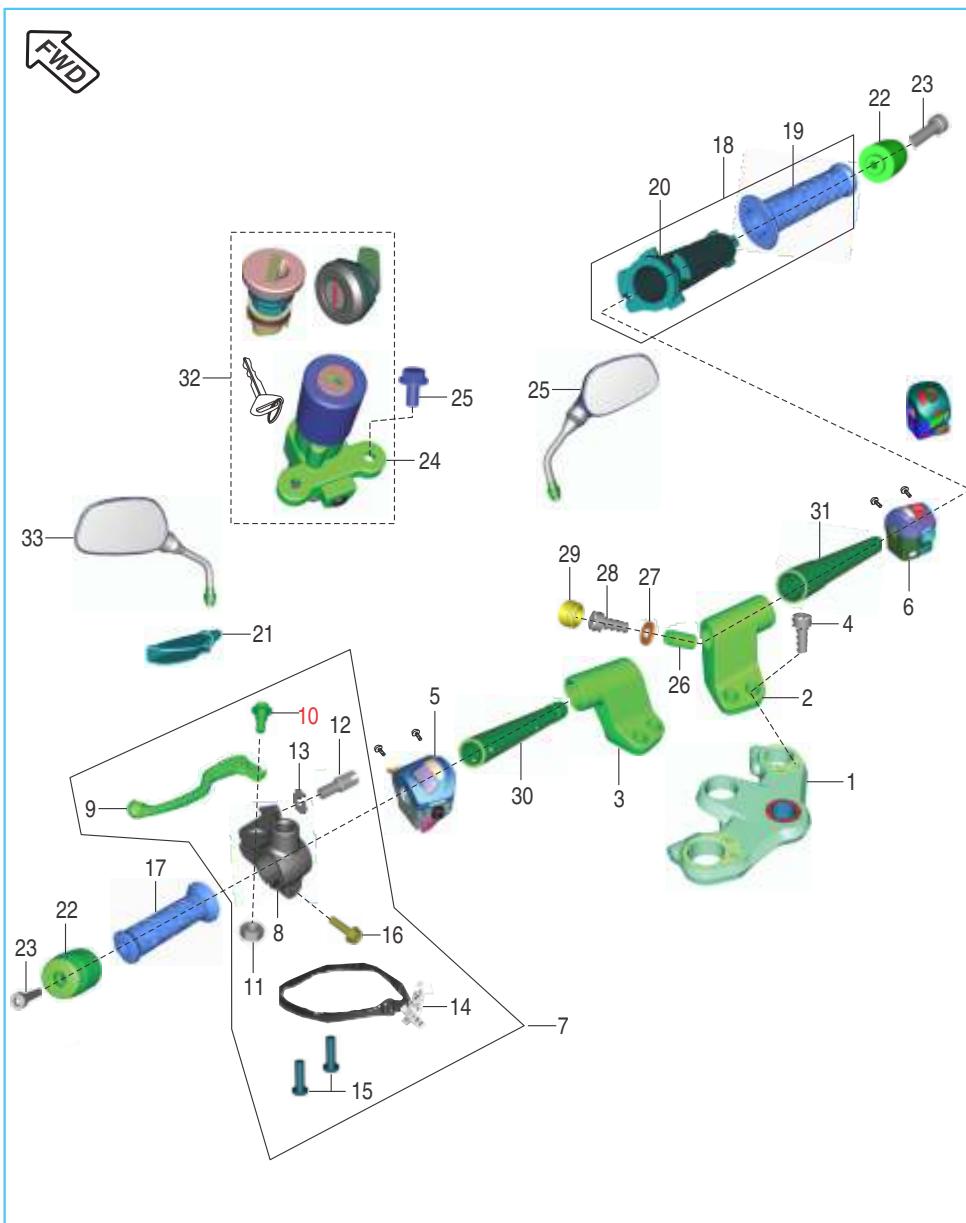

Front Wheel Direction

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-----------------------------|------|---------|
| 21 | DS 1910 52 | Lever Boot LH | 1 | |
| 22 | DK 1810 43 | Handle bar weight | 2 | |
| 23 | 39 2427 04 | Hex. Socket HD Cap Screw | 2 | |
| 24 | JB 4014 02 | Ignition Switch Assembly | 1 | |
| 25 | 39 1680 04 | Flange Bolt | 2 | |
| 26 | DK 1810 31 | Bush Silent Handle Bar Tube | 2 | |
| 27 | 39 1180 11 | Washer | 2 | |
| 28 | DK 1810 79 | Bolt | 2 | |
| 29 | DK 1810 36 | Plug Handle Holder | 2 | |
| 30 | DK 1810 46 | Handle Bar Tube Assembly LH | 1 | |
| 31 | DK 1810 47 | Handle Bar Tube Assembly RH | 1 | |
| 32 | DH 1811 30 | Lock Set | 1 | |
| 33 | DJ 2210 03 | Mirror Assly. LH | 1 | |
| 34 | DJ 2210 04 | Mirror Assly. RH | 1 | |

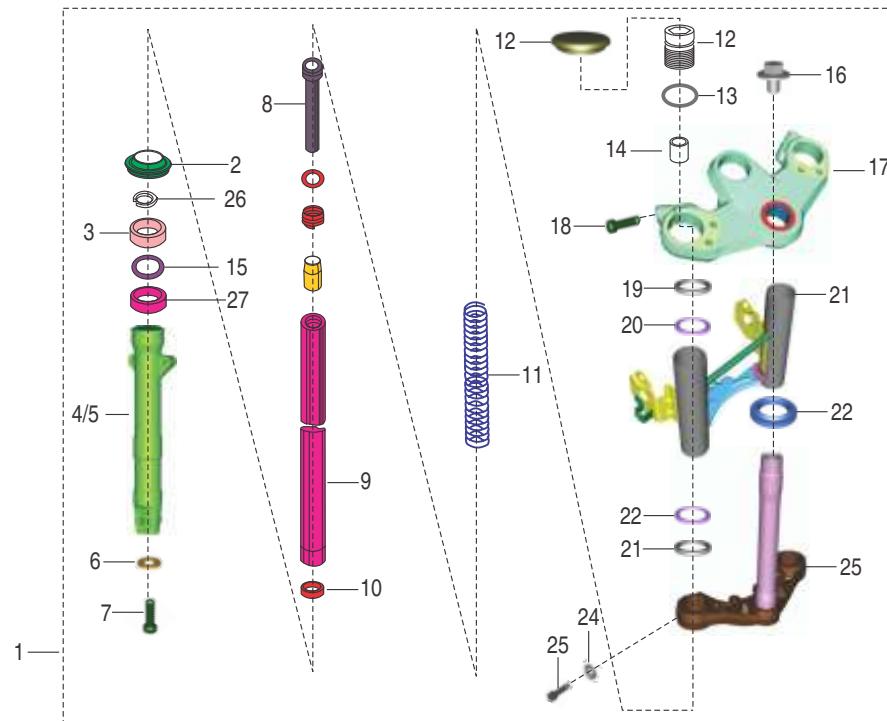

Front Fork


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------|------|---------|
| 1 | DK 1810 87 | Fork Assembly Front | 1 | |
| 2 | DK 1810 21 | Inner Dust Seal | 2 | |
| 3 | DK 1810 19 | Oil seal | 2 | |
| 4 | DK 1810 90 | Outer Tube LH | 1 | |
| 5 | DK 1810 91 | Outer Tube RH | 1 | |
| 6 | DK 1810 07 | Copper Washer | 2 | |
| 7 | DK 1810 08 | Bolt | 2 | |
| 8 | DK 1810 10 | Seat Pipe | 2 | |
| 9 | DK 1810 92 | Fork Pipe Spinning | 2 | |
| 10 | DK 1810 11 | Slide Bush | 2 | |
| 11 | DK 1810 73 | Spring Main Spring | 2 | |
| 12 | DK 1810 22 | Bolt fork | 2 | |
| 13 | DK 1810 23 | 'O' ring | 2 | |
| 14 | DK 1810 93 | Spacer Tube | 2 | |
| 15 | DK 1810 18 | Washer Seal | 2 | |
| 16 | 59 0400 05 | Bolt | 1 | |
| 17 | 56 DK33 Y9 | Upper Bracket | 1 | |
| 18 | DG 1810 08 | Socket Bolt | 2 | |
| 19 | JC 1810 23 | Cushion Rubber | 2 | |
| 20 | JC 1810 22 | Cover Trail B | 4 | |
| 21 | JC 1810 24 | Lamp Shade asly. | 1 | |
| 22 | DG 1810 45 | Bearing cone Upper | 1 | |
| 23 | DK 1810 24 | Under Bracket Sub Assembly | 1 | |
| 24 | DK 1810 25 | Spring washer | 2 | |
| 25 | DK 1810 28 | Bolt | 2 | |
| 26 | DK 1810 20 | Oil Seal Stopper | 2 | |
| 27 | DK 1810 17 | Guide Bush | 2 | |




Fuel Tank, Fuel Cock, Cap Tank & Fuel Gauge

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------|------|---------|
| 1 | DH 1811 30 | Lock Set EVAP Single | 1 | |
| 2 | KA CA05 16 | Hex. Socket HD Cap Bolt | 7 | |
| 3 | DJ 1410 56 | Fuel Cock (Export Market) | 1 | |
| 4 | DD 1412 27 | Bolt Flanged | 2 | |
| 5 | 39 0740 11 | Plain Washer | 2 | |
| 6 | DK 2010 65 | Tank Unit | 1 | |
| 7 | 39 2758 21 | Gasket Fuel Gauge | 1 | |
| 8 | KC GA05 05 | Nut Hex Flanged | 4 | |
| 9 | JC 1410 28 | Tube Fuel | 1 | |
| 10 | BA 1220 03 | Pipe Clip | 1 | |
| 11 | DH 1410 24 | Drain Tube | 1 | |
| 12 | DK 1810 48 | Clamp | 1 | |
| 13 | DH 1410 20 | Seat Tape | 1 | |
| 14 | DJ 1410 72 | Tube Tank To T Connector | 1 | |

FWD

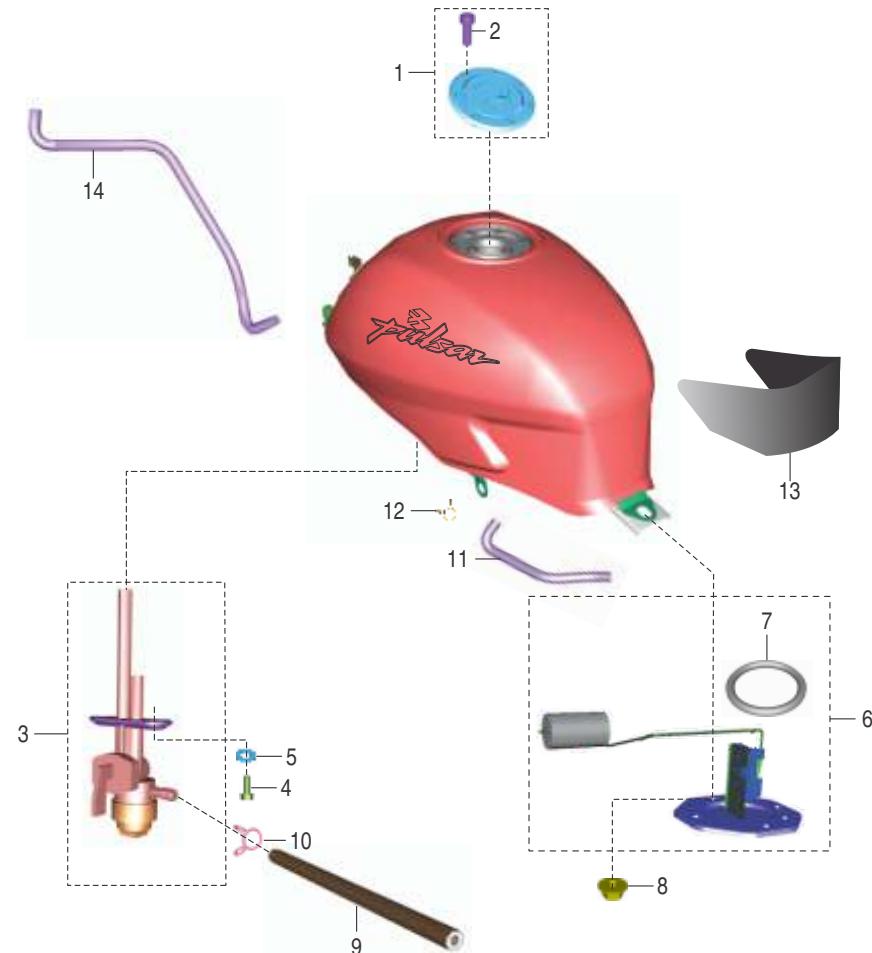

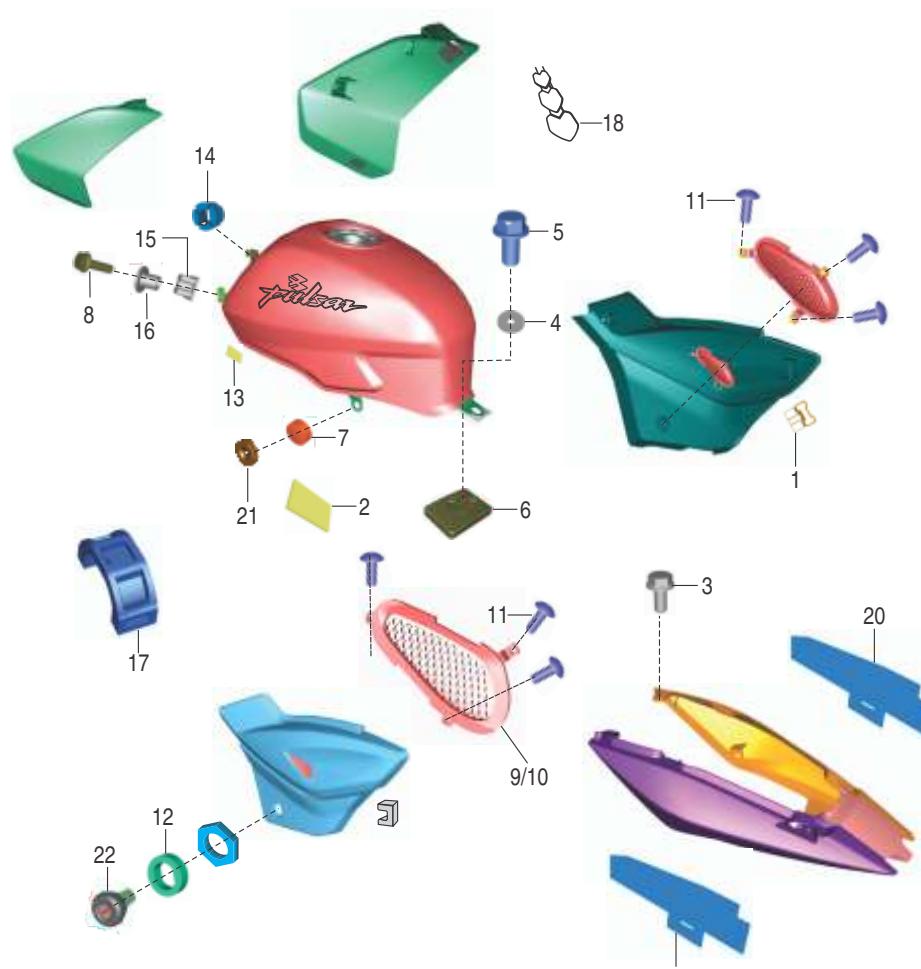


Fittings Petrol Tank Spoiler, Side Cover & Cover Seat

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------------------|------|---------|
| 1 | DH 1611 33 | Grommet Kit For Side Cover | 2 | |
| 2 | JW 1710 07 | Dual Lock Tape 3M - SIZE 15 x 20 | 2 | |
| 3 | 39 1943 04 | Bolt Flanged M6 | 2 | |
| 4 | 39 2424 11 | Plain Washer | 1 | |
| 5 | 39 1556 04 | Flange Bolt | 1 | |
| 6 | DH 1410 23 | Damper Rear | 1 | |
| 7 | DJ 1410 08 | Damper Front | 2 | |
| 8 | 39 1943 04 | Flanged Bolt M6 | 2 | |
| 9 | DK 1611 23 | Cover Side Mesh LH | 1 | |
| 10 | DK 1611 24 | Cover Side Mesh RH | 1 | |
| 11 | 59 0200 01 | Self Tap Screw | 6 | |
| 12 | 31 1610 18 | Damper | 2 | |
| 13 | JW 1710 07 | Dual Lock Tape 3M - SIZE 15 x 20 | 2 | |
| 14 | JC 1410 15 | Grommet Tank Cover | 2 | |
| 15 | JC 1410 17 | Grommet II Tank Cover | 2 | |
| 16 | JC 1410 16 | Collar Tank Cover | 2 | |
| 17 | DK 1410 17 | Damper Tank Middle | 1 | |
| 18 | DK 1410 15 | Tank Pad | 1 | |
| 19 | DK 1611 71 | Rubber Flap For Seat Cowl LH | 1 | |
| 20 | DK 1611 72 | Rubber Flap For Seat Cowl RH | 1 | |
| 21 | DH 1611 58 | Grommet Side Cover RR | 4 | |
| 22 | DH 1612 31 | Lock Side Cover | 1 | |

Seat Assembly & Seat Lock

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------------|------|---------|
| 1 | DK 2110 12 | Seat Assembly Complete front | 1 | |
| 2 | DK 2110 07 | Damper Seat Front | 1 | |
| 3 | DK 2110 09 | Damper For Seat | 4 | |
| 4 | DH 1610 46 | Lock Assembly Seat front | 1 | |
| 5 | DK 2110 14 | Seat Assembly Comp rear | 1 | |
| 6 | DD 2110 03 | Bracket Lock | 1 | |
| 7 | 39 1955 04 | Bolt flange | 2 | |
| 8 | DK 2110 04 | Damper Rear Seat I | 2 | |
| 9 | DS 2110 09 | Damper Rear Seat II | 2 | |
| 10 | DH 1612 33 | Reinf. Seat Lock | 1 | |
| 11 | DK 1614 22 | Bracket Seat Lock - Front Loose | 1 | |

FWD

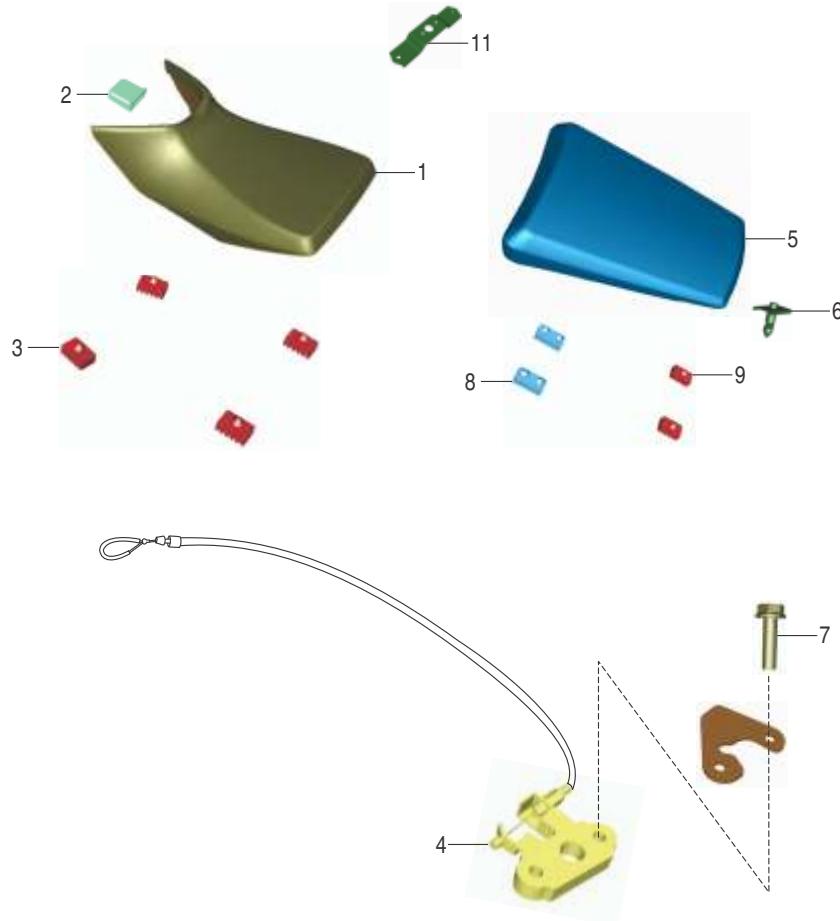

FWD

Front Wheel Direction

Plate No.: 43


Speedometer Assembly

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------------------|------|---------|
| 1 | DJ 1910 85 | Speedometer Assembly | 1 | |
| 2 | 39 1778 02 | Self Tapping Screw | 4 | |
| 3 | DJ 1811 19 | Speedo Meter Cover | 1 | |
| 4 | DJ 2011 74 | Trip Meter Knob | 1 | |
| 5 | DK 1612 09 | Tape I | 4 | |
| 6 | YD H190 02 | Top Cover With Sealing Ring | 1 | |
| 7 | DJ 2011 37 | Dust Cover - Speedo Harness Coupler | 1 | N.I. |




Cables

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------------------|------|---------|
| 1 | DJ 1910 61 | Cable Accelerator | 1 | |
| 2 | DJ 2012 18 | Assembly Speedo Sensor With 'O' Ring | 1 | |
| | JC 2010 43 | Assembly Speedo Sensor | 1 | |
| 3 | JC 1910 04 | Cable Clutch | 1 | |
| 4 | 59 2100 19 | 'O' Ring | 1 | |

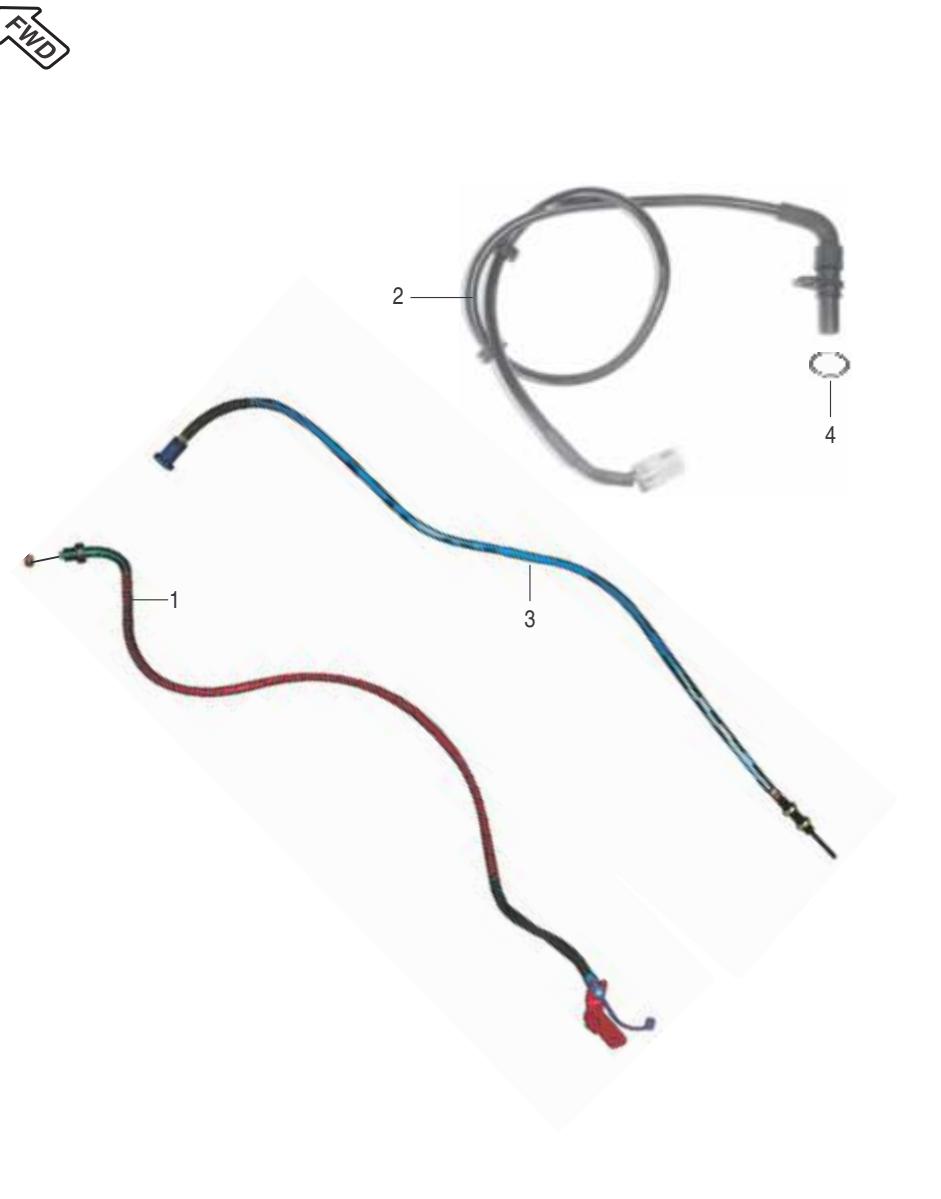

Leg Guards, Saree Guard & Grab Handle


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------|------|---------|
| 1 | DJ 2210 21 | Leg Gaurd RH | 1 | |
| 1A | DJ 2210 20 | Leg Gaurd LH | 1 | |
| 2 | 39 2310 04 | Flange bolt | 4 | |
| 3 | DK 1611 76 | Sari Guard Assly. | 1 | |
| 4 | 36 DK00 23 | Kit hardware saree guard | 1 | |
| 5 | DK 1612 17 | Grab handle LH | 1 | |
| 6 | DK 1612 18 | Grab handle RH | 1 | |
| 7 | 39 1681 04 | Bolt Flange | 4 | |
| 8 | DJ 1610 79 | Foam LH For grab | 1 | |
| 9 | DJ 1610 80 | Foam RH For grab | 1 | |
| 10 | 39 1608 04 | Hex Socket Hd Bolt - M10 | 1 | |
| 11 | 39 0296 15 | Hexagon Nut - M10 | 1 | |
| 12 | DD 2210 03 | Plug | 1 | |

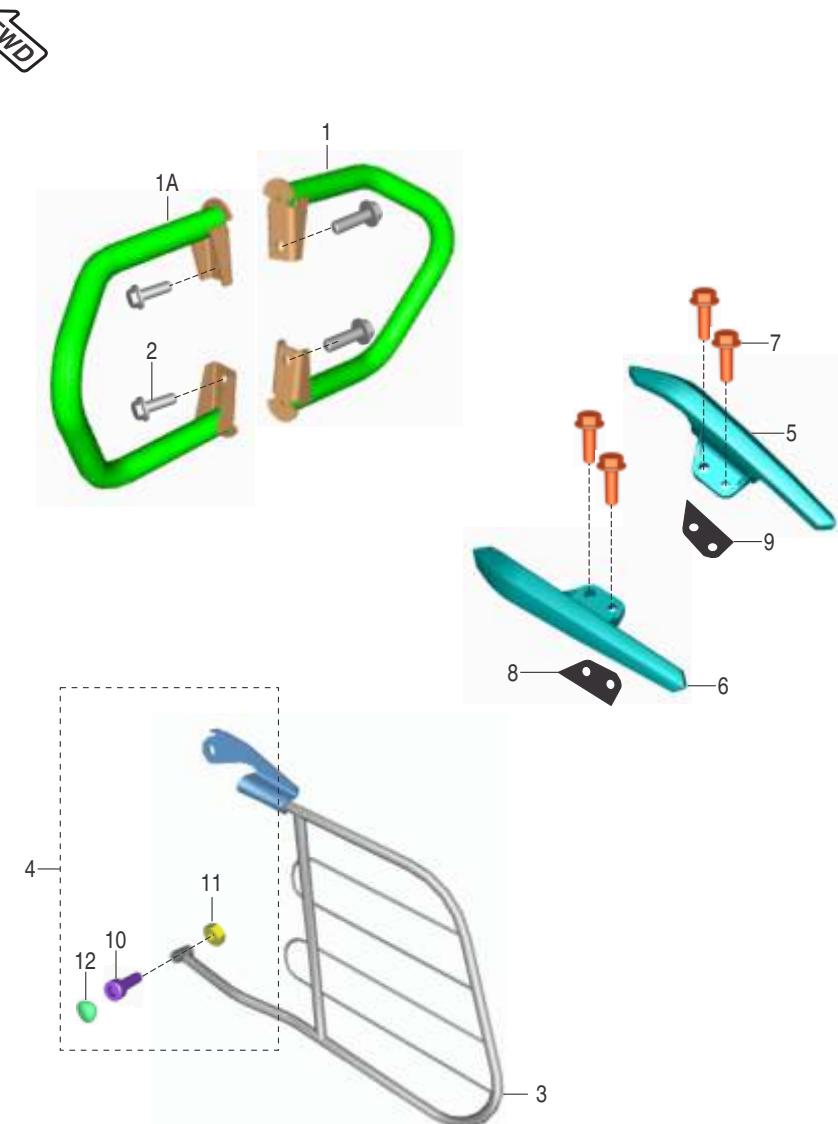


Chain Case

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|----------------------|------|---------|
| 1 | DK 1612 50 | Cover Chain Assembly | 1 | |
| 2 | 39 1680 04 | Bolt (Small) | 3 | |

FWD

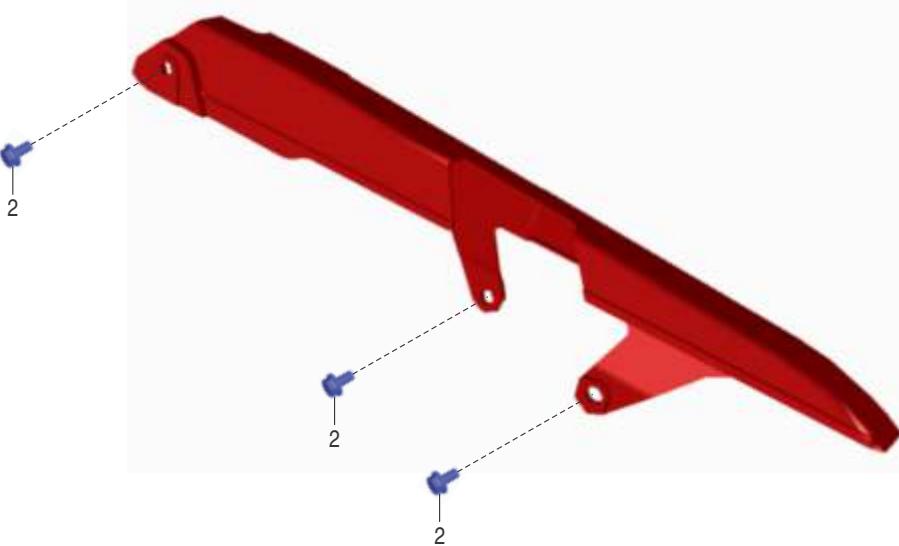

Head Lamp & Fairing

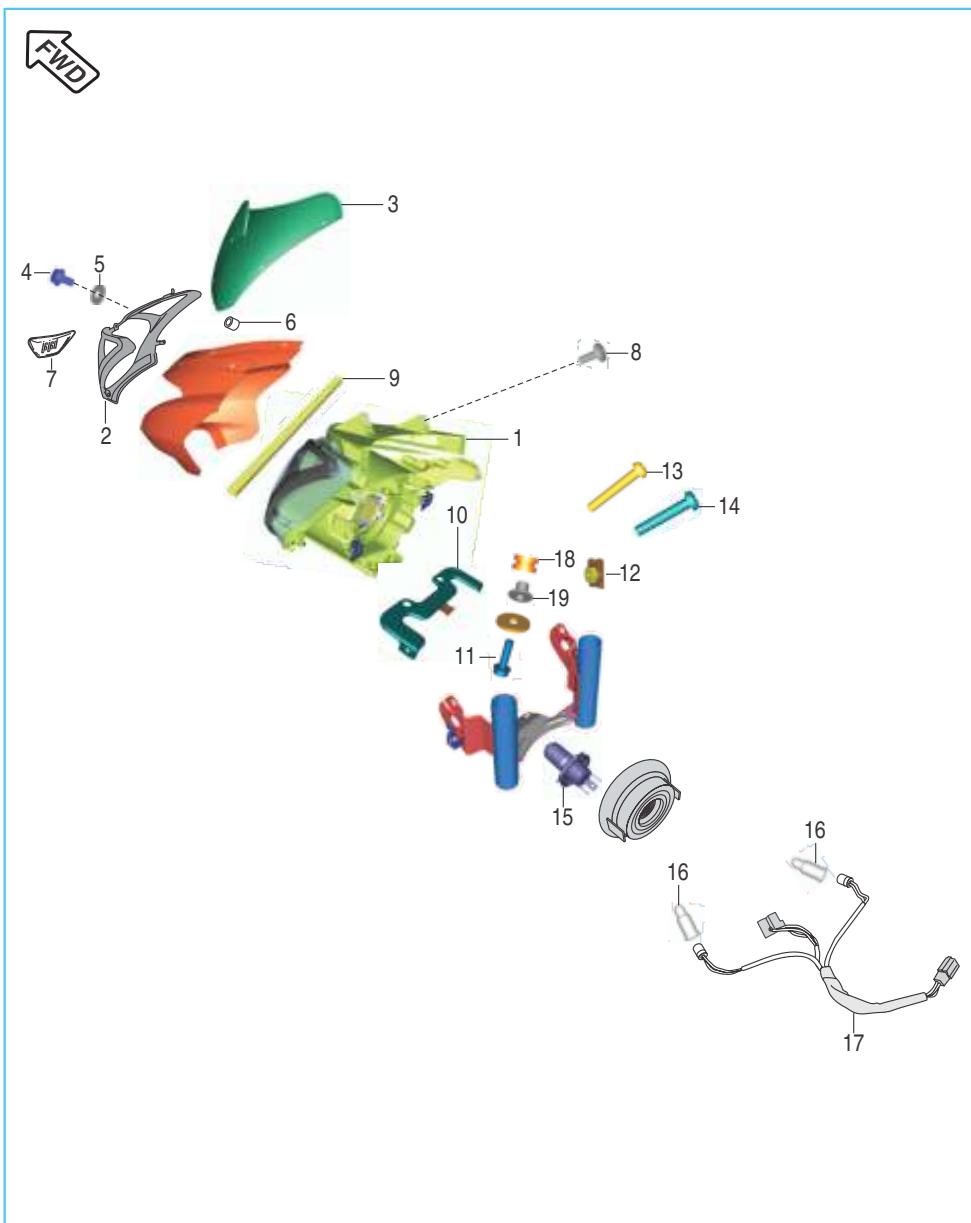


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--------------------------------|------|---------|
| 1 | DJ 2011 76 | Head Lamp Without Bulb | 1 | |
| | YD H190 01 | Head Lamp Without Bulb | 1 | |
| 2 | DJ 1811 20 | Head Lamp Mask | 1 | |
| 3 | DJ 1810 33 | Wind Shield | 1 | |
| 4 | DF 1810 98 | Bolt | 4 | |
| 5 | 39 2141 24 | Washer Nylon | 4 | |
| 6 | DL 1810 10 | Well Nut | 4 | |
| 7 | DJ 1810 37 | Decal Wind Shield | 1 | |
| 8 | 39 1907 01 | Mushroom Head Screw | 2 | |
| 9 | DJ 1810 69 | Packing Fairing | 1 | |
| 10 | DH 1810 52 | Fairing Mounting Upper Bracket | 1 | |
| 11 | KA DD06 25 | Bolt Flanged | 2 | |
| 12 | DJ 1810 65 | Clip Nut | 4 | |
| 13 | DJ 1811 30 | Screw Pan Cross | 2 | |
| 14 | 39 1524 01 | Screw Pan Cross | 2 | |
| 15 | CL 2010 23 | Lamp 12V 35/35W-HS1 | 1 | |
| 16 | DJ 2010 72 | Lamp - Position 12V / 5W | 2 | |
| 17 | DJ 2012 30 | Head Lamp Bulb Wiring Harness | 1 | |
| 18 | DJ 1810 64 | Grommet Fairing Mounting | 2 | |
| 19 | 30 2110 05 | Collar Fairing Mounting | 2 | |

Indicator Light Assembly


| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------------------------|------|---------|
| 1 | DJ 2012 07 | Blinker RR RH With 2P Coupler | 2 | |
| 2 | DJ 2012 06 | Blinker RR LH With 2P Coupler | 2 | |
| 3 | GH 2010 12 | Lamp 12V / 10W | 4 | |
| 4 | 39 1225 15 | Hex Nut Flange | 4 | |
| 5 | DK 1611 64 | Indicator Mounting Bracket Rear | 1 | |

FWD

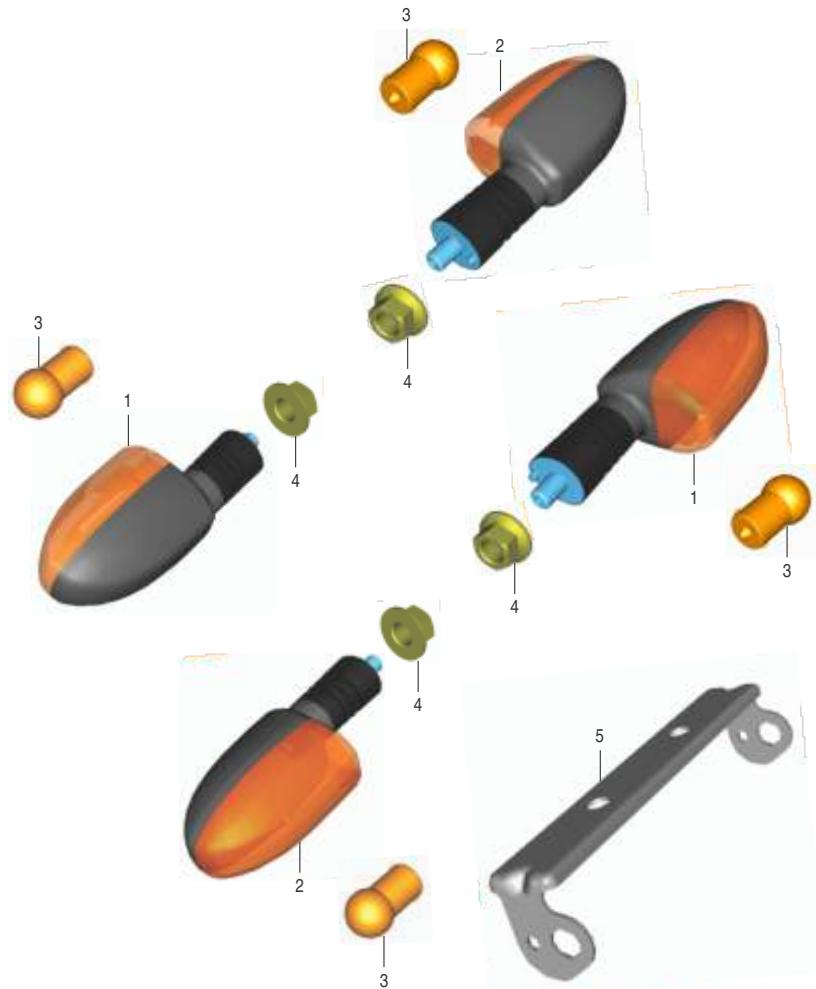


Tail Lamp Assembly & Front / Rear Number Plate

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-----------------------------------|------|---------|
| 1 | DK 2010 03 | LED Tail Lamp Assembly | 1 | |
| 2 | DK 1611 53 | Clip Nut | 4 | |
| 3 | 39 2451 11 | Plain Washer | 4 | |
| 4 | 59 0100 13 | Screw Pan Cross | 4 | |
| 5 | 39 1907 01 | Truss Screw | 2 | |
| 6 | 39 1972 15 | Nut Flange | 2 | |
| 7 | DJ 2010 72 | Lamp 12V-5W | 1 | |
| 8 | JW 4010 11 | Number Plate Illumination | 1 | |
| 9 | DJ 1610 72 | Rear Number Plate Bracket | 1 | |
| 10 | 36 DH40 96 | Kit Front Number Plate | 1 | |
| 11 | 36 PD00 56 | Kit Rear Number Plate | 1 | |
| 12 | JC 1810 26 | Number Plate Mounting Bracket | 1 | |
| 13 | KA DD06 25 | Bolt Flange | 2 | |
| 14 | DH 1612 93 | Grommet For Number Plate Mounting | 2 | |
| 15 | 30 2110 05 | Collar | 2 | |

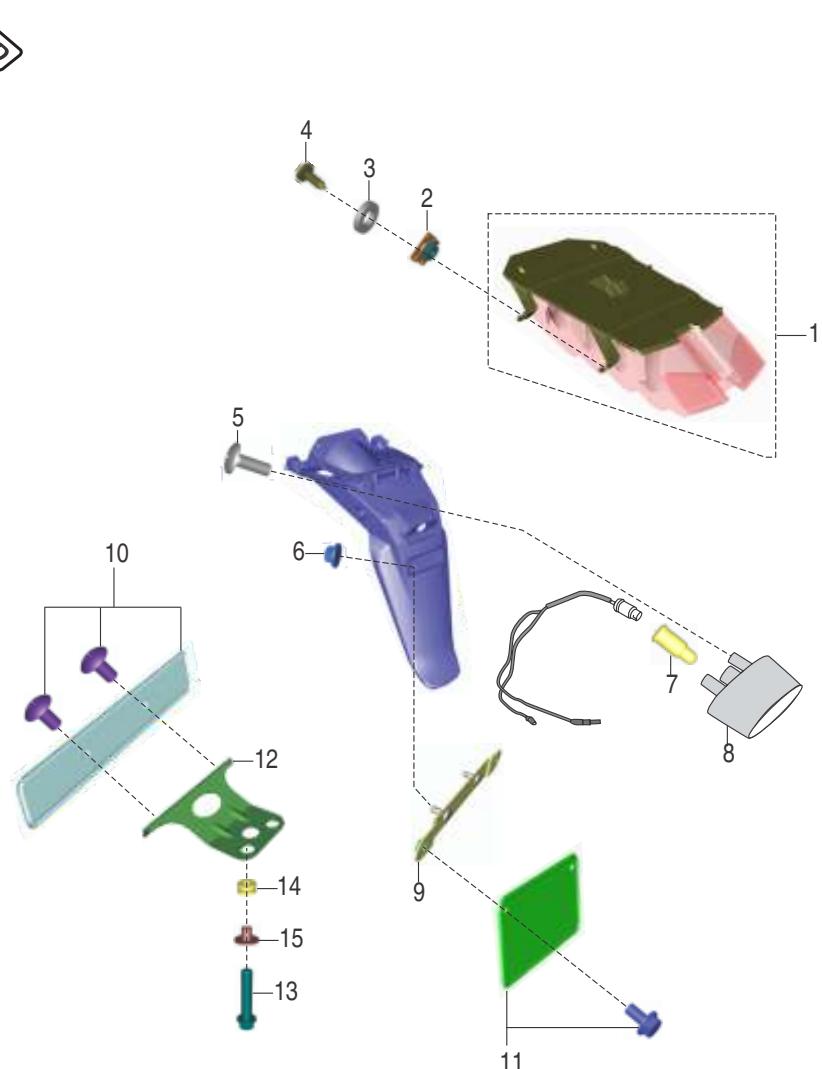

Electrical Equipments

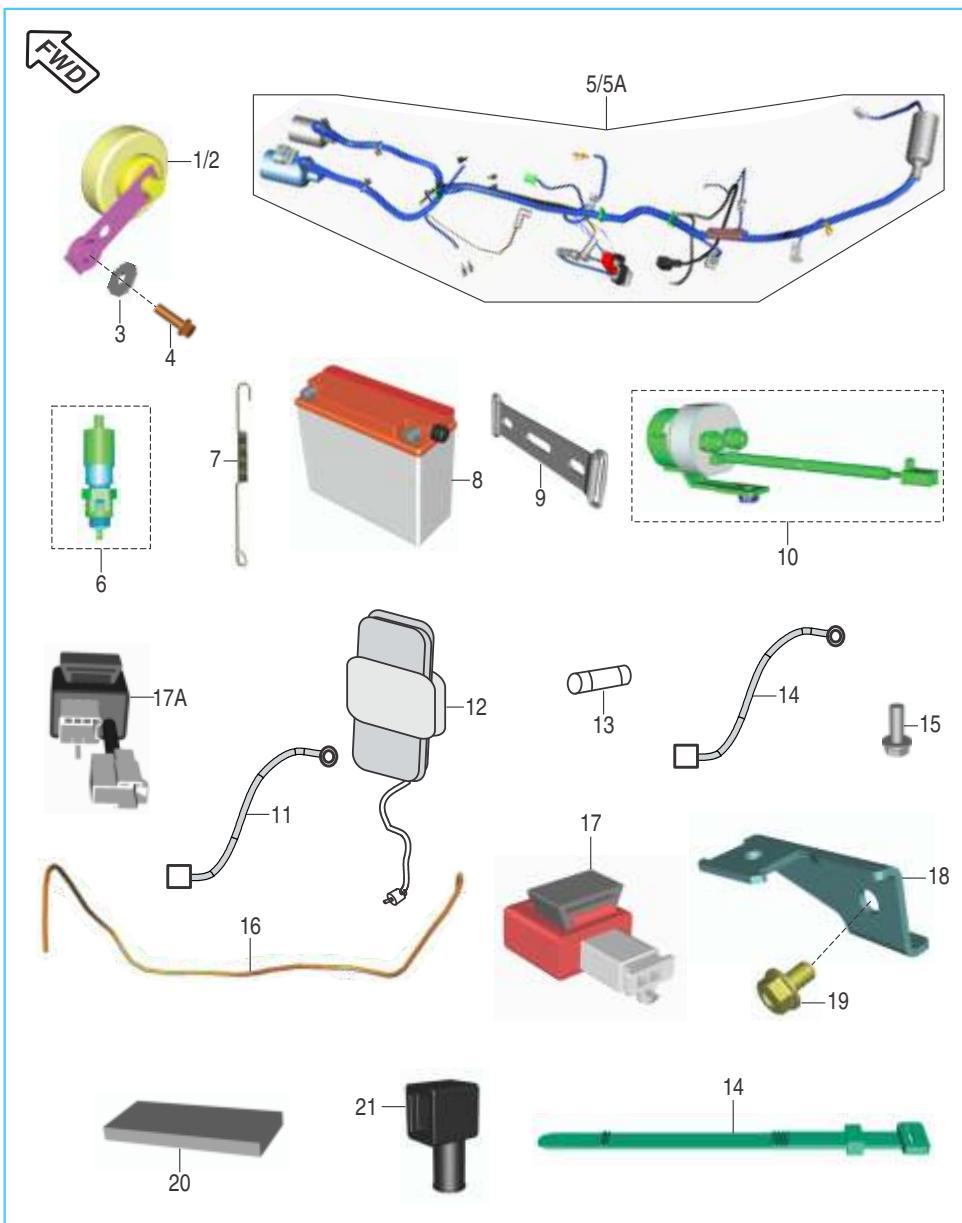

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|--|------|-----------|
| 1 | DK 2010 37 | Horn With LH Stay | 1 | |
| 2 | DK 2010 38 | Horn with RH stay | 1 | |
| 3 | 39 1507 11 | Plain Washer | 1 | |
| 4 | 39 1956 04 | Flange Bolt | 1 | |
| 5 | DJ 2012 60 | Wiring Harness UG | 1 | |
| 5A | DJ 2012 61 | Wiring Harness UG | 1 | AHO Model |
| 6 | 31 2010 79 | Rear Brake Switch | 1 | |
| 7 | DK 1910 14 | Spring Rear Brake Switch | 1 | |
| 8 | DJ 2011 25 | Battery (12V-9A) MF WET | 1 | |
| 9 | DJ 1612 47 | Band Battery | 1 | |
| 10 | DK 2010 78 | Starter Relay With Nut | 1 | |
| 11 | DJ 2011 40 | Cable Assembly (Battery To Earth) | 1 | |
| 12 | GF 2010 36 | Fuse Box Assembly | 1 | |
| 13 | 30 2010 85 | Fuse 15A | 2 | |
| 14 | 30 1910 48 | Band | 5 | |
| 15 | 39 1680 04 | Flange bolt | 1 | |
| 16 | JC 2010 27 | Cable Assembly St. Motor to St. Relay | 1 | |
| 17 | DS 2010 25 | Assembly DC Flasher | 1 | |
| 17A | JL 4020 04 | Light Control Module | 1 | AHO Model |
| 18 | DJ 1613 27 | Bracket LCM Unit (Vehicle without BCU) | 1 | |
| 19 | KA DF06 10 | Flange Bolt (Vehicle without BCU) | 1 | |
| 20 | JG 4018 08 | Foam Battery Bracket 35 x 15 x 3 | 3 | |
| 21 | AB 2010 17 | Cap (Battery) | 1 | |

Tool Kit

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|---------------|------|---------|
| 1 | DJ 2210 19 | Tool Kit | 1 | |
| 2 | DK 2210 24 | Band Tool Kit | 2 | |

FWD



FWD

Front Wheel Direction

Plate No.: 52

Painted Parts & Decals




| No. | Part No. | Description | Qty. | Remarks |
|-----|--|---|-----------------------|--|
| 1 | 52 DJ09 10 52 DJ10 39 52 DJ10 95 52 DJ11 19 52 DJ10 96 | Fuel Tank Eb Blk + Dcl Fuel Tank BS IV Royal Blue + Decal + L Fuel Tank BS IV Eb Blk + New Decal Fuel Tank Passion Red With Decal Fuel Tank Royal Blue + New Decal | 1 1 1 1 1 | From April 17 From April 17 From April 17 From April 17 |
| 2 | 52 DJ09 51 52 DJ09 56 52 DH15 27 52 DH15 99 52 DH15 28 | Assly Cover Side LH Eb Blk Assly Cover Side LH Royal Blue Side Cover LH Asly Dcl Kh. Eb. Bl Side Cover LH Assy Passion Red Side Cover LH Assembly Decal Royal Blue | 1 1 1 1 1 | From April 17 From April 17 From April 17 |
| 3 | 52 DJ09 52 52 DJ09 57 52 DH15 29 52 DH16 00 52 DH15 30 | Assembly Cover Side RH Eb Blk Assembly Cover Side RH Royal Blue Side Cover RH Wh Decal Khi Eb. Blk Side Cover RH Assembly Passion Red Side Cover RH With Decal Royal Blue | 1 1 1 1 1 | From April 17 From April 17 1From April 17 |
| 4 | 52 DJ09 04 52 DJ09 42 52 DH15 31 52 DH16 01 52 DH15 32 | Fairing Ebony Black With Dcl Fairing Royal Blue + Dcl Fairing With Khi Eb. Blk Dcl Fairing With Decal Passion Red Fairing With Royal Blue Decal | 1 1 1 1 1 | From April 17 From April 17 From April 17 |
| 5 | 52 DJ05 65 56 DK05 7Q 56 DK05 4R | Front Fender Assly Ebony Black Front Fender Royal Blue Painted Fender Front - Passion Red | 1 1 1 | From April 17 |
| 6 | 52 DJ09 09 52 DJ09 45 52 DJ10 74 52 DJ11 15 52 DJ10 72 | Seat Cowl Ebony Black With Dcl Seat Cowl Royal Blue + Dcl Seat Cowl Ebony Black + New Dcal Seat Cowl Painted With Decal Seat Cowl Royal Blue + New Decal | 1 1 1 1 1 | From April 17 From April 17 From April 17 |



Plate No.: 52

Painted Parts & Decals

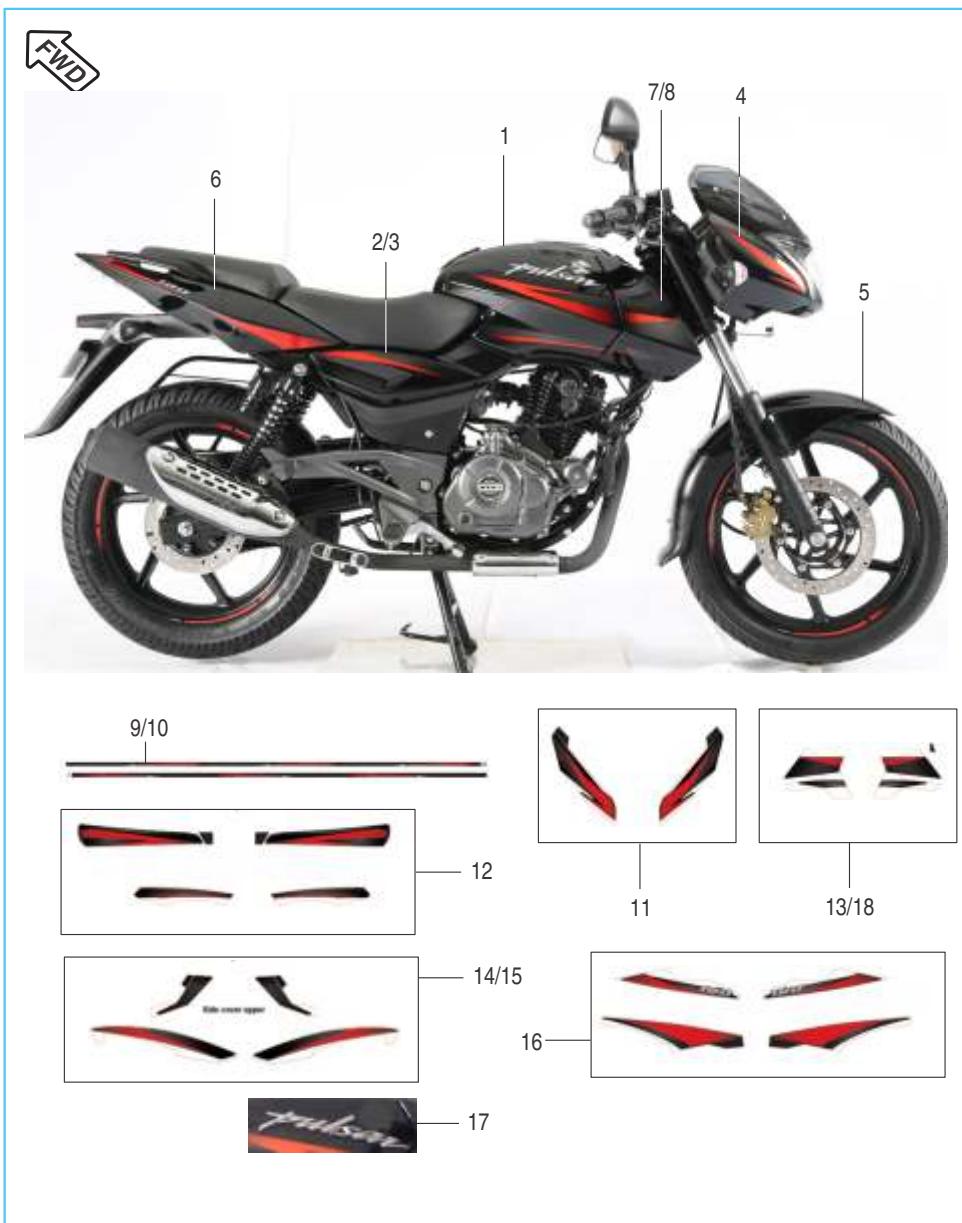

| No. | Part No. | Description | Qty. | Remarks |
|-----|--|---|---|---|
| 7 | 52 DJ09 05 52 DJ09 42 52 DJ10 85 52 DJ11 17 52 DJ10 89 52 DJ09 43 DH 0101 85 DH 0102 19 DH 0102 01 | Flap LH Ebony Black With Decal Fairing Royal Blue Flap LH Ebony Black + New Dcal Tank Flap LH + Decal - Passion Red Flap LH Royal Blue + New Decal Flap LH Royal Blue + Dcl Decal Tank Spoiler LH Blk - Silver Decal Spoiler Tank LH Red - Silver Decal Tank Spoiler LH Blue - Silver | 1 1 1 1 1 1 1 1 1 | From April 17 From April 17 From April 17 |
| 8 | 52 DJ09 06 52 DJ10 87 52 DJ11 18 52 DJ10 91 DH 0101 86 DH 0102 20 | Flap RH Ebony Black With Decal Flap RH Ebony Black + New Dcal Tank Flap RH + Decal - Passion Red Flap RH Royal Blue + New Decal Decal Tank Spoiler RH Blk - Silver Decal Tank Spoiler RH Red - Silver | 1 1 1 1 1 1 | From April 17 From April 17 From April 17 |
| 9 | DH 0101 20 DH 0101 42 DH 0102 09 | Decal Wheel LH-Red Decal Wheel LH-Blue Decal Wheel LH Silver | 2 2 2 | From April 17 |
| 10 | DH 0101 21 DH 0101 43 DH 0102 10 | Decal Wheel RH-Red Decal Wheel RH-Blue Decal Wheel RH Silver | 2 2 2 | From April 17 |
| 11 | 36 DJ40 63 36 DJ40 69 36 DJ40 75 36 DH41 25 36 DJ40 78 | Kit Fairing Decal Red Kit Fairing Decal Royal Blue Kit Decal Fairing Ebony Black Kit Decal Fairing Passion Red Kit Decal Fairing Royal Blue | 1 1 1 1 1 | From April 17 From April 17 From April 17 |



Front Wheel Direction

| No. | Part No. | Description | Qty. | Remarks |
|-----|------------|-------------------------------------|------|---------------|
| 12 | 36 DJ40 64 | Kit Tank Decal Red | 1 | |
| | 36 DJ40 68 | Kit Tank Decal Royal Blue | 1 | |
| | 36 DJ40 76 | Kit Decal Tank Ebony Black | 1 | From April 17 |
| | 36 DH41 26 | Kit Decal Tank Passion Red | 1 | |
| | 36 DJ40 79 | Kit Decal Tank Royal Blue | 1 | |
| 13 | 36 DJ40 70 | Kit Tank Flap RH Royal Blue | 1 | |
| | 36 DJ40 71 | Kit Tank Flap LH Royal Blue | 1 | |
| | DH 0101 08 | Decal Tank Flap Upper Red LH | 1 | |
| | DH 0101 09 | Decal Tank Flap Upper Red RH | 1 | |
| 14 | 36 DJ40 65 | Kit LH Side Cover Decal Red | 1 | |
| | 36 DK01 25 | Kit LH Side Cover Decal Royal Blue | 1 | |
| | 36 DK01 37 | Kit Decal Side Cover LH Ebony Black | 1 | From April 17 |
| | 36 DH41 28 | Kit Decal Side Cover LH Passion Red | 1 | |
| | 36 DK01 39 | Kit Decal Side Cover LH Royal Blue | 1 | |
| 15 | 36 DJ40 66 | Kit RH Side Cover Decal Red | 1 | |
| | 36 DK01 26 | Kit RH Side Cover Decal Royal Blue | 1 | |
| | 36 DK01 38 | Kit Decal Side Cover RH Ebony Black | 1 | From April 17 |
| | 36 DH41 29 | Kit Decal Side Cover RH Passion Red | 1 | |
| | 36 DK01 40 | Kit Decal Side Cover RH Royal Blue | 1 | |
| 16 | 36 DJ40 67 | Kit Seat Cowl Decal Red | 1 | |
| | 36 DJ40 72 | Kit Seat Cowl Royal Blue | 1 | |
| | 36 DJ40 77 | Kit Decal Seat Cowl Ebony Black | 1 | From April 17 |
| | 36 DJ40 83 | Kit Decal Seat Cowl Passion Red | 1 | |
| | 36 DJ40 81 | Kit Decal Seat Cowl Royal Blue | 1 | |
| 17 | DJ 1614 16 | Tank Decal 'Pulsar' | 2 | |
| 18 | DH 0102 00 | Decal Tank Lower RH Blue Silver | 1 | From April 17 |

Consumable Parts



| No. | Part No. | Description | Supply Unit | Application |
|-----|--|--|------------------------------|--|
| 1 | 36 0010 61 83 0204 11 83 0203 34 | Bajaj Genuine Oil 10W50 Bajaj Genuine Oil 10W30 Bajaj Genuine Oil 20W50 (BGO to be ordered to HPCL) | 1.5 Ltr. 1 Ltr. 1 Ltr. | Dominar 400 100cc Models 125cc and above models |
| 2 | 36 0010 58 | Bajaj Coolant Koolex | 1 Ltr. | Coolant Top-up/Replace |
| 3 | 36 DH40 61 83 0203 25 | Brake Fluid DOT4 Brake Fluid DOT3 | 100 ml 100 ml | Disc Brake Top-up/Replace Disc Brake Top-up/Replace |
| 4 | 36 0010 52 | Silicon grease | 3 gm | Caliper Pin |
| 5 | 83 0204 73 83 0203 68 | Grease Petamo GHY 441 Grease Molycoat | 3 gm 200 gm | Water Pump Seals For Starter Clutch Lubrication |
| 6 | 36 0010 52 | HP Lithon RR Grease | 10 gm | Steering Race |
| 7 | 83 0201 73 | Multi Purpose Grease (Local Purchase) | -- | Lubrication of Clutch Lever, Brake Lever, Brake Pedal & Side Stand |
| 8 | 36 0010 55 | Chain Lubricant HP Make | 1 kg | Non - Sealed Chain Lubrication |
| 9 | 36 0010 62 | Liquid gasket L5910 | 50 ml | Crankcase Joining |
| 10 | 36 3140 04 | Fork oil | 160 ml | Front Fork Top-up/Replace |
| 11 | 36 DH40 29 | Kit Spray Chain Lub | 100 ml | Sealed Drive Chain |
| 12 | 36 DH40 71 | Wonderfill Chain Spray | 100 ml | Sealed Drive Chain |

| | | | | | |
|----|---|----|---|----|---|
| 13 |  | 14 |  | 15 |  |
| 16 |  | 17 |  | 18 |  |
| 19 |  | 20 |  | 21 |  |
| 22 |  | 23 |  | 24 |  |

| No. | Part No. | Description | Supply Unit | Application |
|-----|---------------|---|-------------|---|
| 13 | 36 DH40 72 | Rust Remover Spray Make - Zorric 88 & Wonder fill easiner | 100 ml | For Removing Rust from Components |
| 14 | 76 0109 36 | Loctite Thread locker 243 | 50 ml | For Screws & Bolts |
| 15 | 76 0109 37 | Loctite retaining compound 638 | 50 ml | For Screws & Bolts |
| 16 | 37 0043 52 | Touch up paint slate grey | 440 ml | Touch up of Frame, Swing Arm & Step Holder |
| 17 | 37 0043 53 | Touch up paint Matte Silk black | 440 ml | Touch up of Grab Handle, Handle Bar & Handle Holder |
| 18 | 36 0010 60 | Kibatsu touch up paint | 400 cc | Touch up of Cylinder head, Block & Alloy Wheels |
| 19 | 37 2240 18 | Paint Bottle Schwartz Black | -- | P-200NS Frame Touch-up |
| 20 | 75 6802 36 NA | Petroleum Jelly (Local Purchase) Distilled Water (Local Purchase) | 1 Ltr. | For Battery Terminals For Battery Level Top-up |
| 21 | NA | SAE 90 oil (Local Purchase) | - | |
| 22 | 62 3050 84 | WD40 Spray (Local Purchase) | 400 ml | Electrical Contact Cleaning Spray |
| 23 | 36 0010 56 | Carburetor Cleaning Spray | -- | For Cleaning Carburetor |
| 24 | 37 2540 39 | Corrosion Protection Spray Proto quick LTP902 (To be ordered on Vendor) | -- | For Preventing vehicle parts from rusting |



Kit List

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Sr No | Kit Part No. | Kit Description | Consisting of Following Parts | | |
|-------|--------------|----------------------------|-------------------------------|-------------------------------|---------|
| | | | Part No. | Description | Qty/Kit |
| 1 | 36DS1001 | Cyl.Head O Ring Kit | 39239121 | O Ring (Cover tappet) | 2 |
| | | | 39128321 | O ring | 2 |
| 2 | 36DJ1004 | Valve Kit | DJ101124 | Valve Intake | 1 |
| | | | DJ101125 | Valve Exhaust | 1 |
| 3 | DK101326 | Valve Repair Kit | DK101247 | Retainer valve spring | 2 |
| | | | DK101108 | Spring valve inner | 2 |
| | | | DK101110 | Spring valve outer | 2 |
| | | | DK101246 | Seat valve spring | 2 |
| 4 | 36DK0039 | Guide Chain Kit | DH101017 | Guide chain (Tight) | 1 |
| | | | DK101059 | Guide Chain (slack) | 1 |
| 5 | 36DK0038 | Set primary drive & driven | DH101628 | Gear primary drive | 1 |
| | | | DK101561 | Clutch Housing | 1 |
| 6 | 36DH4019 | Kit centrifugal oil filter | 39220011 | Washer | 1 |
| | | | DH101234 | Gasket centrifugal oil filter | 1 |
| | | | DH101640 | Oval screw | 1 |
| | | | Dh101066 | Join oil dealivery | 1 |
| | | | DH101067 | Spring oil delivery | 1 |
| | | | 39219908 | Pin oil delivery joint | 1 |
| 10 | 36DH1007 | Set of Plate | DH101283 | Plate Damper | 1 |
| | | | DH101293 | Plate Damper Cover LH RR | 1 |
| 11 | 36DH4010 | Kit hardware air cleaner | DH121020 | Bracket lock | 1 |
| | | | 01110609 | Plain washer | 1 |
| | | | 39178001 | Screw pan cross | 1 |
| | | | 39177304 | Bolt flange | 4 |
| | | | 31121043 | Coller | 3 |
| | | | 39071111 | Plain washer | 3 |
| 12 | 36DK0015 | Kit element air filter | DK121002 | Element air filter fine | 1 |
| | | | DK121003 | Element air filter coarse | 1 |
| 13 | 36DH4011 | Kit hardware shield | DH101301 | Seal shield muflar | 2 |
| | | | DH101395 | Trust screw | 2 |
| | | | DH101481 | Grommet shield | 1 |
| 14 | 36DK0009 | Kit hardware silencer | 39185004 | Flange bolt | 1 |
| | | | 39242511 | Plain washer | 1 |
| | | | DD161071 | U nut | 1 |

Kit List

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Sr No | Kit Part No. | Kit Description | Consisting of Following Parts | | |
|-------|--------------|------------------------------|-------------------------------|--------------------------|---------|
| | | | Part No. | Description | Qty/Kit |
| | | | DH161155 | Damper silencer | 1 |
| | | | DH161157 | Tube silencer mounting | 1 |
| 15 | 36DK0011 | Kit hardware engine mounting | 39231204 | Bolt flange | 4 |
| | | | 39197015 | Nut flange | 8 |
| | | | 39241304 | Bolt flange | 1 |
| 18 | 36DK0013 | Kit hardware pillion | DH161245 | U Nut | 3 |
| | | | DJ161186 | Plait side pillion stape | 2 |
| | | | DH161061 | Pin pillion set | 2 |
| 19 | 36JC0007 | Kit lever brake | 30141031 | "O" ring | 2 |
| | | | 39104011 | Plain washer | 2 |
| | | | 39078408 | Split pin | 2 |
| | | | 01170122 | "O" ring | 1 |
| | | | JC151006 | Indicator | 1 |
| 20 | 36DK0036 | Chain sprocket kit | JC151007 | Lever brake | 1 |
| | | | 39244704 | Hex. head bold | 1 |
| | | | 39079815 | Nut | 1 |
| | | | DJ151110 | Sprocket (36 teeth) | 1 |
| | | | DK151010 | Chain | 1 |
| 23 | 36JC0006 | Kit hardware rod bracket | DV101048 | Sprocket Drive | 1 |
| | | | 30191038 | Pin | 1 |
| | | | 39019811 | Plain washer | 1 |
| | | | 39080808 | Split pin | 1 |
| | | | JC191008 | Spring | 1 |
| 24 | 36DK0018 | Kit hardware rod torque | JC191006 | Pin | 1 |
| | | | JC191007 | Brake adjustment nut | 1 |
| | | | 39078912 | Spring washer | 2 |
| | | | 39069415 | Nut lock | 2 |
| | | | 39080708 | Pin snap | 2 |
| 25 | 36DK0019 | Kit hardware holder LH | 39154011 | Plain washer | 1 |
| | | | 30191024 | Screw | 1 |
| | | | 30191017 | Nut | 1 |
| | | | 39021911 | Plain washer | 1 |
| | | | 39072504 | Hex bold | 1 |
| 26 | 36DH1601 | Grommet kit for side cover | DH161158 | Grommet side cover | 4 |

Kit List

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Sr No | Kit Part No. | Kit Description | Consisting of Following Parts | | |
|-------|--------------|-------------------------------|-------------------------------|-------------------------------|---------|
| | | | Part No. | Description | Qty/Kit |
| 27 | 36DH4020 | Kit hardware mounting bracket | DH161133 | Grommet side cover rear | 2 |
| | | | DJ181029 | Collar faring mounting | 6 |
| | | | DJ181064 | Grommet fearing mounting | 6 |
| | | | 39021111 | Plain washer | 4 |
| | | | 39155204 | Flange bolt | 4 |
| | 36DJ4068 | KIT TANK DCL R BLUE K2 | DH010126 | DECAL TANK UPPER LH BLUE | 1 |
| | | | DH010128 | DECAL TANK LOWER LH BLUE | 1 |
| | | | DH010127 | DECAL TANK UPPER RH BLUE | 1 |
| | | | DH010129 | DECAL TANK LOWER RH BLUE | 1 |
| | 36DJ4069 | KIT FAIRING DCL R BLUE K2 | DH010124 | DECAL FAIRING LH BLUE | 1 |
| | | | DH010125 | DECAL FAIRING RH BLUE | 1 |
| | 36PD0030 | KIT FRICTION PLATE-A101 | DK101566 | CLUTCH FRICTION DISK (CFD) | 4 |
| | | | PD551419 | DISK C FRICTION CLUTCH | 1 |
| | | | DK101568 | CLUTCH FRICTION DISK-B | 1 |
| | 36JG0011 | KIT STEERING HEAD BEARING | DK181050 | CAGE BEARING STEERING TOP | 1 |
| | | | DG181045 | BEARING CONE :- UPPER | 1 |
| | | | DG181005 | BEARING CONE | 1 |
| | | | DG181003 | WASHER | 1 |
| | | | DG181004 | SEAL - OIL | 1 |
| | | | DK181051 | CAGE BEARING STEERING BOTTOM | 1 |
| | | | DG181047 | BEARING RACE - LOWER | 1 |
| | | | DG181046 | BEARING RACE - UPPER | 1 |
| | 36DJ4070 | KIT TANK FLAP RH R BLUE K2 | DH010131 | DECAL FLAP TANK UPPER RH BLUE | 1 |
| | | | DH010133 | DECAL FLAP TANK LOWER RH BLUE | 1 |
| | 36DJ4071 | KIT TANK FLAP LH R BLUE K2 | DH010132 | DECAL FLAP TANK LOWER LH BLUE | 1 |
| | | | DH010130 | DECAL FLAP TANK UPPER LH BLUE | 1 |

Kit List

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Sr No | Kit Part No. | Kit Description | Consisting of Following Parts | | |
|-------|--------------|----------------------------|-------------------------------|---------------------------------|---------|
| | | | Part No. | Description | Qty/Kit |
| | 36DJ4072 | KIT S COWL R BLUE K2 | DJ010104 | DECAL SEAT COWL UPPER LH BLUE | 1 |
| | | | DJ010105 | DECAL SEAT COWL UPPER RH BLUE | 1 |
| | | | DH010139 | DECAL SEAT COWL LOWER RH BLUE | 1 |
| | | | DH010138 | DECAL SEAT COWL LOWER LH BLUE | 1 |
| | 36DJ4063 | FAIRING DCL RED | DH010102 | DECAL FAIRING BLACK LH | 1 |
| | | | DH010103 | DECAL FAIRING BLACK RH | 1 |
| | 36DJ4064 | TANK DCL RED | DH010104 | DECAL TANK UPPER BLACK LH | 1 |
| | | | DH010105 | DECAL TANK UPPER BLACK RH | 1 |
| | | | DH010106 | DECAL TANK LOWER BLACK LH | 1 |
| | | | DH010107 | DECAL TANK LOWER BLACK RH | 1 |
| | 36DJ4065 | LH SIDE C DCL RED | DH010112 | DECAL COVER SIDE UPPER BLACK LH | 1 |
| | | | DH010114 | DECAL COVER SIDE LOWER BLACK LH | 1 |
| | 36DJ4066 | RH SIDE C DCL RED | DH010115 | DECAL COVER SIDE LOWER BLACK RH | 1 |
| | | | DH010113 | DECAL COVER SIDE UPPER BLACK RH | 1 |
| | 36DJ4067 | S COWL DCL RED | DH010116 | DECAL COWL SEAT LOWER BLACK LH | 1 |
| | | | DH010117 | DECAL COWL SEAT LOWER BLACK RH | 1 |
| | | | DJ010102 | DECAL COWL SEAT UPPER BLACK LH | 1 |
| | | | DJ010103 | DECAL COWL SEAT UPPER BLACK RH | 1 |
| | 36DJ4062 | CYL HEAD WITH COVER SAI-K2 | DJ101367 | COVER COMPLETE CYLINDER HEAD | 1 |
| | | | DJ101708 | CYLINDER HEAD COMP _SAI | 1 |

Amendment Sheet

BAJAJ
pulsar DTS-i 180 UG, BS IV

AMENDMENT SHEET (PARTS ADDED)

Amendment Sheet

BAJAJ
pulsar DTS-i 180 UG, BS IV

AMENDMENT SHEET (PARTS DELETED)

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 22 1504 51 | 19 | 54 |
| 30 1410 31 | 12 | 54 |
| 30 1410 31 | 22 | 54 |
| 30 1510 82 | 12 | 68 |
| 30 1611 57 | 2 | 58 |
| 30 1910 17 | 13 | 76 |
| 30 1910 48 | 14 | 102 |
| 30 2010 85 | 13 | 102 |
| 30 2110 05 | 19 | 96 |
| 30 2110 05 | 15 | 100 |
| 31 1011 06 | 16 | 26 |
| 31 1011 73 | 4 | 14 |
| 31 1210 06 | 9 | 12 |
| 31 1610 18 | 12 | 84 |
| 31 2010 79 | 2 | 74 |
| 31 2010 79 | 6 | 102 |
| 33 1410 08 | 3 | 4 |
| 36 DH19 02 | 15 | 64 |
| 36 DH40 10 | 2 | 40 |
| 36 DH40 11 | 3 | 38 |
| 36 DH40 19 | 13 | 14 |
| 36 DH40 30 | 3 | 10 |
| 36 DH40 48 | 1 | 64 |
| 36 DH40 96 | 10 | 100 |
| 36 DH41 25 | 11 | 108 |
| 36 DH41 26 | 12 | 110 |
| 36 DH41 28 | 14 | 110 |
| 36 DH41 29 | 15 | 110 |
| 36 DJ10 04 | 7 | 8 |
| 36 DJ40 82 | 1 | 28 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 36 DJ40 31 | 1 | 64 |
| 36 DJ40 32 | 9 | 66 |
| 36 DJ40 33 | 10 | 66 |
| 36 DJ40 63 | 11 | 108 |
| 36 DJ40 64 | 12 | 110 |
| 36 DJ40 65 | 14 | 110 |
| 36 DJ40 66 | 15 | 110 |
| 36 DJ40 67 | 16 | 110 |
| 36 DJ40 68 | 12 | 110 |
| 36 DJ40 69 | 11 | 108 |
| 36 DJ40 70 | 13 | 110 |
| 36 DJ40 71 | 13 | 110 |
| 36 DJ40 72 | 16 | 110 |
| 36 DJ40 75 | 11 | 108 |
| 36 DJ40 76 | 12 | 110 |
| 36 DJ40 77 | 16 | 110 |
| 36 DJ40 78 | 11 | 108 |
| 36 DJ40 79 | 12 | 110 |
| 36 DJ40 81 | 16 | 110 |
| 36 DJ40 83 | 16 | 110 |
| 36 DK00 09 | 6 | 38 |
| 36 DK00 13 | 6 | 54 |
| 36 DK00 13 | 15 | 54 |
| 36 DK00 23 | 4 | 92 |
| 36 DK00 36 | 4 | 68 |
| 36 DK00 38 | 9 | 14 |
| 36 DK00 65 | 9 | 66 |
| 36 DK00 66 | 10 | 66 |
| 36 DK00 67 | 14 | 72 |
| 36 DK00 68 | 16 | 72 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 36 DK00 69 | 2 | 72 |
| 36 DK00 70 | 2A | 72 |
| 36 DK00 71 | 4 | 72 |
| 36 DK01 25 | 14 | 110 |
| 36 DK01 26 | 15 | 110 |
| 36 DK01 37 | 14 | 110 |
| 36 DK01 38 | 15 | 110 |
| 36 DK01 39 | 14 | 110 |
| 36 DK01 40 | 15 | 110 |
| 36 DS10 01 | 1 | 6 |
| 36 DU19 01 | 12 | 76 |
| 36 JG00 11 | 5 | 48 |
| 36 PD00 30 | 2 | 32 |
| 36 PD00 56 | 11 | 100 |
| 39 0292 15 | 8 | 54 |
| 39 0296 15 | 11 | 92 |
| 39 0422 15 | 10 | 58 |
| 39 0711 11 | 7 | 56 |
| 39 0714 11 | 17 | 52 |
| 39 0740 11 | 5 | 82 |
| 39 0752 01 | 6 | 26 |
| 39 0784 08 | 21 | 54 |
| 39 0787 08 | 3 | 58 |
| 39 0798 15 | 8 | 56 |
| 39 0963 15 | 18 | 54 |
| 39 0972 04 | 10 | 46 |
| 39 0999 06 | 11 | 28 |
| 39 0999 06 | 5 | 30 |
| 39 1040 11 | 15 | 50 |
| 39 1041 19 | 4 | 28 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 39 1069 01 | 7 | 54 |
| 39 1075 04 | 9 | 2 |
| 39 1180 11 | 27 | 78 |
| 39 1184 15 | 11 | 76 |
| 39 1224 11 | 13 | 52 |
| 39 1225 15 | 4 | 98 |
| 39 1507 11 | 3 | 102 |
| 39 1524 01 | 14 | 96 |
| 39 1556 04 | 5 | 84 |
| 39 1608 04 | 10 | 92 |
| 39 1620 11 | 9 | 18 |
| 39 1660 05 | 2 | 6 |
| 39 1672 04 | 3 | 18 |
| 39 1672 04 | 6 | 56 |
| 39 1673 04 | 10 | 10 |
| 39 1674 04 | 9 | 6 |
| 39 1674 04 | 11 | 18 |
| 39 1674 04 | 2 | 34 |
| 39 1677 04 | 20 | 26 |
| 39 1680 04 | 10 | 56 |
| 39 1680 04 | 25 | 78 |
| 39 1680 04 | 2 | 94 |
| 39 1680 04 | 15 | 102 |
| 39 1681 04 | 7 | 92 |
| 39 1686 06 | 8 | 18 |
| 39 1686 06 | 4 | 34 |
| 39 1689 04 | 11 | 12 |
| 39 1714 04 | 9 | 54 |
| 39 1778 02 | 2 | 88 |
| 39 1780 01 | 13 | 40 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 39 1829 12 | 3 | 52 |
| 39 1845 04 | 11 | 24 |
| 39 1907 01 | 8 | 96 |
| 39 1907 01 | 5 | 100 |
| 39 1931 20 | 6 | 14 |
| 39 1940 04 | 19 | 26 |
| 39 1943 04 | 3 | 84 |
| 39 1943 04 | 8 | 84 |
| 39 1944 04 | 10 | 44 |
| 39 1944 04 | 18 | 44 |
| 39 1955 04 | 7 | 86 |
| 39 1956 04 | 4 | 102 |
| 39 1967 04 | 10 | 50 |
| 39 1970 15 | 5 | 38 |
| 39 1972 15 | 6 | 100 |
| 39 1990 20 | 20 | 28 |
| 39 1997 15 | 14 | 52 |
| 39 1997 15 | 9 | 68 |
| 39 1998 19 | 11 | 22 |
| 39 2017 19 | 5 | 8 |
| 39 2038 04 | 17 | 68 |
| 39 2060 04 | 12 | 58 |
| 39 2121 04 | 2 | 66 |
| 39 2132 17 | 5 | 12 |
| 39 2141 24 | 5 | 96 |
| 39 2152 20 | 5 | 18 |
| 39 2157 04 | 7 | 50 |
| 39 2158 11 | 2 | 16 |
| 39 2159 11 | 13 | 16 |
| 39 2160 11 | 9 | 16 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 39 2165 11 | 3 | 14 |
| 39 2166 11 | 11 | 16 |
| 39 2180 06 | 8 | 24 |
| 39 2181 06 | 2 | 12 |
| 39 2181 06 | 24 | 26 |
| 39 2188 19 | 4 | 26 |
| 39 2190 19 | 11 | 26 |
| 39 2194 21 | 6 | 34 |
| 39 2199 08 | 17 | 14 |
| 39 2200 11 | 15 | 32 |
| 39 2203 07 | 8 | 14 |
| 39 2310 04 | 13 | 50 |
| 39 2310 04 | 3 | 70 |
| 39 2310 04 | 2 | 92 |
| 39 2312 04 | 4 | 50 |
| 39 2366 15 | 16 | 52 |
| 39 2383 15 | 17 | 22 |
| 39 2391 21 | 3 | 2 |
| 39 2412 04 | 8 | 50 |
| 39 2424 11 | 4 | 84 |
| 39 2427 04 | 23 | 78 |
| 39 2440 11 | 9 | 8 |
| 39 2443 11 | 18 | 28 |
| 39 2448 11 | 12 | 12 |
| 39 2451 11 | 3 | 100 |
| 39 2453 04 | 6 | 22 |
| 39 2481 04 | 5 | 70 |
| 39 2532 04 | 8 | 2 |
| 39 2539 21 | 6 | 6 |
| 39 2557 17 | 7 | 18 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 39 2583 20 | 6 | 24 |
| 39 2601 20 | 9 | 24 |
| 39 2603 20 | 7 | 26 |
| 39 2606 07 | 7 | 20 |
| 39 2608 01 | 11 | 6 |
| 39 2617 20 | 9 | 32 |
| 39 2639 04 | 6 | 20 |
| 39 2647 15 | 6 | 2 |
| 39 2758 21 | 7 | 82 |
| 52 DH01 69 | 1 | 34 |
| 52 DH01 77 | 10 | 18 |
| 52 DH13 17 | 1 | 30 |
| 52 DH15 27 | 2 | 106 |
| 52 DH15 28 | 2 | 106 |
| 52 DH15 29 | 3 | 106 |
| 52 DH15 30 | 3 | 106 |
| 52 DH15 31 | 4 | 106 |
| 52 DH15 32 | 4 | 106 |
| 52 DH15 99 | 2 | 106 |
| 52 DH16 00 | 3 | 106 |
| 52 DH16 01 | 4 | 106 |
| 52 DJ05 65 | 5 | 106 |
| 52 DJ09 04 | 4 | 106 |
| 52 DJ09 05 | 7 | 108 |
| 52 DJ09 06 | 8 | 108 |
| 52 DJ09 09 | 6 | 106 |
| 52 DJ09 10 | 1 | 106 |
| 52 DJ09 42 | 4 | 106 |
| 52 DJ09 42 | 7 | 108 |
| 52 DJ09 43 | 8 | 108 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 52 DJ09 45 | 6 | 106 |
| 52 DJ09 51 | 2 | 106 |
| 52 DJ09 52 | 3 | 106 |
| 52 DJ09 56 | 2 | 106 |
| 52 DJ09 57 | 3 | 106 |
| 52 DJ10 39 | 1 | 106 |
| 52 DJ10 72 | 6 | 106 |
| 52 DJ10 74 | 6 | 106 |
| 52 DJ10 85 | 7 | 108 |
| 52 DJ10 87 | 8 | 108 |
| 52 DJ10 89 | 7 | 108 |
| 52 DJ10 91 | 8 | 108 |
| 52 DJ10 95 | 1 | 106 |
| 52 DJ10 96 | 1 | 106 |
| 52 DJ11 15 | 6 | 106 |
| 52 DJ11 17 | 7 | 108 |
| 52 DJ11 18 | 8 | 108 |
| 52 DJ11 19 | 1 | 106 |
| 56 DJ3X 1Y | 1 | 54 |
| 56 DJ3Y 1Y | 2 | 54 |
| 56 DK05 4R | 5 | 106 |
| 56 DK05 7Q | 5 | 106 |
| 59 0100 13 | 4 | 100 |
| 59 0200 01 | 11 | 84 |
| 59 0400 05 | 16 | 80 |
| 59 0400 17 | 14 | 50 |
| 59 0400 40 | 3 | 56 |
| 59 0400 41 | 11 | 50 |
| 59 0500 08 | 3 | 24 |
| 59 0500 08 | 2 | 26 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| 59 1000 02 | 1 | 44 |
| 59 2000 06 | 8 | 26 |
| 59 2000 07 | 22 | 26 |
| 59 2000 07 | 9 | 46 |
| 59 2000 27 | 7 | 24 |
| 59 2000 28 | 13 | 18 |
| 59 2000 28 | 9 | 26 |
| 59 2000 29 | 12 | 18 |
| 59 2100 06 | 5 | 26 |
| 59 2100 19 | 4 | 90 |
| AA 1014 37 | 24 | 16 |
| AA 1014 37 | 4 | 24 |
| AA 1410 48 | 18 | 40 |
| AB 2010 17 | 21 | 102 |
| AP 1010 43 | 13 | 30 |
| BA 1220 03 | 10 | 82 |
| CL 2010 23 | 15 | 96 |
| CS 1011 28 | 1 | 10 |
| DD 1010 62 | 11 | 10 |
| DD 1110 12 | 15 | 44 |
| DD 1210 07 | 10 | 12 |
| DD 1412 27 | 4 | 82 |
| DD 2110 03 | 6 | 86 |
| DD 2210 03 | 12 | 92 |
| DE 1510 37 | 6 | 66 |
| DE 1510 43 | 7 | 66 |
| DE 1510 45 | 8 | 66 |
| DE 1510 46 | 4 | 66 |
| DE 1510 46 | 10 | 72 |
| DE 1510 47 | 5 | 66 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DE 1510 47 | 11 | 72 |
| DE 1510 48 | 3 | 66 |
| DE 1910 10 | 5 | 64 |
| DE 1910 10 | 8 | 70 |
| DE 1910 28 | 14 | 64 |
| DE 1910 33 | 6 | 64 |
| DE 1910 36 | 15 | 64 |
| DF 1611 02 | 9 | 58 |
| DF 1810 98 | 4 | 96 |
| DG 1010 29 | 4 | 8 |
| DG 1013 39 | 3 | 74 |
| DG 1014 18 | 8 | 28 |
| DG 1014 18 | 2 | 30 |
| DG 1014 56 | 10 | 26 |
| DG 1014 98 | 11 | 2 |
| DG 1110 08 | 8 | 44 |
| DG 1210 02 | 17 | 40 |
| DG 1510 05 | 11 | 62 |
| DG 1510 07 | 12 | 62 |
| DG 1510 08 | 13 | 62 |
| DG 1510 08 | 21 | 68 |
| DG 1710 18 | 5 | 52 |
| DG 1710 19 | 7 | 52 |
| DG 1710 22 | 15 | 52 |
| DG 1710 34 | 10 | 52 |
| DG 1710 38 | 2 | 52 |
| DG 1810 08 | 4 | 76 |
| DG 1810 08 | 18 | 80 |
| DG 1810 45 | 22 | 80 |
| DH 0101 08 | 13 | 110 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DH 0101 09 | 13 | 110 |
| DH 0101 20 | 9 | 108 |
| DH 0101 21 | 10 | 108 |
| DH 0101 42 | 9 | 108 |
| DH 0101 43 | 10 | 108 |
| DH 0101 85 | 7 | 108 |
| DH 0101 86 | 8 | 108 |
| DH 0102 00 | 18 | 110 |
| DH 0102 01 | 7 | 108 |
| DH 0102 09 | 9 | 108 |
| DH 0102 10 | 10 | 108 |
| DH 0102 19 | 7 | 108 |
| DH 0102 20 | 8 | 108 |
| DH 1010 18 | 12 | 28 |
| DH 1010 66 | 16 | 14 |
| DH 1010 67 | 15 | 14 |
| DH 1010 72 | 2 | 18 |
| DH 1010 79 | 4 | 16 |
| DH 1010 84 | 8 | 16 |
| DH 1011 11 | 15 | 16 |
| DH 1011 41 | 5 | 28 |
| DH 1011 42 | 3 | 28 |
| DH 1011 46 | 3 | 20 |
| DH 1011 52 | 6 | 28 |
| DH 1011 54 | 13 | 28 |
| DH 1011 63 | 16 | 46 |
| DH 1011 72 | 7 | 46 |
| DH 1011 95 | 11 | 14 |
| DH 1011 97 | 2 | 28 |
| DH 1011 99 | 6 | 44 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DH 1012 03 | 12 | 26 |
| DH 1012 35 | 5 | 16 |
| DH 1012 72 | 10 | 2 |
| DH 1012 75 | 5 | 32 |
| DH 1012 92 | 11 | 30 |
| DH 1012 93 | 9 | 30 |
| DH 1012 94 | 12 | 30 |
| DH 1012 95 | 8 | 8 |
| DH 1013 19 | 18 | 16 |
| DH 1013 80 | 7 | 44 |
| DH 1013 81 | 5 | 44 |
| DH 1013 85 | 5 | 46 |
| DH 1013 86 | 4 | 44 |
| DH 1013 88 | 7 | 30 |
| DH 1013 89 | 14 | 46 |
| DH 1013 92 | 8 | 10 |
| DH 1013 93 | 7 | 22 |
| DH 1013 94 | 10 | 22 |
| DH 1013 96 | 2 | 14 |
| DH 1014 12 | 5 | 10 |
| DH 1014 14 | 7 | 12 |
| DH 1014 24 | 6 | 18 |
| DH 1014 87 | 10 | 24 |
| DH 1014 93 | 4 | 20 |
| DH 1014 96 | 9 | 20 |
| DH 1015 08 | 4 | 6 |
| DH 1015 09 | 5 | 22 |
| DH 1015 44 | 17 | 28 |
| DH 1015 81 | 4 | 46 |
| DH 1016 07 | 9 | 38 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DH 1016 08 | 10 | 38 |
| DH 1016 48 | 13 | 32 |
| DH 1016 61 | 15 | 26 |
| DH 1017 14 | 2 | 22 |
| DH 1017 18 | 13 | 26 |
| DH 1018 96 | 5 | 24 |
| DH 1020 52 | 4 | 18 |
| DH 1020 52 | 14 | 18 |
| DH 1021 25 | 6 | 10 |
| DH 1021 51 | 10 | 14 |
| DH 1021 53 | 12 | 14 |
| DH 1021 74 | 7 | 4 |
| DH 1021 75 | 8 | 4 |
| DH 1021 80 | 9 | 4 |
| DH 1021 89 | 8 | 20 |
| DH 1022 01 | 5 | 2 |
| DH 1022 63 | 8 | 38 |
| DH 1022 72 | 2 | 38 |
| DH 1022 74 | 15 | 40 |
| DH 1110 12 | 10 | 6 |
| DH 1110 13 | 16 | 44 |
| DH 1110 15 | 14 | 44 |
| DH 1110 16 | 17 | 44 |
| DH 1110 80 | 2 | 44 |
| DH 1110 82 | 3 | 44 |
| DH 1110 84 | 11 | 46 |
| DH 1111 15 | 11 | 46 |
| DH 1210 10 | 3 | 34 |
| DH 1210 11 | 15 | 28 |
| DH 1210 12 | 16 | 28 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DH 1210 35 | 5 | 34 |
| DH 1210 38 | 8 | 6 |
| DH 1211 68 | 3 | 36 |
| DH 1211 69 | 10 | 36 |
| DH 1211 71 | 2 | 36 |
| DH 1211 90 | 4 | 40 |
| DH 1410 20 | 13 | 82 |
| DH 1410 23 | 6 | 84 |
| DH 1410 24 | 11 | 82 |
| DH 1410 73 | 10 | 42 |
| DH 1410 74 | 12 | 42 |
| DH 1610 46 | 4 | 86 |
| DH 1610 53 | 17 | 54 |
| DH 1610 56 | 20 | 54 |
| DH 1610 66 | 7 | 58 |
| DH 1611 12 | 2 | 48 |
| DH 1611 21 | 4 | 58 |
| DH 1611 33 | 1 | 84 |
| DH 1611 55 | 11 | 54 |
| DH 1611 57 | 10 | 54 |
| DH 1611 58 | 21 | 84 |
| DH 1611 61 | 9 | 50 |
| DH 1611 89 | 2 | 50 |
| DH 1611 90 | 3 | 50 |
| DH 1612 31 | 22 | 84 |
| DH 1612 33 | 10 | 86 |
| DH 1612 39 | 5 | 58 |
| DH 1612 40 | 8 | 58 |
| DH 1612 93 | 14 | 100 |
| DH 1614 16 | 12 | 40 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DH 1614 29 | 8 | 42 |
| DH 1710 19 | 8 | 52 |
| DH 1710 19 | 14 | 62 |
| DH 1710 19 | 22 | 68 |
| DH 1810 52 | 10 | 96 |
| DH 1811 30 | 32 | 78 |
| DH 1811 30 | 1 | 82 |
| DH 1910 17 | 20 | 76 |
| DH 1910 67 | 17 | 76 |
| DH 1910 68 | 19 | 76 |
| DH 1910 69 | 18 | 76 |
| DH 2010 65 | 13 | 58 |
| DJ 1010 04 | 1 | 12 |
| DJ 1010 12 | 3 | 6 |
| DJ 1010 63 | 23 | 16 |
| DJ 1010 64 | 4 | 38 |
| DJ 1011 58 | 3 | 12 |
| DJ 1012 17 | 2 | 2 |
| DJ 1013 50 | 1 | 32 |
| DJ 1013 71 | 6 | 12 |
| DJ 1013 73 | 2 | 10 |
| DJ 1017 11 | 1 | 2 |
| DJ 1017 11 | 12 | 6 |
| DJ 1017 12 | 1 | 24 |
| DJ 1110 98 | 9 | 44 |
| DJ 1210 22 | 7 | 6 |
| DJ 1210 44 | 4 | 36 |
| DJ 1210 53 | 5 | 36 |
| DJ 1210 54 | 6 | 36 |
| DJ 1210 55 | 7 | 36 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DJ 1210 56 | 8 | 36 |
| DJ 1210 57 | 9 | 36 |
| DJ 1210 59 | 11 | 36 |
| DJ 1210 81 | 3 | 40 |
| DJ 1210 87 | 1 | 40 |
| DJ 1210 89 | 5 | 4 |
| DJ 1210 90 | 5 | 6 |
| DJ 1210 91 | 1 | 36 |
| DJ 1410 08 | 7 | 84 |
| DJ 1410 56 | 3 | 82 |
| DJ 1410 71 | 15 | 42 |
| DJ 1410 72 | 6 | 42 |
| DJ 1410 72 | 14 | 82 |
| DJ 1410 73 | 3 | 42 |
| DJ 1410 74 | 7 | 42 |
| DJ 1410 77 | 16 | 42 |
| DJ 1511 14 | 2 | 64 |
| DJ 1610 69 | 1 | 56 |
| DJ 1610 72 | 9 | 100 |
| DJ 1610 79 | 8 | 92 |
| DJ 1610 80 | 9 | 92 |
| DJ 1611 14 | 5 | 50 |
| DJ 1611 15 | 6 | 50 |
| DJ 1611 22 | 5 | 54 |
| DJ 1611 26 | 14 | 54 |
| DJ 1611 27 | 16 | 54 |
| DJ 1611 28 | 3 | 54 |
| DJ 1611 29 | 4 | 54 |
| DJ 1612 28 | 10 | 30 |
| DJ 1612 47 | 9 | 102 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DJ 1612 78 | 7 | 38 |
| DJ 1612 90 | 18 | 50 |
| DJ 1613 27 | 18 | 102 |
| DJ 1614 00 | 1 | 48 |
| DJ 1614 16 | 17 | 110 |
| DJ 1710 44 | 11 | 52 |
| DJ 1810 33 | 3 | 96 |
| DJ 1810 37 | 7 | 96 |
| DJ 1810 64 | 18 | 96 |
| DJ 1810 65 | 12 | 96 |
| DJ 1810 69 | 9 | 96 |
| DJ 1811 19 | 3 | 88 |
| DJ 1811 20 | 2 | 96 |
| DJ 1811 30 | 13 | 96 |
| DJ 1910 27 | 6 | 64 |
| DJ 1910 28 | 7 | 64 |
| DJ 1910 29 | 8 | 64 |
| DJ 1910 30 | 9 | 64 |
| DJ 1910 31 | 10 | 64 |
| DJ 1910 34 | 13 | 64 |
| DJ 1910 35 | 14 | 64 |
| DJ 1910 56 | 11 | 64 |
| DJ 1910 61 | 1 | 90 |
| DJ 1910 81 | 8 | 76 |
| DJ 1910 82 | 7 | 76 |
| DJ 1910 83 | 9 | 76 |
| DJ 1910 85 | 1 | 88 |
| DJ 2010 72 | 16 | 96 |
| DJ 2010 72 | 7 | 100 |
| DJ 2011 08 | 16 | 64 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DJ 2011 09 | 12 | 64 |
| DJ 2011 25 | 8 | 102 |
| DJ 2011 37 | 7 | 88 |
| DJ 2011 40 | 18 | 26 |
| DJ 2011 40 | 11 | 102 |
| DJ 2011 74 | 4 | 88 |
| DJ 2011 76 | 1 | 96 |
| DJ 2012 02 | 11 | 44 |
| DJ 2012 06 | 2 | 98 |
| DJ 2012 07 | 1 | 98 |
| DJ 2012 18 | 2 | 90 |
| DJ 2012 30 | 17 | 96 |
| DJ 2012 46 | 14 | 76 |
| DJ 2012 60 | 5 | 102 |
| DJ 2012 61 | 5A | 102 |
| DJ 2210 03 | 33 | 78 |
| DJ 2210 04 | 34 | 78 |
| DJ 2210 19 | 1 | 104 |
| DJ 2210 20 | 1A | 92 |
| DJ 2210 21 | 1 | 92 |
| DJ 9025 03 | 1 | 18 |
| DK 1010 59 | 12 | 10 |
| DK 1010 72 | 11 | 32 |
| DK 1010 94 | 3 | 26 |
| DK 1010 97 | 21 | 26 |
| DK 1011 02 | 6 | 16 |
| DK 1011 03 | 3 | 16 |
| DK 1011 04 | 7 | 16 |
| DK 1011 05 | 12 | 16 |
| DK 1011 18 | 16 | 16 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DK 1011 26 | 12 | 32 |
| DK 1011 35 | 10 | 20 |
| DK 1011 44 | 10 | 16 |
| DK 1011 59 | 1 | 20 |
| DK 1011 60 | 2 | 20 |
| DK 1011 76 | 6 | 46 |
| DK 1011 80 | 13 | 22 |
| DK 1011 82 | 4 | 22 |
| DK 1011 83 | 16 | 22 |
| DK 1011 85 | 14 | 22 |
| DK 1011 85 | 5 | 74 |
| DK 1011 86 | 15 | 22 |
| DK 1011 86 | 4 | 74 |
| DK 1011 87 | 12 | 22 |
| DK 1011 87 | 6 | 74 |
| DK 1012 45 | 20 | 16 |
| DK 1012 51 | 7 | 28 |
| DK 1012 53 | 9 | 22 |
| DK 1013 26 | 6 | 8 |
| DK 1013 52 | 21 | 16 |
| DK 1013 80 | 17 | 26 |
| DK 1014 71 | 1 | 16 |
| DK 1014 80 | 14 | 14 |
| DK 1014 80 | 14 | 28 |
| DK 1015 64 | 3 | 32 |
| DK 1015 65 | 6 | 32 |
| DK 1015 69 | 4 | 32 |
| DK 1015 70 | 16 | 32 |
| DK 1015 71 | 17 | 32 |
| DK 1015 73 | 10 | 32 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DK 1015 74 | 8 | 32 |
| DK 1015 92 | 8 | 12 |
| DK 1015 95 | 1 | 46 |
| DK 1015 96 | 15 | 46 |
| DK 1016 05 | 2 | 46 |
| DK 1016 36 | 14 | 32 |
| DK 1016 60 | 19 | 16 |
| DK 1016 61 | 17 | 16 |
| DK 1017 18 | 14 | 16 |
| DK 1017 22 | 1 | 22 |
| DK 1017 22 | 3 | 22 |
| DK 1017 25 | 8 | 22 |
| DK 1017 32 | 5 | 20 |
| DK 1017 38 | 19 | 28 |
| DK 1017 48 | 1 | 8 |
| DK 1017 51 | 2 | 8 |
| DK 1017 55 | 3 | 8 |
| 56 DJ3Z 1Y | 6 | 30 |
| 56 DJ4E 1Y | 13 | 46 |
| DK 1210 07 | 7 | 40 |
| DK 1210 09 | 5 | 40 |
| DK 1210 11 | 16 | 40 |
| DK 1210 15 | 6 | 40 |
| DK 1210 91 | 6 | 4 |
| DK 1410 15 | 18 | 84 |
| DK 1410 17 | 17 | 84 |
| DK 1510 09 | 2 | 68 |
| DK 1510 12 | 6 | 68 |
| DK 1510 15 | 11 | 68 |
| DK 1510 22 | 14 | 68 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DK 1510 24 | 16 | 68 |
| DK 1510 26 | 5 | 60 |
| DK 1510 27 | 9 | 62 |
| DK 1510 28 | 8 | 62 |
| DK 1510 31 | 1 | 72 |
| DK 1510 33 | 1 | 70 |
| DK 1510 34 | 2 | 70 |
| DK 1510 36 | 5 | 68 |
| DK 1510 39 | 2 | 60 |
| DK 1510 40 | 4 | 60 |
| DK 1510 41 | 9 | 72 |
| DK 1510 42 | 5 | 72 |
| DK 1510 45 | 10 | 70 |
| DK 1510 50 | 3 | 60 |
| DK 1510 50 | 1 | 68 |
| DK 1510 63 | 6 | 70 |
| DK 1510 69 | 4 | 64 |
| DK 1510 69 | 7 | 70 |
| DK 1510 76 | 6 | 72 |
| DK 1510 77 | 7 | 72 |
| DK 1510 78 | 3 | 72 |
| DK 1510 81 | 19 | 68 |
| DK 1510 82 | 20 | 68 |
| DK 1510 83 | 8 | 72 |
| DK 1510 84 | 9 | 70 |
| DK 1510 85 | 12 | 72 |
| DK 1510 86 | 4 | 70 |
| DK 1510 88 | 13 | 72 |
| DK 1510 89 | 14 | 72 |
| DK 1510 90 | 15 | 72 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DK 1510 95 | 2 | 62 |
| DK 1610 85 | 9 | 56 |
| DK 1610 96 | 1 | 50 |
| DK 1610 98 | 2 | 56 |
| DK 1611 22 | 1 | 58 |
| DK 1611 23 | 9 | 84 |
| DK 1611 24 | 10 | 84 |
| DK 1611 53 | 2 | 100 |
| DK 1611 61 | 12 | 50 |
| DK 1611 64 | 5 | 98 |
| DK 1611 71 | 19 | 84 |
| DK 1611 72 | 20 | 84 |
| DK 1611 76 | 3 | 92 |
| DK 1612 09 | 5 | 88 |
| DK 1612 17 | 5 | 92 |
| DK 1612 18 | 6 | 92 |
| DK 1612 50 | 1 | 94 |
| DK 1613 38 | 5 | 56 |
| DK 1614 15 | 16 | 50 |
| DK 1614 16 | 17 | 50 |
| DK 1614 22 | 11 | 86 |
| DK 1710 03 | 9 | 52 |
| DK 1710 06 | 6 | 52 |
| DK 1710 11 | 4 | 52 |
| DK 1710 14 | 1 | 52 |
| DK 1810 07 | 6 | 80 |
| DK 1810 08 | 7 | 80 |
| DK 1810 10 | 8 | 80 |
| DK 1810 11 | 10 | 80 |
| DK 1810 12 | 4 | 12 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DK 1810 17 | 27 | 80 |
| DK 1810 18 | 15 | 80 |
| DK 1810 19 | 3 | 80 |
| DK 1810 20 | 26 | 80 |
| DK 1810 21 | 2 | 80 |
| DK 1810 22 | 12 | 80 |
| DK 1810 23 | 13 | 80 |
| DK 1810 24 | 23 | 80 |
| DK 1810 25 | 24 | 80 |
| DK 1810 28 | 25 | 80 |
| DK 1810 31 | 26 | 78 |
| DK 1810 36 | 29 | 78 |
| DK 1810 43 | 22 | 78 |
| DK 1810 46 | 30 | 78 |
| DK 1810 47 | 31 | 78 |
| DK 1810 48 | 12 | 82 |
| DK 1810 50 | 7 | 48 |
| DK 1810 51 | 8 | 48 |
| 56 DK32 Y9 | 3 | 76 |
| 56 DK31 Y9 | 2 | 76 |
| 56 DK33 Y9 | 1 | 76 |
| 56 DK33 Y9 | 17 | 80 |
| DK 1810 73 | 11 | 80 |
| DK 1810 75 | 3 | 48 |
| DK 1810 79 | 28 | 78 |
| DK 1810 87 | 1 | 80 |
| DK 1810 90 | 4 | 80 |
| DK 1810 91 | 5 | 80 |
| DK 1810 92 | 9 | 80 |
| DK 1810 93 | 14 | 80 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DK 1910 12 | 3 | 64 |
| DK 1910 12 | 1 | 74 |
| DK 1910 13 | 7 | 74 |
| DK 1910 14 | 7 | 102 |
| DK 2010 03 | 1 | 100 |
| DK 2010 37 | 1 | 102 |
| DK 2010 38 | 2 | 102 |
| DK 2010 65 | 6 | 82 |
| DK 2010 78 | 10 | 102 |
| DK 2110 04 | 8 | 86 |
| DK 2110 07 | 2 | 86 |
| DK 2110 09 | 3 | 86 |
| DK 2110 12 | 1 | 86 |
| DK 2110 14 | 5 | 86 |
| DK 2210 24 | 2 | 104 |
| DL 1810 10 | 6 | 96 |
| DL 1910 14 | 10 | 76 |
| DS 1010 71 | 21 | 28 |
| DS 1010 84 | 7 | 2 |
| DS 1011 54 | 5 | 14 |
| DS 1011 66 | 4 | 2 |
| DS 1012 15 | 9 | 28 |
| DS 1012 34 | 14 | 26 |
| DS 1013 53 | 10 | 28 |
| DS 1013 53 | 4 | 30 |
| DS 1013 53 | 12 | 46 |
| DS 1211 16 | 14 | 40 |
| DS 1211 17 | 8 | 40 |
| DS 1211 26 | 9 | 40 |
| DS 1510 73 | 10 | 68 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| DS 1510 74 | 3 | 68 |
| DS 1611 25 | 4 | 56 |
| DS 1910 52 | 21 | 78 |
| DS 2010 25 | 17 | 102 |
| DS 2110 09 | 9 | 86 |
| DV 1010 42 | 3 | 30 |
| DV 1010 48 | 22 | 16 |
| GF 2010 36 | 12 | 102 |
| GH 2010 12 | 3 | 98 |
| GL 1710 36 | 5 | 42 |
| JB 4014 02 | 24 | 78 |
| JB 5910 59 | 12 | 38 |
| JB 5910 68 | 11 | 38 |
| JC 1010 01 | 1 | 14 |
| JC 1010 29 | 2 | 24 |
| JC 1010 34 | 9 | 10 |
| JC 1010 35 | 7 | 10 |
| JC 1010 45 | 1 | 26 |
| JC 1011 12 | 3 | 46 |
| JC 1011 15 | 8 | 46 |
| JC 1110 22 | 12 | 44 |
| JC 1110 23 | 13 | 44 |
| JC 1410 15 | 14 | 84 |
| JC 1410 16 | 16 | 84 |
| JC 1410 17 | 15 | 84 |
| JC 1410 28 | 9 | 82 |
| JC 1510 13 | 1 | 60 |
| JC 1510 13 | 1 | 62 |
| JC 1510 16 | 8 | 68 |
| JC 1510 17 | 15 | 62 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| JC 1510 19 | 3 | 62 |
| JC 1610 17 | 6 | 58 |
| JC 1810 22 | 20 | 80 |
| JC 1810 23 | 19 | 80 |
| JC 1810 24 | 21 | 80 |
| JC 1810 26 | 12 | 100 |
| JC 1910 04 | 3 | 90 |
| JC 2010 27 | 16 | 102 |
| JC 2010 39 | 11 | 58 |
| JC 2010 43 | 2 | 90 |
| JC 2010 46 | 6 | 62 |
| JD 1138 14 | 11 | 4 |
| JD 1138 15 | 12 | 4 |
| JD 4014 00 | 6A | 76 |
| JE 5412 12 | 8 | 30 |
| JF 1318 06 | 1 | 66 |
| JF 4014 00 | 5 | 76 |
| JF 4014 01 | 6 | 76 |
| JG 1312 19 | 15 | 68 |
| JG 1710 29 | 4 | 42 |
| JG 4018 08 | 20 | 102 |
| JH 1710 48 | 17 | 42 |
| JH 1716 02 | 11 | 42 |
| JL 4020 04 | 17A | 102 |
| JL 5810 65 | 4 | 4 |
| JL 5810 66 | 2 | 4 |
| JM 1710 04 | 12 | 52 |
| JW 1318 07 | 6 | 66 |
| JW 1318 09 | 11 | 66 |
| JW 1318 10 | 12 | 66 |

Parts Index

BAJAJ
pulsar DTS-i 180 UG, BS IV

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| JW 1710 07 | 2 | 84 |
| JW 1710 07 | 13 | 84 |
| JW 4010 11 | 8 | 100 |
| JY 1710 69 | 13 | 42 |
| JY 1710 70 | 2 | 42 |
| JY 1710 77 | 1 | 42 |
| JY 1718 25 | 9 | 42 |
| KA CA05 16 | 2 | 82 |
| KA DD06 25 | 16 | 76 |
| KA DD06 25 | 11 | 96 |
| KA DD06 25 | 13 | 100 |
| KA DF06 10 | 19 | 102 |
| KA DF06 30 | 13 | 4 |
| KA EG06 14 | 10 | 4 |
| KB BA04 08 | 4 | 62 |
| KB BA05 16 | 11 | 40 |
| KB BA05 25 | 10 | 40 |
| KC GA05 05 | 8 | 82 |
| KC GF06 06 | 14 | 4 |
| KD DB04 08 | 5 | 62 |
| KH AA32 25 | 13 | 54 |
| KJ AB10 19 | 23 | 26 |
| KM AA08 00 | 6 | 48 |
| KP AC60 05 | 7 | 68 |
| KP BC62 02 | 7 | 62 |
| KP BC62 02 | 13 | 68 |
| KP BC63 02 | 18 | 68 |
| LB U000 12 | 15 | 76 |
| PD 1318 03 | 10 | 62 |
| PD 1510 06 | 4 | 48 |

| Part Number | Figure No. | Page No. |
|-------------|------------|----------|
| PD 1716 16 | 14 | 42 |
| PD 5112 29 | 4 | 10 |
| PD 5310 29 | 7 | 14 |
| PD 5514 27 | 7 | 32 |
| PD 5822 00 | 1 | 4 |
| YD H190 01 | 1 | 96 |
| YD H190 02 | 6 | 88 |
| YD J080 01 | 1 | 38 |