


BRANCH TYPE INST SHEET

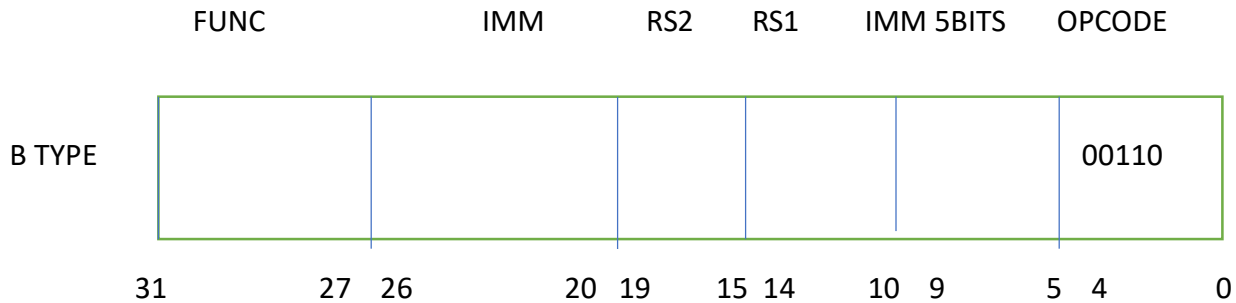

OPCODE = 00110

FUNC

IMM

NONE = 5'b000000; // None
// Two-register comparisons

IMM FROM TWO FIELD RS2 = X1-X31 RS1= X1-X31
26:20,9:5

OR -2048 TO 2047 OR 0-4096

BEQ = 5'b000001; // Equal

]BNEQ = 5'b00010; // Not equal

BGT = 5'b00011; // Greater than, unsigned

BLT = 5'b00100; // Less than, unsigned

BGST = 5'b00101; // Greater than, signed

BLST = 5'b00110; // Less than, signed

// Single-register signed comparisons

BLTZ = 5'b00111; // Less than zero

BGTZ = 5'b01000; // Greater than zero

BGEZ = 5'b01001; // Greater than or equal to zero

BLEZ = 5'b01010; // Less than or equal to zero

// Single-register equality comparisons

BEQZ = 5'b01011; // Equal to zero

BNEZ = 5'b01100; // Not equal to zero