



2) For 3-way valve SV1、SV2 and SV3:

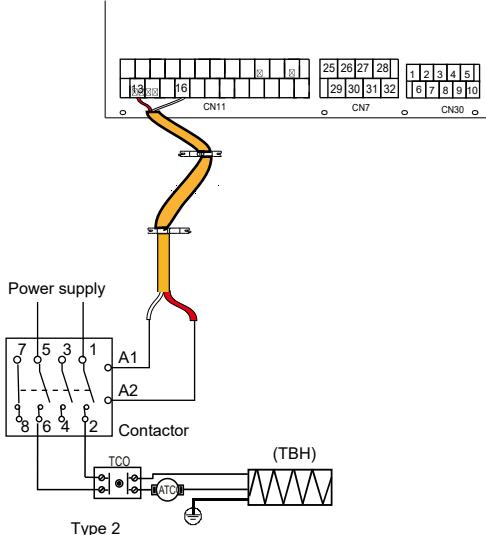


The parts wiring is illustrated below:

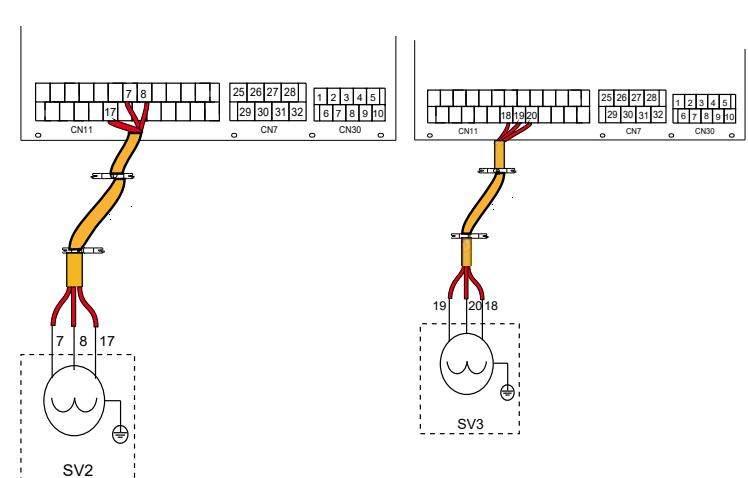

a) Procedure


- Connect the cable to the appropriate terminals as shown in the picture.
- Fix the cable reliably.

Connecting the actuator with 3-point control

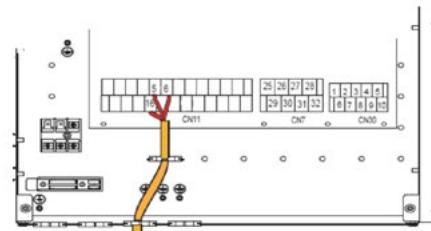

*- in case of using an actuator with constant control voltage on one wire, it shoude be connected to terminal no. 15 (L1) on CN11

1) For solar energy input signal:

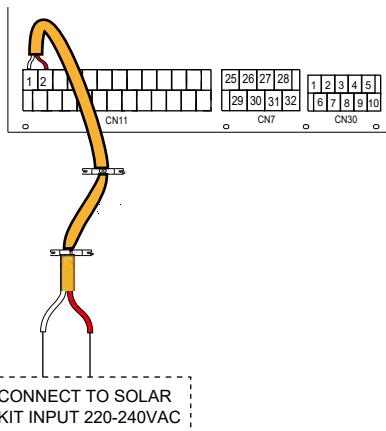

Voltage	220-240VAC
Maximum running current(A)	0.2
Wiring size(mm ²)	0.75

3-way valve (230V fixed line actuator)



3) For remote shut down:

