



DHW pump

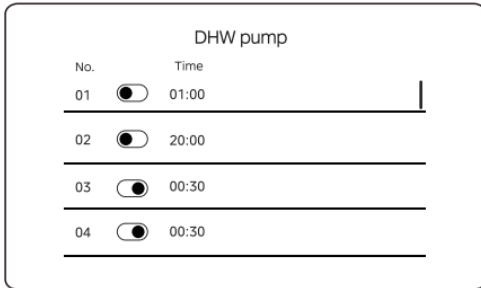

5.4 Settings

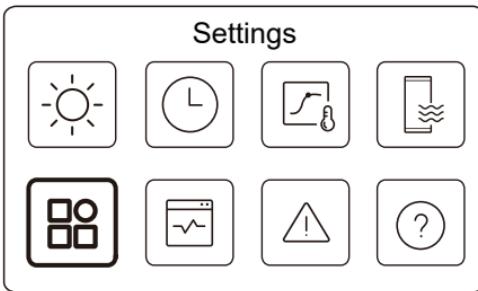

The status indicator on the right of the interface shows “ON” when the setting is active, and “OFF” when the setting is inactive.