OCTAVE OBD-II adapter Rev 0: the plug's adapter board, 1:1

Print at 100 % ("actual size", not "fit to page"). Measure the bar below with a ruler before trusting anything else on this sheet.

A. Cut out and try the plug on it

Front of the adapter (the plug's side). Cut along the outline, prick the 16 black slots, push the plug's tails through.

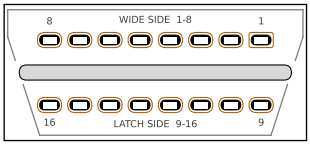

B. The same view with its dimensions (mm)

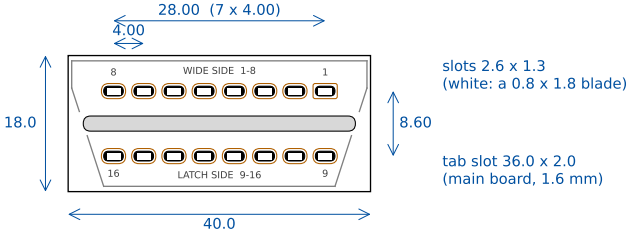

What to check

1. All 16 tails go into the slots without bending: 2 rows of 8, 4.00 mm apart, rows 8.60 mm apart (tails 0.8 x 1.8 mm, slots 2.6 x 1.3 mm).
2. Pin 1 lands on the square-cornered pad. Seen from the plug's mating face pin 1 is at the top right, and pins 1-8 are on the wide side of the D.
3. The plug's shroud matches the grey D outline (40.26 mm wide side, 17.8 mm across), wide side to "WIDE SIDE 1-8".
4. The plug's flange (37.6 x 17.2 mm) sits flat on the paper and stays inside the 40 x 18 mm outline.
5. The tails stand about 4.0 mm out of the plug's back: 1.6 mm of board leaves 2.4 mm to solder.
6. Look into the back of the plug between the rows: the grey 36 x 2 mm slot is where the main board's tab comes through (1.3 mm deep, it stops 0.3 mm below the front face). Nothing of the plug may sit in it.

The footprint was drawn from the Jiatel CR-PG001 drawing (OBDII-Male-16pin.pdf rev A). If a plug from another maker differs in any of 1-5, change gen/mklib.py and rebuild before ordering; if it fits, order the adapter board with the main board.