
## How to setup the OPTICAL8SW gamecontroller.




Startup the program on your desktop after installation.

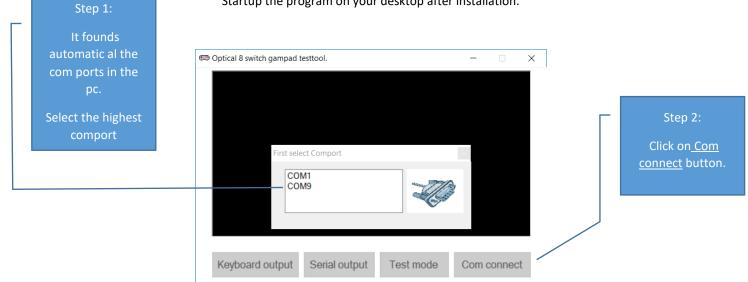


Remap


Exit


Read values

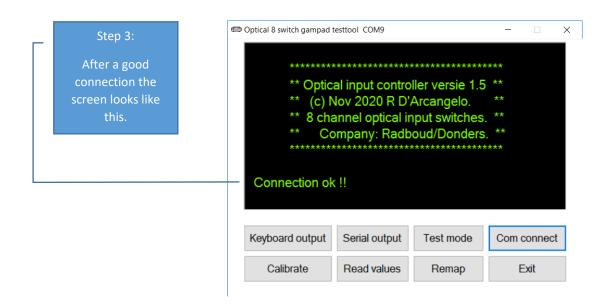

Calibrate

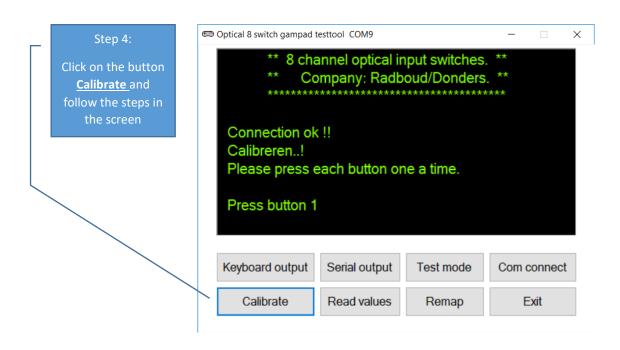

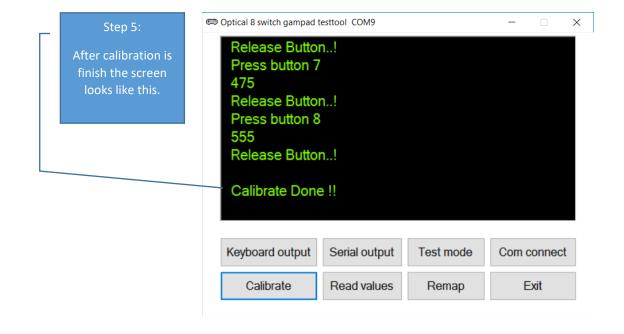

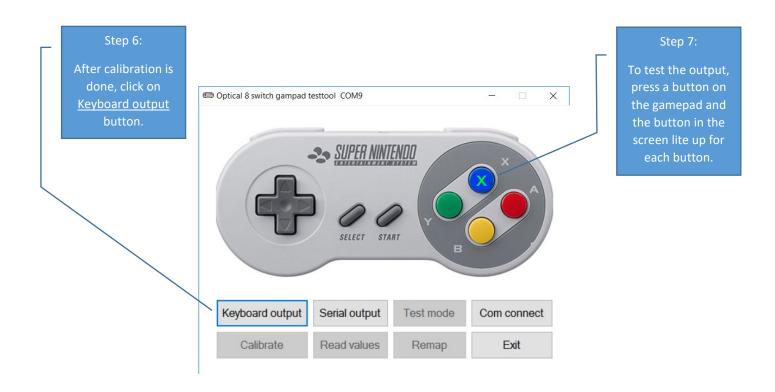




The gamepad is now ready and set as a keyboard HID for Windows.







Shows the saved calibration values and the output char how are send to the PC

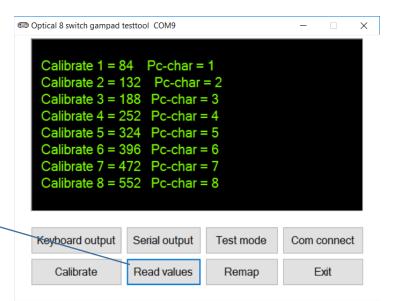

## Extra options:

Shows in realtime the values from the gamepad serial to the pc.

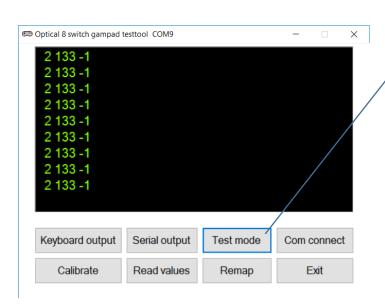

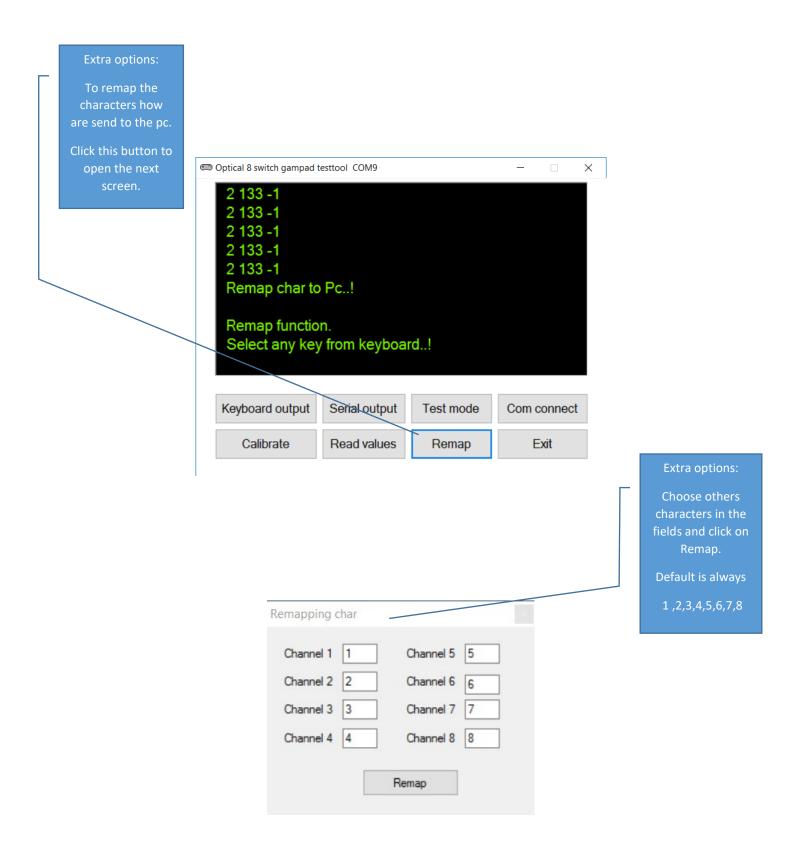

When use putty,

Connect to serial port COM .......(look in windows control panel).

Baudrate 115200

Press always H for the helpmenu.

