


J7
USB_A
VBUS
D+
D-
Shield
GND
IC1
USBLC6-2SC6
C35
22pf
C36
22pf
I/O1_1
I/O2_1
I/O1_2
I/O2_2
VBUS
GND
+5V
POCKETBEAGLE-P1
P1
TEMP-SENSE
PROG-ENABLE
SPI2.CS
SPI2.CLK
SPI2.MISO
SPI2.MOSI
+3.3V
J1
POCKETBEAGLE-P2
P2
J102
STEAMMA QT
RAILCOM-DIR
CAN0_RX
CAN0_TX
SCL
SDA
OPS-BRAKE
RAILCOM-ENABLE
RAILCOM-DATA
RAILCOM-SHORT
OPS-SIG
OPS-ENABLE
PROG-SIG
J101
Barrel_Jack
RB080LAM-30TR
D1
DCC_VS
Power Supplies
5V Out
Power Input
Railcom-OLBC-VREFD
12VD
Prog-DCC-VSD
Railcom-VREFD
RAILCOM_OLBC_VREF
PROG_DCC_VS
RAILCOM_VREF
+12V
File: PowerSupply.kicad_sch
Console
FAN-CONTROL
DCC_VS
DCC Output to Tracks
J2
Operations Driver
OPS-SIG
OPS-BRAKE
OPS-ENABLE
SDA
SCL
SIGNAL
BRAKE
ENABLE
SDA
SCL
PowerIn
B
A
SPI.CS
SPI.CLK
SPI.MOSI
SPI.MISO
C1
10 nf
R1
2.4
F1
350ma
OPS_B
OPS_A
C2
10 nf
R2
2.4
F2
350ma
1B
1A
3K
R54
3K
R55
3K
R56
3K
R57
D11
OPS ActA
D12
OPS ActB
D13
PROG ActA
D14
PROG ActB
GND
File: OpsDriver.kicad_sch
Prog and LCC Alt H/L Driver
Power1
SDA
SCL
Signal1
Enable1
Power2
Signal2
Enable2
2B
2A
PROG_DCC_VS
PROG-SIG
PROG-ENABLE
OPS-SIG
OPS-ENABLE
OLBC_B
OLBC_A
+12V
350ma
F5
350ma
F6
ALT_L
ALT_H
File: ProgAltDriver.kicad_sch
CAN Transceiver
CAN0_TX
CAN0_RX
CAN_TX
CAN_RX
File: CANTransceiver.kicad_sch
Fan Control
+12V
FAN_POWER
FAN-CONTROL
FAN_CONTROL
TEMP-SENSE
TEMP_SENSE
File: FANControl.kicad_sch
Railcomm Interface
DCC_VS
RAILCOM-SHORT
RAILCOM-ENABLE
OPS_A
OPS_B
OLBC_A
OLBC_B
Power
SHORT
ENABLE
OPS-A
OPS-B
OLBC-A
OLBC-B
VREF
DATA
DIR
VREF-OLBC
RAILCOM_VREF
RAILCOM-DATA
RAILCOM-DIR
RAILCOM_OLBC_VREF
File: RailCom.kicad_sch
MK2
Mounting_Hole_PAD
MK1
Mounting_Hole
FID1
Fiducial
FID2
Fiducial
FID3
Fiducial
MK3
Mounting_Hole
MK4
Mounting_Hole
Main Page, with Pocket Beagle Connections
Deepwoods Software
Sheet: /
File: PocketBeagleCommandStation_SMD.kicad_sch
Title: Pocket Beagle DCC Command Station (SMD version)
Size: USLetter
Date: 2026-07-08
Rev: C
KiCad E.D.A. kicad 6.0.11+dfsg-1
Id: 1/7

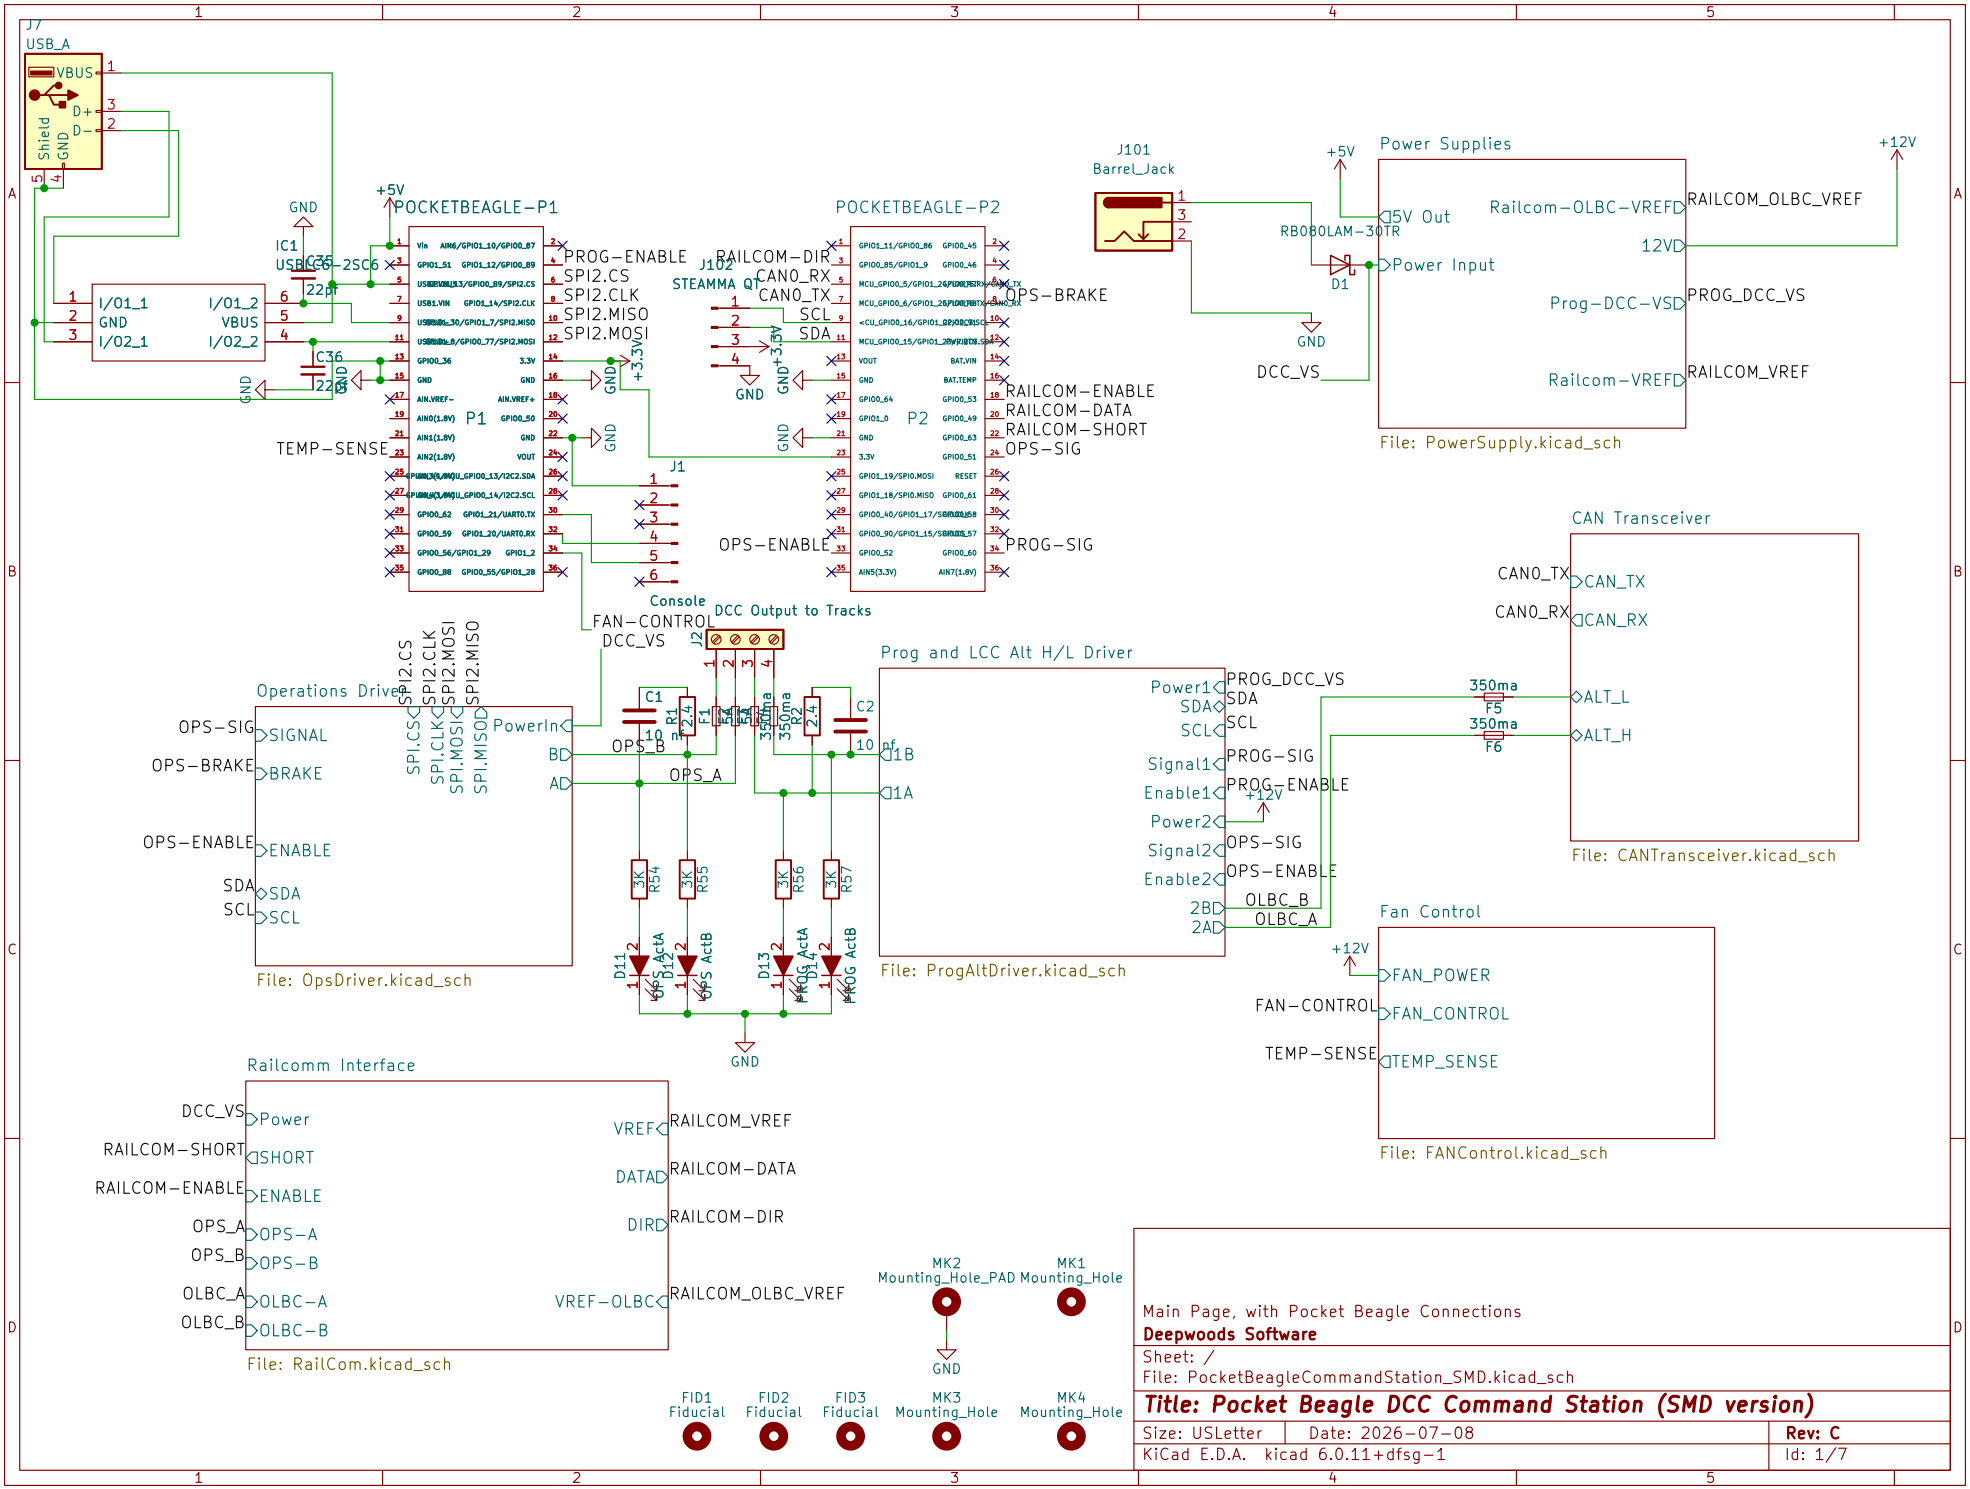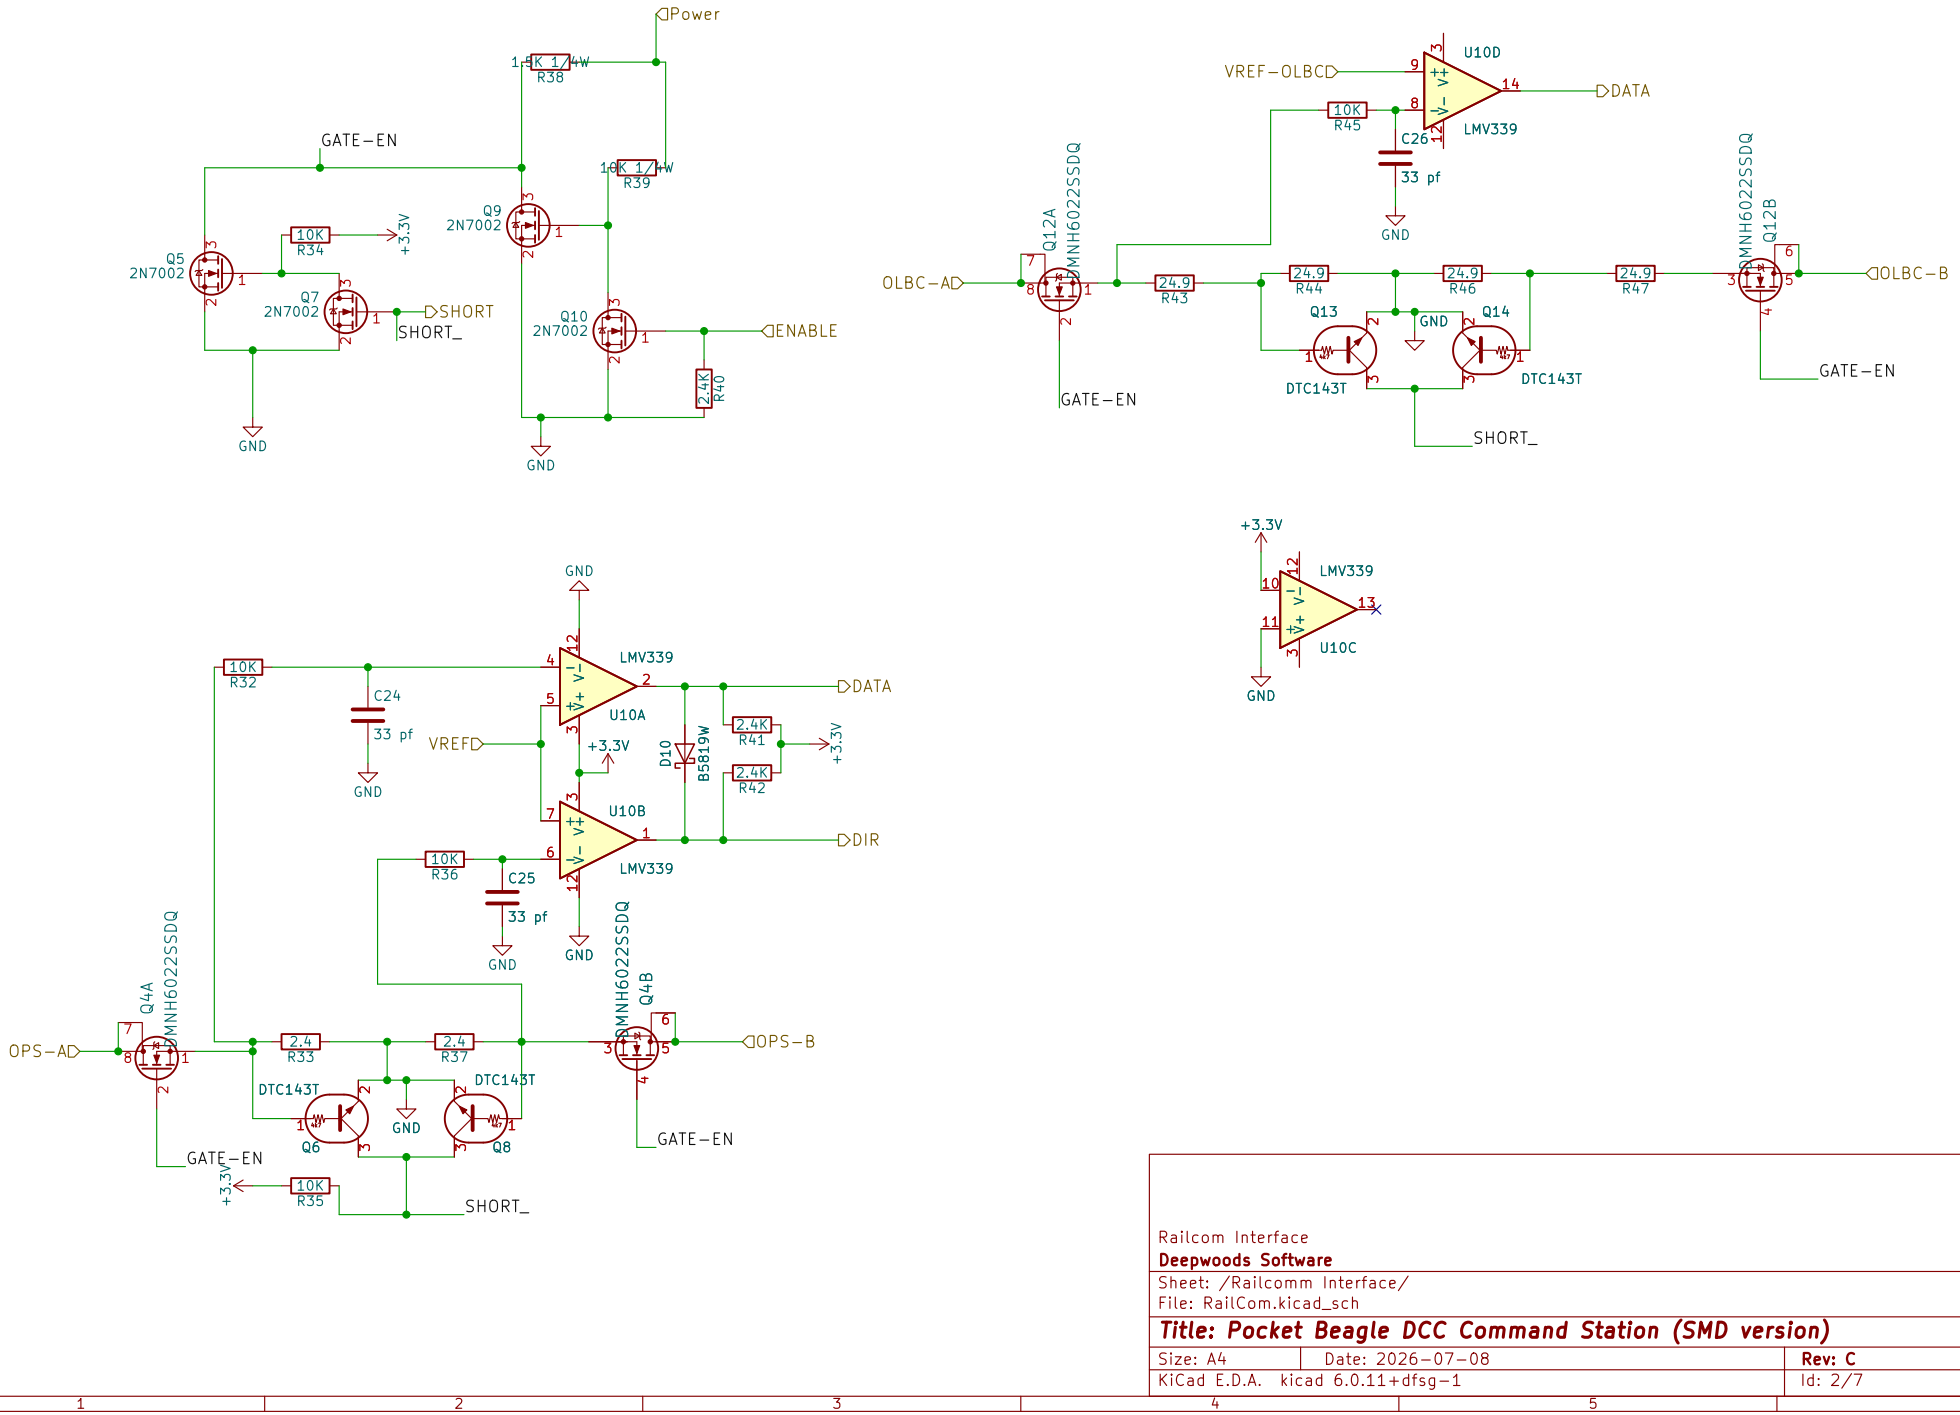

Railcom Interface


Deepwoods Software

Sheet: /Railcomm Interface/

File: RailCom.kicad_sch

Title: Pocket Beagle DCC Command Station (SMD version)

Size: A4	Date: 2026-07-08	**Rev: C**
KiCad E.D.A. kicad 6.0.11+dfsg-1		Id: 2/7

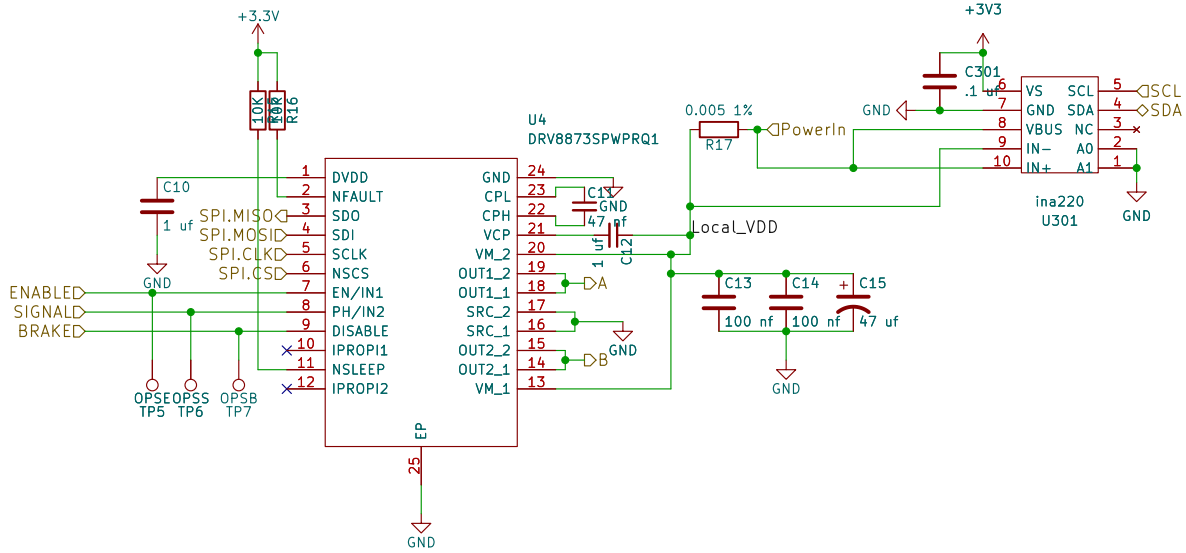

Operations DCC Driver


Deepwoods Software

Sheet: /Operations Driver/

File: OpsDriver.kicad_sch

Title: Pocket Beagle DCC Command Station (SMD version)

Size: A4	Date: 2026-07-08	**Rev: C**
KiCad E.D.A. kicad 6.0.11+dfsg-1		Id: 3/7

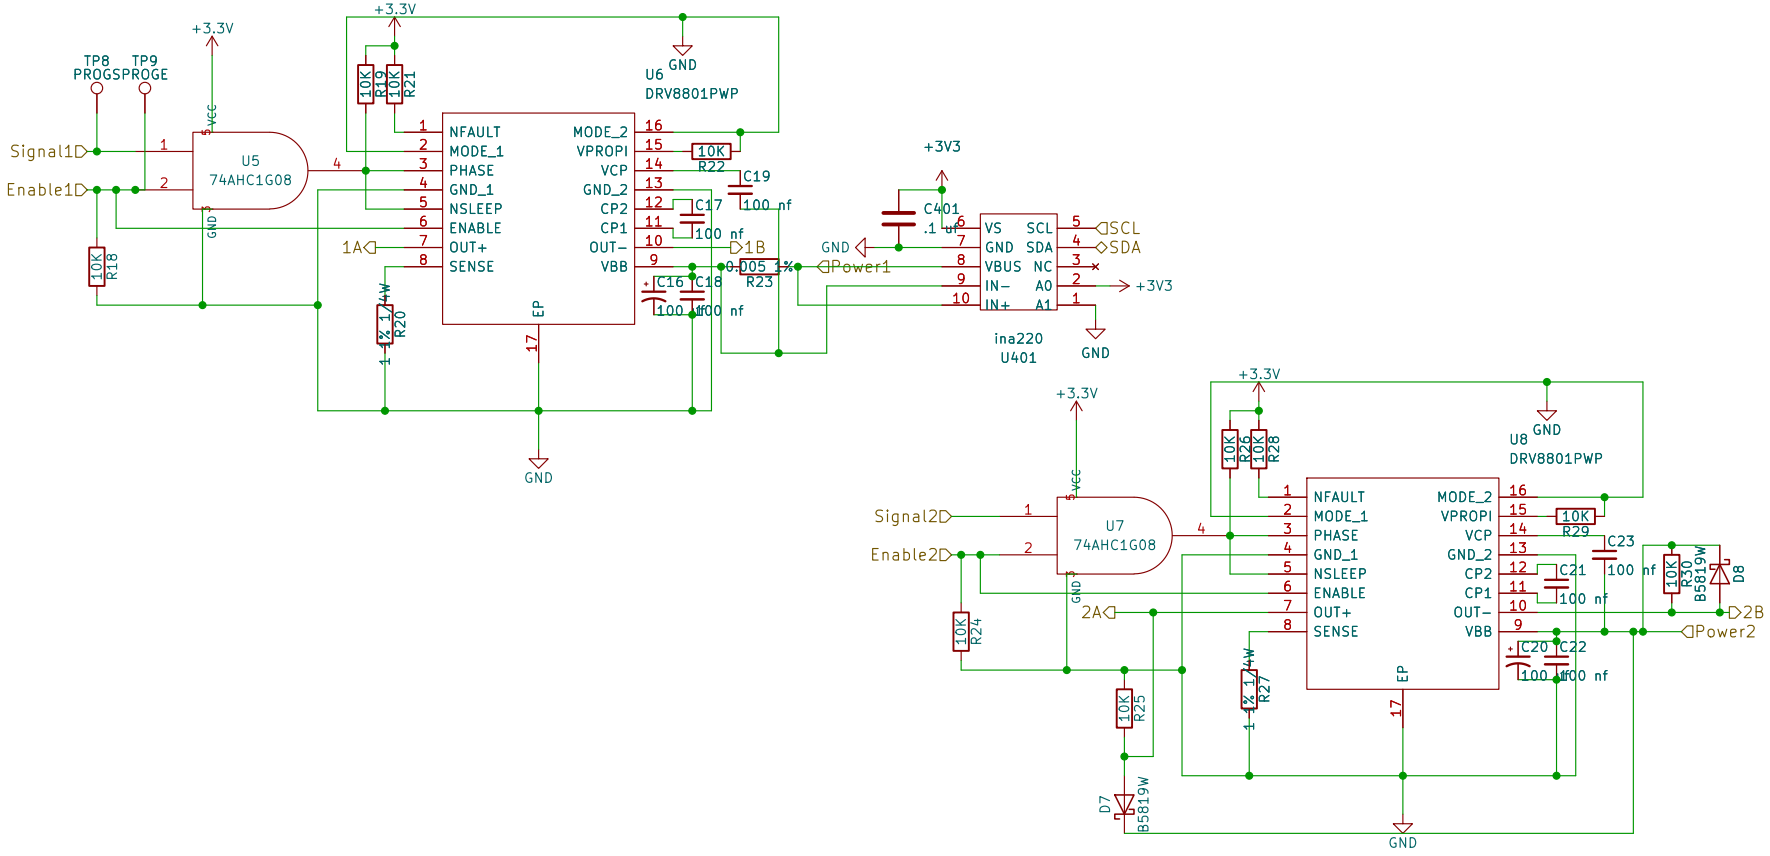

Prog and OpenLCB DCC drivers


Deepwoods Software

Sheet: /Prog and LCC Alt H/L Driver/

File: ProgAltDriver.kicad_sch

Title: Pocket Beagle DCC Command Station (SMD version)

Size: A4	Date: 2026-07-08	**Rev: C**
KiCad E.D.A. kicad 6.0.11+dfsg-1		Id: 4/7

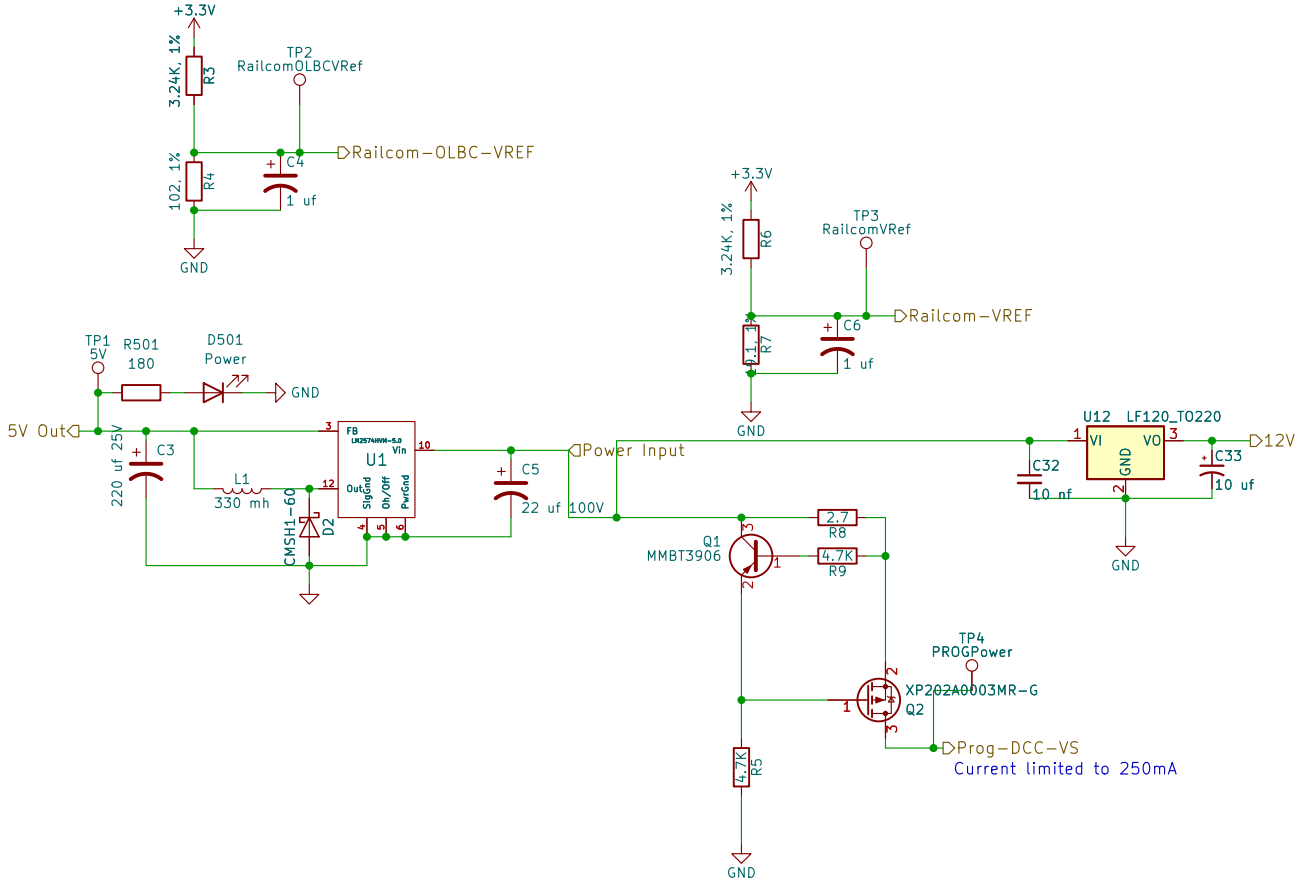


Power Supplies
Deepwoods Software

Sheet: /Power Supplies/
File: PowerSupply.kicad_sch

Title: Pocket Beagle DCC Command Station (SMD version)

Size: A4	Date: 2026-07-08	**Rev: C**
KiCad E.D.A. kicad 6.0.11+dfsg-1		Id: 5/7

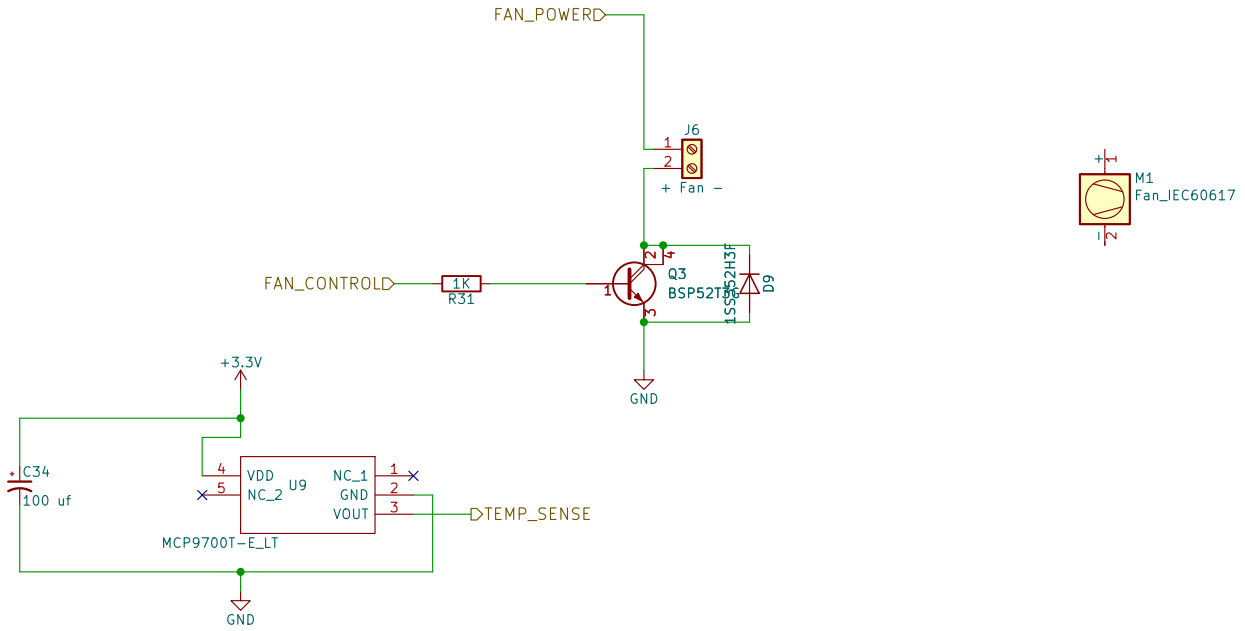

Fan Control


Deepwoods Software

Sheet: /Fan Control/

File: FANControl.kicad_sch

Title: Pocket Beagle DCC Command Station (SMD version)

Size: A4	Date: 2026-07-08	**Rev: C**
KiCad E.D.A. kicad 6.0.11+dfsg-1		Id: 6/7

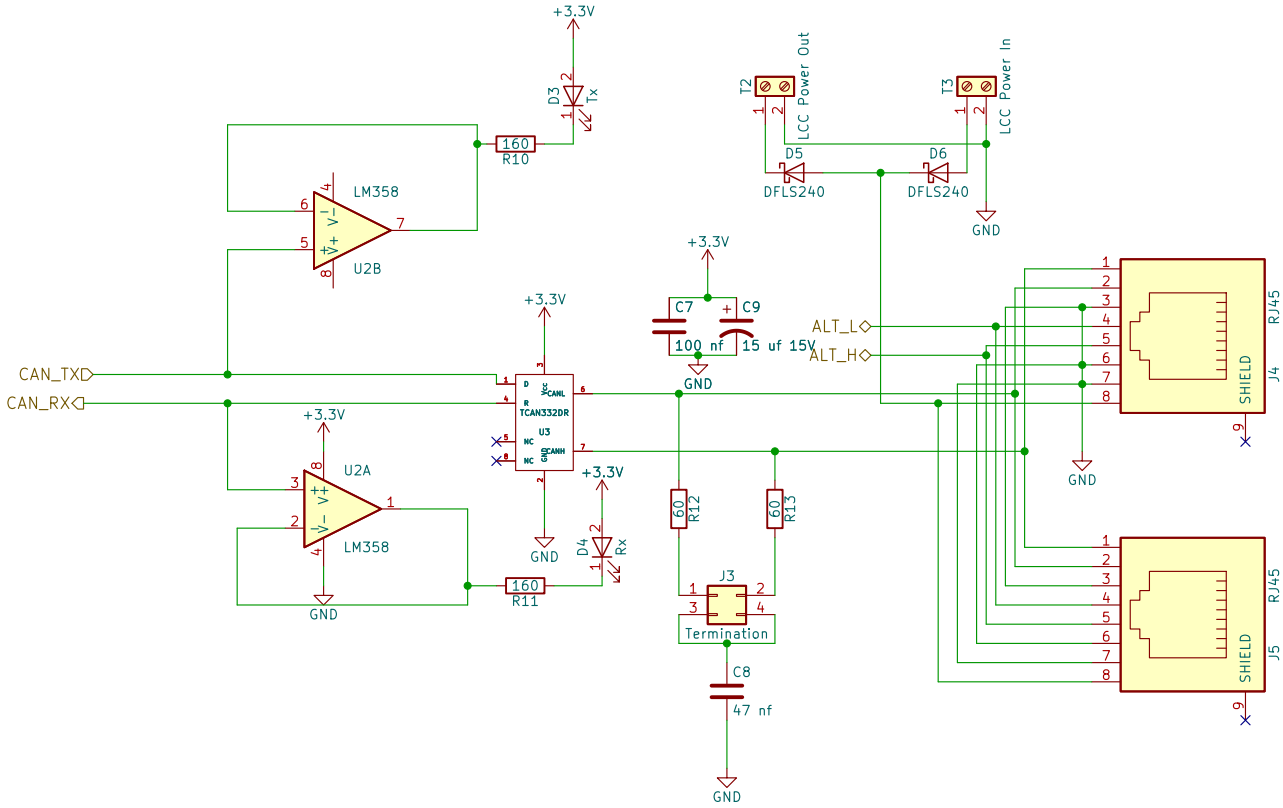

CAN Transceiver

Deepwoods Software

Sheet: /CAN Transceiver/

File: CANTransceiver.kicad_sch

Title: Pocket Beagle DCC Command Station (SMD version)

Size: A4	Date: 2026-07-08	**Rev: C**
KiCad E.D.A. kicad 6.0.11+dfsg-1		Id: 7/7