

VL04 (Programming Examples)

Server configuration

SERVER,1,47.89.58.215, 21100,0# (0 means that we will use an IP--1 is for an address)(IP)(Port)(0TCP1UDP)

APN of the SIM

m2mglobal.telefonica.mx

Enable automatic time zone

ASETGMT,ON#

Time zone according to the platform to be used

GMT,E,0,0#(Para EPCOMGPS) GMT,E,8,0#(Para Tracksolid)

Factory reset

FACTORY#

Restart the device

RESET#

Telephone numbers that receive alerts

SOS, A, PHONE_NUMBER#(A-addD-delete)

Central telephone number

CENTER,A,PHONE_NUMBER#(A-addD-delete)

Reporting times

TIMER,10,60#(10 is the reporting time with ignition)(60 It is the reporting time without ignition)

Create geofence

FENCE,ON,0,23.634501,-102.552784,100,IN,0#(ON-OFF)(0)(AI(Longitud)(Radio)(IN-OUT of when it will be generated alert) (0= GPRS -1=GPRS+SMS)

Vibration alarm

SIGNAL, OFF, 1#(ON-OFF) (0=GPRS -1=GPRS+SMS -2=GPRS+SMS+CALL -3GPRS+CALL)

Alarm due to power outage

POWERALM,ON,2,10,1#(ON-OFF) (0=GPRS -1=GPRS+SMS -2=GPRS+SMS+CALL -3GPRS+CALL)(10 seconds Detects the time without food)(1 second Minimum loading time)

External low battery alarm

(ON / OFF)(0=GPRS - 1=GPRS+SMS)(115= If the voltage drops below 11.5 execute the alert)(123= When return to 12.3 volts will stop the alerts) (30 = seconds time to send the event)

Low battery alarm

BATALM,ON,1#(ON-OFF) (0=GPRS -1=GPRS+SMS)

Alarm installation

INSTALLALM,ON,0#(ON-OFF) (0=GPRS -1=GPRS+SMS)

Speeding alarm

SPEED,ON,80,120,0,ON#(ON/OFF) (80 seconds after detecting the event) (120K/h limit) (0=GPRS –1=GPRS+SMS)
(ON/OFF alarm sound)

Fatigue alarm

FATIGUEALM,ON,240,20,30,0,ON#(ON/OFF) (240minutesmaximum driving time) (20 minutes of time between breaks)
(30 minutes driving time before maximum time)(0=GPRS –1=GPRS+SMS) (ON/OFF alarm sound)

Password

PWDSW, ON#We enable the password

The password must contain numbers and letters and at least 1 character but no more than 19 characters.
disable this option)

Change password

PASSWORD,000000,B#(Password toNew password

SOS message

#

GPS module Actvar

GPSON#(Athe position 5 minutes

LBS Position

LBS#

LEDs

LEDSW,ON#(ON-OFF)

**Vibration sensitivity level
LEVEL**

**Mileage parameters
MILEAGE,ON,0#(ON / OFF) (0= Initial mileage)**

**Defense mode
DEFMODE,1#(0=Automatic mode
-1=Manual mode)**

**Force disarmament
DSRESET#**

**Spy Call
1#(0=Indicates that listening is prohibited – 1=Indicates that listening is only available by center number — 2=Indicates that the listening is available for all numbers.)**

**Check firmware version
Firmware version**

**Parameter review
PARAM#(Check the parameters)**

Check network configuration

GPRSSET#(Device network configuration)

Check the status of the device

Status Review

Position Statement

WHERE#(Position Review)

URL review

Check URL

Review position

POSITION#(Position Review)

Check the status of geofences

FENCE#(Geofence Review)

VOICE ALARM

Speed

SPEED

Time driving

FATIGUE ALARM

Geofencing entry

FENCE

Geofence exit

FENCE

Vibration detected

SIGNAL, AUDIO, OFF#(ON/OFF)

Interrupted energy

POWER ALARM

Acceleration

HARACC,AUDIO,ON#(ON/OFF)

Sudden braking

HARDEC,AUDIO,ON#(ON/OFF)

Sudden Turn

HARTU,AUDIO,ON#(ON/OFF)

Environment and brand lines

HARLAN,AUDIO,ON#(ON/OFF)

Overturning

ROLLOVER, AUDIO, ON#(ON/OFF)

Collision


HORCOL, AUDIO, ON#(ON/OFF)

Unstable vehicle

VEHSW,AUDIO,ON#(ON/OFF)

Vehicle without balance

EULAA,AUDIO,ON#(ON/OFF) The range of values for angle changes is greater than 20° and less than 70°.

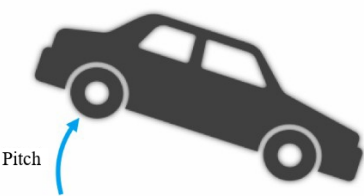

Sound at ignition

ACCSOUND, AUDIO, ON#(ON/OFF)

Sound for first position

POSITION, AUDIO, ON#(ON/OFF)