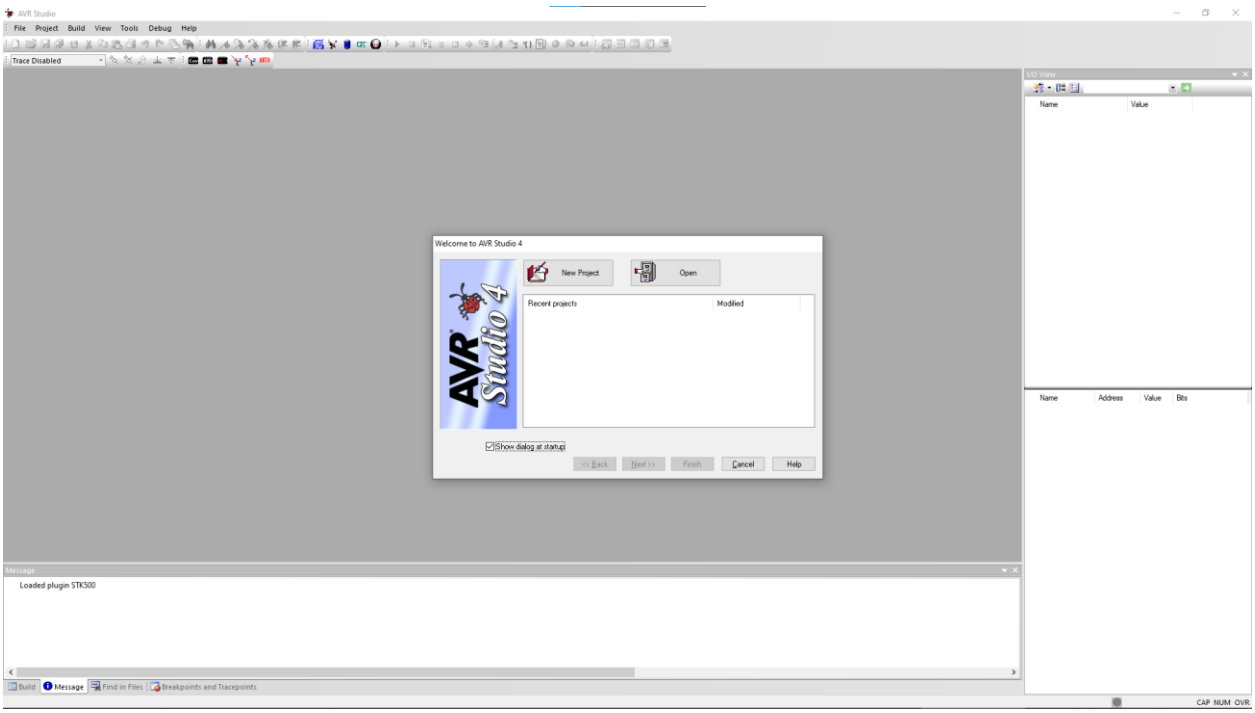
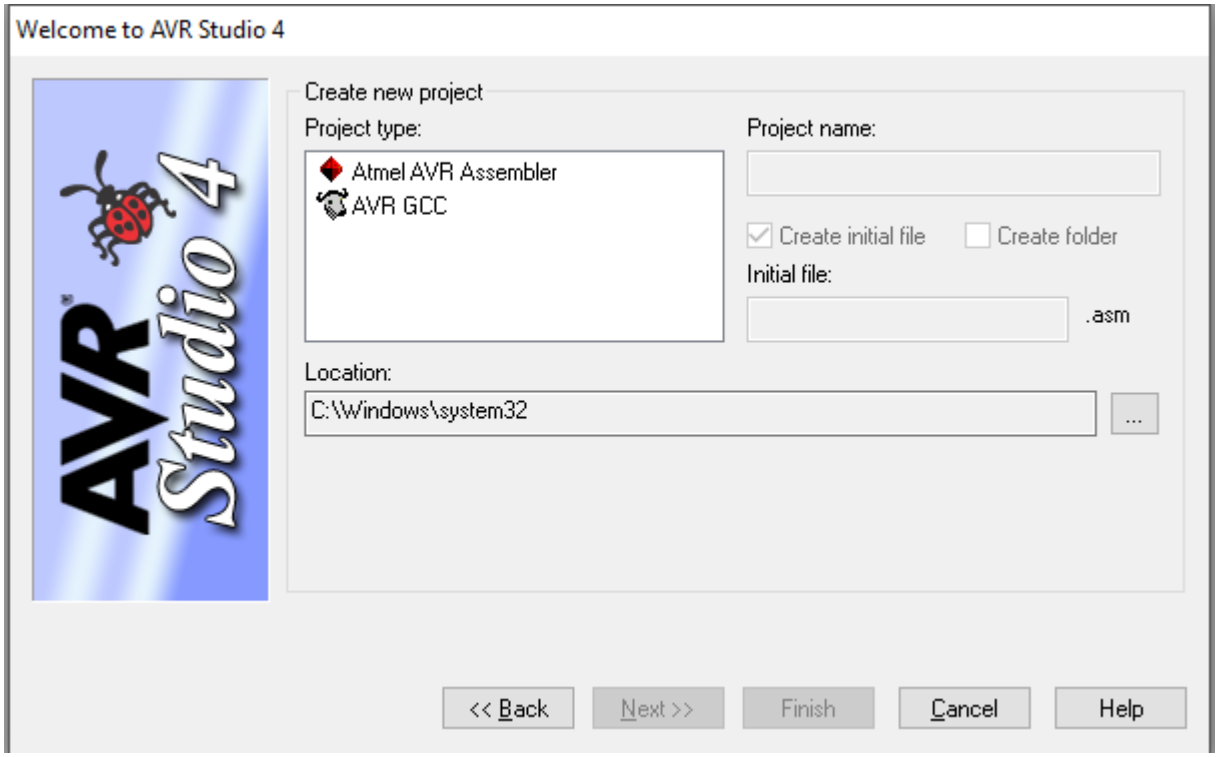
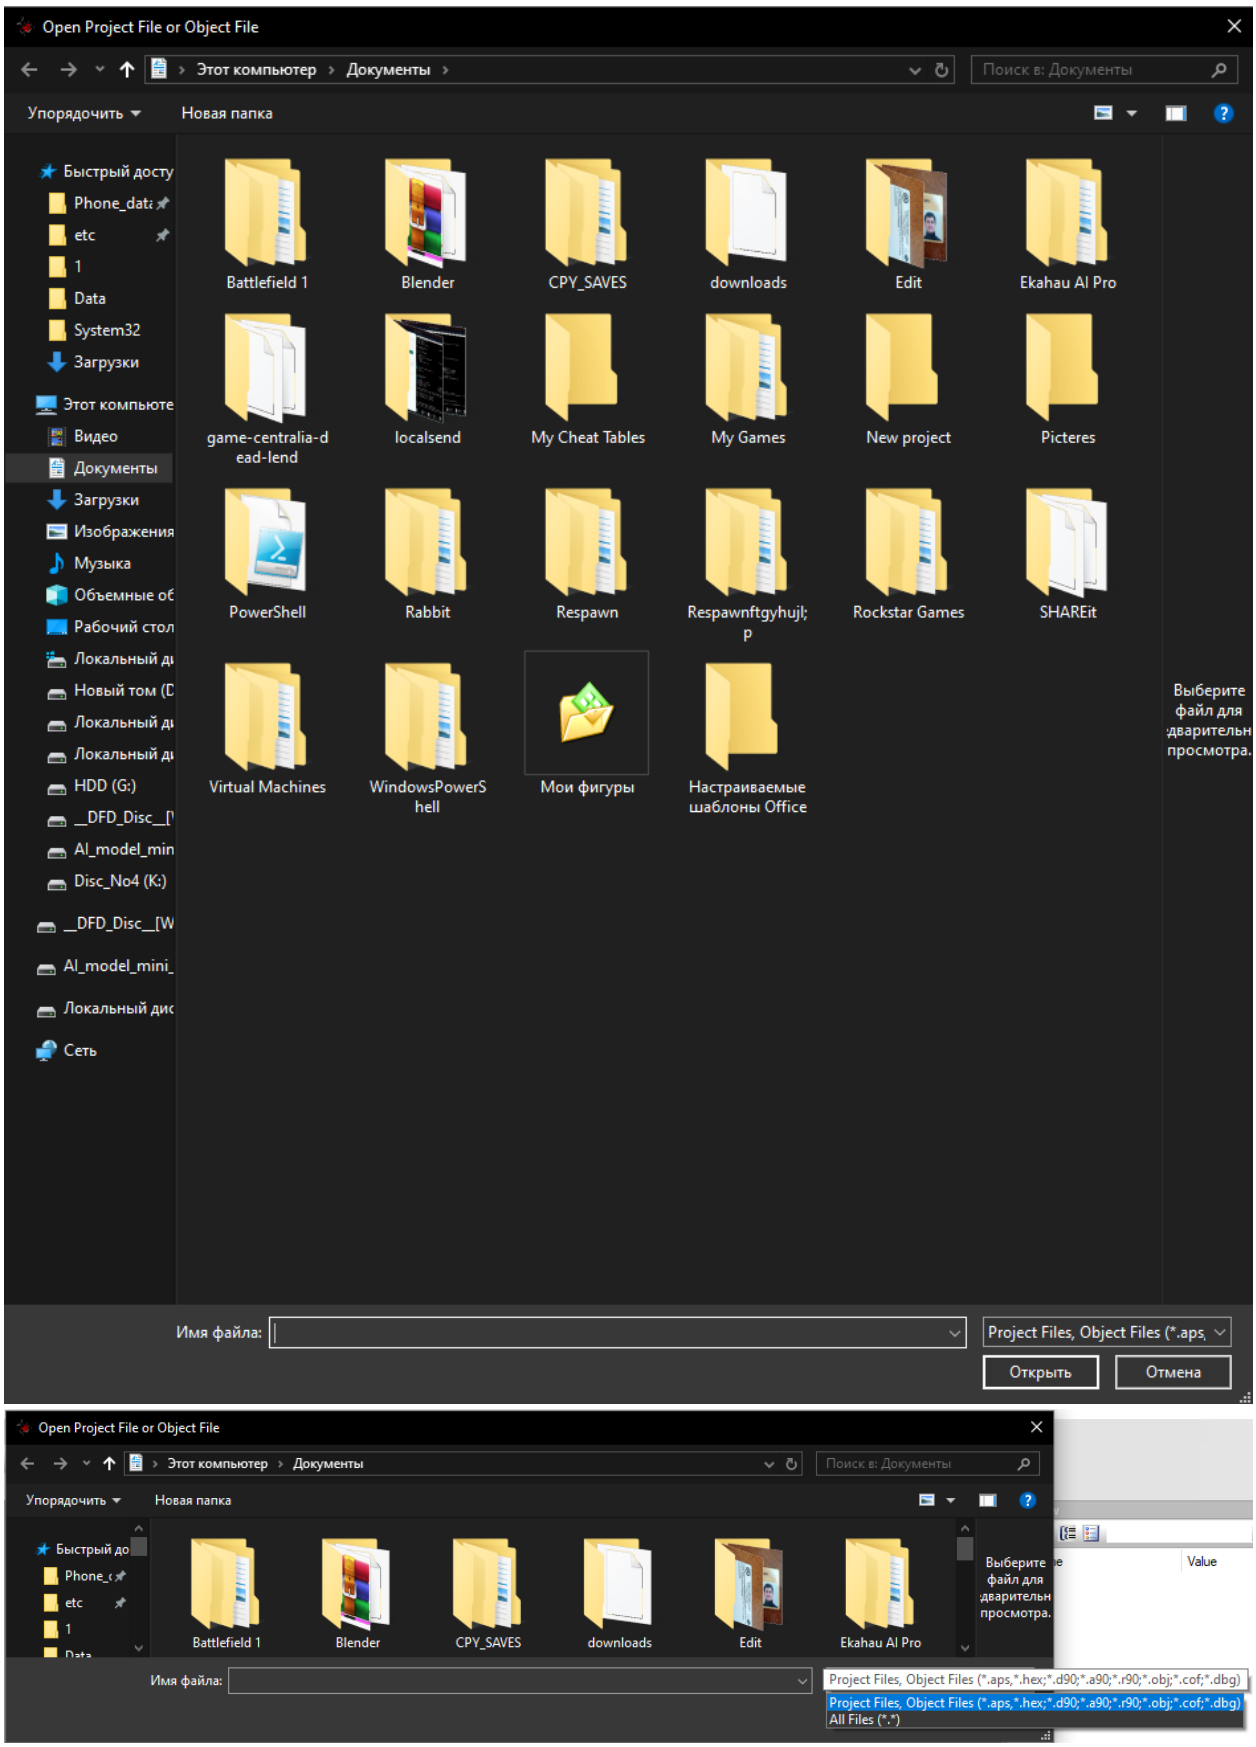
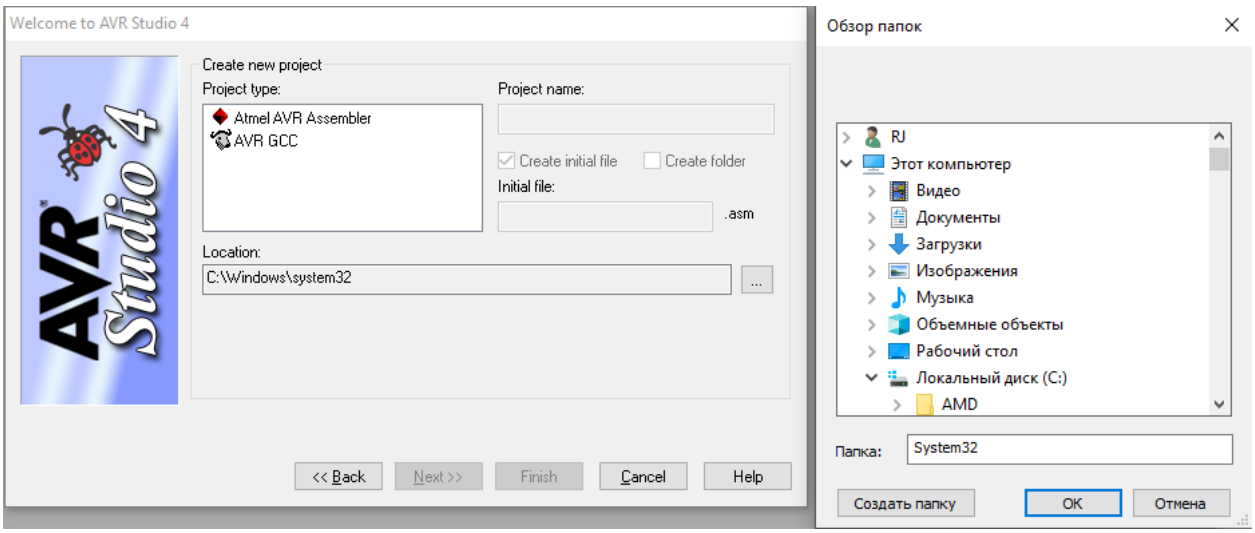
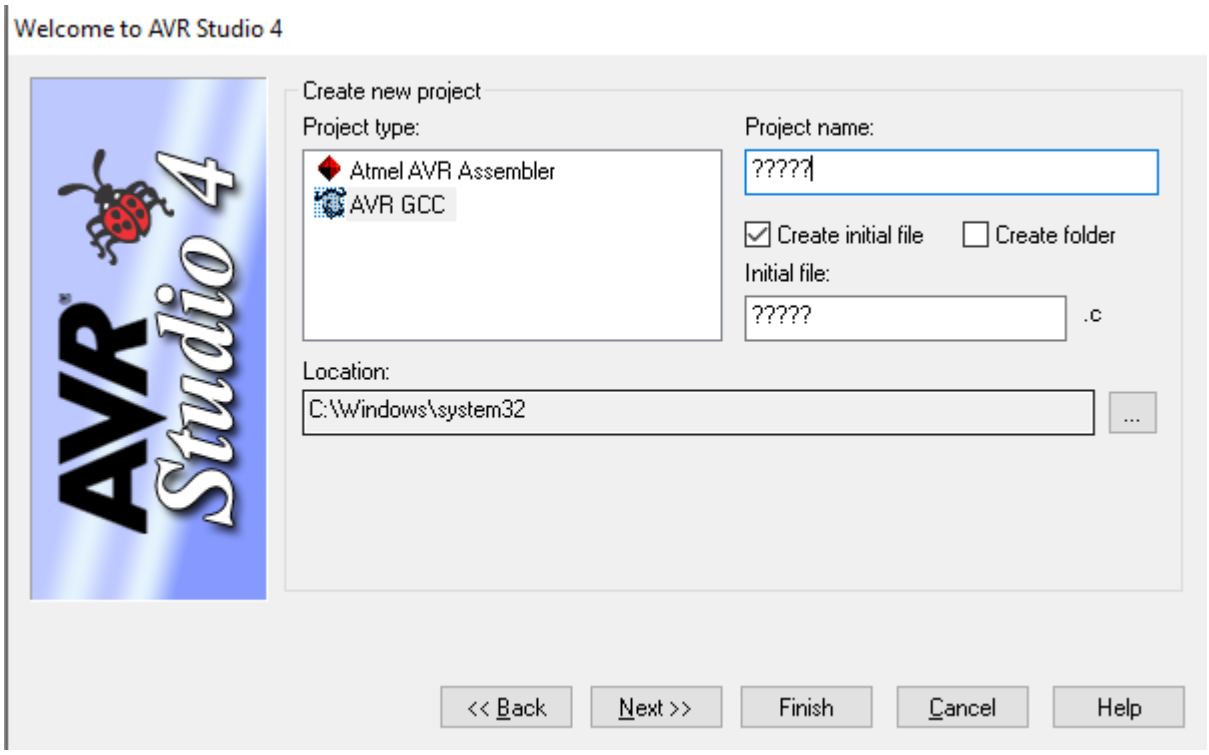

AVR Studio
File Project Build View Tools Debug Help
Trace Disabled
I/O View
Name
Value
Welcome to AVR Studio 4
New Project
Open
Recent projects
Modified
Show dialog at startup
<< Back
Next >>
Finish
Cancel
Help
Name
Address
Value
Bits
Message
Loaded plugin STK500
Build
Message
Find in Files
Breakpoints and Tracepoints
CAP NUM OVR


Welcome to AVR Studio 4
AVR Studio 4
Create new project
Project type:
Atmel AVR Assembler
AVR GCC
Project name:
Create initial file
Create folder
Initial file:
.asm
Location:
C:\Windows\system32
...
<< Back
Next >>
Finish
Cancel
Help

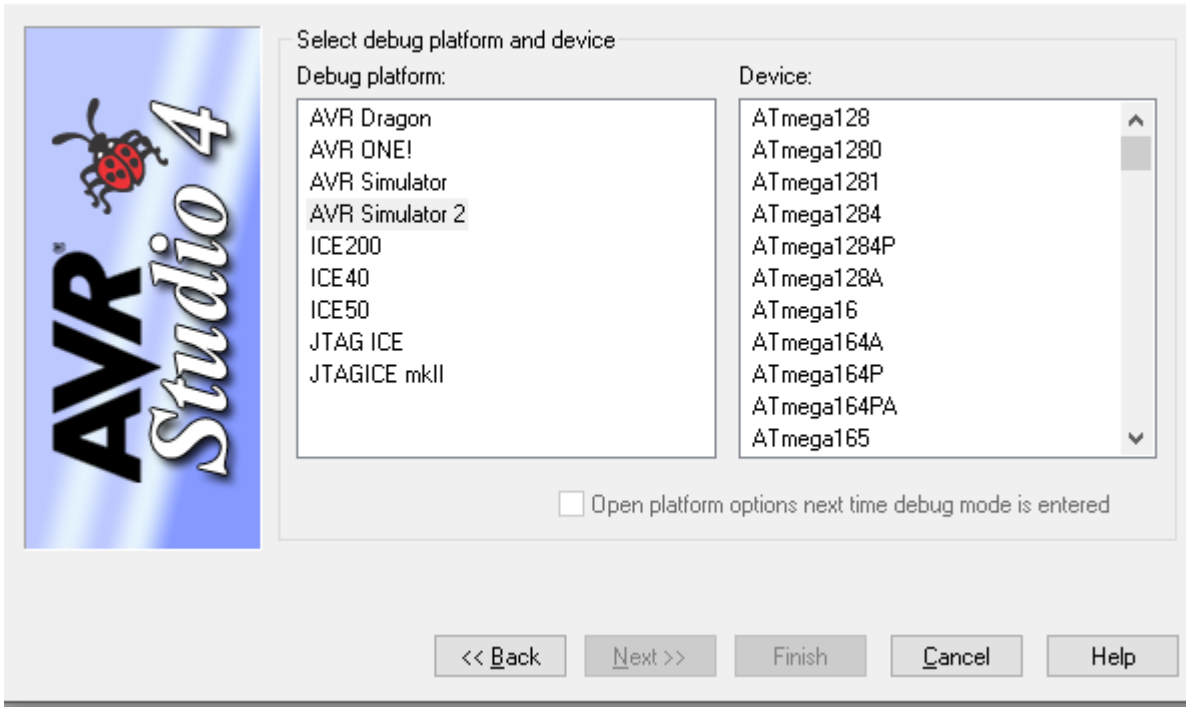

Open Project File or Object File
Этот компьютер › Документы ›
Поиск в: Документы
Упорядочить
Новая папка
Быстрый доступ
Phone_data
etc
1
Data
System32
Загрузки
Этот компьютер
Видео
Документы
Загрузки
Изображения
Музыка
Объемные об
Рабочий стол
Локальный д
Новый том (D
Локальный д
Локальный д
HDD (G:)
_DFD_Disc_[
AI_model_min
Disc_No4 (K:)
_DFD_Disc_[W
AI_model_mini
Локальный дис
Сеть
Battlefield 1
Blender
CPY_SAVES
downloads
Edit
Ekahau AI Pro
game-centralia-dead-lend
localsend
My Cheat Tables
My Games
New project
Picteres
PowerShell
Rabbit
Respawn
Respawnftgyhujl;p
Rockstar Games
SHAREit
Virtual Machines
WindowsPowerShell
Мои фигуры
Настраиваемые шаблоны Office
Выберите файл для дварительн просмотра.
Имя файла:
Project Files, Object Files (*.aps,
Открыть
Отмена

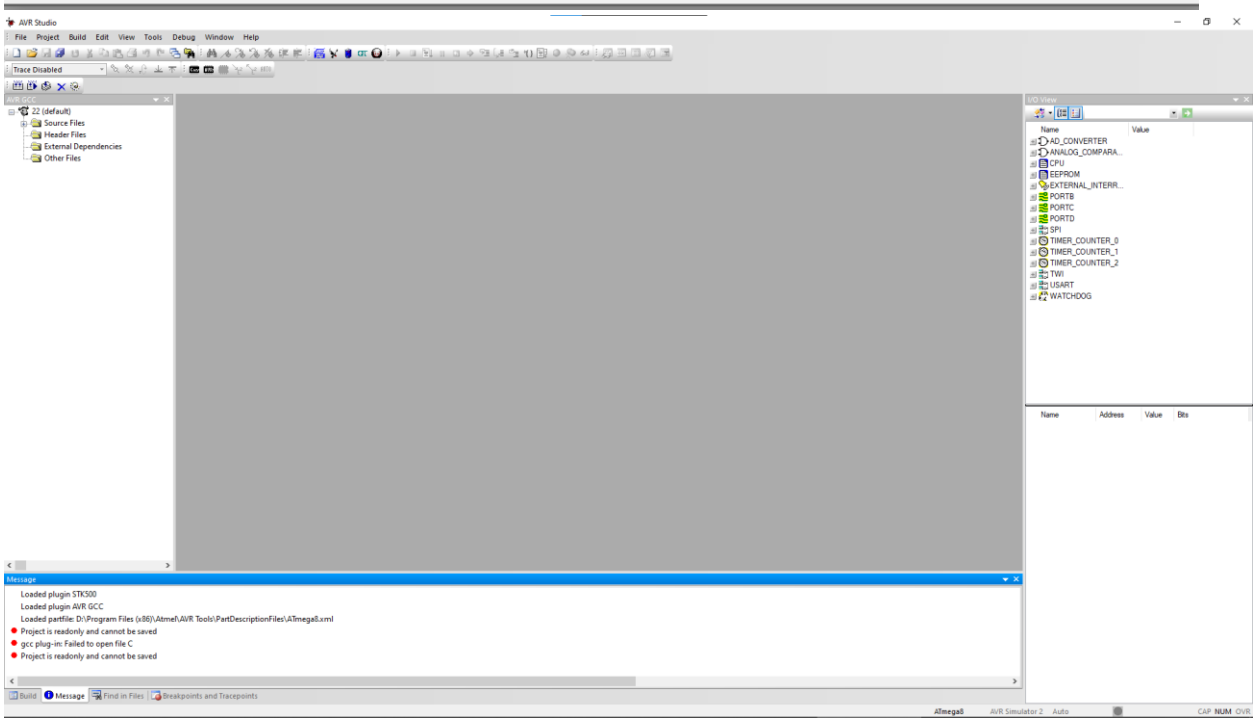
Open Project File or Object File
Этот компьютер › Документы
Поиск в: Документы
Упорядочить
Новая папка
Быстрый до
Phone_(
etc
1
Data
Battlefield 1
Blender
CPY_SAVES
downloads
Edit
Ekahau AI Pro
Выберите файл для дварительн просмотра.
Value
Имя файла:
Project Files, Object Files (*.aps,*.hex;*.d90;*.a90;*.r90;*.obj;*.cof;*.dbg)
Project Files, Object Files (*.aps,*.hex;*.d90;*.a90;*.r90;*.obj;*.cof;*.dbg)
All Files (*.*)

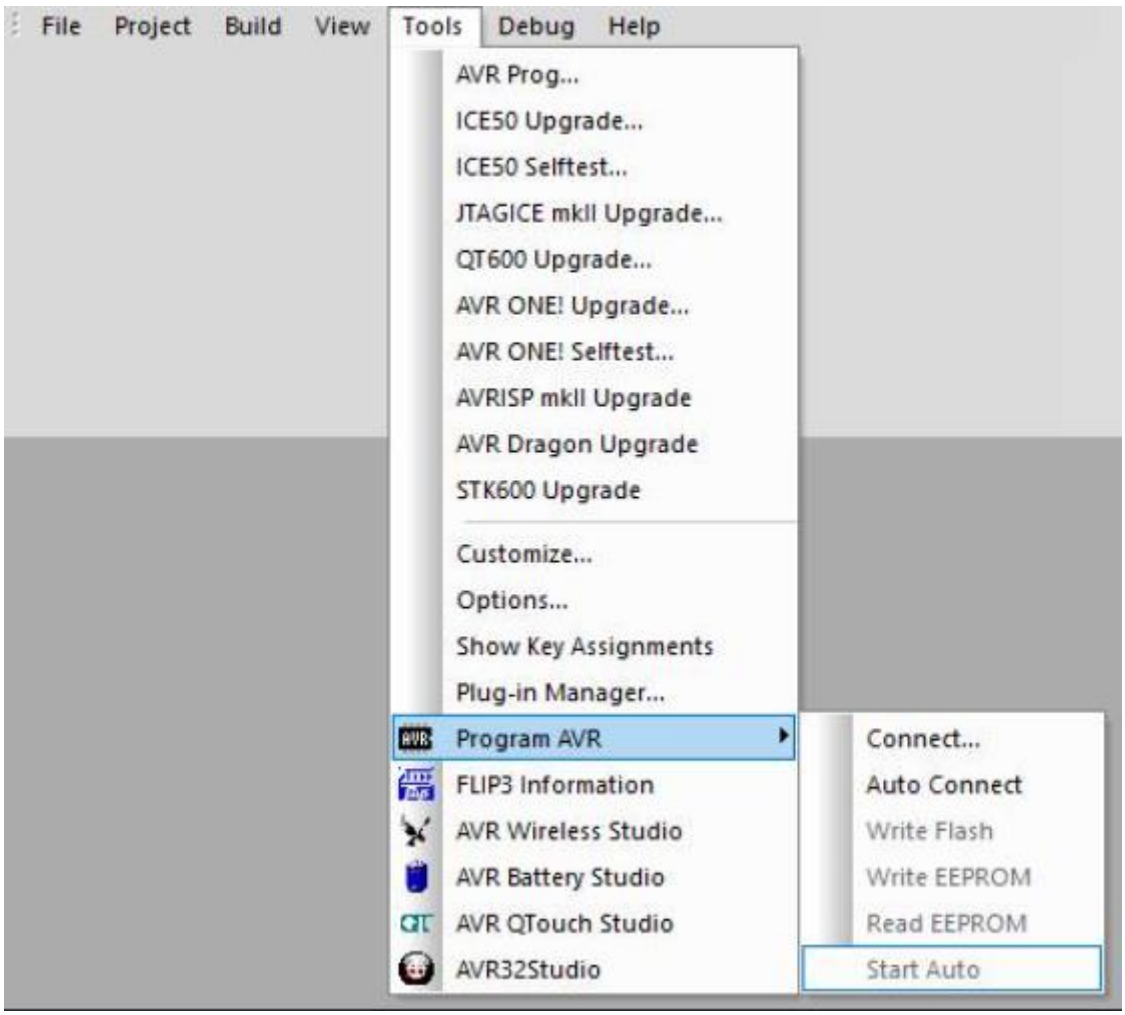

Welcome to AVR Studio 4
Create new project
Project type:
Atmel AVR Assembler
AVR GCC
Project name:
Create initial file
Create folder
Initial file:
.asm
Location:
C:\Windows\system32
<< Back
Next >>
Finish
Cancel
Help
Обзор папок
RJ
Этот компьютер
Видео
Документы
Загрузки
Изображения
Музыка
Объемные объекты
Рабочий стол
Локальный диск (C:)
AMD
Папка:
System32
Создать папку
OK
Отмена

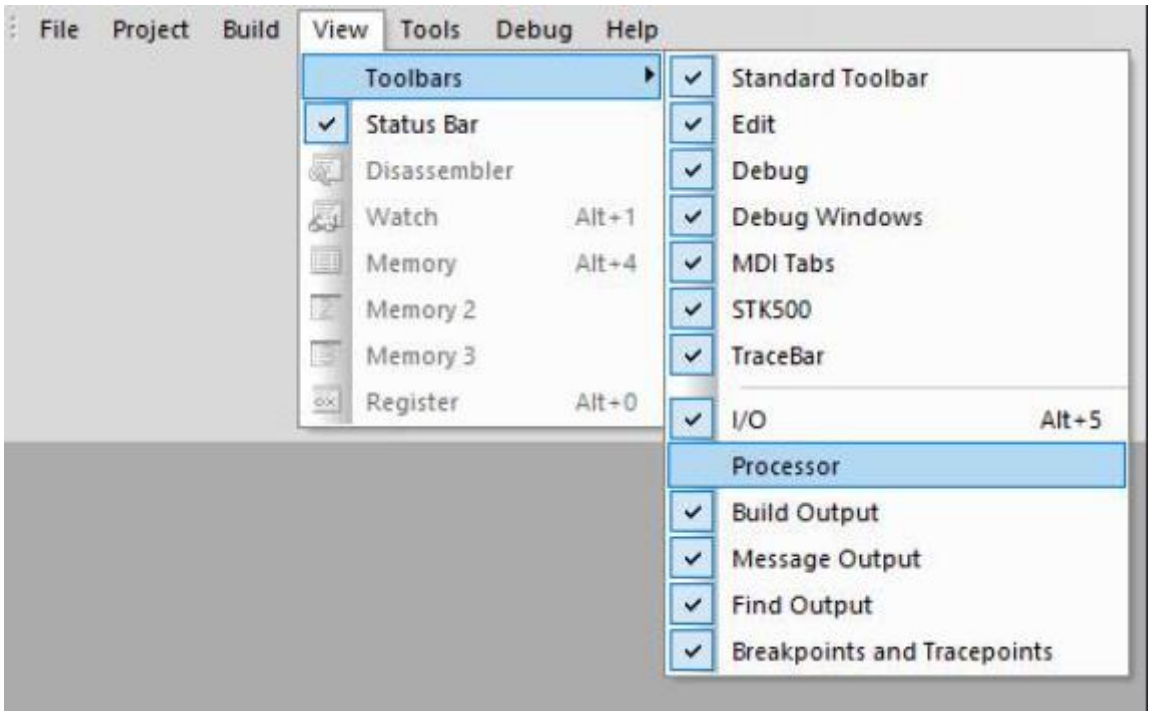

Welcome to AVR Studio 4
Create new project
Project type:
Atmel AVR Assembler
AVR GCC
Project name:
?????
Create initial file
Create folder
Initial file:
?????
.c
Location:
C:\Windows\system32
...
<< Back
Next >>
Finish
Cancel
Help

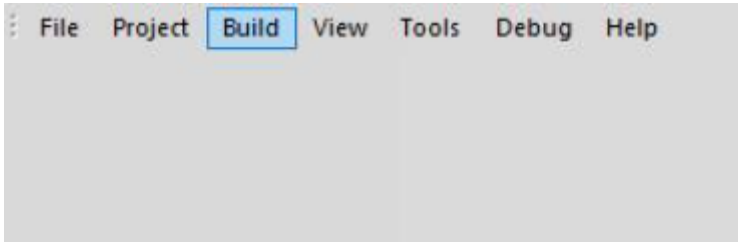
Welcome to AVR Studio 4

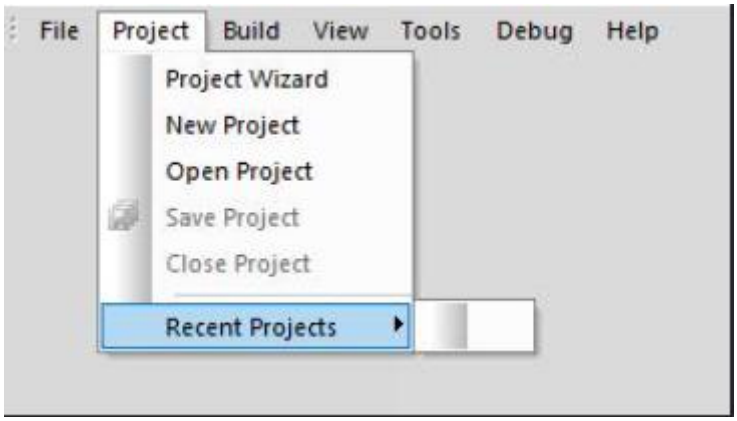


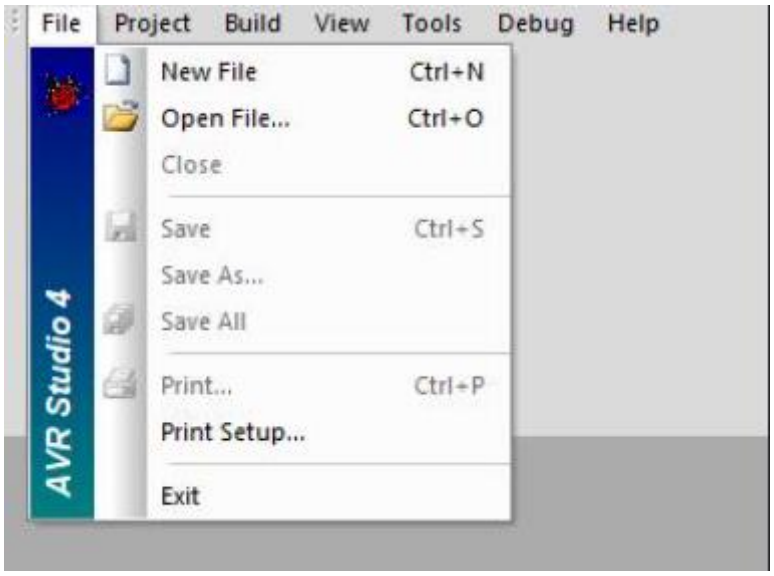



File
Project
Build
View
Tools
Debug
Help
AVR Prog...
ICE50 Upgrade...
ICE50 Selftest...
JTAGICE mkII Upgrade...
QT600 Upgrade...
AVR ONE! Upgrade...
AVR ONE! Selftest...
AVRISP mkII Upgrade
AVR Dragon Upgrade
STK600 Upgrade
Customize...
Options...
Show Key Assignments
Plug-in Manager...
Program AVR
FLIP3 Information
AVR Wireless Studio
AVR Battery Studio
AVR QTouch Studio
AVR32Studio
Connect...
Auto Connect
Write Flash
Write EEPROM
Read EEPROM
Start Auto

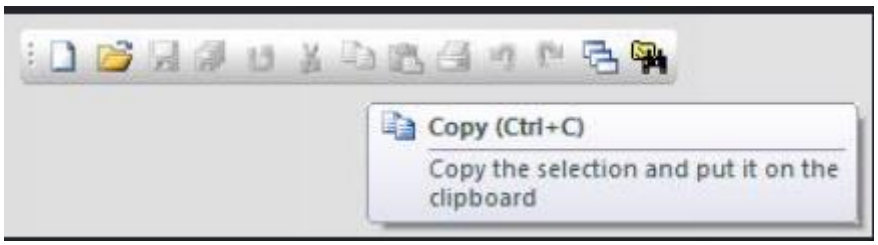

File
Project
Build
View
Tools
Debug
Help
Toolbars
Status Bar
Disassembler
Watch Alt+1
Memory Alt+4
Memory 2
Memory 3
Register Alt+0
Standard Toolbar
Edit
Debug
Debug Windows
MDI Tabs
STK500
TraceBar
I/O Alt+5
Processor
Build Output
Message Output
Find Output
Breakpoints and Tracepoints


File
Project
Build
View
Tools
Debug
Help

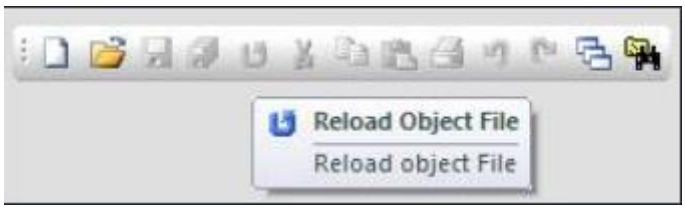

File
Project
Build
View
Tools
Debug
Help
Project Wizard
New Project
Open Project
Save Project
Close Project
Recent Projects

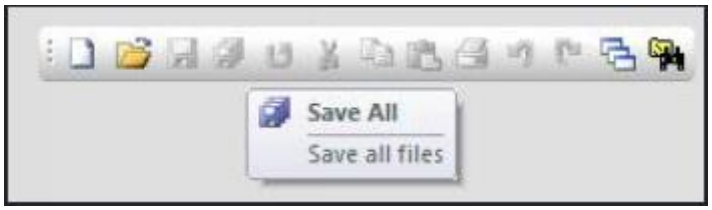

File
Project
Build
View
Tools
Debug
Help
AVR Studio 4
New File Ctrl+N
Open File... Ctrl+O
Close
Save Ctrl+S
Save As...
Save All
Print... Ctrl+P
Print Setup...
Exit

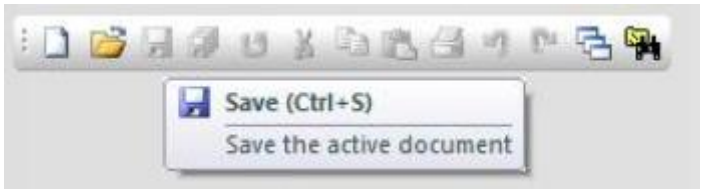

Paste (Ctrl+V)
Insert clipboard contents


Copy (Ctrl+C)
Copy the selection and put it on the clipboard


Cut (Ctrl+X)
Cut the selection and put it on the clipboard

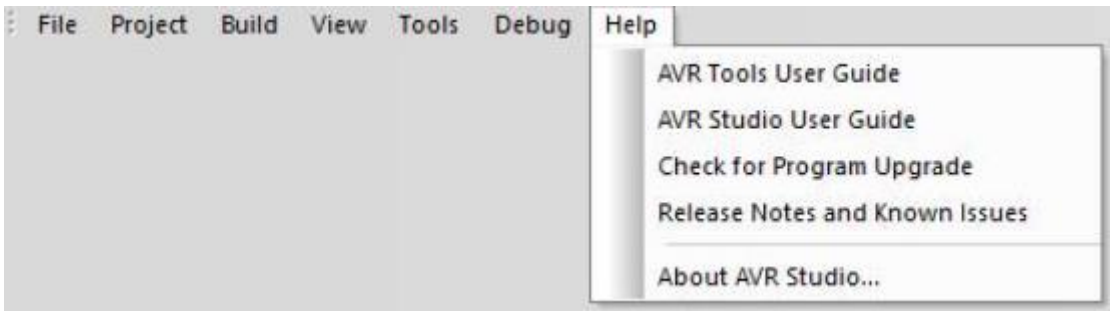

Reload Object File
Reload object File

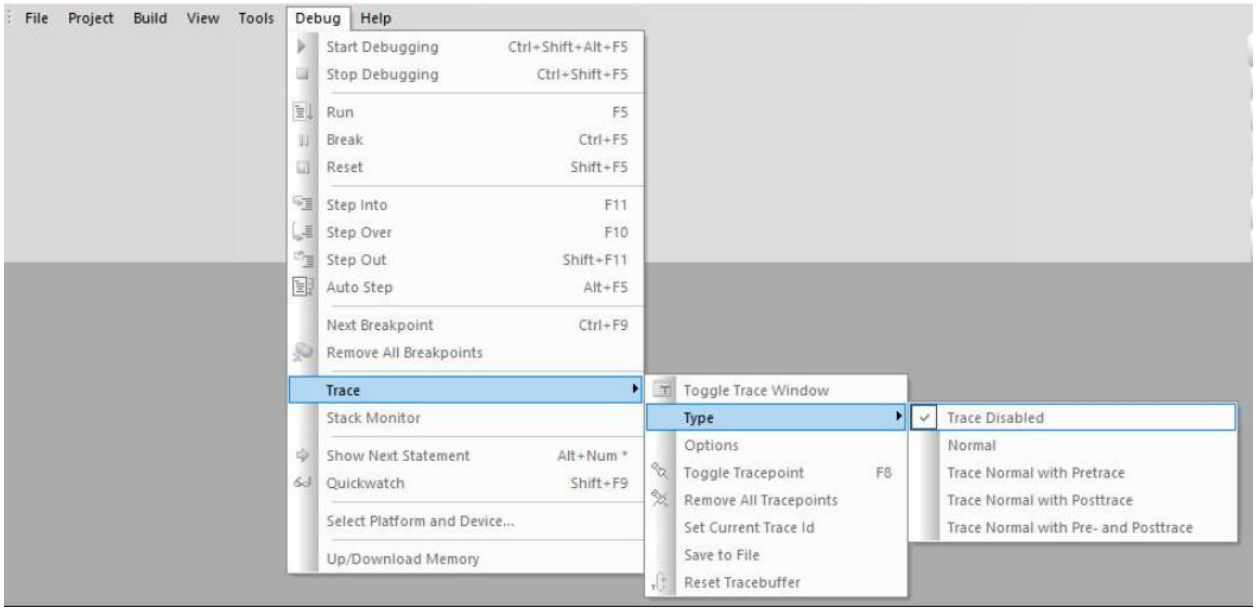

Save All
Save all files


Save (Ctrl+S)
Save the active document

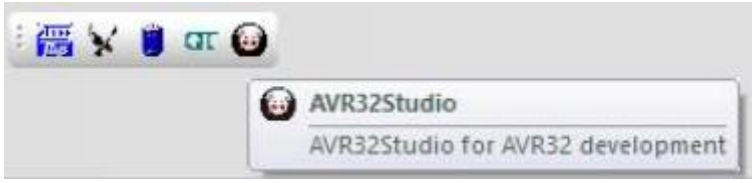

Open File (Ctrl+O)
Open file


New File (Ctrl+N)
New file


File
Project
Build
View
Tools
Debug
Help
AVR Tools User Guide
AVR Studio User Guide
Check for Program Upgrade
Release Notes and Known Issues
About AVR Studio...

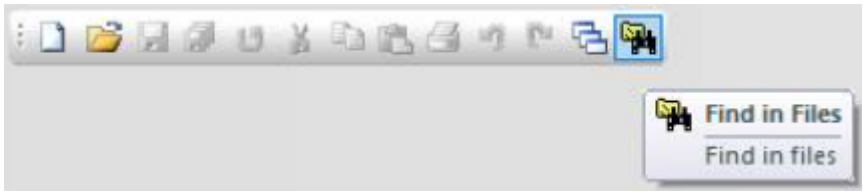

File
Project
Build
View
Tools
Debug
Help
Start Debugging Ctrl+Shift+Alt+F5
Stop Debugging Ctrl+Shift+F5
Run F5
Break Ctrl+F5
Reset Shift+F5
Step Into F11
Step Over F10
Step Out Shift+F11
Auto Step Alt+F5
Next Breakpoint Ctrl+F9
Remove All Breakpoints
Trace
Stack Monitor
Show Next Statement Alt+Num *
Quickwatch Shift+F9
Select Platform and Device...
Up/Download Memory
Toggle Trace Window
Type
Options
Toggle Tracepoint F8
Remove All Tracepoints
Set Current Trace Id
Save to File
Reset Tracebuffer
Trace Disabled
Normal
Trace Normal with Pretrace
Trace Normal with Posttrace
Trace Normal with Pre- and Posttrace

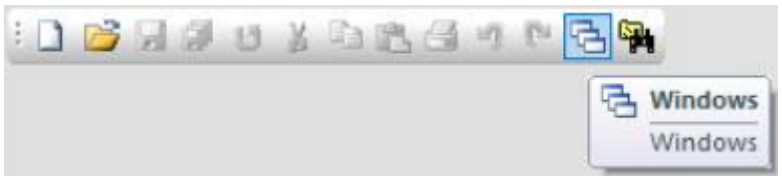

AVR QTouch Studio
Start the AVR QTouch Studio application


AVR32Studio
AVR32Studio for AVR32 development


AVR Battery Studio
Start the AVR Battery Studio application
AVR Wireless Studio
Start the AVR Wireless Studio application

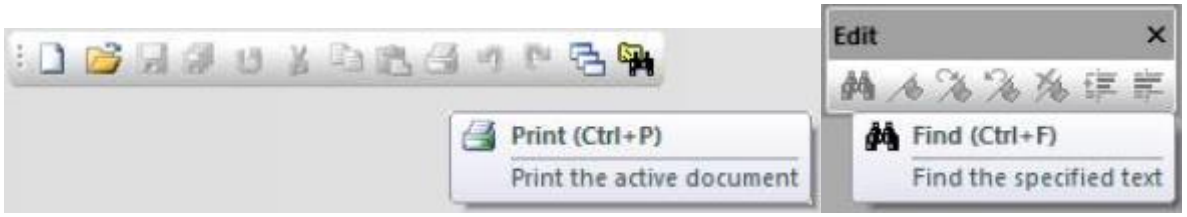

FLIP3
Flexible in-system programmer

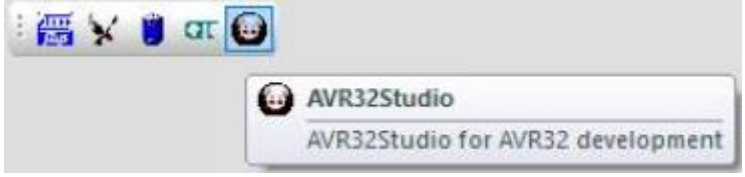

Find in Files
Find in files

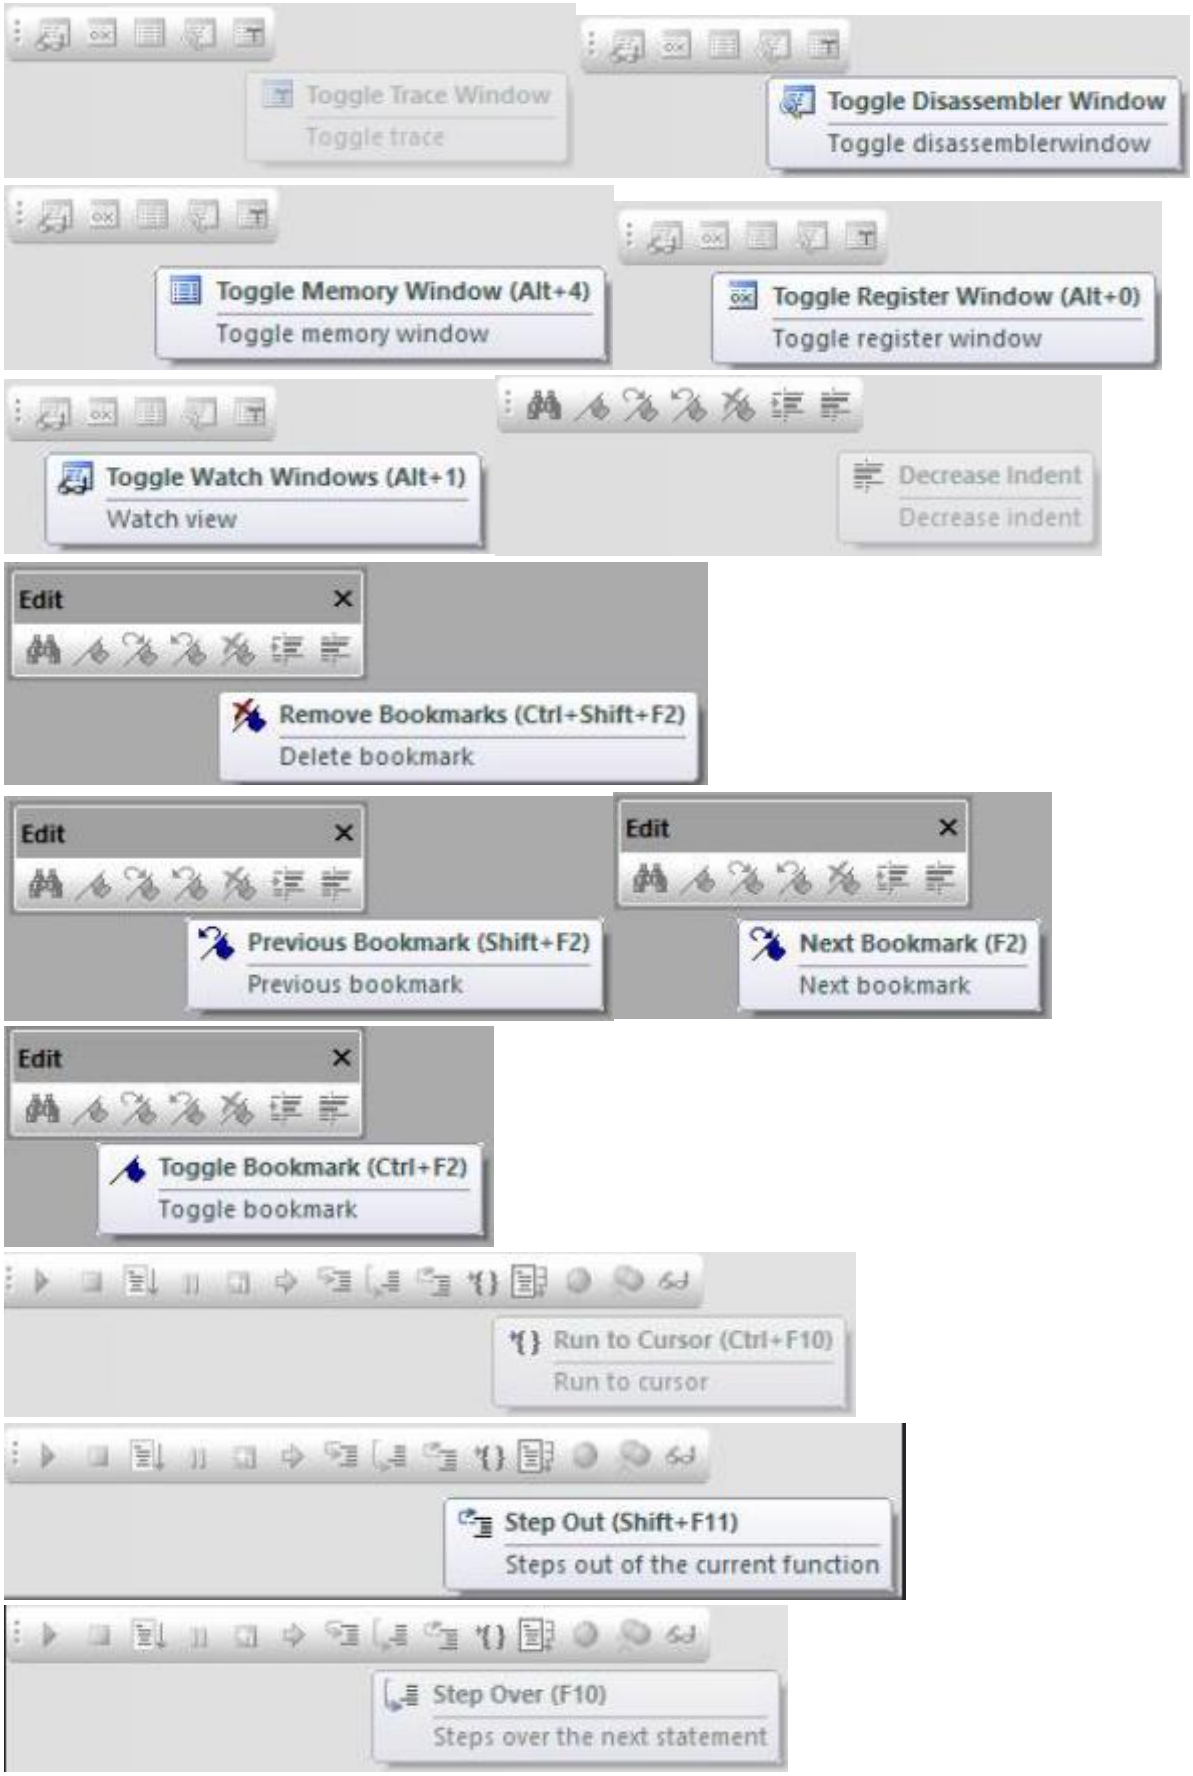

Windows
Windows


Redo (Ctrl+Y)
Redo the previously undone action


Undo (Ctrl+Z)
Undo the last action

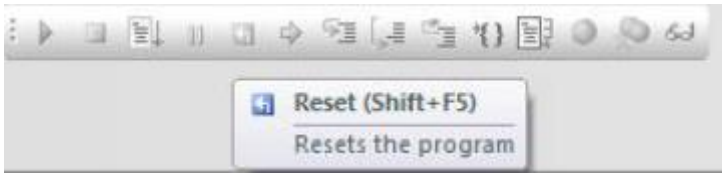

Print (Ctrl+P)
Print the active document
Edit
Find (Ctrl+F)
Find the specified text


AVR32Studio
AVR32Studio for AVR32 development


Toggle Trace Window
Toggle trace
Toggle Disassembler Window
Toggle disassemblerwindow
Toggle Memory Window (Alt+4)
Toggle memory window
Toggle Register Window (Alt+0)
Toggle register window
Toggle Watch Windows (Alt+1)
Watch view
Decrease Indent
Decrease indent
Edit
Remove Bookmarks (Ctrl+Shift+F2)
Delete bookmark
Edit
Previous Bookmark (Shift+F2)
Previous bookmark
Edit
Next Bookmark (F2)
Next bookmark
Edit
Toggle Bookmark (Ctrl+F2)
Toggle bookmark
Run to Cursor (Ctrl+F10)
Run to cursor
Step Out (Shift+F11)
Steps out of the current function
Step Over (F10)
Steps over the next statement

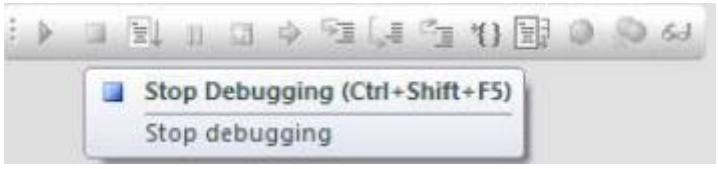

Step Into (F11)
Steps into the next statement

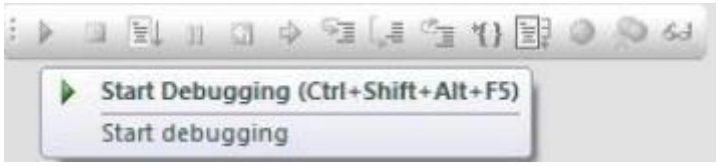

Show Next Statement (Alt+Num *)
Show next statement


Reset (Shift+F5)
Resets the program


Break (Ctrl+F5)
Stops program execution

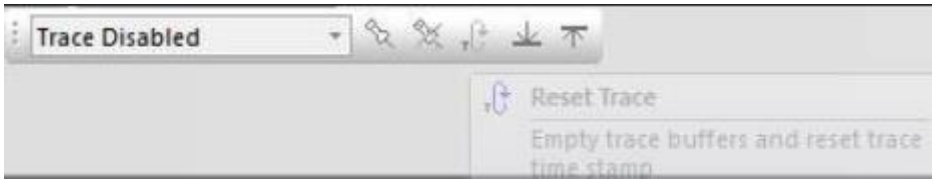

Run (F5)
Run


Stop Debugging (Ctrl+Shift+F5)
Stop debugging


Start Debugging (Ctrl+Shift+Alt+F5)
Start debugging


Trace Disabled
Previous Statement (Ctrl+F12)
Previous statement


Trace Disabled
Next Statement (Alt+F12)
Next statement

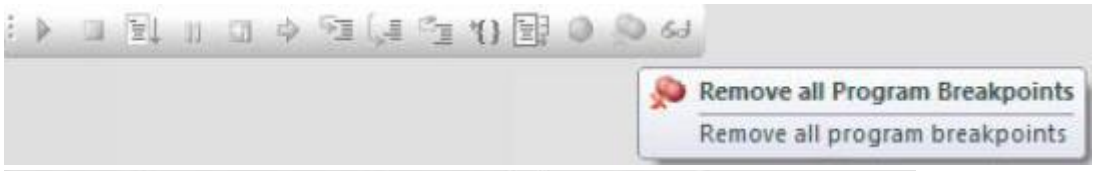

Trace Disabled
Reset Trace
Empty trace buffers and reset trace time stamp

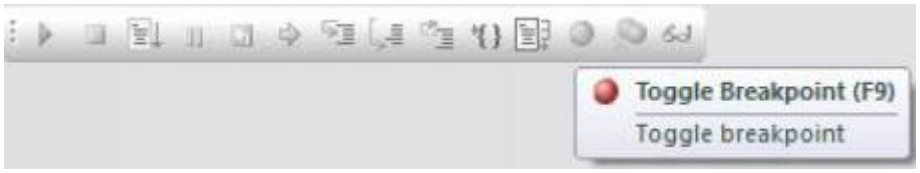

Trace Disabled
Remove all Tracepoints
Remove all tracepoint


Trace Disabled
Toggle Tracepoint (F8)
Toggle tracepoint


Trace Disabled
Trace Mode


Quickwatch (Shift+F9)
Quickwatch

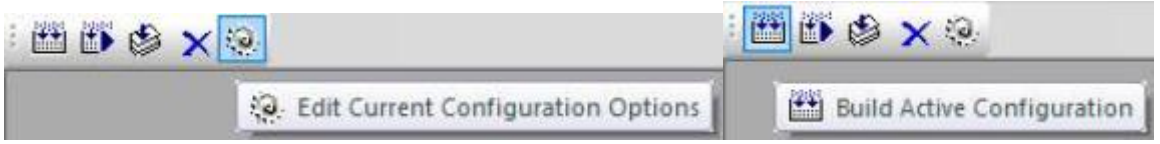

Remove all Program Breakpoints
Remove all program breakpoints


Toggle Breakpoint (F9)
Toggle breakpoint


AutoStep (Alt+F5)
Autostep

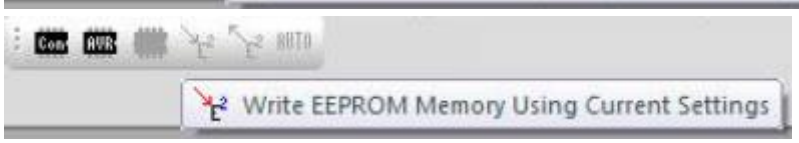

Display the 'Connect' Dialog
Build and Run
Compile Active File

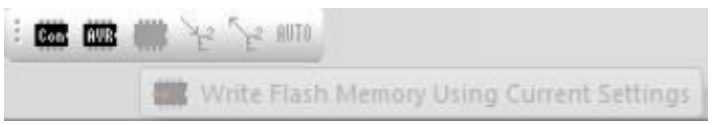

Clean Current Configuration


Edit Current Configuration Options
Build Active Configuration


Start Auto Programming

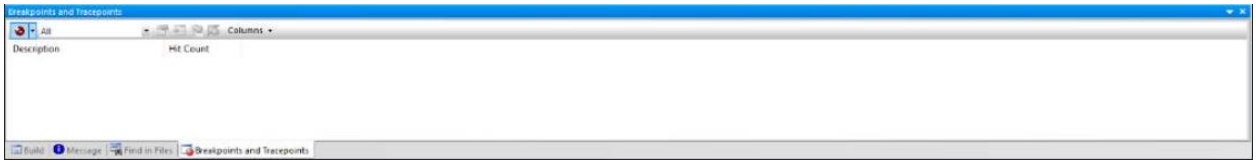

Read EEPROM Memory Using Current Settings

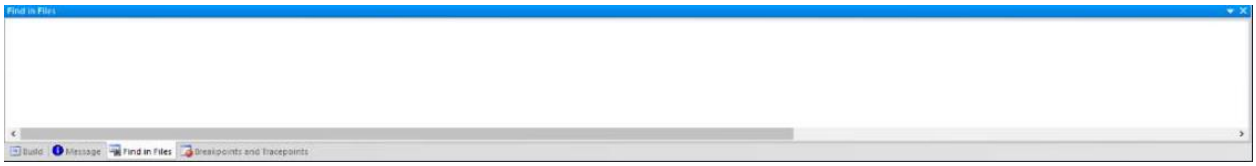

Write EEPROM Memory Using Current Settings

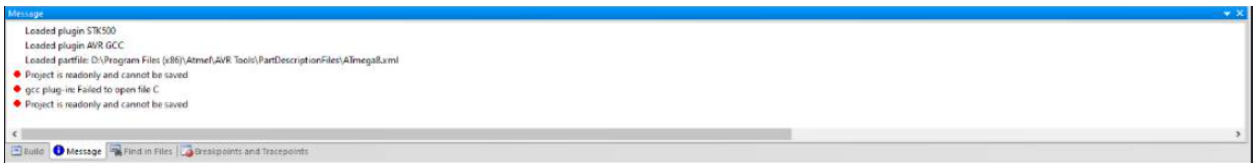

Write Flash Memory Using Current Settings


Connect to the Selected AVR Programmer

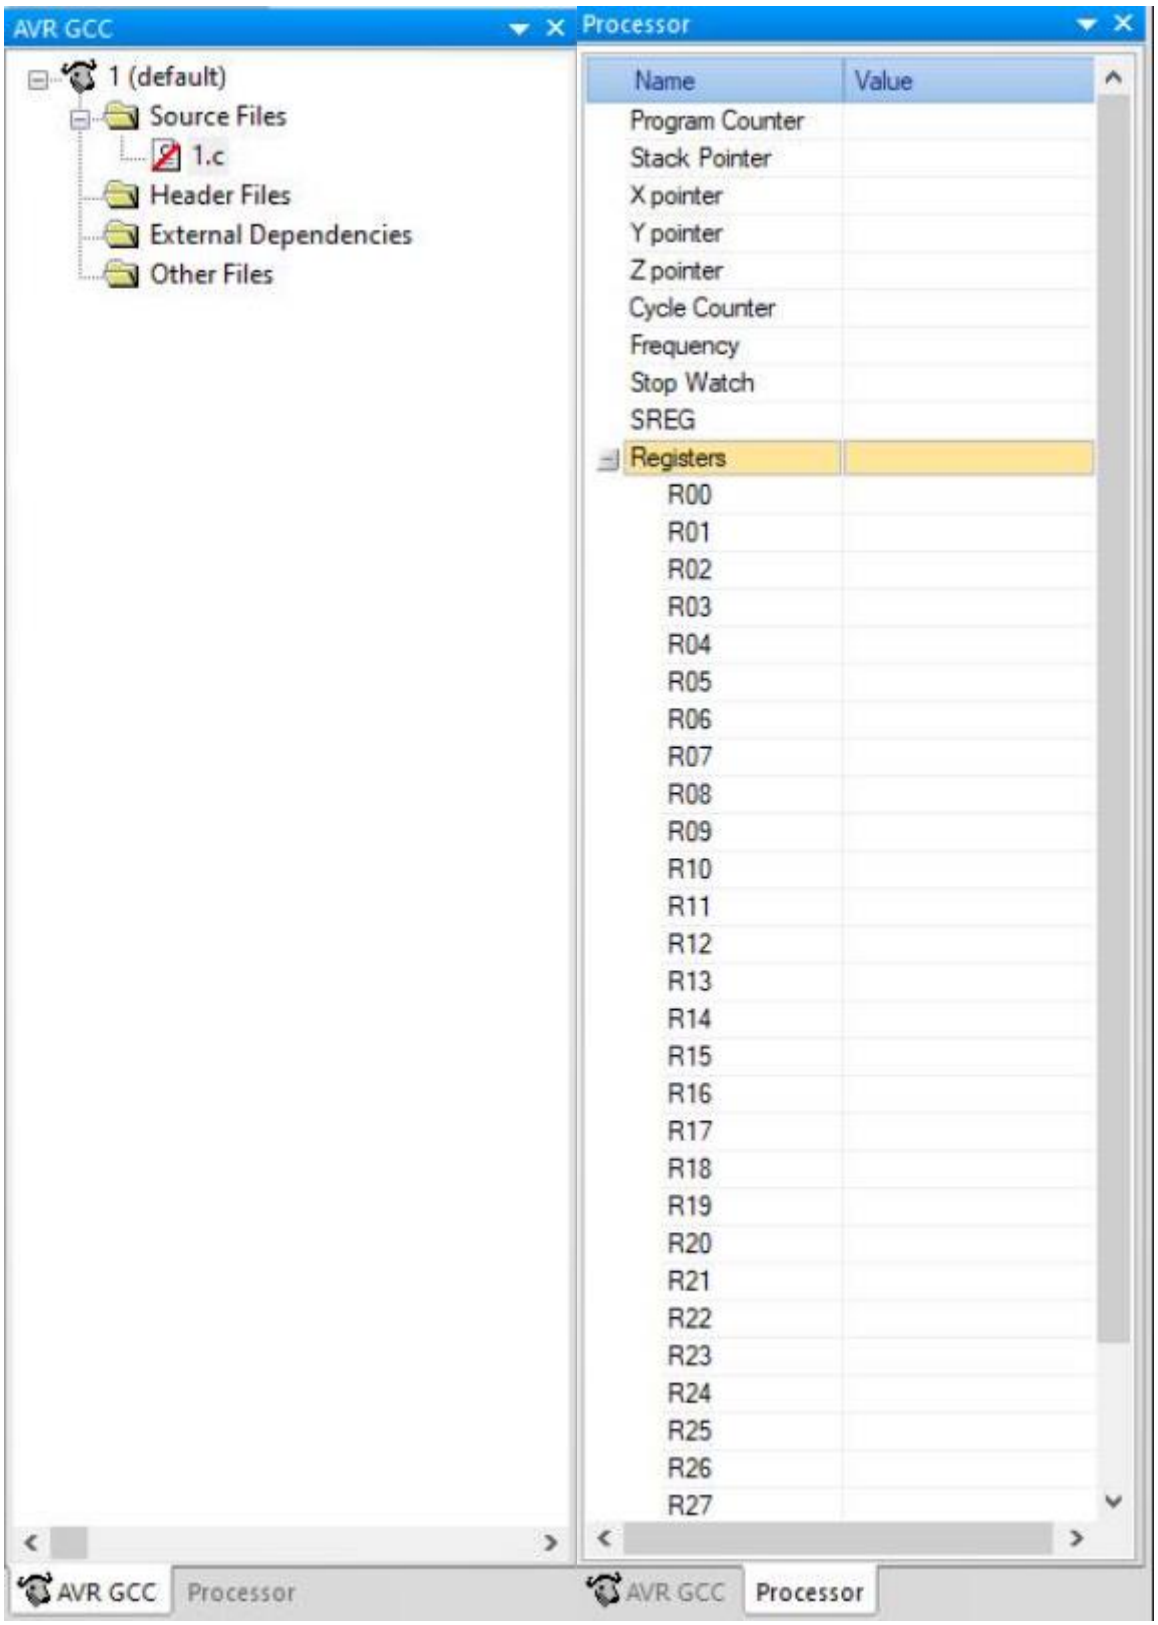

Loaded plugin STK500
Loaded plugin AVR GCC
Project is readonly and cannot be saved
gcc plug-in: Failed to open file C
Project is readonly and cannot be saved

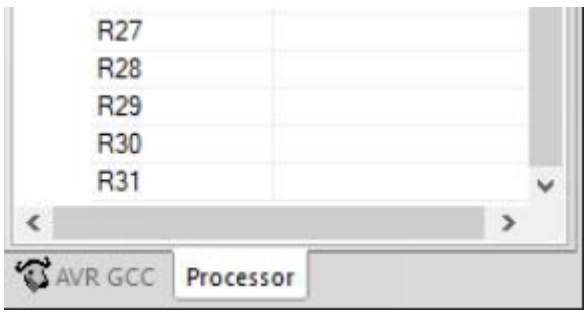

Breakpoints and Tracepoints
All
Columns
Description
Hit Count
Build
Message
Find in Files
Breakpoints and Tracepoints


Find in Files
Build
Message
Find in Files
Breakpoints and Tracepoints


Message
Loaded plugin STK500
Loaded plugin AVR GCC
Loaded partfile: D:\Program Files (x86)\Atmel\AVR Tools\PartDescriptionFiles\ATmega8.xml
Project is readonly and cannot be saved
gcc plug-in: Failed to open file C
Project is readonly and cannot be saved
Build
Message
Find in Files
Breakpoints and Tracepoints

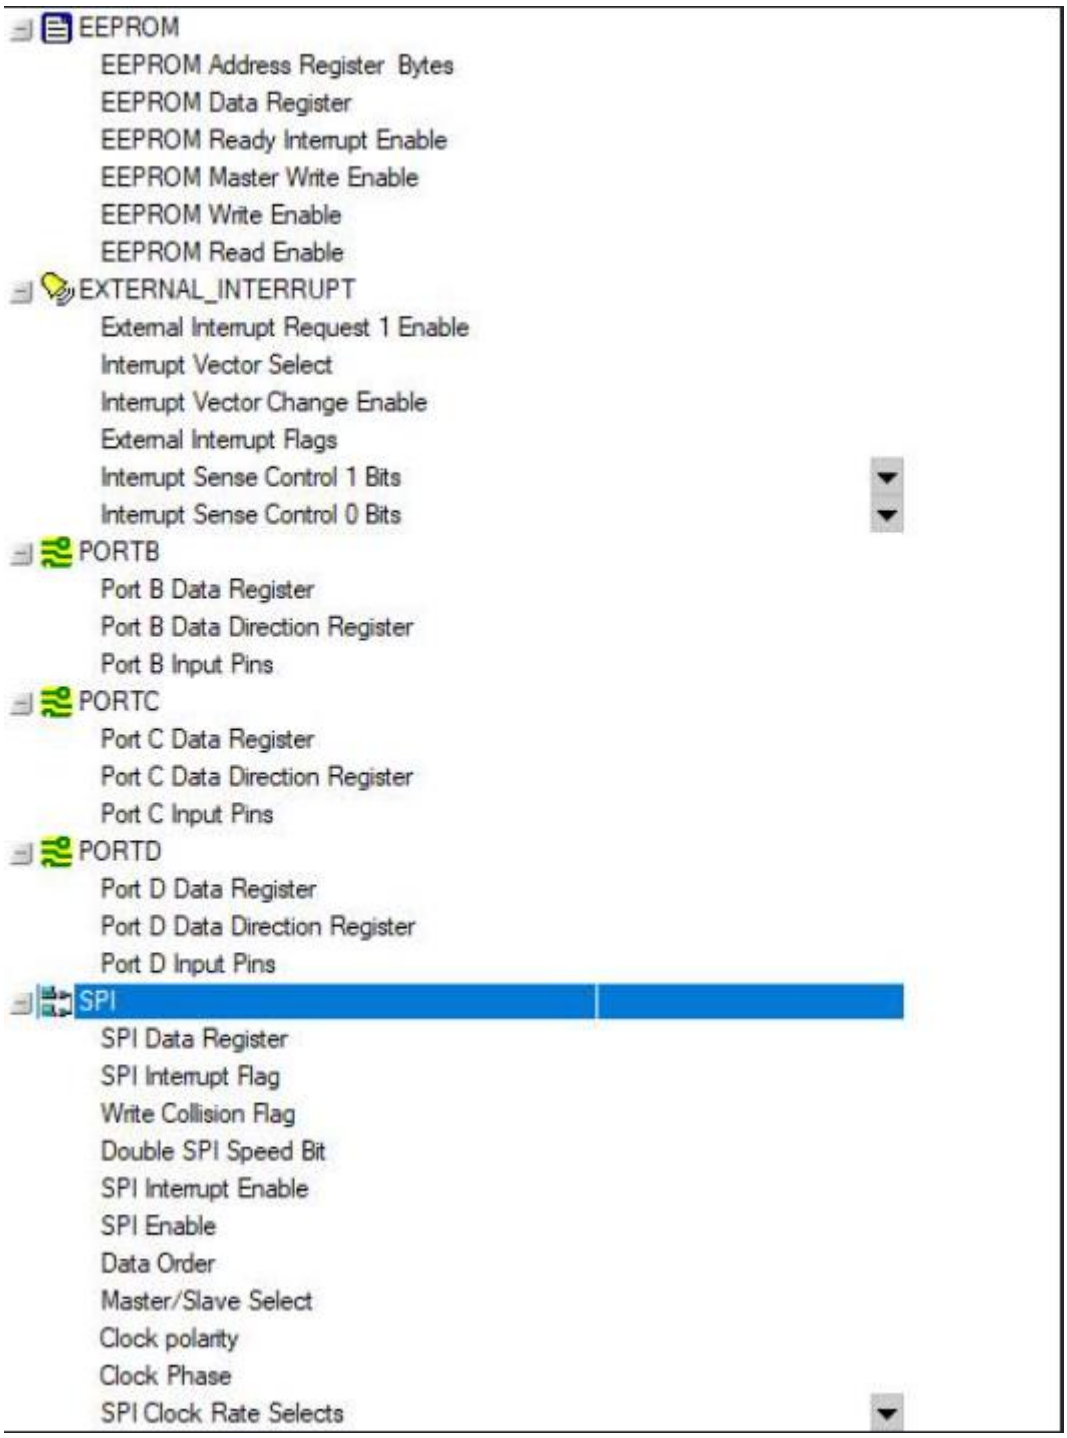

Build
Build
Message
Find in Files
Breakpoints and Tracepoints


AVR GCC
1 (default)
Source Files
1.c
Header Files
External Dependencies
Other Files
AVR GCC
Processor
Processor
Name
Value
Program Counter
Stack Pointer
X pointer
Y pointer
Z pointer
Cycle Counter
Frequency
Stop Watch
SREG
Registers
R00
R01
R02
R03
R04
R05
R06
R07
R08
R09
R10
R11
R12
R13
R14
R15
R16
R17
R18
R19
R20
R21
R22
R23
R24
R25
R26
R27
AVR GCC
Processor
AVR GCC
Processor

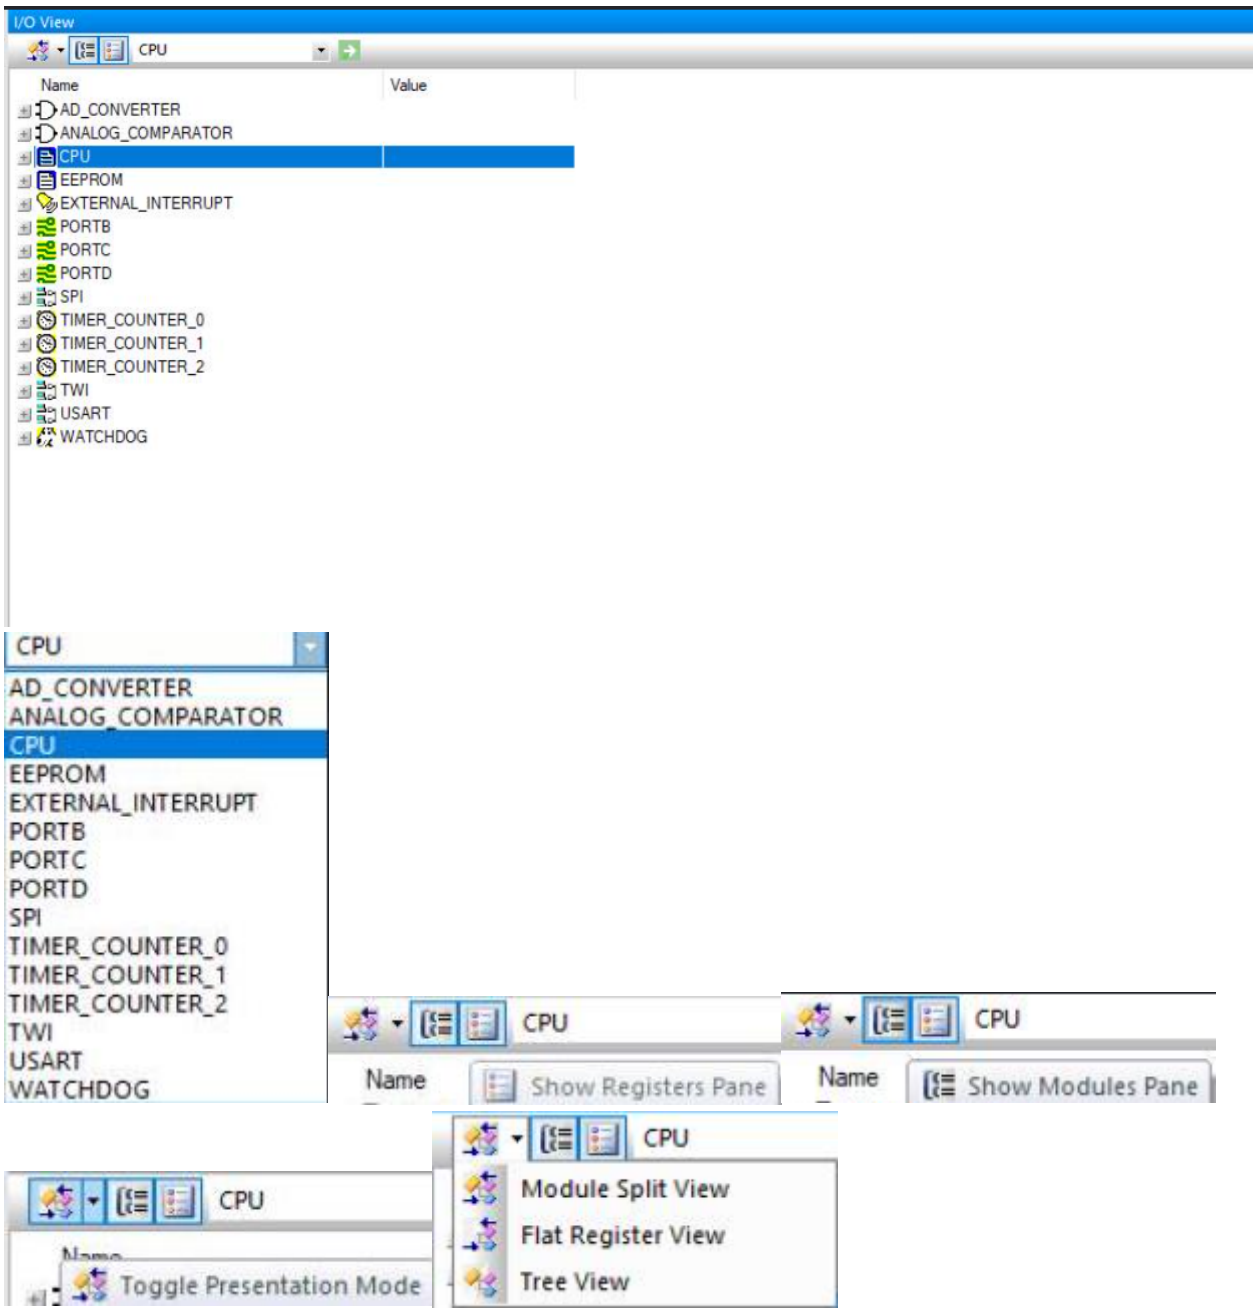

R27
R28
R29
R30
R31
AVR GCC
Processor


AVR GCC
1 (default)
Source Files
1.c
Header Files
External Dependencies
Other Files
AVR GCC
Processor
Edit1


Build Active Configuration


EEPROM
EEPROM Address Register Bytes
EEPROM Data Register
EEPROM Ready Interrupt Enable
EEPROM Master Write Enable
EEPROM Write Enable
EEPROM Read Enable
EXTERNAL_INTERRUPT
External Interrupt Request 1 Enable
Interrupt Vector Select
Interrupt Vector Change Enable
External Interrupt Flags
Interrupt Sense Control 1 Bits
Interrupt Sense Control 0 Bits
PORTB
Port B Data Register
Port B Data Direction Register
Port B Input Pins
PORTC
Port C Data Register
Port C Data Direction Register
Port C Input Pins
PORTD
Port D Data Register
Port D Data Direction Register
Port D Input Pins
SPI
SPI Data Register
SPI Interrupt Flag
Write Collision Flag
Double SPI Speed Bit
SPI Interrupt Enable
SPI Enable
Data Order
Master/Slave Select
Clock polarity
Clock Phase
SPI Clock Rate Selects


Name
Value
AD_CONVERTER
Reference Selection Bits
Left Adjust Result
Analog Channel and Gain Selection Bits
ADC Enable
ADC Start Conversion
ADC Free Running Select
ADC Interrupt Flag
ADC Interrupt Enable
ADC Prescaler Select Bits
ADC Data Register Bytes
ANALOG_COMPARATOR
Analog Comparator Multiplexer Enable
Analog Comparator Disable
Analog Comparator Bandgap Select
Analog Compare Output
Analog Comparator Interrupt Flag
Analog Comparator Interrupt Enable
Analog Comparator Input Capture Enable
Analog Comparator Interrupt Mode Select bits
CPU
Global Interrupt Enable
Bit Copy Storage
Half Carry Flag
Sign Bit
Two's Complement Overflow Flag
Negative Flag
Zero Flag
Carry Flag
Stack Pointer
Sleep Enable
Sleep Mode Select
Interrupt Sense Control 1 Bits
Interrupt Sense Control 0 Bits
Watchdog Reset Flag
Brown-out Reset Flag
External Reset Flag
Power-on reset flag
Oscillator Calibration Value
SPM Interrupt Enable
Read-While-Write Section Busy
Read-While-Write Section Read Enable
Boot Lock Bit Set
Page Write
Page Erase
Store Program Memory Enable
ADC High Speed Mode
Pull-up Disable
Prescaler Reset Timer/Counter1 and Timer/...


I/O View
CPU
Name
Value
AD_CONVERTER
ANALOG_COMPARATOR
CPU
EEPROM
EXTERNAL_INTERRUPT
PORTB
PORTC
PORTD
SPI
TIMER_COUNTER_0
TIMER_COUNTER_1
TIMER_COUNTER_2
TWI
USART
WATCHDOG

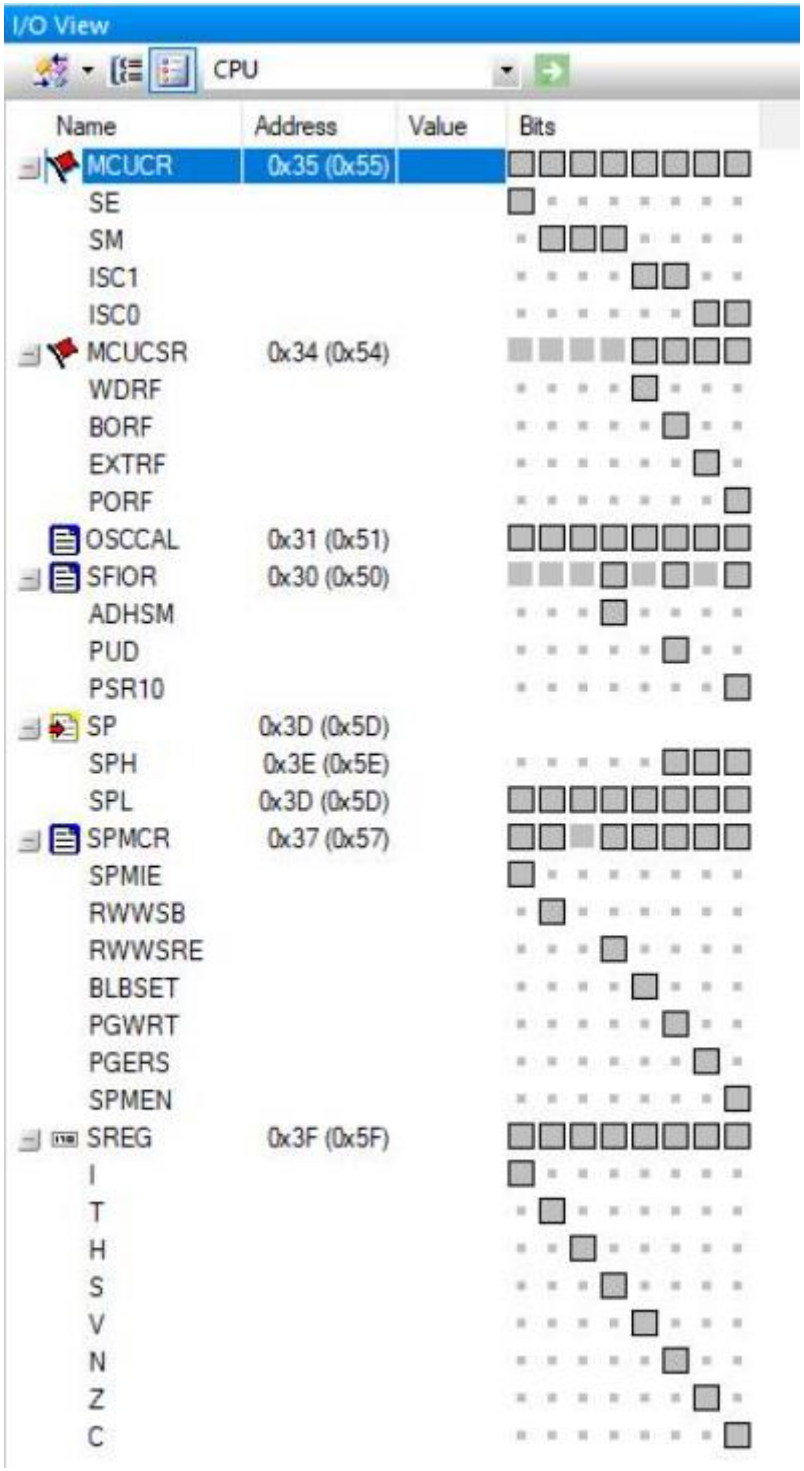
CPU
AD_CONVERTER
ANALOG_COMPARATOR
CPU
EEPROM
EXTERNAL_INTERRUPT
PORTB
PORTC
PORTD
SPI
TIMER_COUNTER_0
TIMER_COUNTER_1
TIMER_COUNTER_2
TWI
USART
WATCHDOG

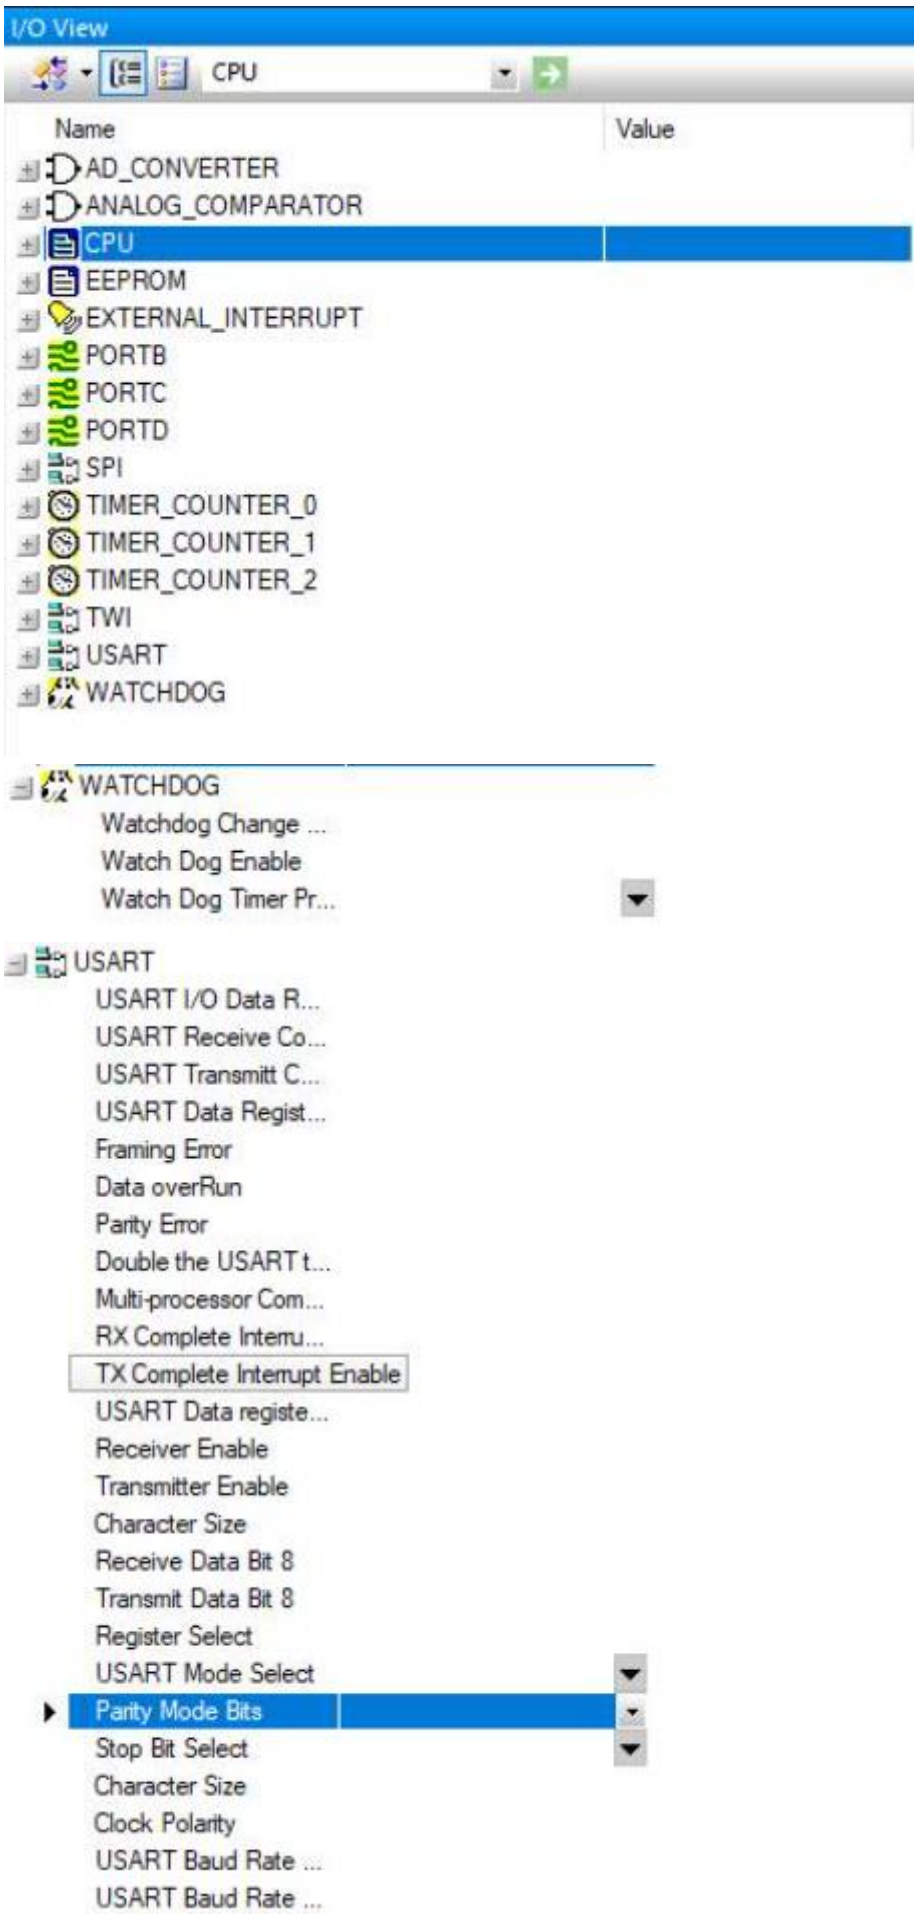
CPU
Name
Show Registers Pane

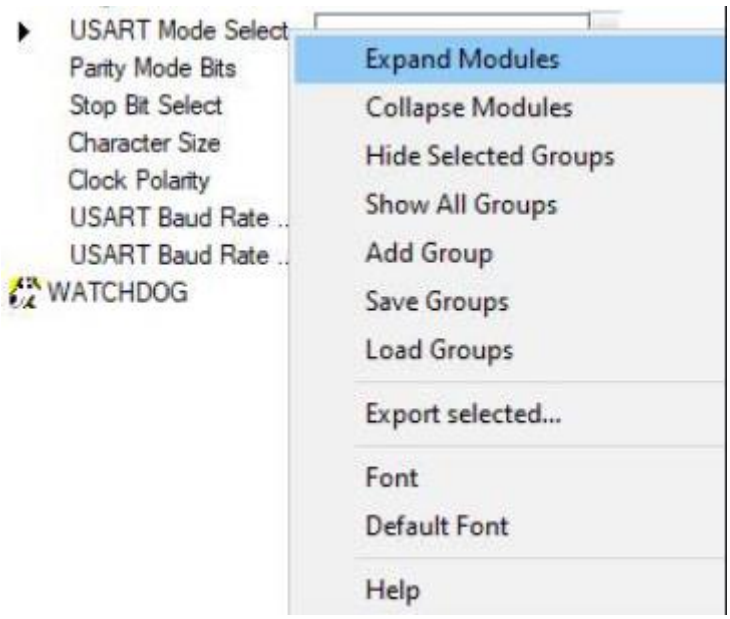
CPU
Name
Show Modules Pane

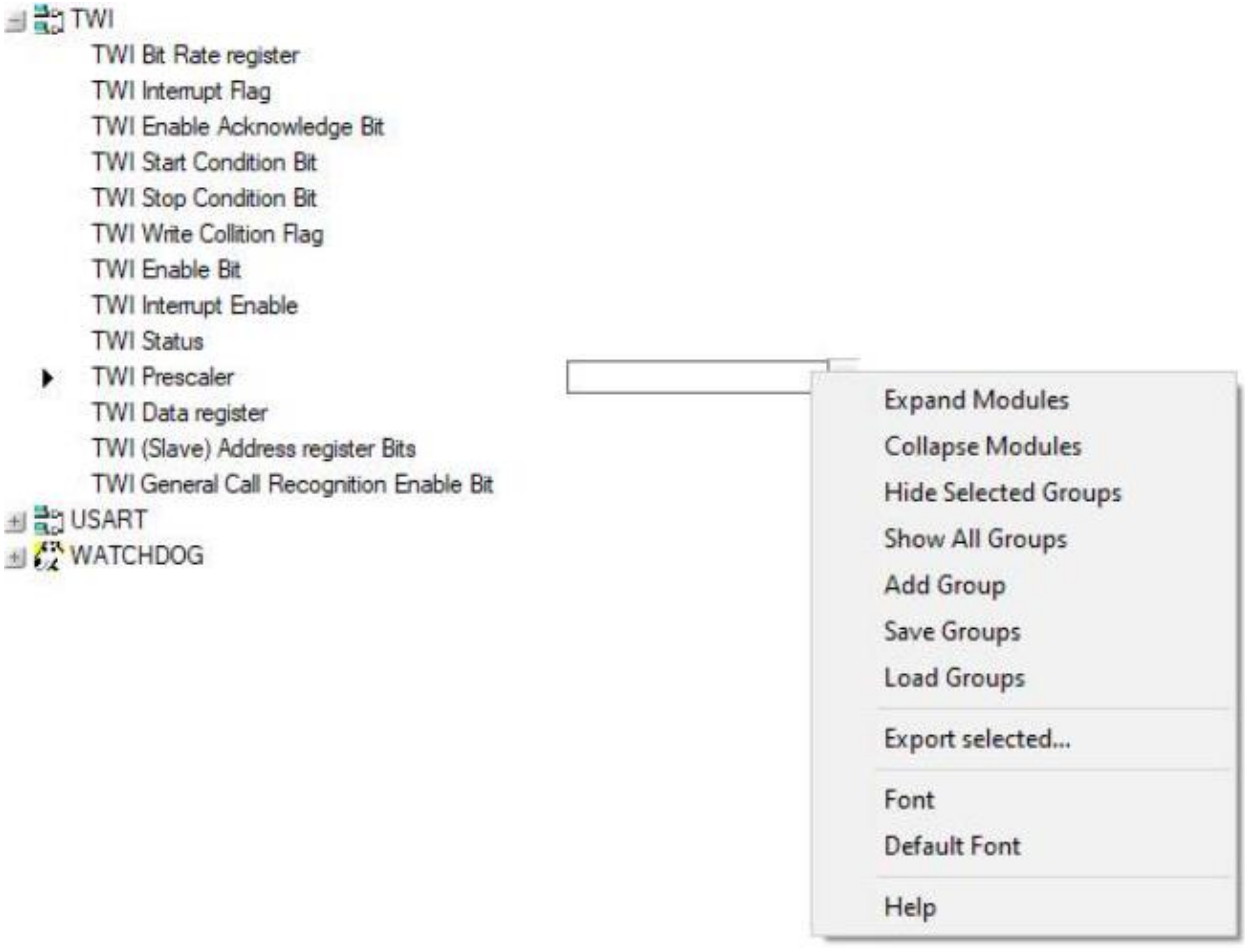
CPU
Toggle Presentation Mode

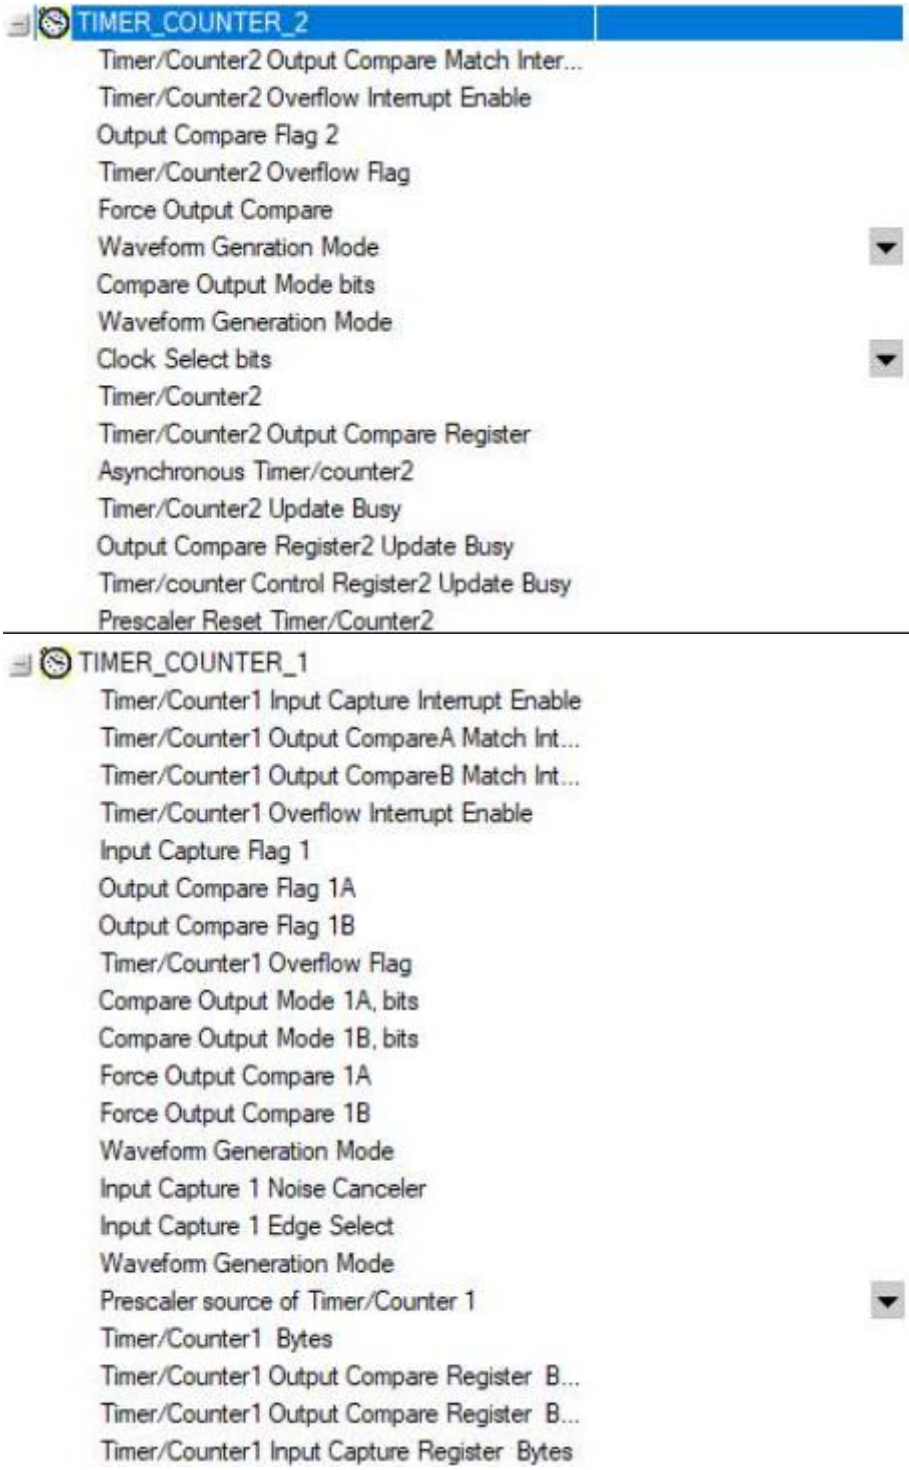
CPU
Module Split View
Flat Register View
Tree View

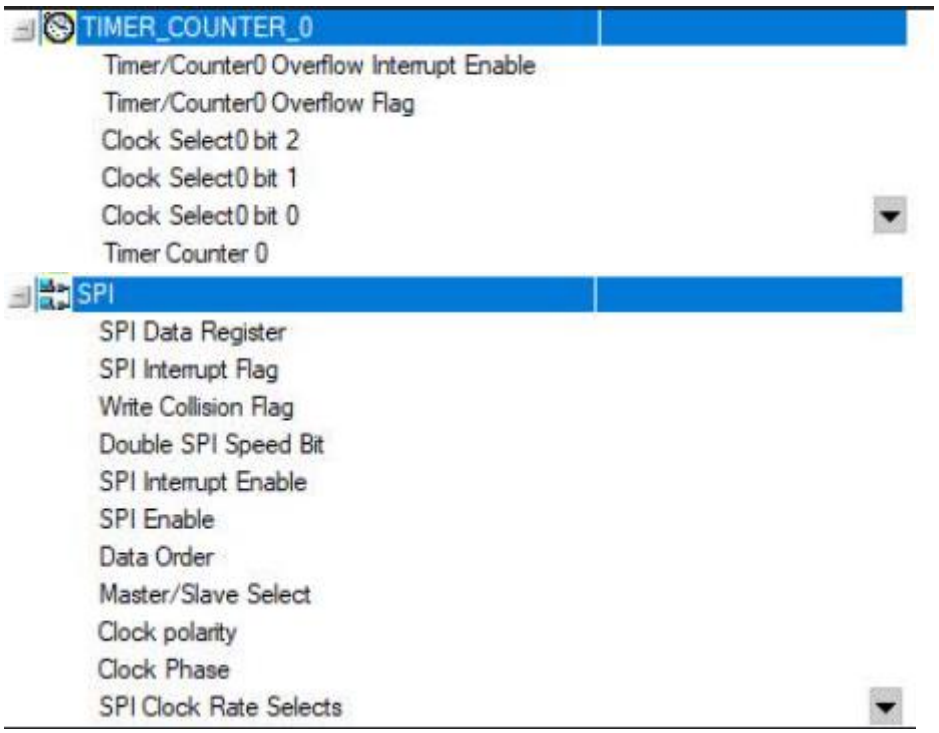

I/O View
CPU
Name
Address
Value
Bits
MCUCR
0x35 (0x55)
SE
SM
ISC1
ISC0
MCUCSR
0x34 (0x54)
WDRF
BORF
EXTRF
PORF
OSCCAL
0x31 (0x51)
SFIOR
0x30 (0x50)
ADHSM
PUD
PSR10
SP
0x3D (0x5D)
SPH
0x3E (0x5E)
SPL
0x3D (0x5D)
SPMCR
0x37 (0x57)
SPMIE
RWWSB
RWWSRE
BLBSET
PGWRT
PGERS
SPMEN
SREG
0x3F (0x5F)
I
T
H
S
V
N
Z
C


I/O View
CPU
Name
Value
AD_CONVERTER
ANALOG_COMPARATOR
CPU
EEPROM
EXTERNAL_INTERRUPT
PORTB
PORTC
PORTD
SPI
TIMER_COUNTER_0
TIMER_COUNTER_1
TIMER_COUNTER_2
TWI
USART
WATCHDOG
WATCHDOG
Watchdog Change ...
Watch Dog Enable
Watch Dog Timer Pr...
USART
USART I/O Data R...
USART Receive Co...
USART Transmitt C...
USART Data Regist...
Framing Error
Data overRun
Parity Error
Double the USART t...
Multi-processor Com...
RX Complete Interru...
TX Complete Interrupt Enable
USART Data registe...
Receiver Enable
Transmitter Enable
Character Size
Receive Data Bit 8
Transmit Data Bit 8
Register Select
USART Mode Select
Parity Mode Bits
Stop Bit Select
Character Size
Clock Polarity
USART Baud Rate ...
USART Baud Rate ...


USART Mode Select
Parity Mode Bits
Stop Bit Select
Character Size
Clock Polarity
USART Baud Rate ..
USART Baud Rate ..
WATCHDOG
Expand Modules
Collapse Modules
Hide Selected Groups
Show All Groups
Add Group
Save Groups
Load Groups
Export selected...
Font
Default Font
Help


TWI
TWI Bit Rate register
TWI Interrupt Flag
TWI Enable Acknowledge Bit
TWI Start Condition Bit
TWI Stop Condition Bit
TWI Write Collition Flag
TWI Enable Bit
TWI Interrupt Enable
TWI Status
TWI Prescaler
TWI Data register
TWI (Slave) Address register Bits
TWI General Call Recognition Enable Bit
USART
WATCHDOG
Expand Modules
Collapse Modules
Hide Selected Groups
Show All Groups
Add Group
Save Groups
Load Groups
Export selected...
Font
Default Font
Help


TIMER_COUNTER_2
Timer/Counter2 Output Compare Match Inter...
Timer/Counter2 Overflow Interrupt Enable
Output Compare Flag 2
Timer/Counter2 Overflow Flag
Force Output Compare
Waveform Genration Mode
Compare Output Mode bits
Waveform Generation Mode
Clock Select bits
Timer/Counter2
Timer/Counter2 Output Compare Register
Asynchronous Timer/counter2
Timer/Counter2 Update Busy
Output Compare Register2 Update Busy
Timer/counter Control Register2 Update Busy
Prescaler Reset Timer/Counter2
TIMER_COUNTER_1
Timer/Counter1 Input Capture Interrupt Enable
Timer/Counter1 Output CompareA Match Int...
Timer/Counter1 Output CompareB Match Int...
Timer/Counter1 Overflow Interrupt Enable
Input Capture Flag 1
Output Compare Flag 1A
Output Compare Flag 1B
Timer/Counter1 Overflow Flag
Compare Output Mode 1A, bits
Compare Output Mode 1B, bits
Force Output Compare 1A
Force Output Compare 1B
Waveform Generation Mode
Input Capture 1 Noise Canceler
Input Capture 1 Edge Select
Waveform Generation Mode
Prescaler source of Timer/Counter 1
Timer/Counter1 Bytes
Timer/Counter1 Output Compare Register B...
Timer/Counter1 Output Compare Register B...
Timer/Counter1 Input Capture Register Bytes


TIMER_COUNTER_0
Timer/Counter0 Overflow Interrupt Enable
Timer/Counter0 Overflow Flag
Clock Select0 bit 2
Clock Select0 bit 1
Clock Select0 bit 0
Timer Counter 0
SPI
SPI Data Register
SPI Interrupt Flag
Write Collision Flag
Double SPI Speed Bit
SPI Interrupt Enable
SPI Enable
Data Order
Master/Slave Select
Clock polarity
Clock Phase
SPI Clock Rate Selects