



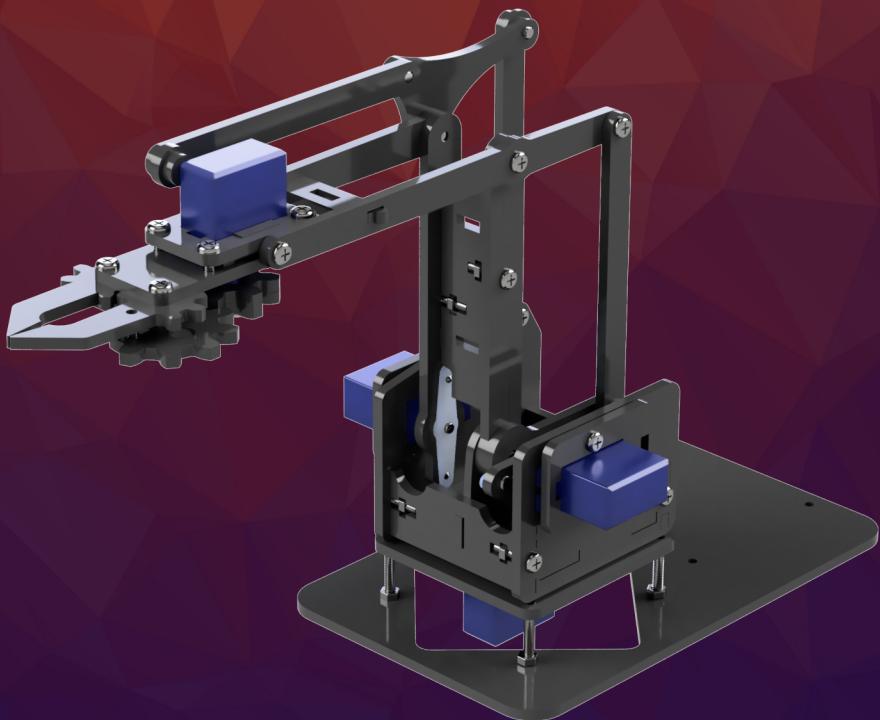


Robotic Arm Assembly Guide

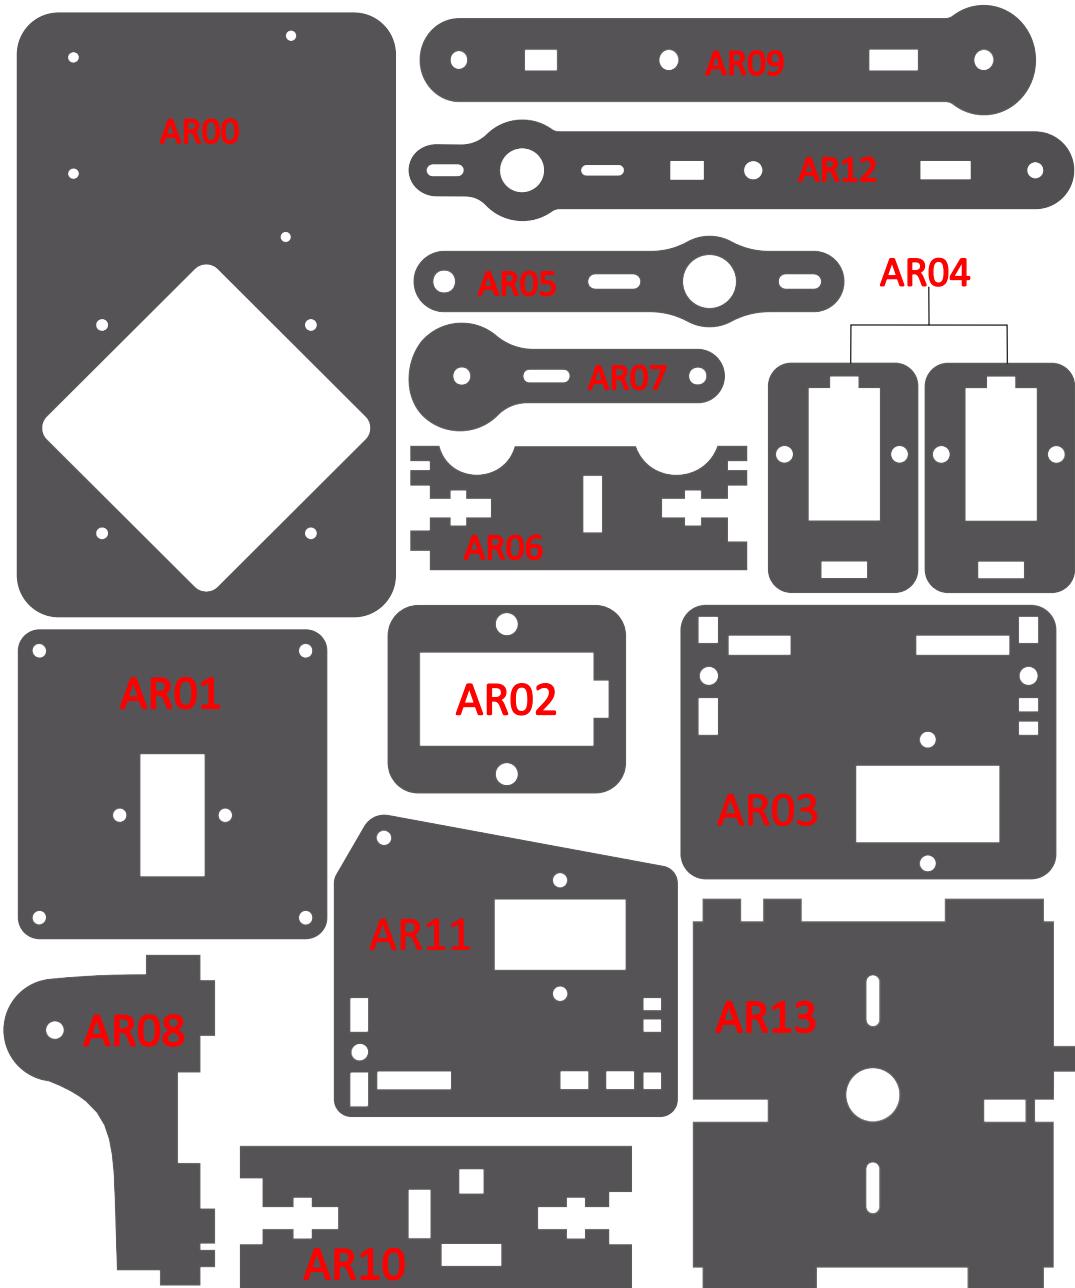

Part list



Part list

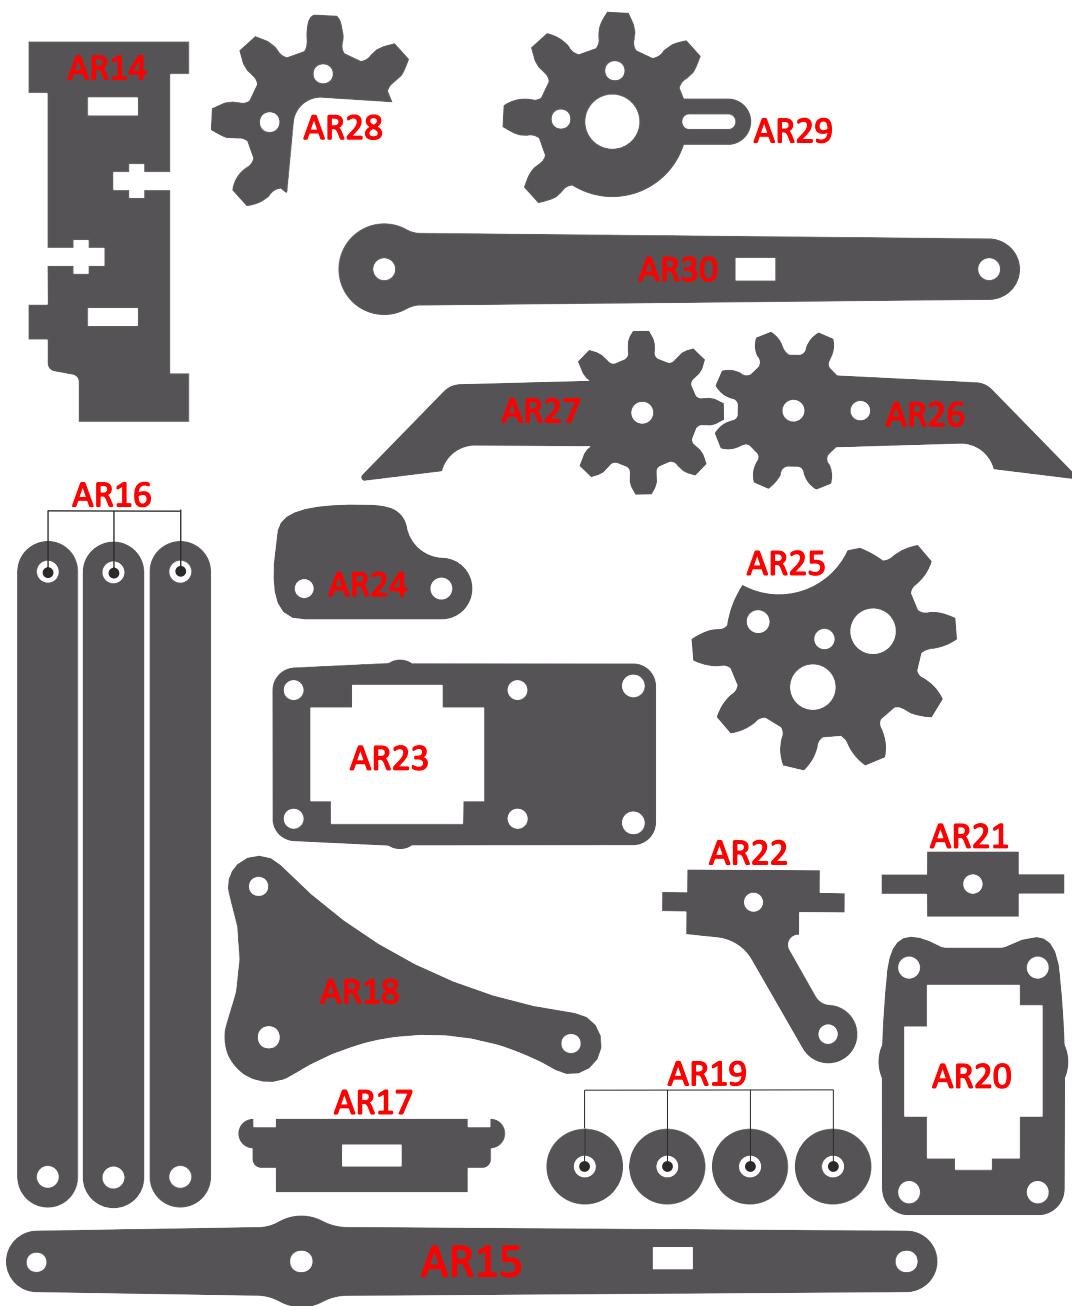

Aseembly Steps - Tuning up the servo motors.

Before starting the assembly, you have to manually adjust the angles of the servo motors. Otherwise, Robotic Arm will not work properly.



Attach the servo horn to the servo motor, then slowly turn the servo horn clockwise until it stops. It is not a problem if the servo horn is not the same as the angle shown in the image above. The important thing here is that you have hit the last note of the servo.



Remove the servo arm from the servo motor and reposition it perpendicular to the servo motor as shown.



Slowly turn the servo horn counterclockwise until it is parallel with the servo motor, as seen in the image. When this step is finished, it means that the servo motor is in the center position. It is important that you apply this process to other servo motors in the set. After processing the other motors, remove the servo horn and set aside for assembly.

Aseemby Steps - Before getting started


These are the needed fastener components and their quantity for building your robotic arm. 2.5 screwdriver is needed for construction components. additional screw's for servo motor mounting and servo horns are included in their specific package.

Fasteners	
	■ M3 Nut - 10 pcs.
	■ M3x 6mm - 6 pcs.
	■ M3x 8mm - 15 pcs.
	■ M3x 10mm - 3 pcs.
	■ M3x 12mm - 8 pcs.
	■ M3x 20mm - 4 pcs.


* The dimensions of fasteners are 1/1 scale if this document printed in A5 booklet format.

Aseembly Steps


①

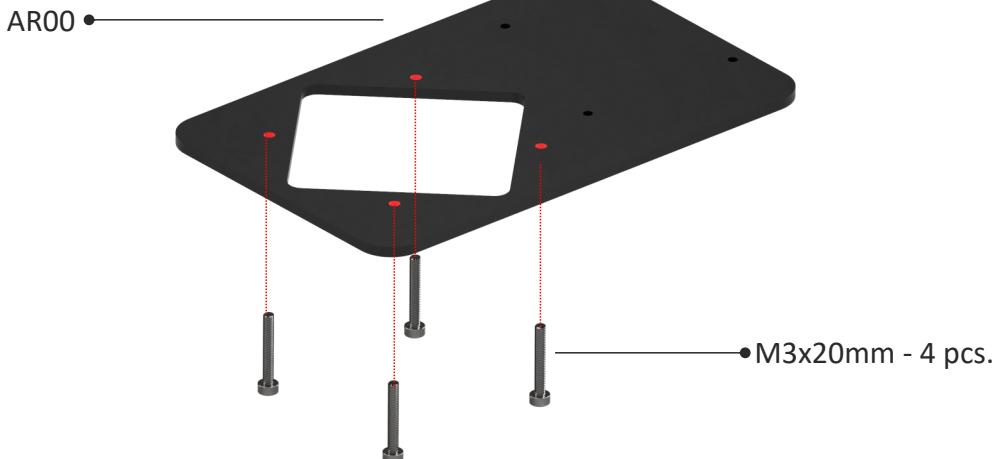


②

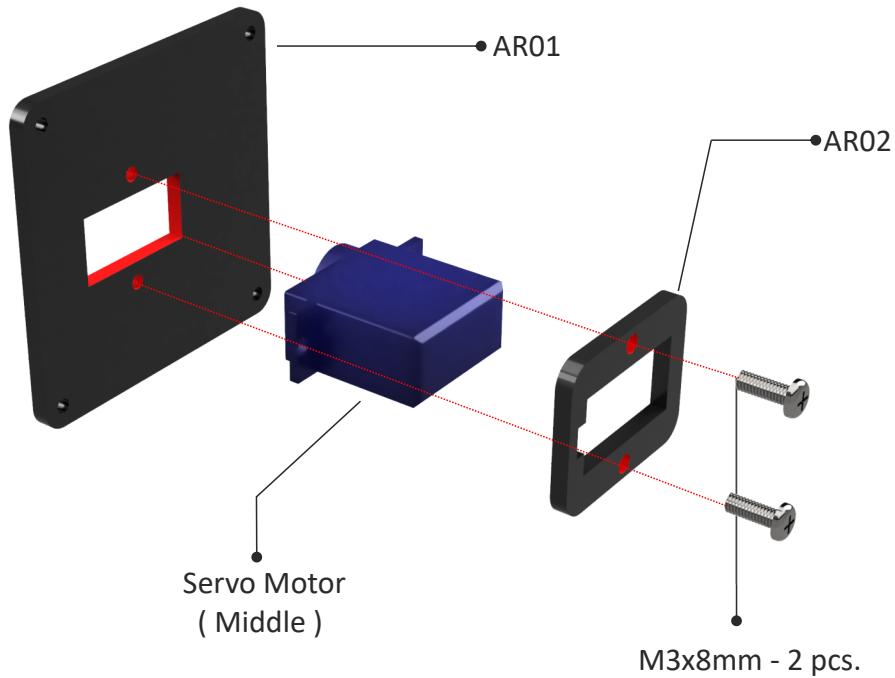

Assembly Steps

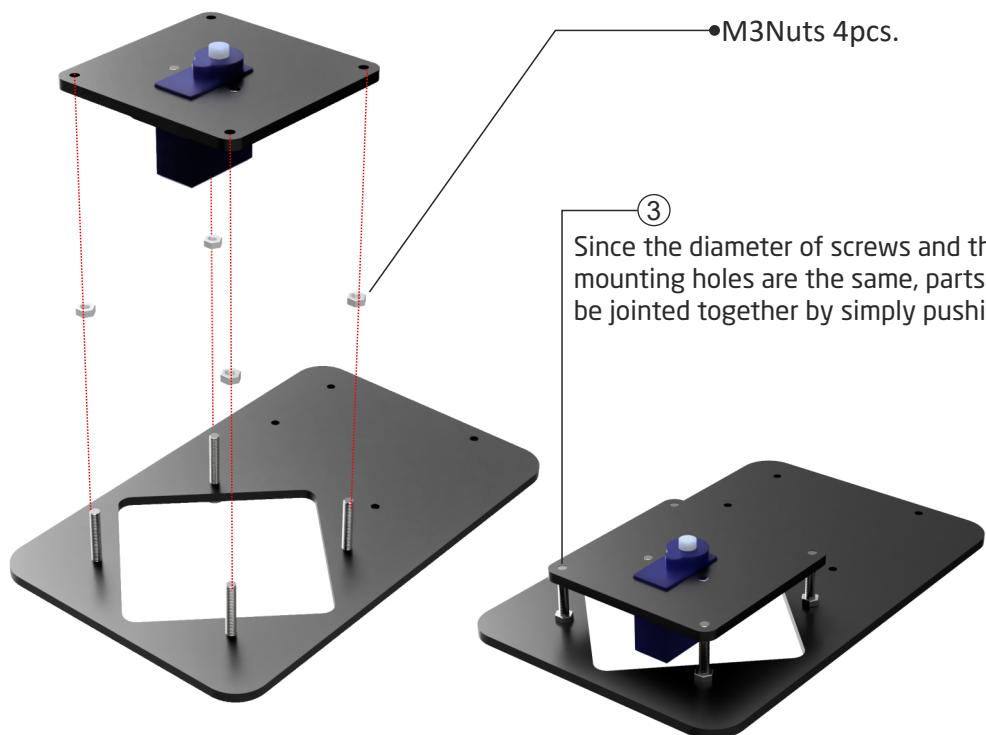


④

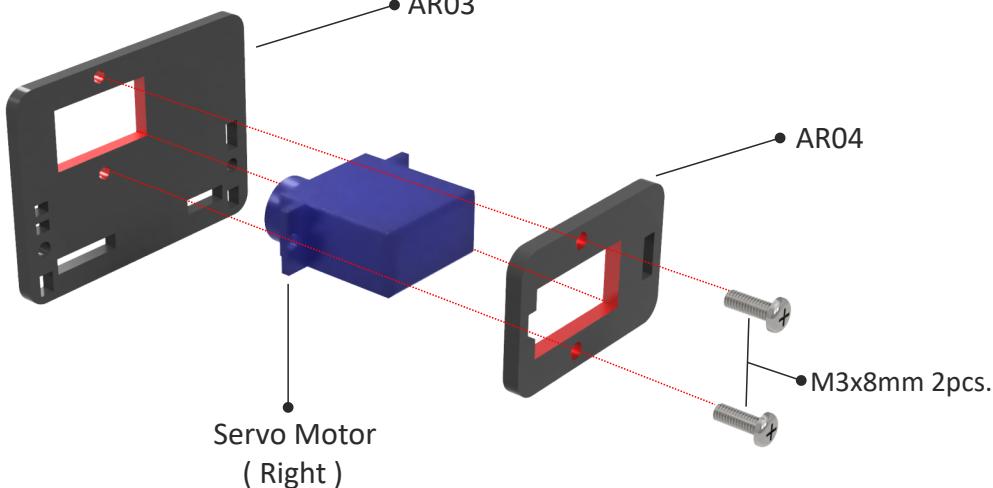


Aseemby Steps

⑤

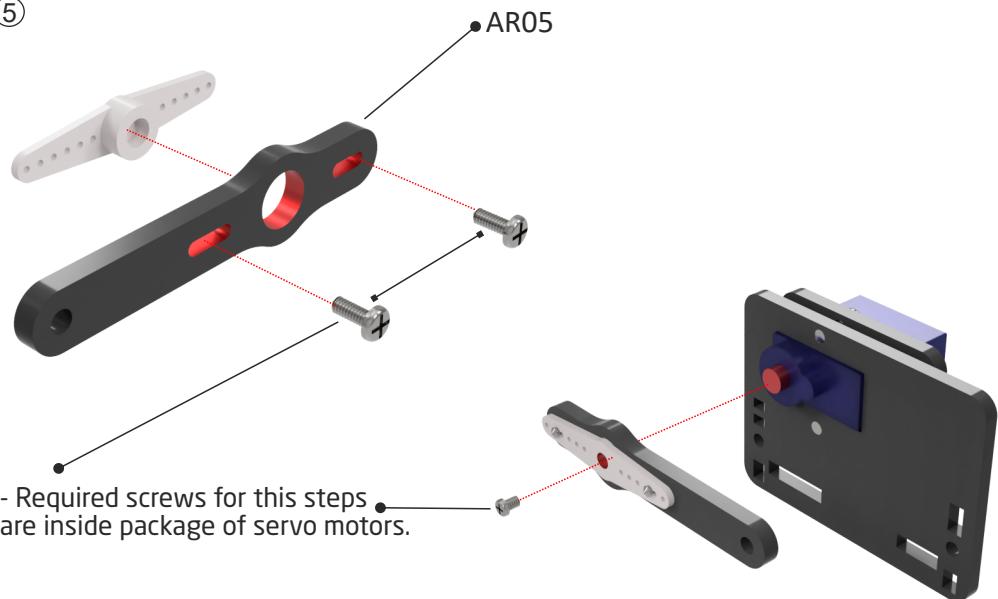


⑥

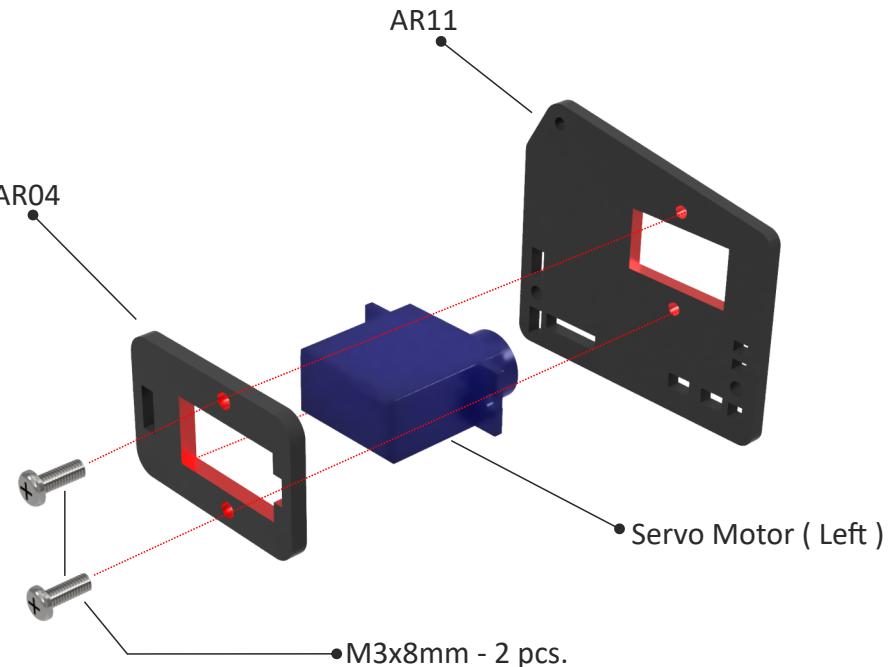


Assembly Steps

⑦

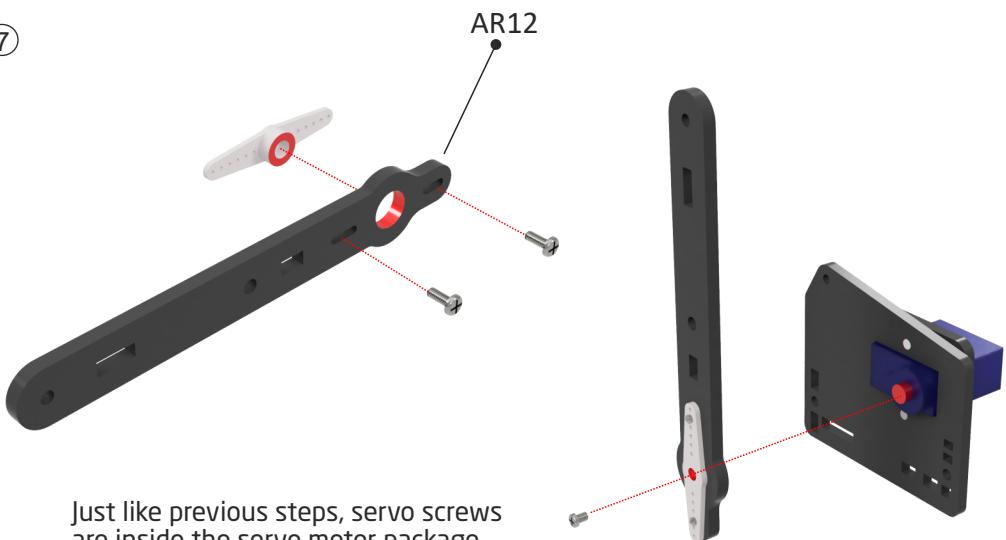

⑧

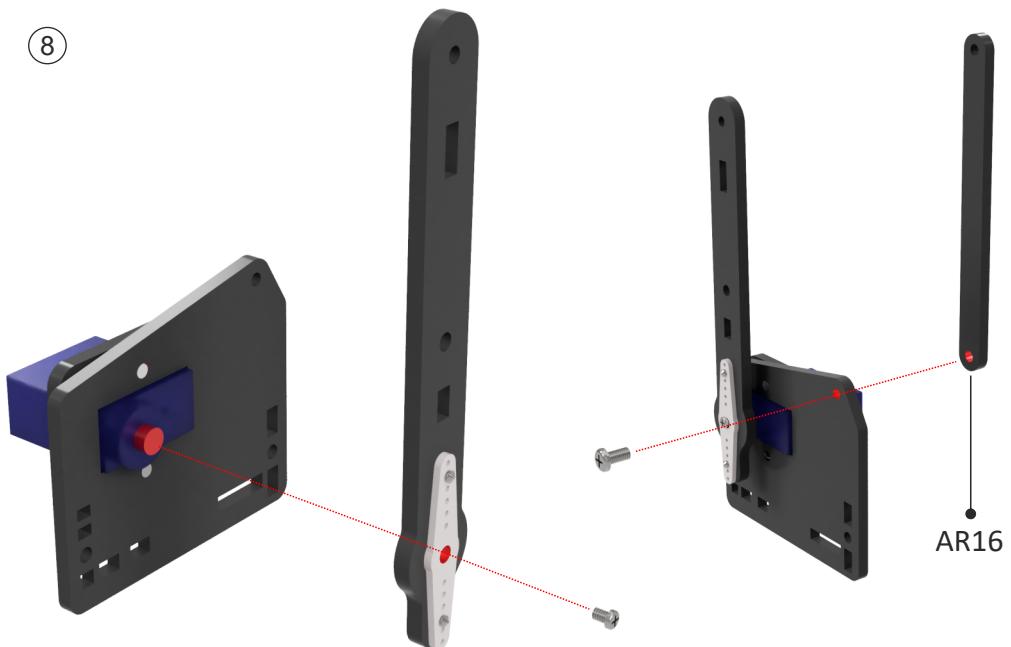


Assembly Steps

⑨




⑩

*servo screws are inside
the servo motor package

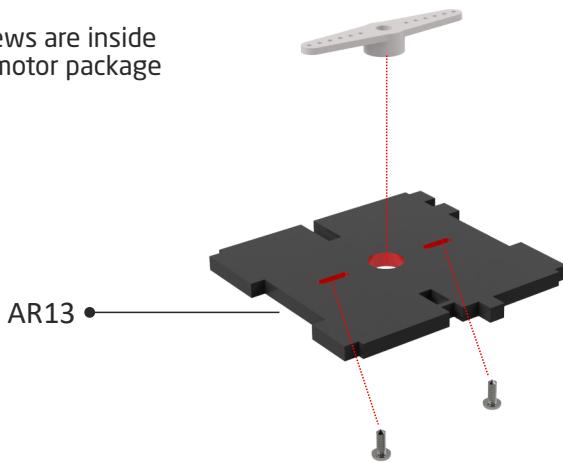


Aseemby Steps

⑬

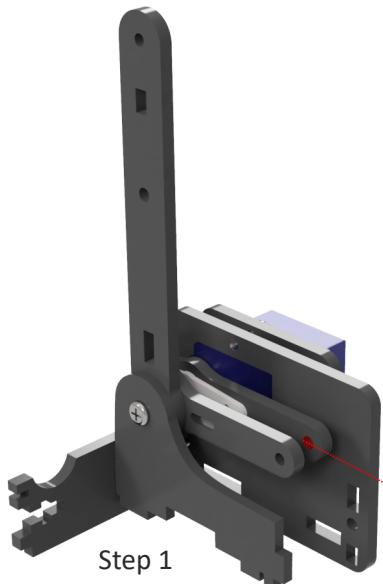



M3x12mm

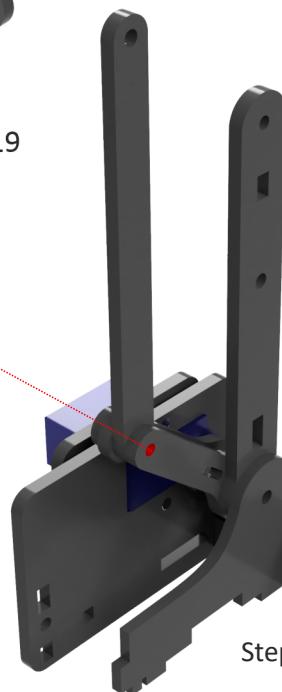

*In order to put together **AR16** and **AR19** its recommended to lift these parts a little bit then use **M3x12mm** screw to tighten them


Assembly Steps

⑪

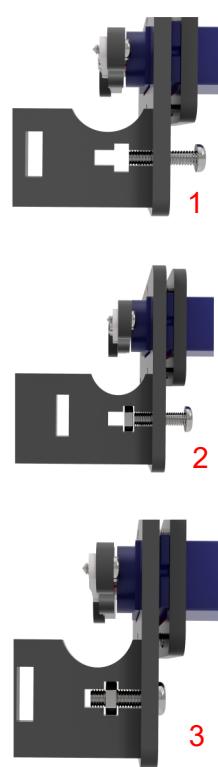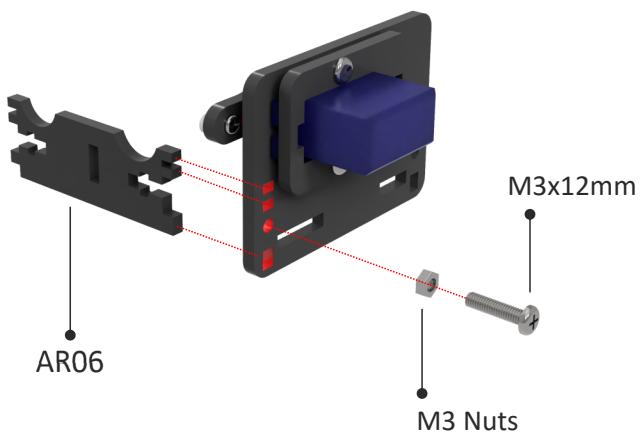

*In order to connect the parts together properly, first insert the screw (1). then put nut inside the referenced nesting (2) then its safe to tighten screw (3).


⑫

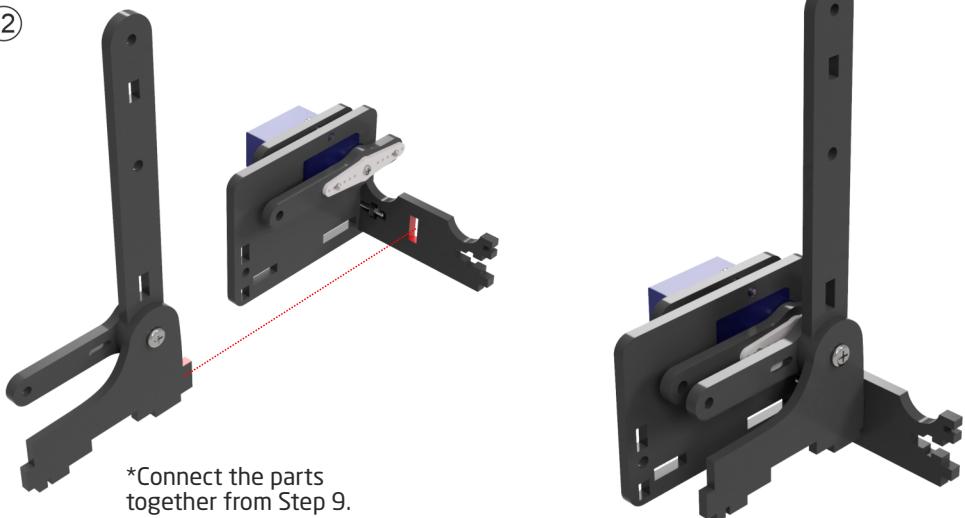

*Connect the parts together from Step 9.



Assembly Steps

⑯

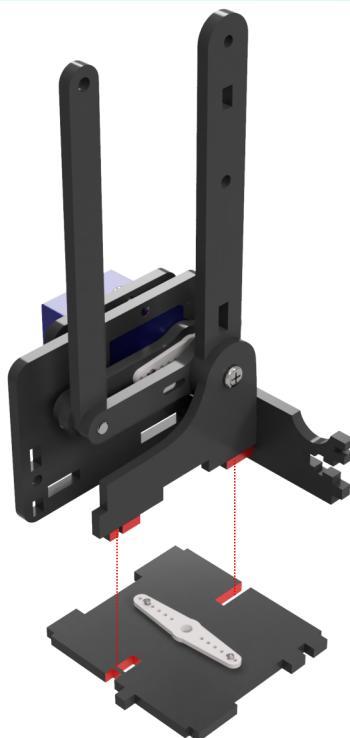


*Connect the parts together from Step 10.


⑯

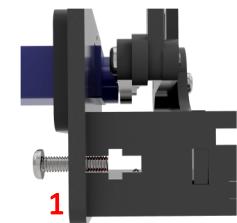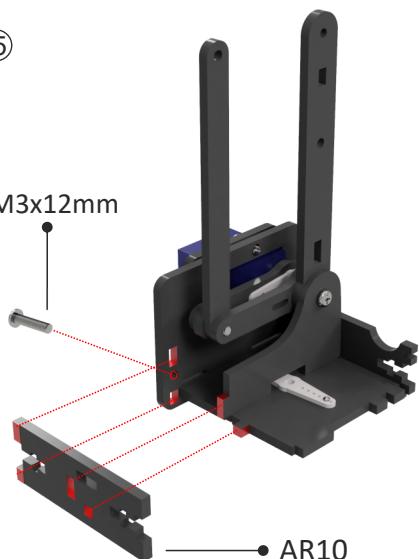

1

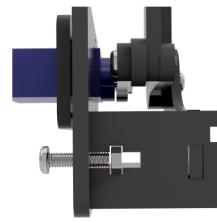

2


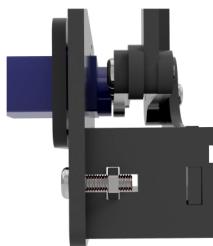


3


In order to connect the parts together properly, first insert the screw (1). then put nut inside the referenced nesting (2) then its safe to tighten screw (3).

Aseembly Steps


⑯

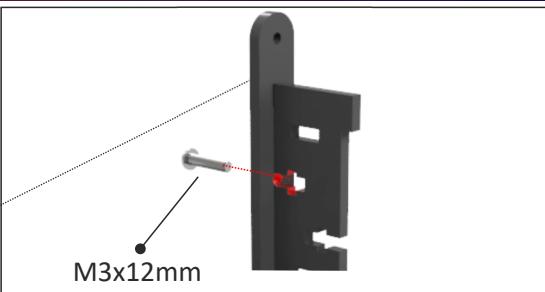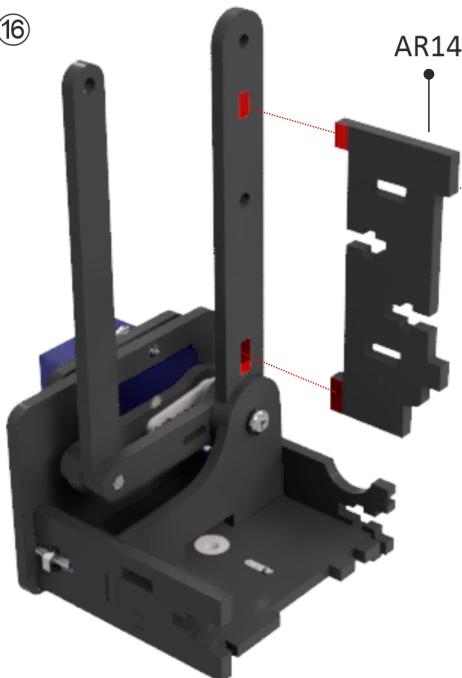


In order to connect the parts together properly, first insert the screw (1), then put nut inside the referenced nesting (2) then its safeto tighten screw (3).

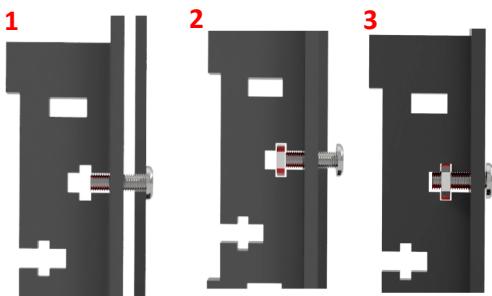

⑰

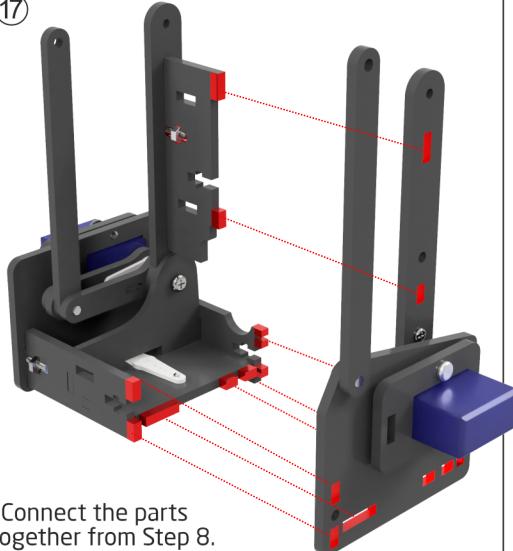


*Connect the parts together from Step 8.

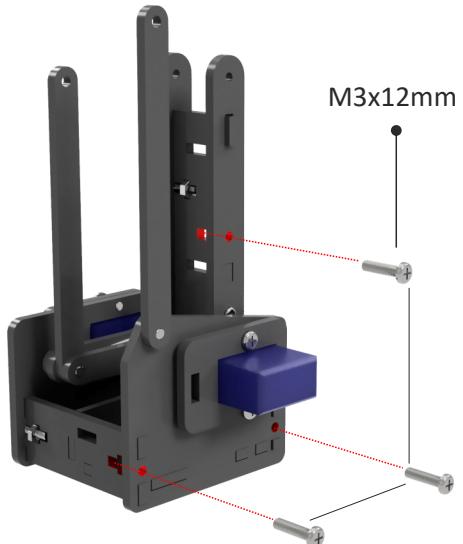


Aseemby Steps

⑯

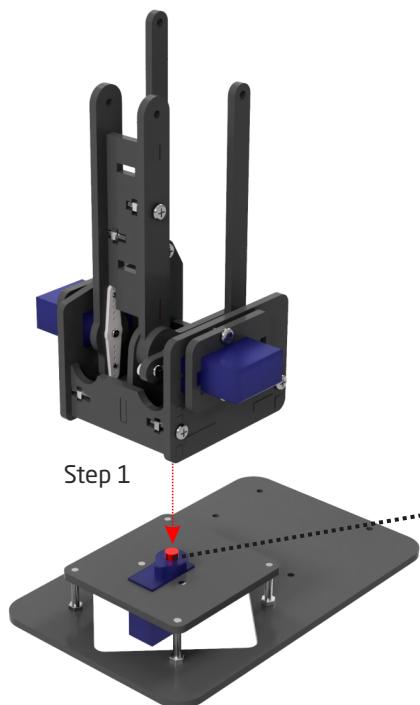


Step 2

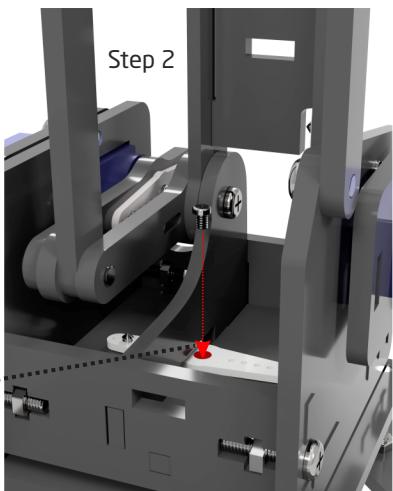


*Connect the upper and lower parts then use a servo screw to tight them together.

⑯

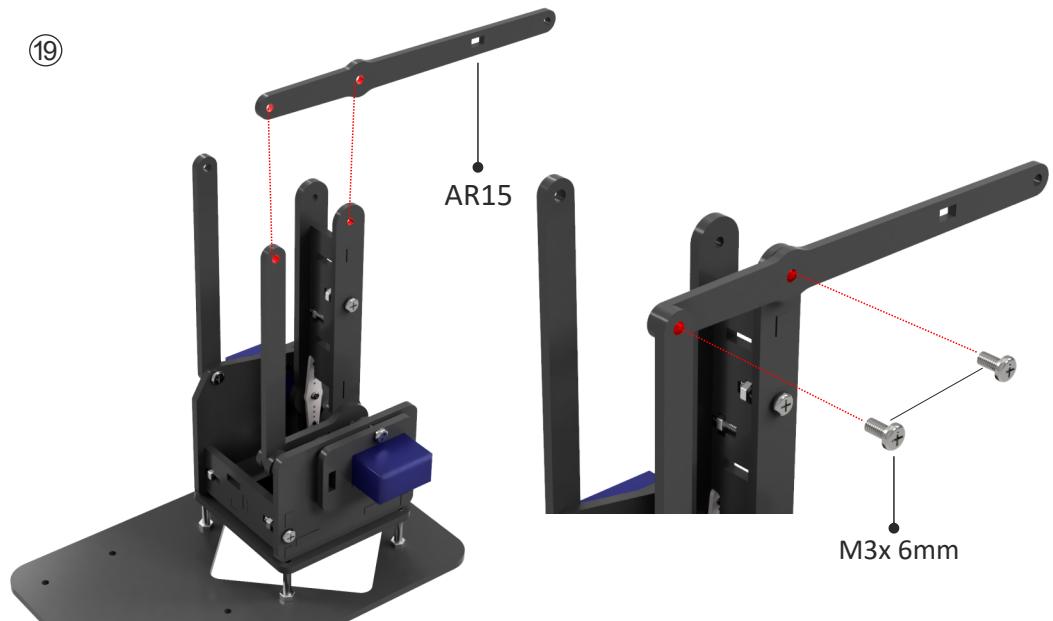


Aseemby Steps


(20)

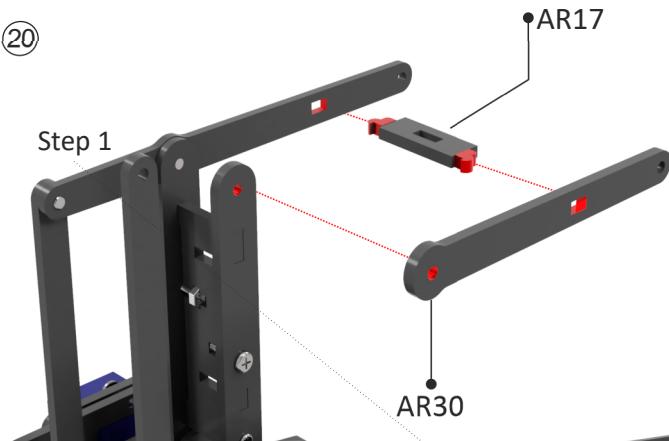


AR18

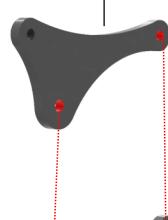


AR19

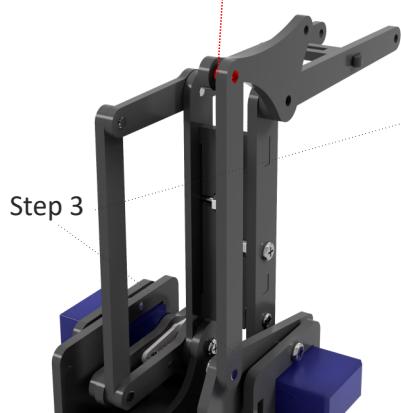

Step 2

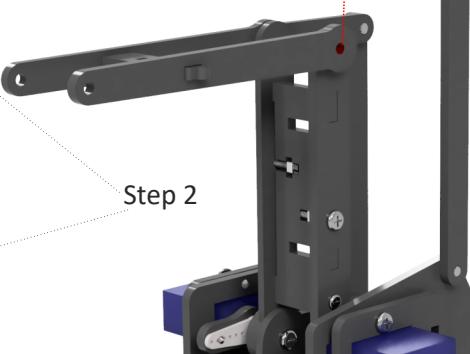


Step 3

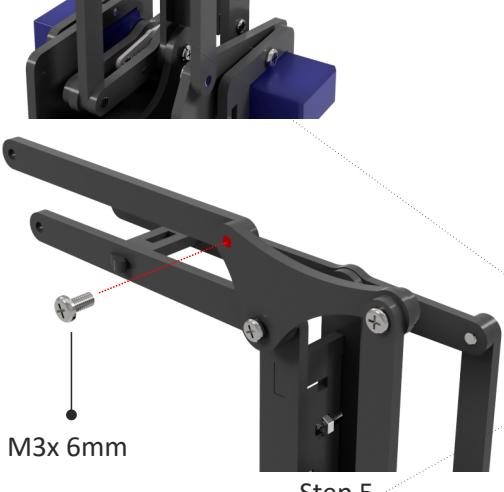

M3x 6mm

M3x 10mm


Step 4

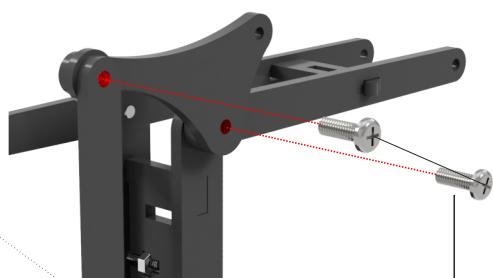

Step 5


Aseembly Steps

(21)

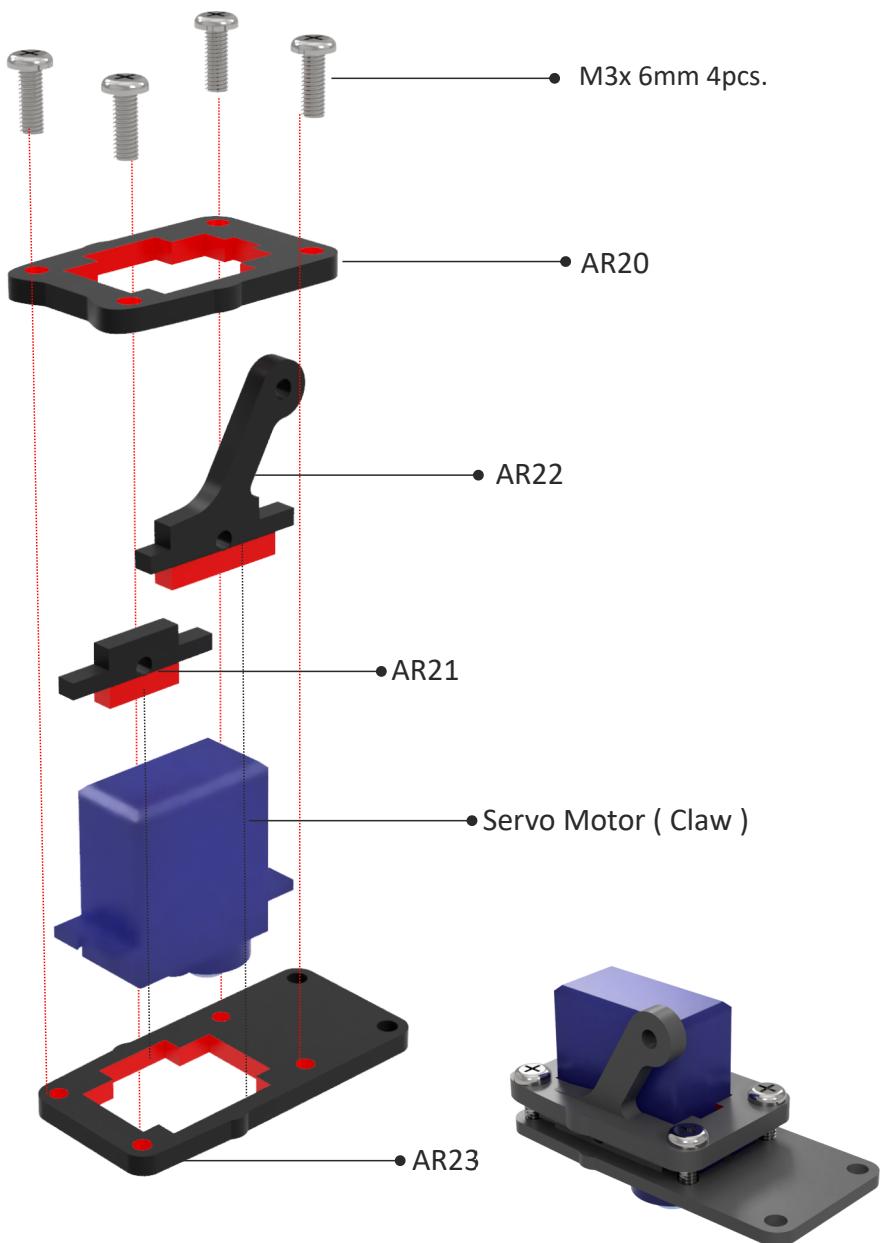


Assembly Steps

(22)

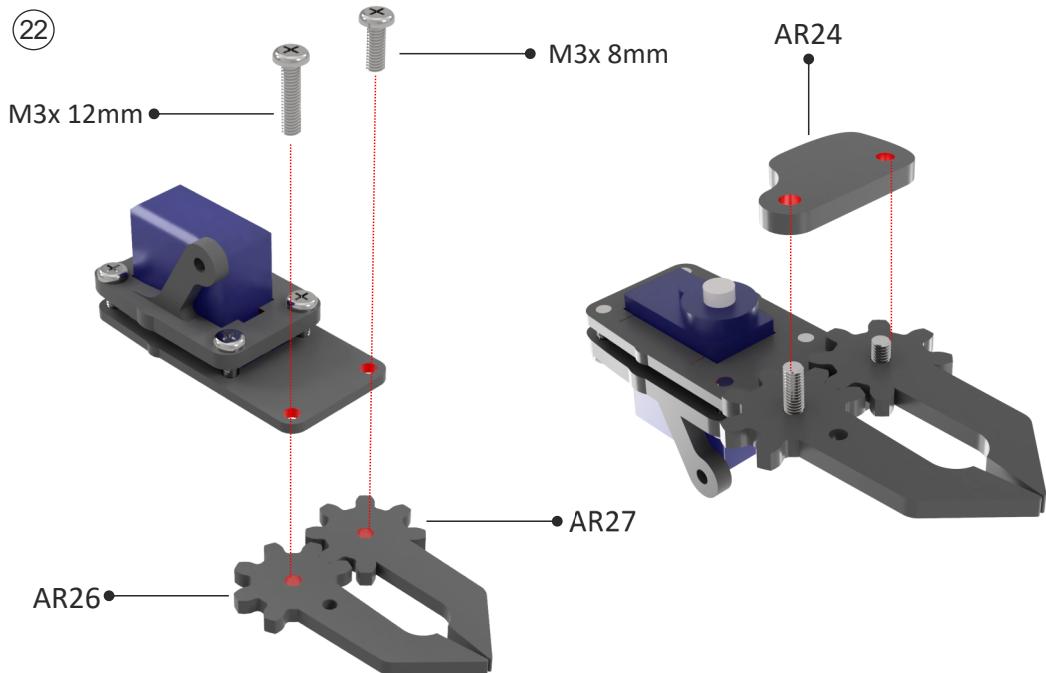


(23)

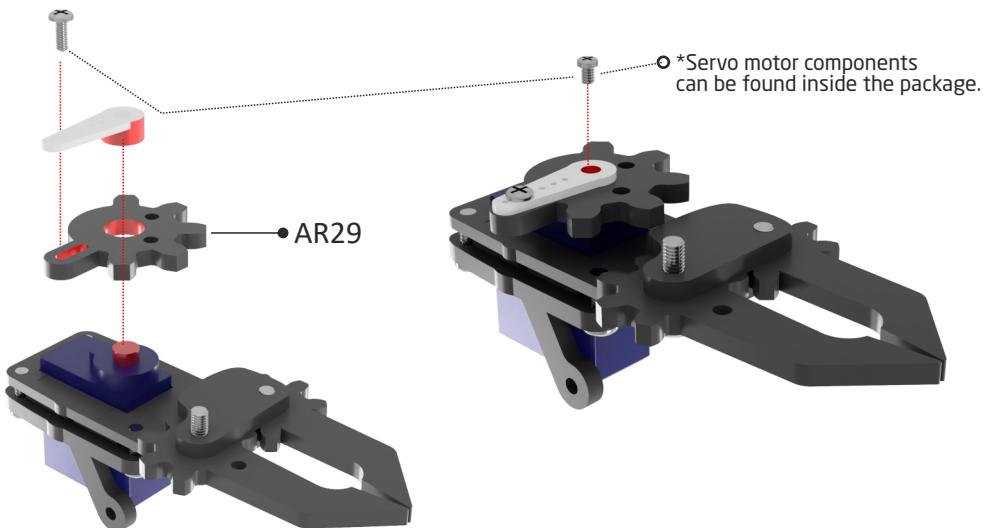


Assembly Steps

24

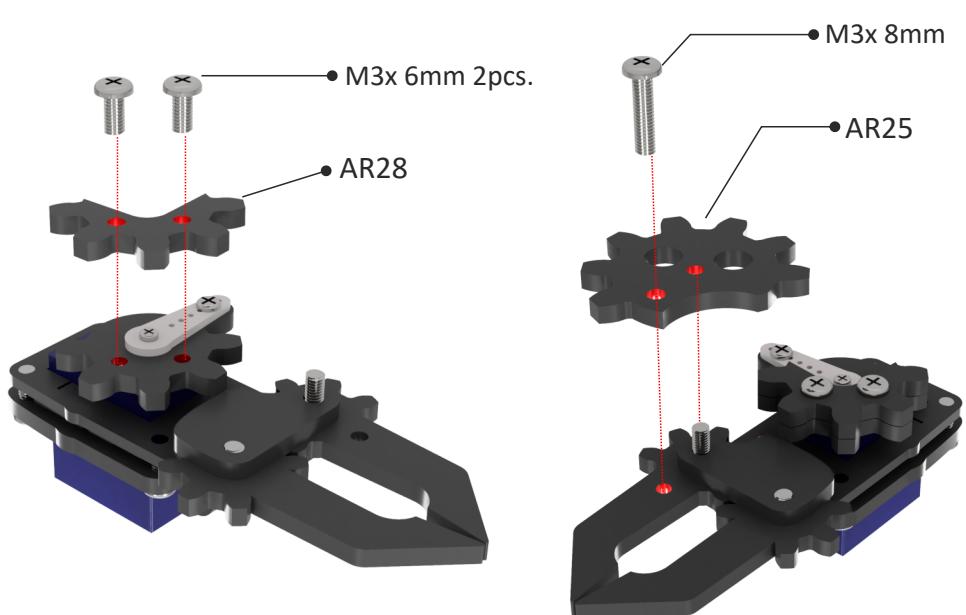

25

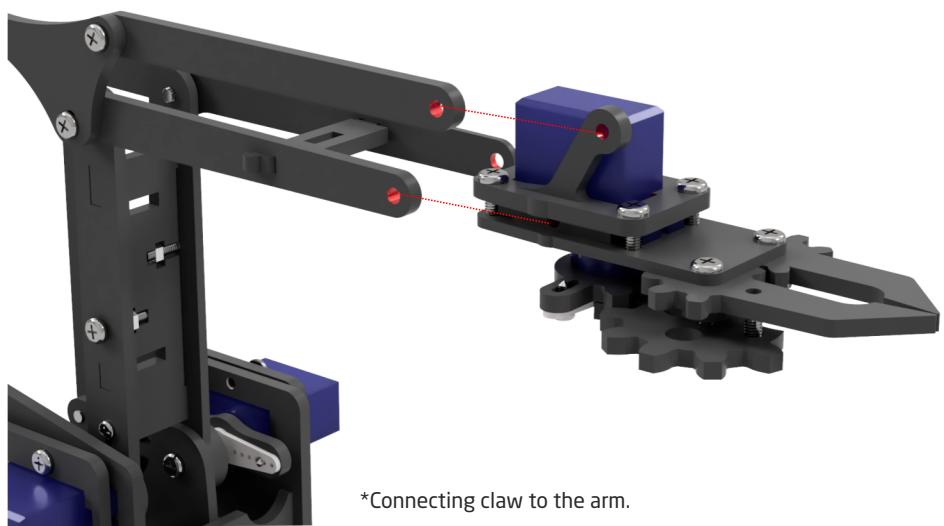


Assembly Steps

(26)




*Put AR19 first then
tighten the screws.

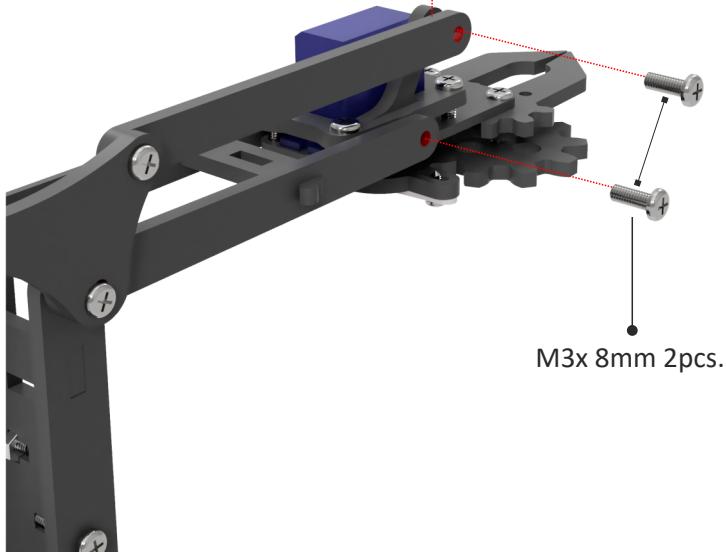

(27)



Aseembly Steps

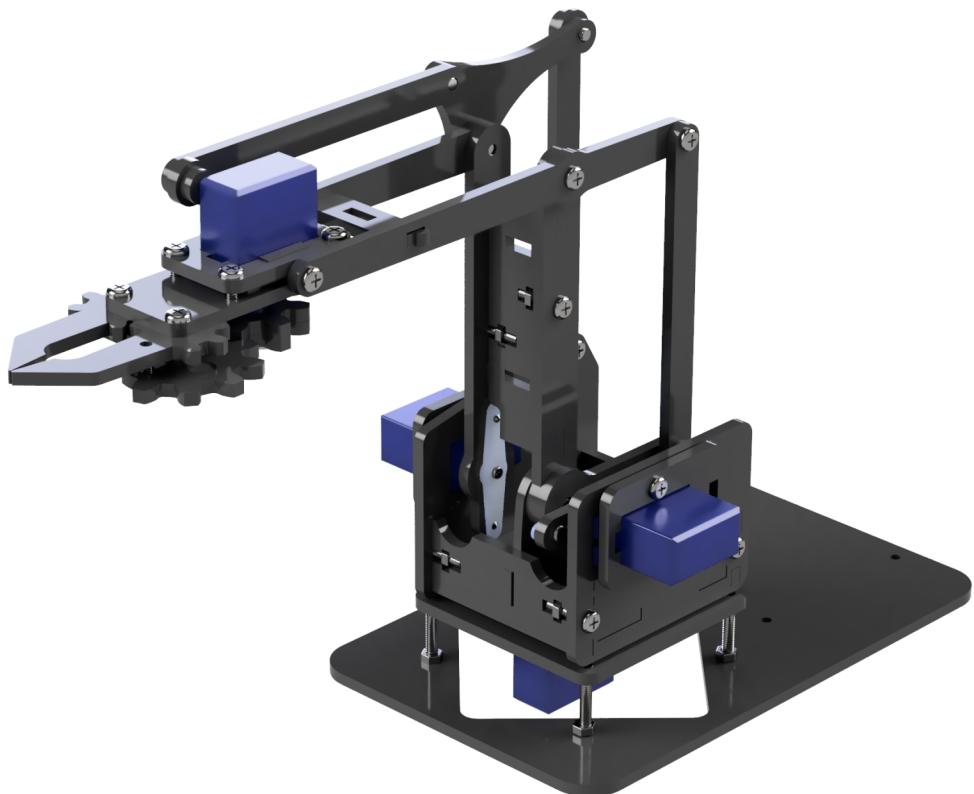

The robotic arm building is finished and its ready to be equipped for your projects.

We're Here to Help
Feel free to reach out to us at
+90850 766 0 425 or
info@robotistan.com
For further information please visit:



YouTube



youtube.com/robotistan

FORUM

robotistan



forum.robotistan.com

BLOG

robotistan



maker.robotistan.com

Robotistan Elektronik Ticaret A.Ş.

Mehmet AKÇALI (Editor) - Sercan Okay (Graphics, Design, Visuals)
info@robotistan.com - www.robotistan.com
Tel: 0850 766 0 425