HOW DO I CLEAN THE SPOON?

Tobacco is very persistent and sticks to the internal parts of the machine. To make prefectly filled cigarettes, it is very important that you clean the machine regularly.

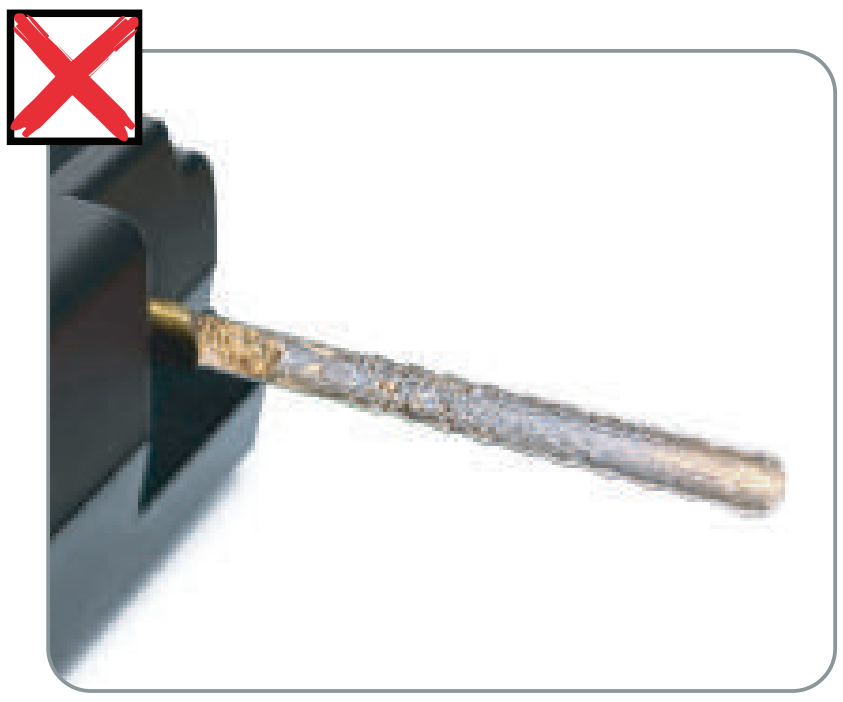

Tobacco residues can stick in the outermost corner of the spoon, preventing tobacco from being pushed up to the filter of the cigarette tube.

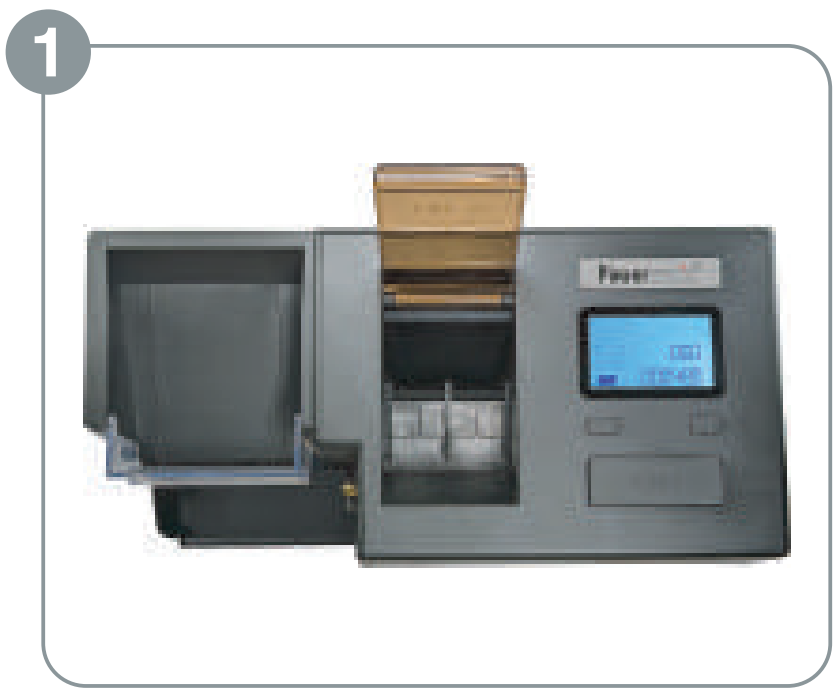

Open the tobacco and tube hopper lid and remove all tobacco from the hopper and loading chamber. Close the tobacco lid and press START.

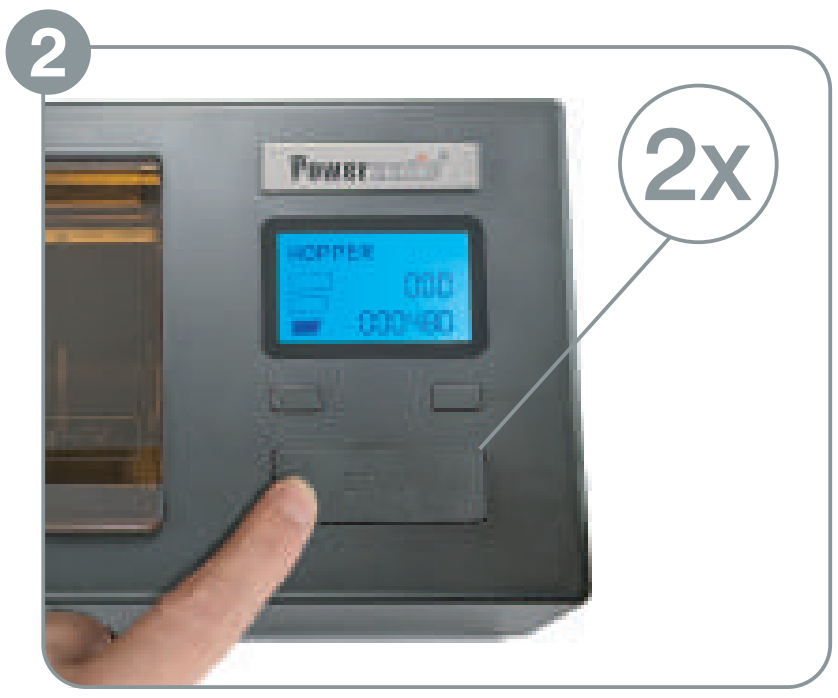

Wait until HOPPER appears. Press START again and wait for the spoon to come out. When the spoon is fully out, quickly press START for the second time.

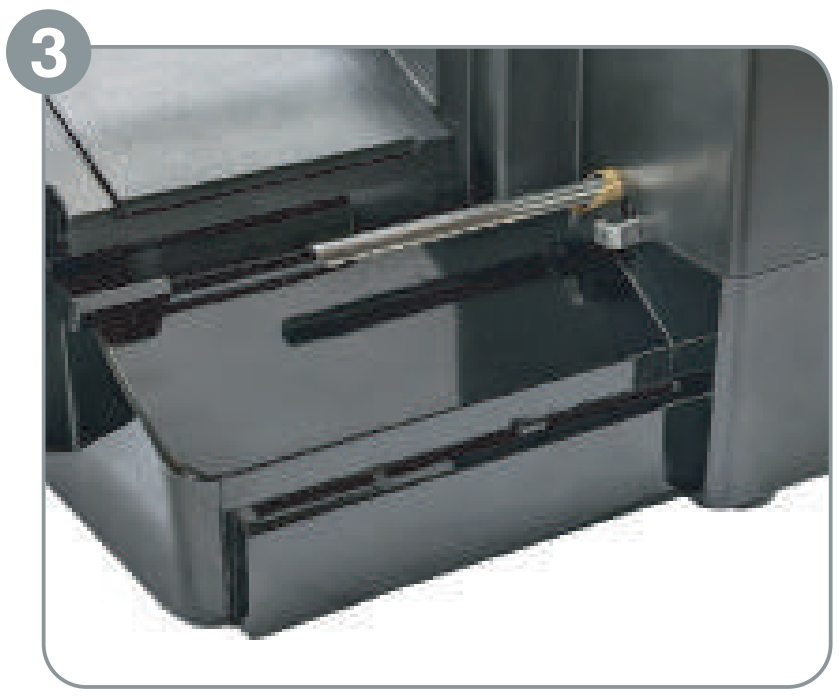

The spoon will now stay in this position and can be cleaned using the cleaning accessories or a damp cloth.

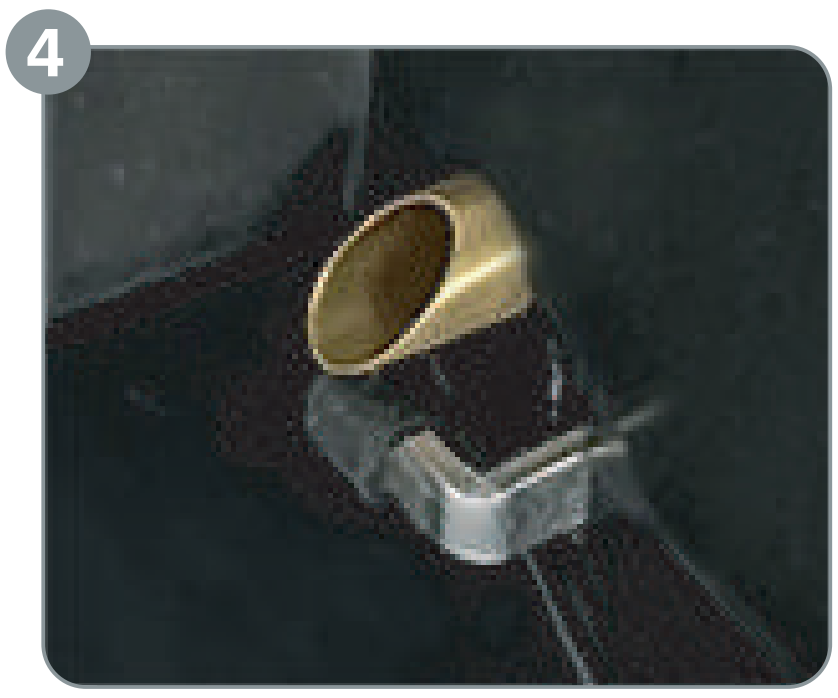

Tobacco can also stick to the tobacco cutting knife and to the inside of the spoon nozzle and this must also be cleaned.

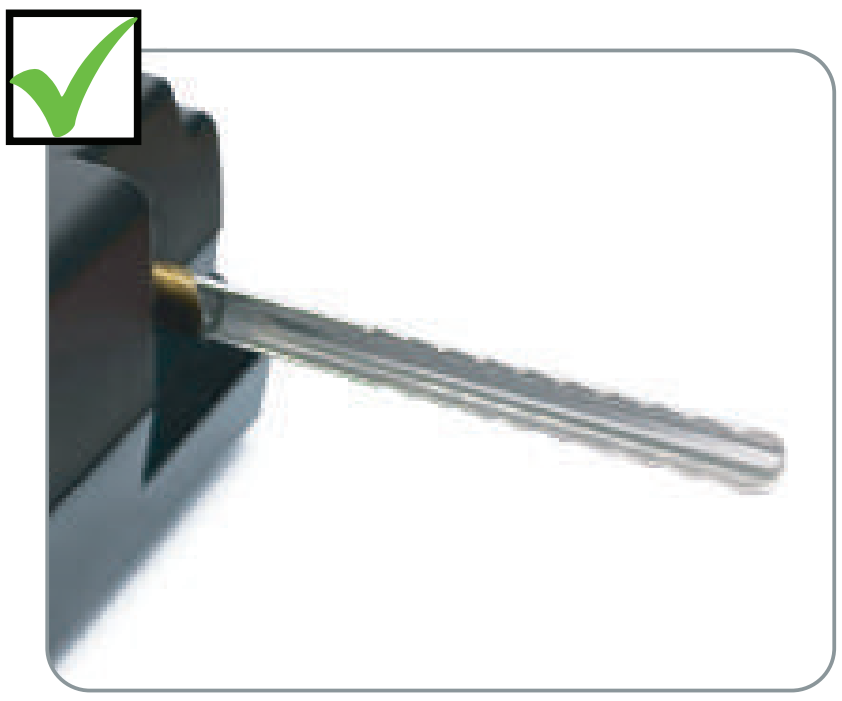

The machine is now clean and can be used again.

⚠ SAFETY NOTIFICATION

Switch off the machine when cleaning internal parts.

FREQUENTLY ASKED QUESTIONS

Q: Tobacco is not filled to the end of the cigarette filter? *A: The tobacco may be too moist. Make sure you use volume tobacco with a moisture level below 12% Rh.*

If you have any further questions, please contact the original seller of the machine.

¿CÓMO SE LIMPIA EL INYECTOR?

El tabaco es muy terco y se pega a las partes internas de la máquina. Para hacer cigarrillos perfectamente rellenos, es muy importante que limpie la máquina.

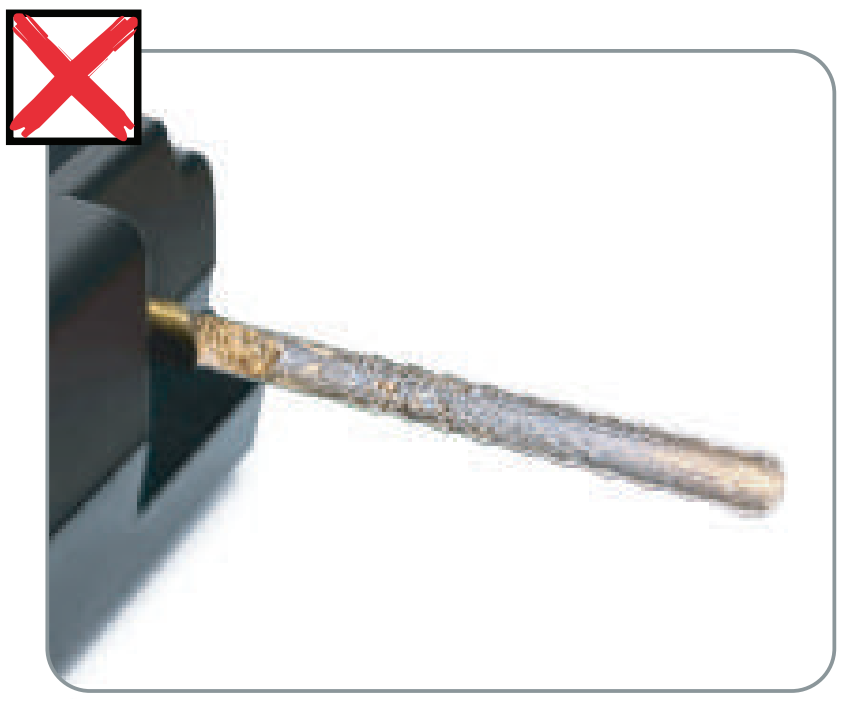

El tabaco pueden adherirse a la esquina más alejada de la inyector, impidiendo que el tabaco llegue hasta el filtro de tubo.

1

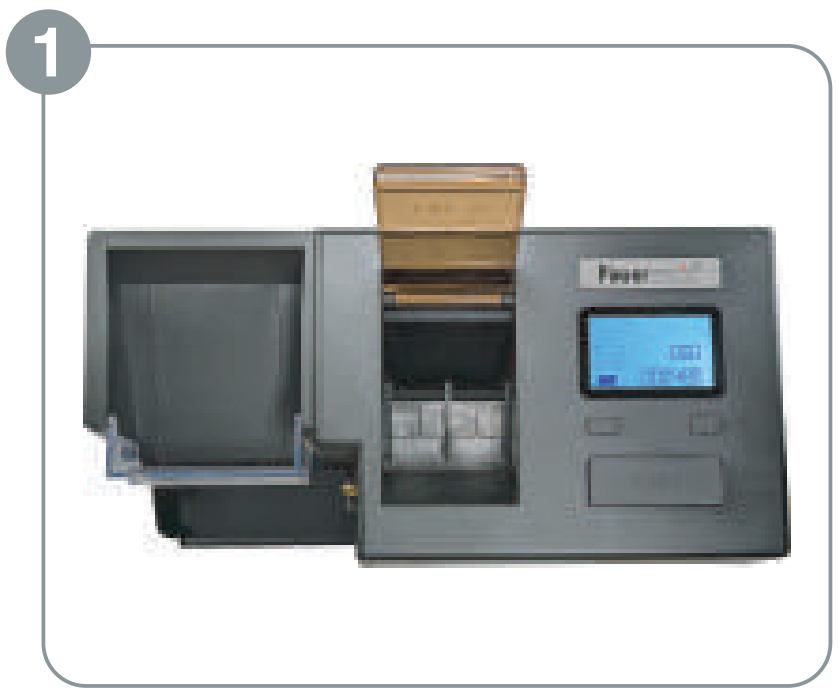

Abra la tapa del tanque y elimine todos los residuos del tolva y de la cámara de carga de tabaco. Cierre la tapa y pulse START.

2

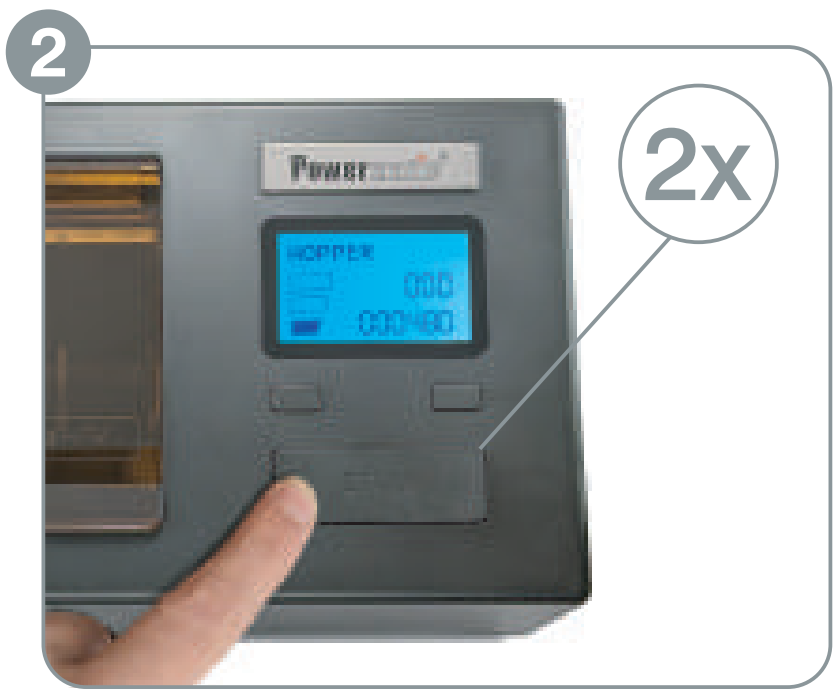

Espere a que aparezca HOPPER. Pulse START y esperar a que el inyector salga del todo. Cuando la inyector haya salido del todo, pulse START de nuevo.

3

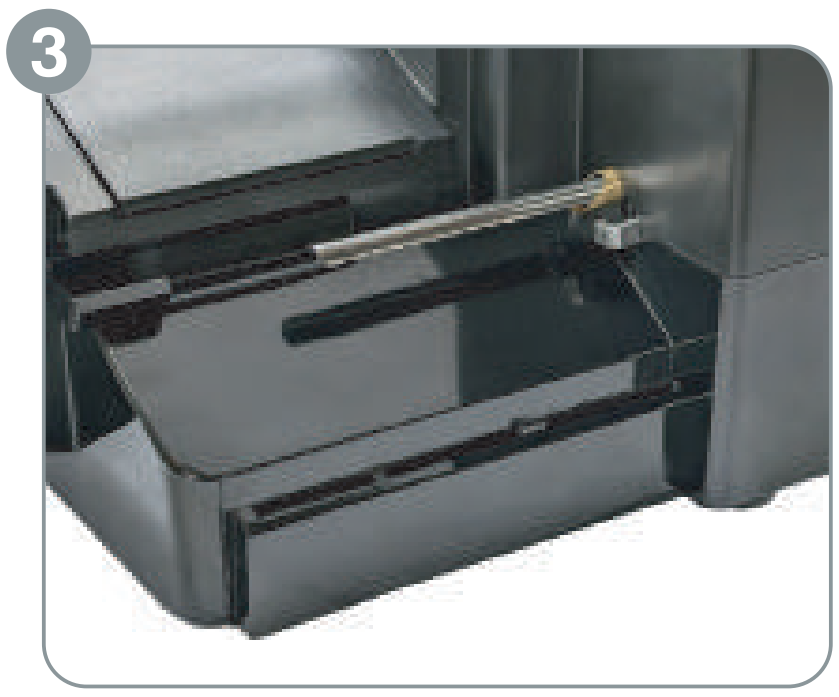

La inyector permanece ahora en esta posición y puede limpiarse con los accesorios de limpieza.

4

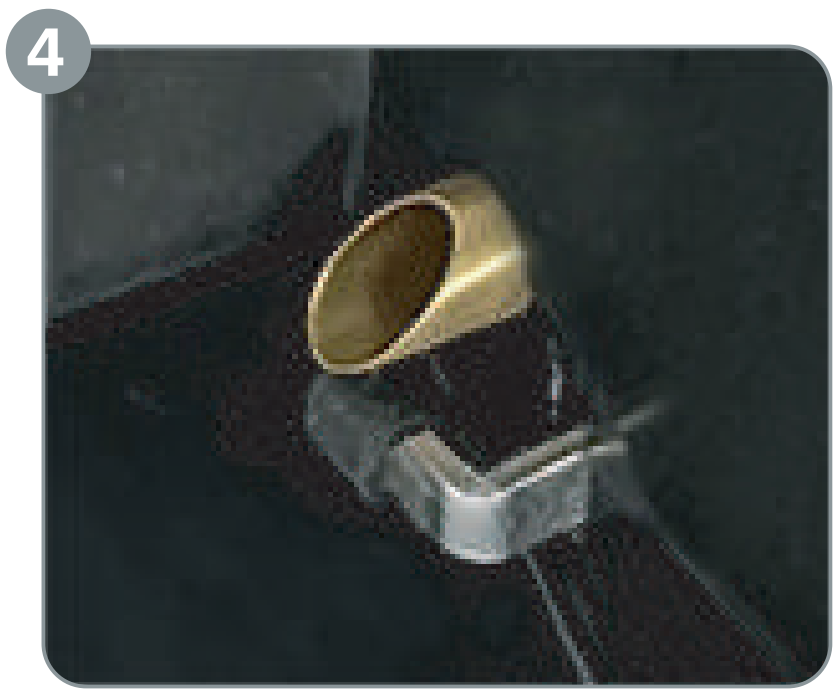

El tabaco también se adhiere al cuchillo y al interior de la boquilla de inyector y es que también sea necesario limpiarlo.

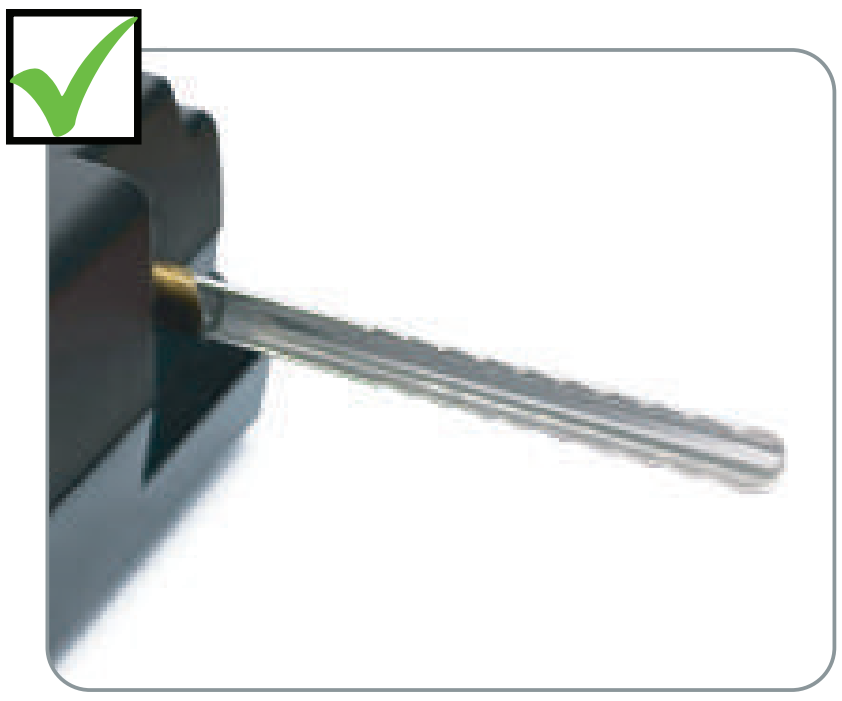

La máquina ya está limpia y puede volver a utilizarse.

⚠ NOTIFICACIÓN DE SEGURIDAD

Apague la máquina cuando limpie las piezas internas.

PREGUNTAS MÁS FRECUENTES

P: ¿El tabaco no llega hasta el final de la tubo del filtro? *R: Puede que el tabac esté demasiado húmedo. Asegúrese de utilizar tabaco expandido con un contenido de humedad inferior al 12% Hr.*

Si tiene más preguntas, póngase en contacto con el vendedor original.