


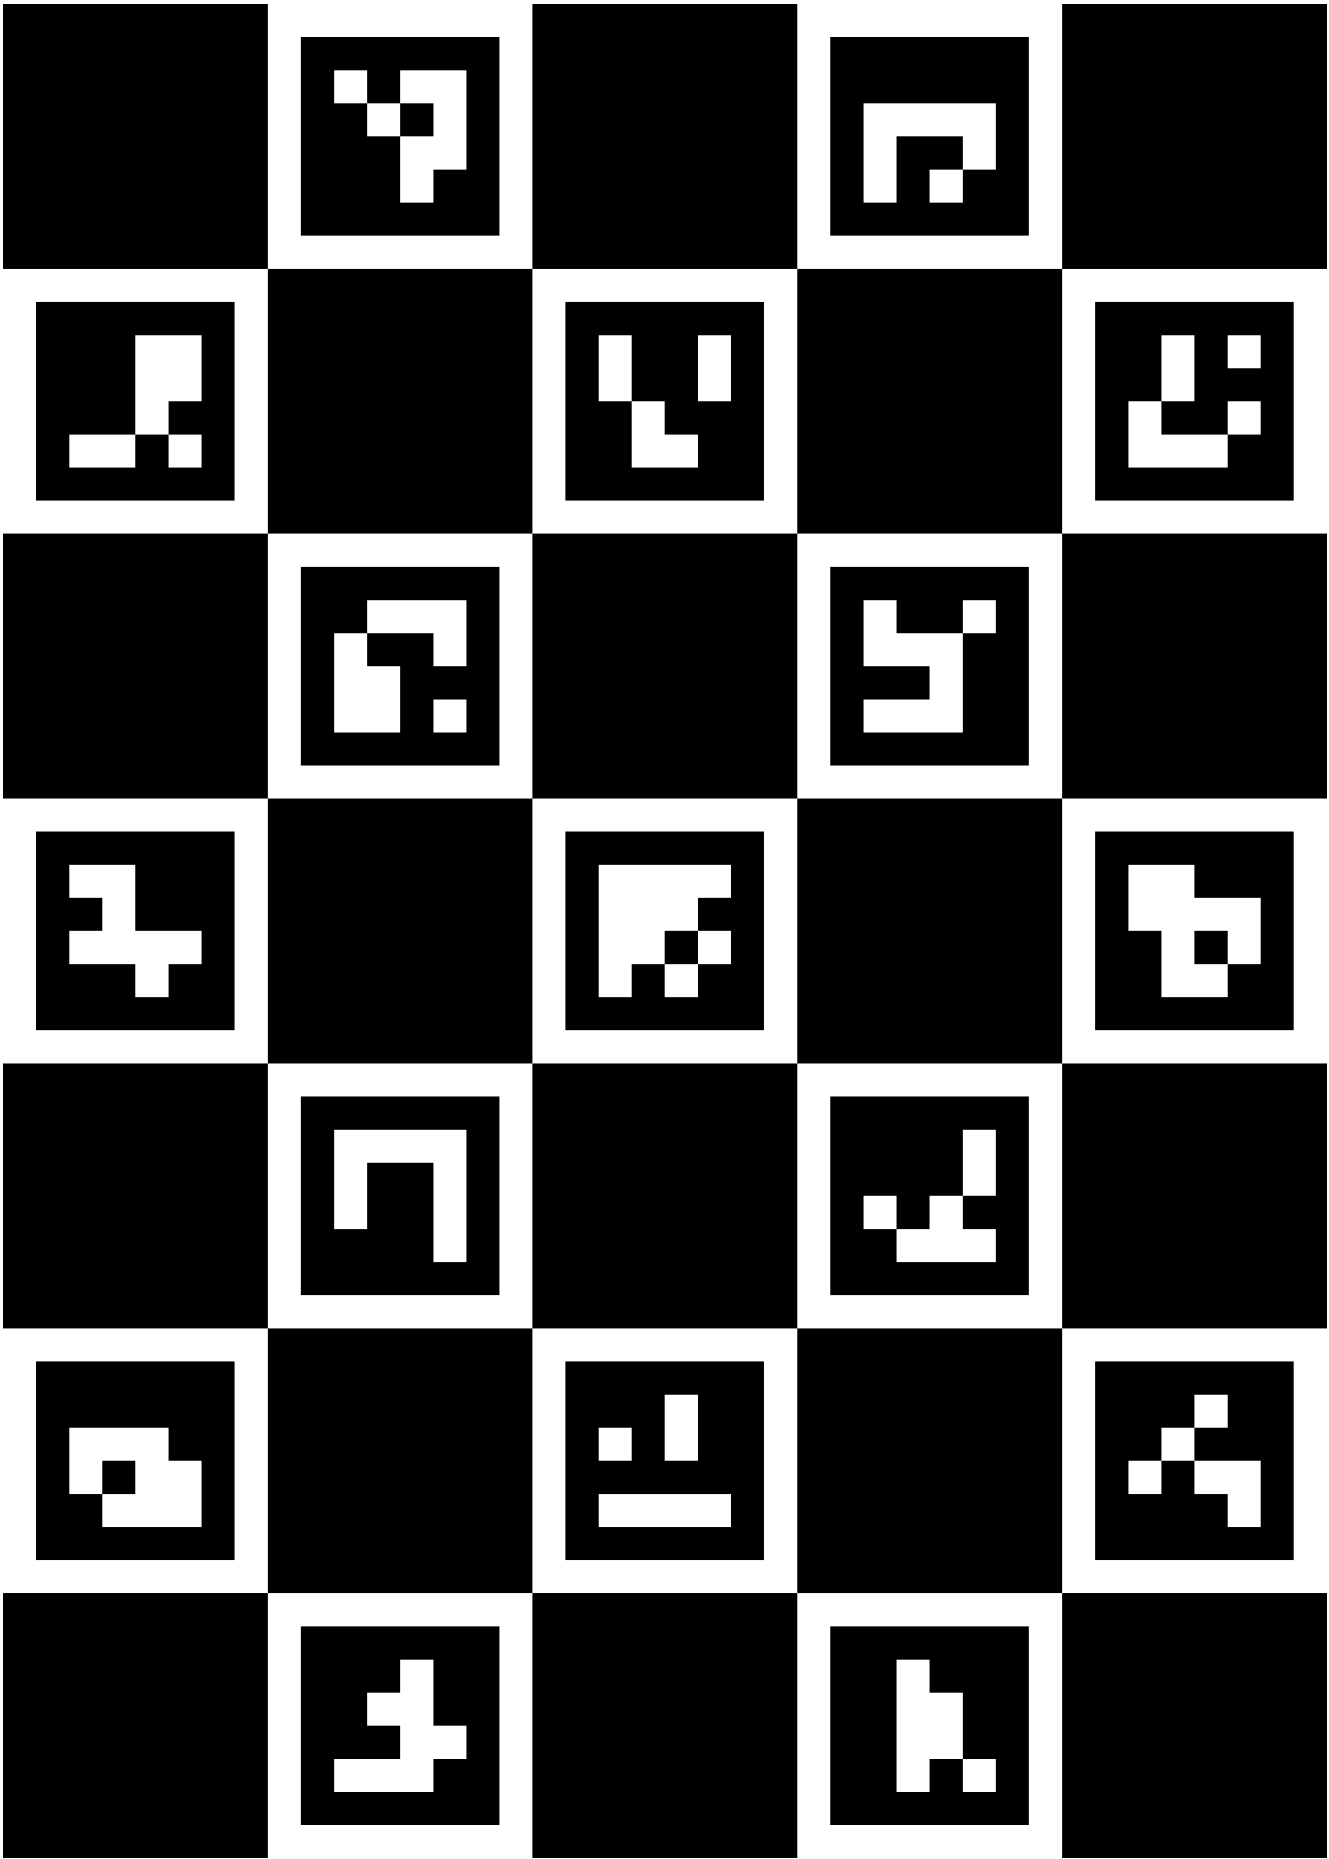

board 175 x 245 mm - origin corner is bottom-left of the chessboard; place flat on the landing plane.



100 mm reference - MEASURE THIS. If it is not 100.0 mm the page was scaled; markers are off by the same factor.