
2062 MODULE REMOVAL

MODULE ACCESS

Front Access


Accessing the Topbox and Fascia Modules

1. Insert the key into the front of the fascia and unlock to hinge open, supporting the fascia as it rises.

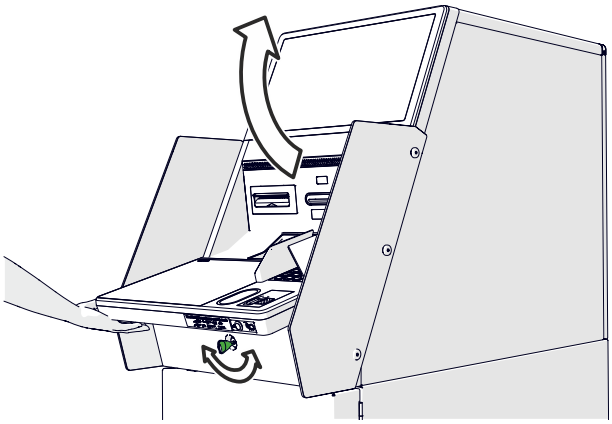

Accessing the Security Enclosure Modules


1. Open the fascia.
2. Depress the latch on the top of the front cosmetic door and hinge open.

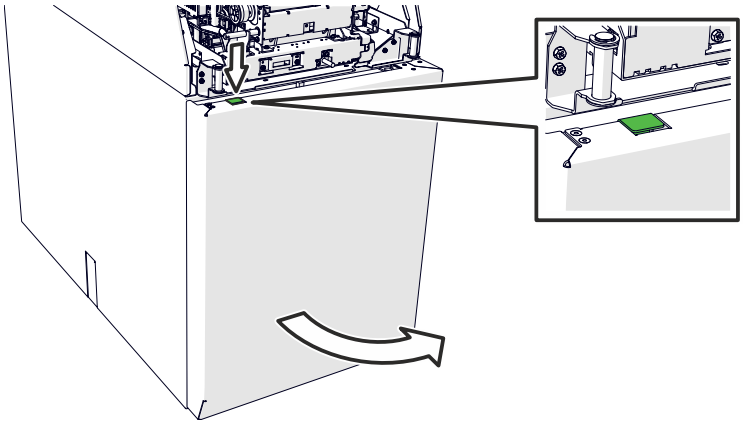

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

Accessing the UPS


1. Open the fascia.
2. Open the front cosmetic door.
3. Insert the key into the sidebox access panel and hinge open.

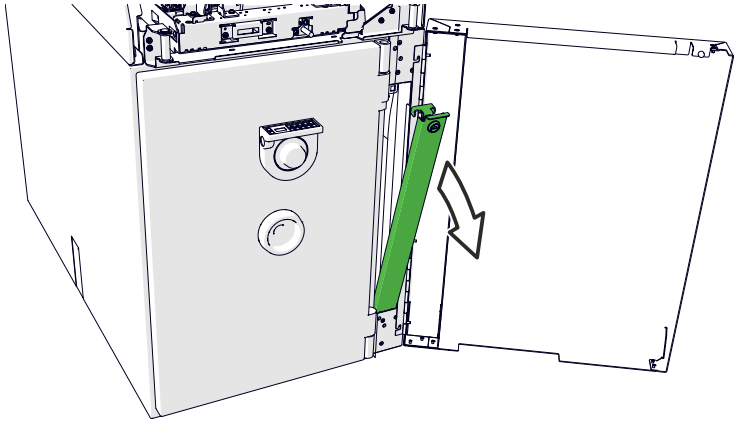

Rear Access

Access the Topbox Modules


Insert the key into the rear door and hinge open.

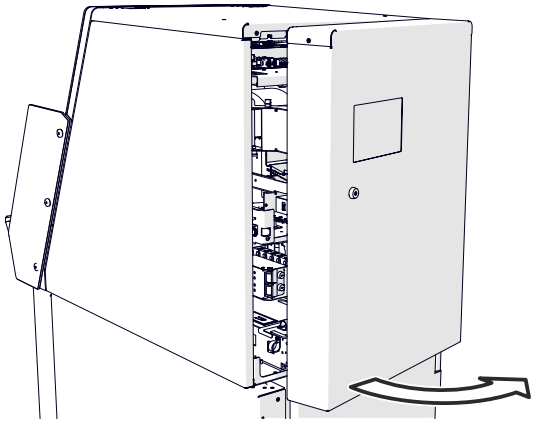

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


Access the Fascia Modules

Insert the key into the front of the fascia and hinge open, supporting the fascia as it rises.

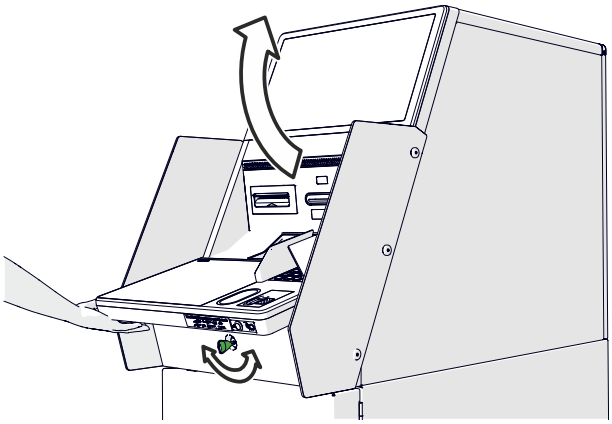

Access the UPS


Insert the key into the sidebox access panel and hinge open.

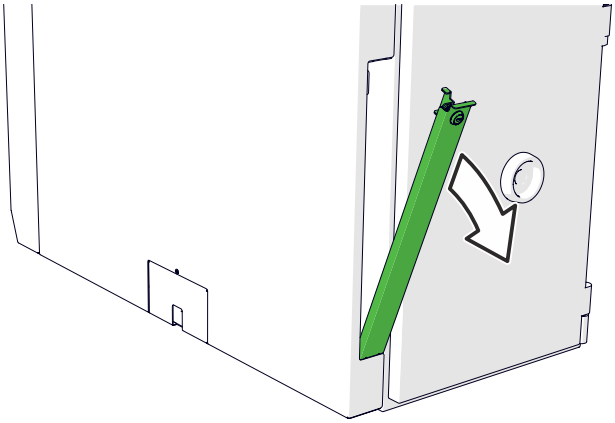


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

Accessing the Smart Shelf Modules

1. Unlock and open the fascia.
2. Loosen the four captive screws securing the smart shelf to the fascia.

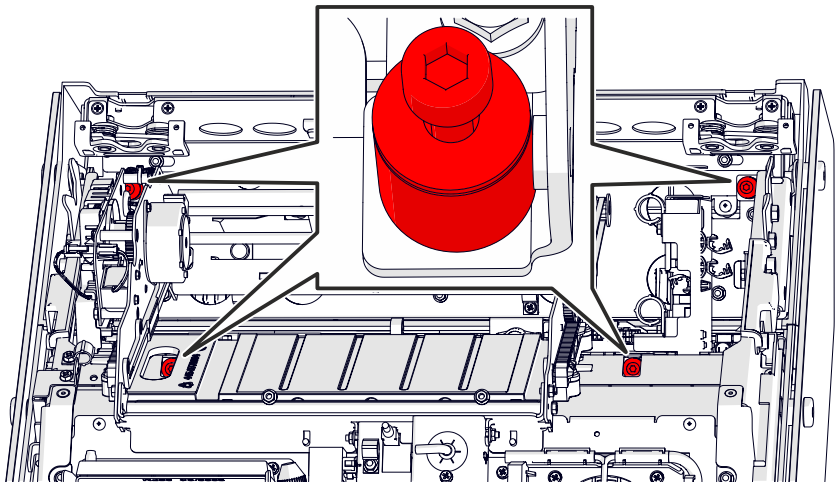


3. Partially close the fascia. Carefully extract the smart shelf upwards and outwards.

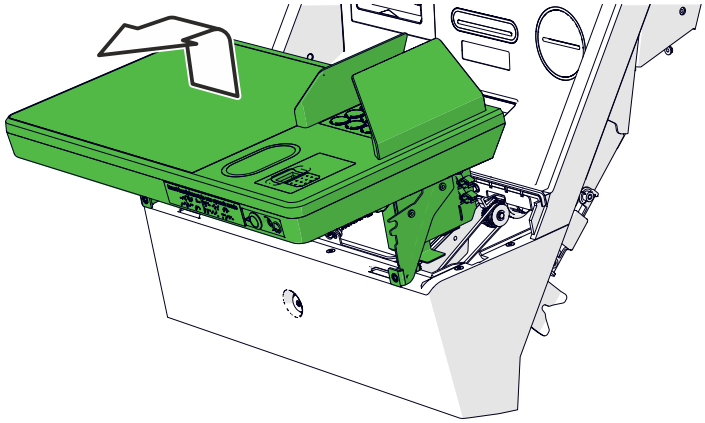

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


4. Tilt the smart shelf upwards and hook it onto the fascia in the service position. Ensure the two locating tabs are engaged.

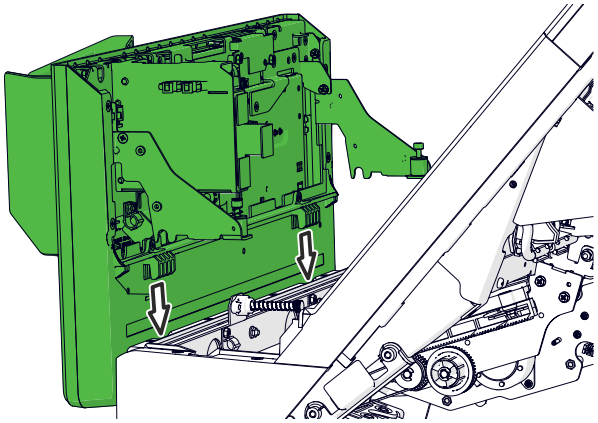

POWER ISOLATION


Front Access

The ATM power switch is located in the topbox on the right-hand side. See 'Access' instructions. Press the mains switch(s) to the OFF position "0".

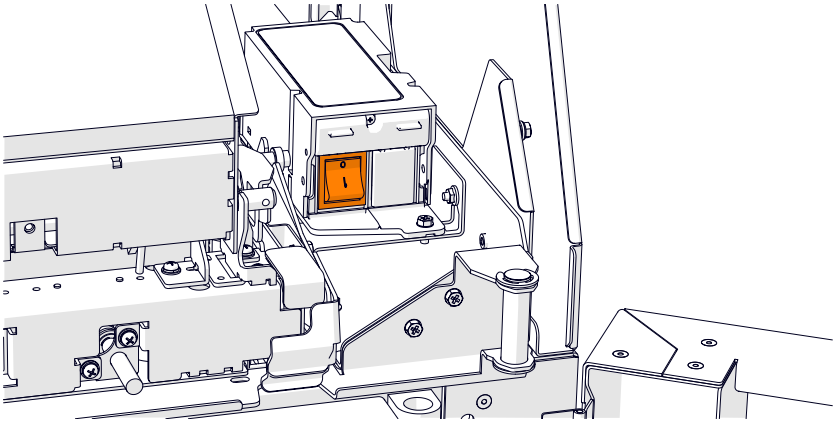

The UPS switch is located in the security enclosure sidebox on the right-hand side. See 'Access' instructions. Press and hold the UPS power button for at least 2 seconds.


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

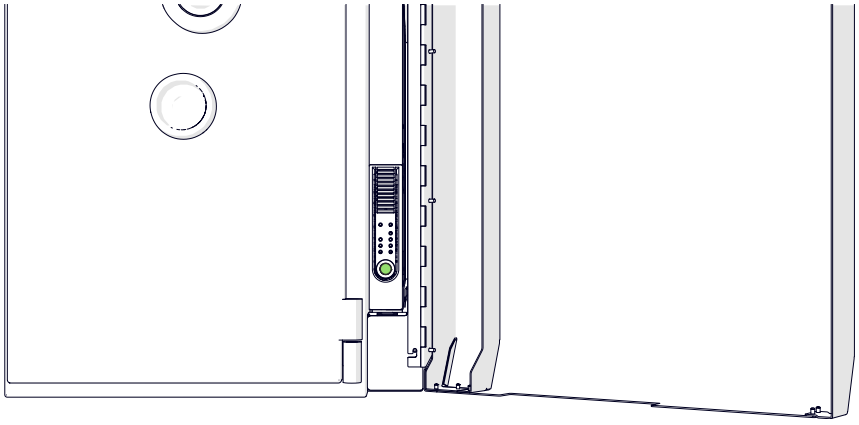

Switch the UPS back on before switching the mains switch back on.


Rear Access

The ATM power switch is located in the topbox on the right-hand side. See 'Access' instructions. Press the mains switch(s) to the OFF position "0".

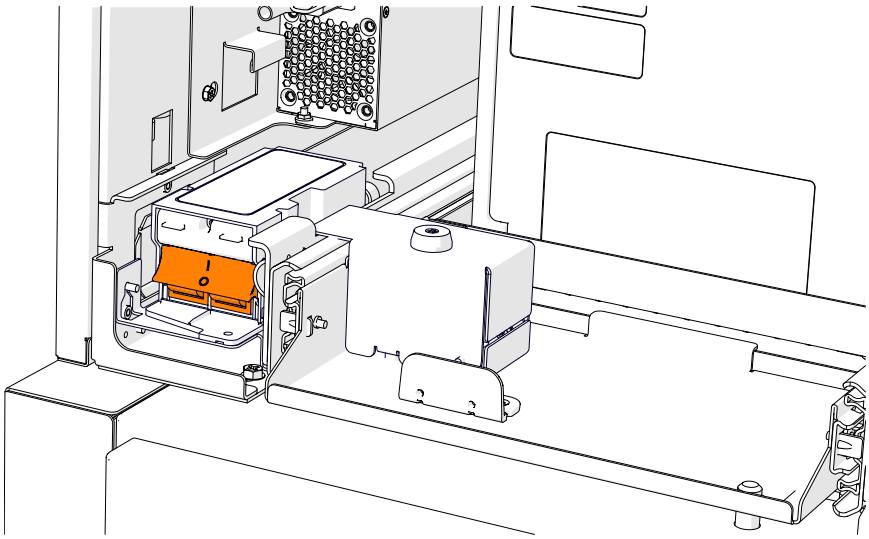

The UPS switch is located in the security enclosure sidebox on the right-hand side. See 'Access' instructions. Press and hold the UPS power button for at least 2 seconds.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

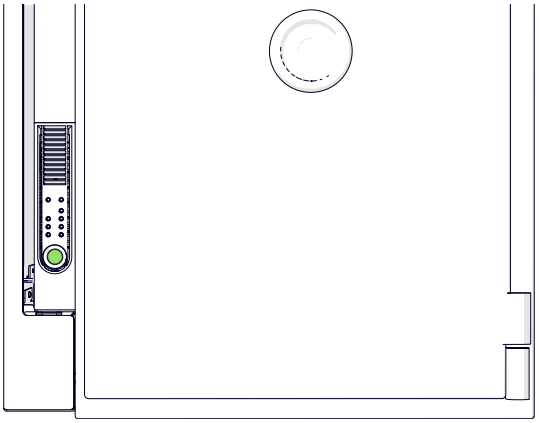


Switch the UPS back on before switching the mains switch back on.

FRONT ACCESS

SR Shutter


Removal

1. Unlock and open the fascia. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. **Applies to units with barcode and camera only**. Loosen the two nuts securing the assembly to the shutter. Remove the assembly from the shutter.

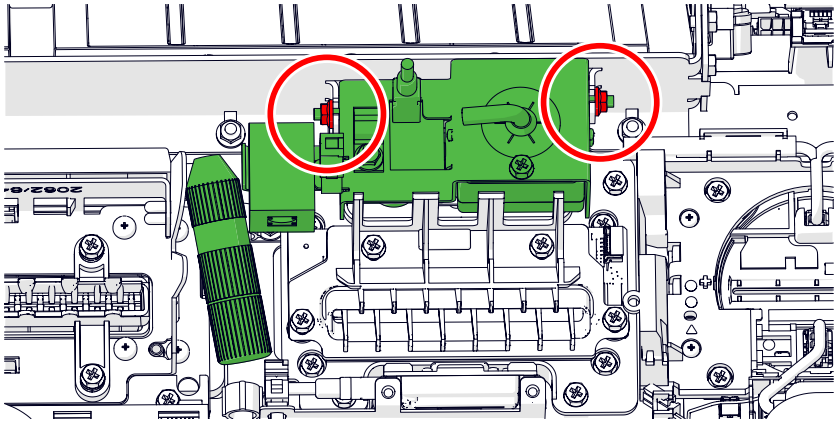


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


4. Disconnect the cables from the shutter control board.

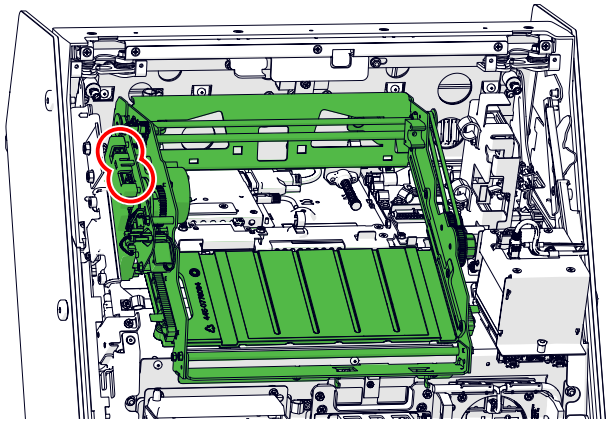

5. Remove and retain the two nuts securing the top of the shutter assembly to the fascia.

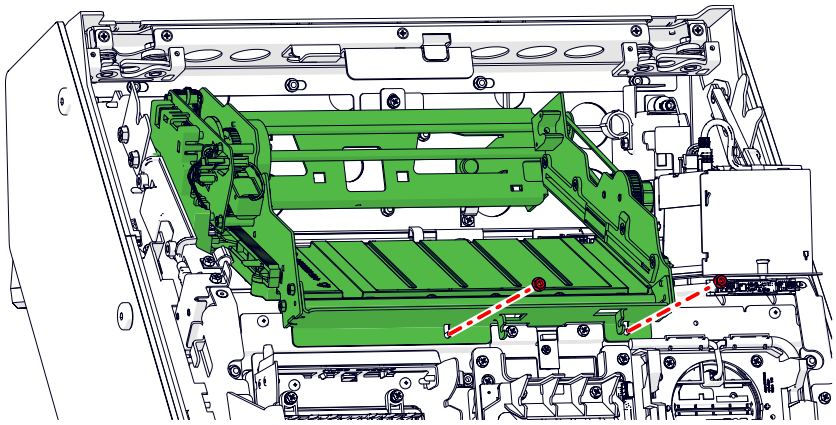

6. Unscrew the captive screws on the bottom of the shutter assembly. Remove the shutter assembly from the fascia.

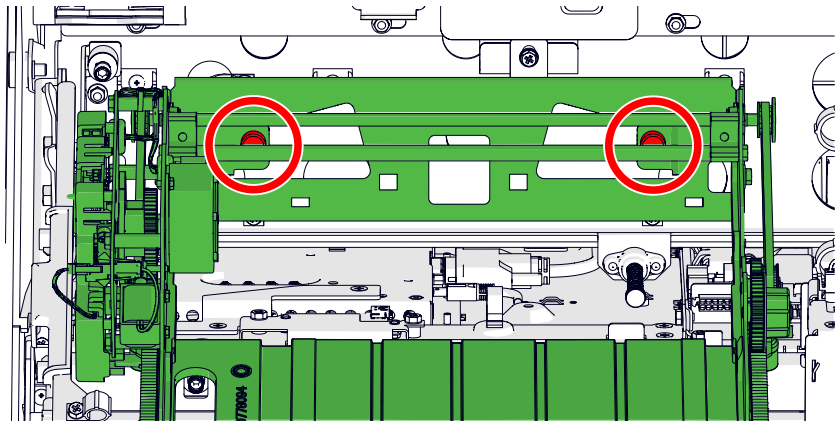

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


Replacement

Fitting the replacement shutter assembly is the reverse of this process.


Power Supply Unit (PSU)

Removal

1. Unlock and open the fascia. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Rack out the SR upper module until the slides are fully extended.
4. Disconnect the AC cable from the PSU.

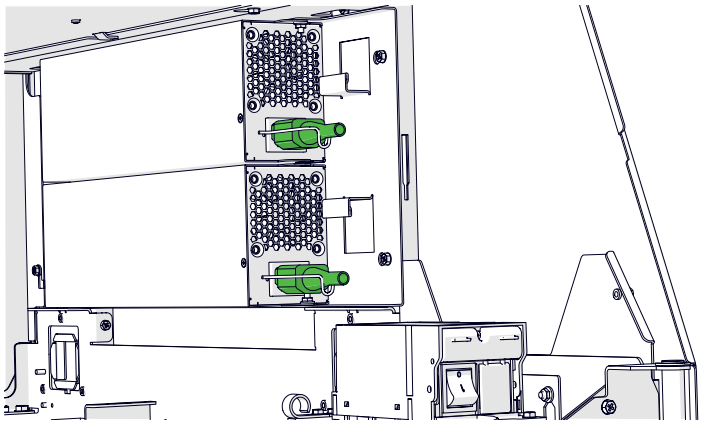


5. Remove and retain the nut securing the PSU to the tray.

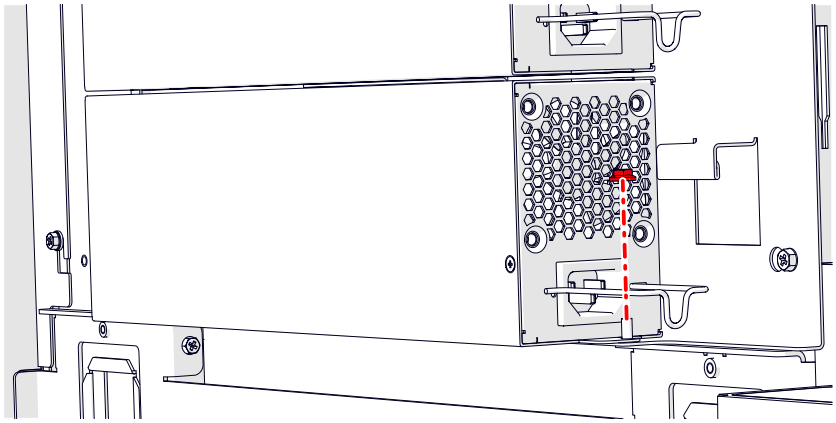

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

6. Carefully remove the PSU and disconnect the DC cables at the rear.

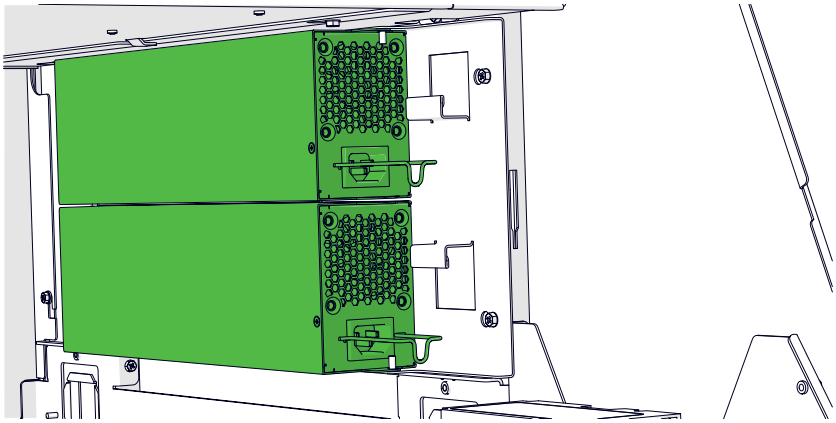


Replacement

Fitting the replacement power supply is the reverse of this process.

Keypad


Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. **Applies only to ATMs with contactless card reader (CCR).** Loosen the screw securing the CCR antenna assembly to the keypad back plate. Detach the CCR antenna assembly from under the screw.

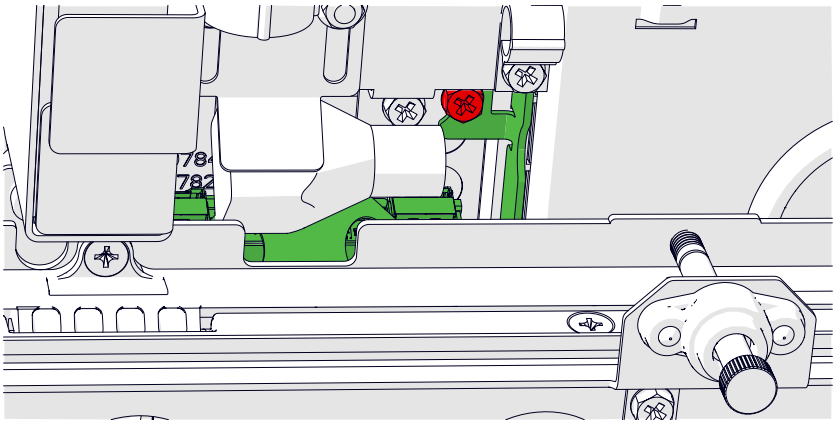


NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

4. Remove and retain the screw securing the keypad backplate to the display bracket.

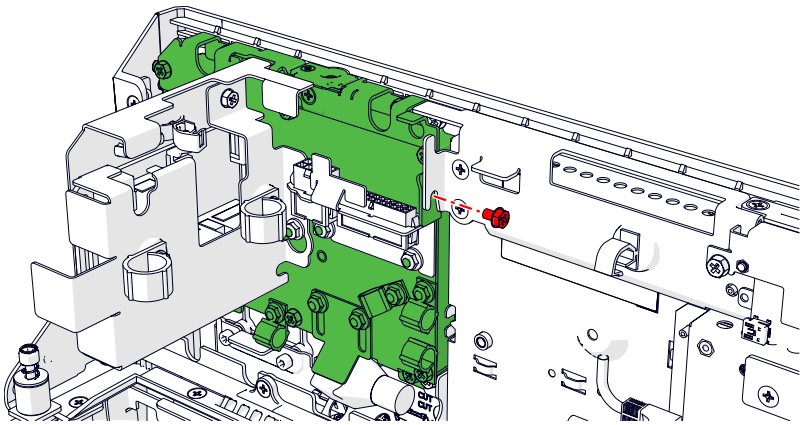


5. Remove and retain the countersink head screw securing the keypad backplate to the brace.

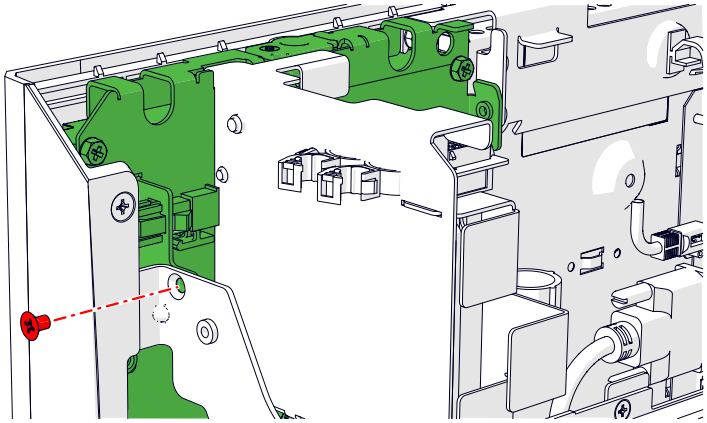


6. Disconnect the DC cable and USB extension cable.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

7. Remove and retain the four screws securing the keypad to the shelf.

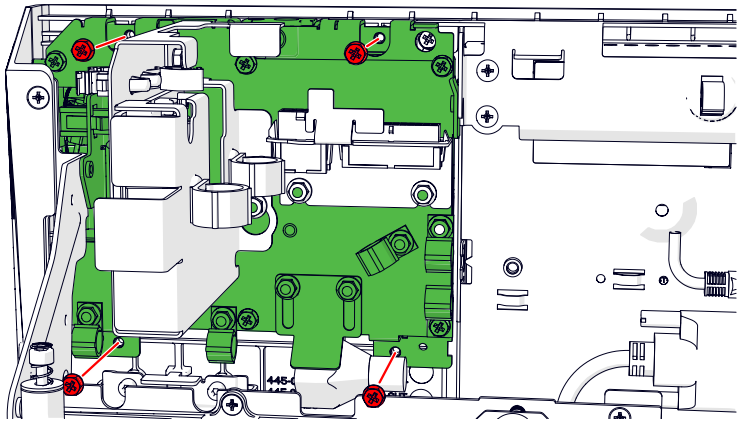

8. Remove and retain the six screws securing the back plate to the keypad. Remove the keypad.

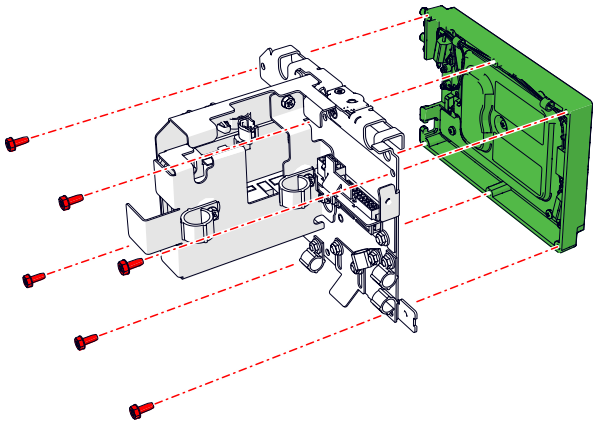

Replacement

Fitting the replacement keypad is the reverse of this process. Refer to the UEPP service chapter in this manual for the required detailed key loading information.

Miscellaneous Interface


Removal

The Miscellaneous Interface PCB is located on the under side of the top shelf.


1. Unlock and open the fascia. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect all cables from the miscellaneous interface.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

4. Remove and retain the two screws securing the miscellaneous interface cover to the top shelf. Remove and retain the cover.

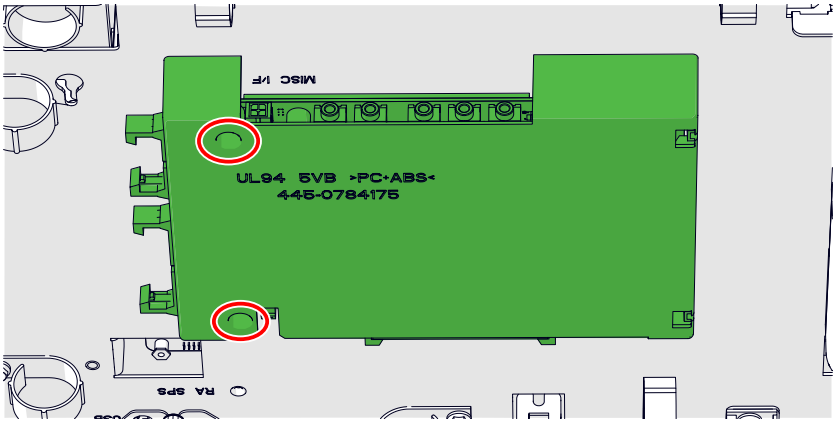

5. Remove and retain the two screws securing the miscellaneous interface to the shelf.

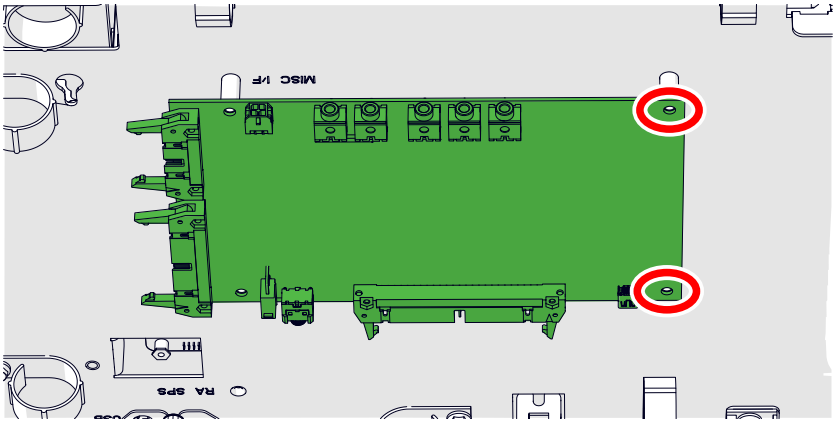

Replacement

Fitting the replacement miscellaneous interface is the reverse of this process.

PC Core


Removal

The Miscellaneous Interface PCB is located on the under side of the top shelf.

1. Unlock and open the fascia. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect all cables from the PC Core.

NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

4. Remove and retain the two screws securing the PC Core.

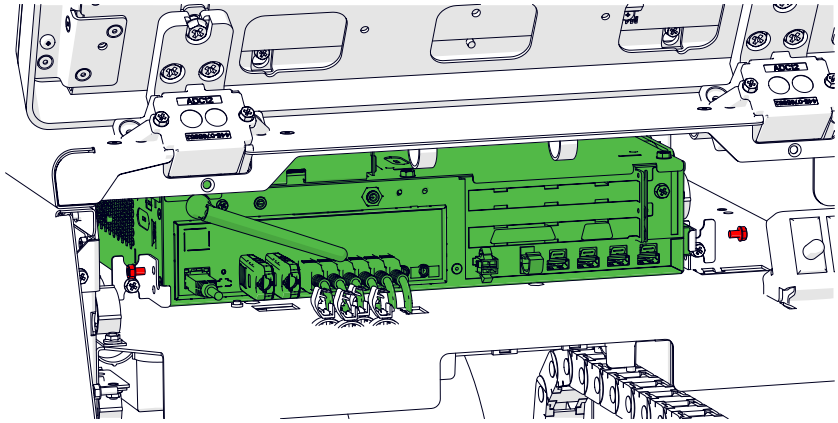

5. Remove the PC Core.


Replacement

Fitting the replacement PC Core is the reverse of this process.

Display


Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect the display DVI , DC and USB cables from the display.
4. Remove and retain the two countersink screws securing the touchscreen flex bracket. Remove and retain the flex bracket.

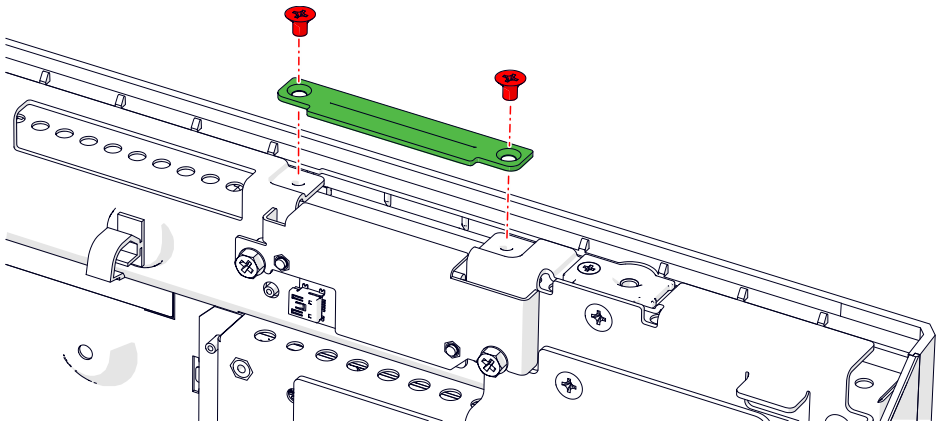


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

5. Loosen the two screws securing the touchscreen controller assembly to the display bracket. Detach the touchscreen controller assembly from under the screws.

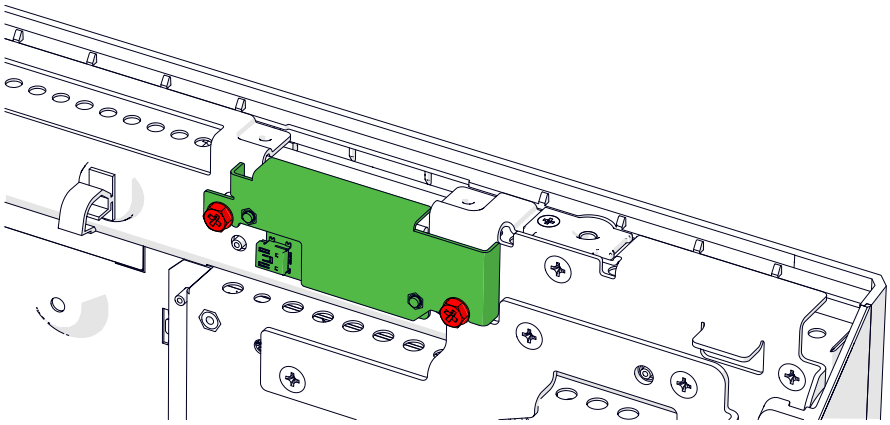


6. Loosen the two screws securing the display bracket to the keypad backplate and the shelf.

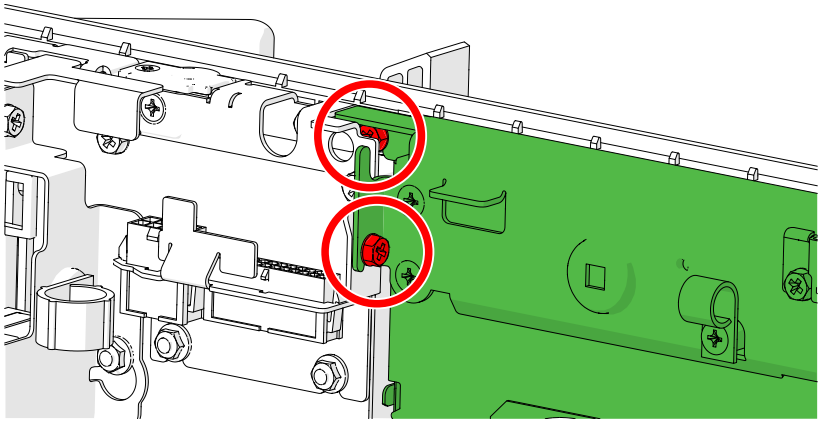


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


7. Loosen the two screws securing the display bracket to the shelf frame.

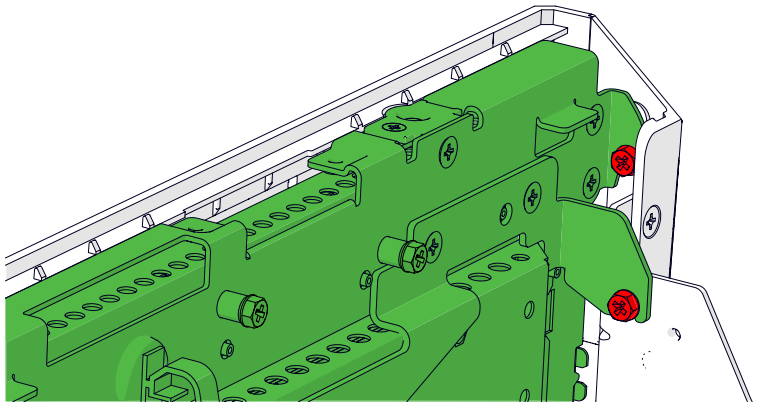

8. Carefully lift the display and bracket assembly upwards using the two finger grabs to remove it from the shelf assembly.

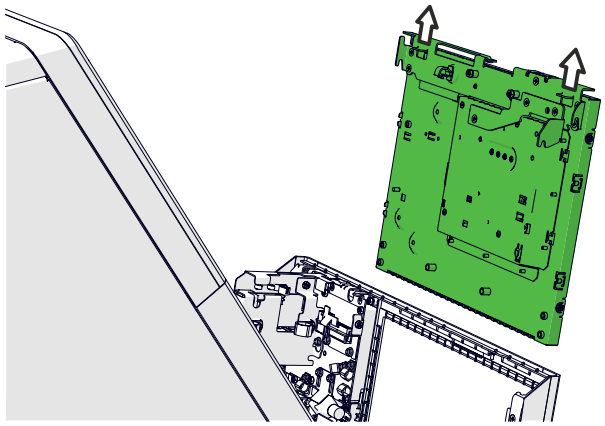

9. Remove and retain the four screws securing the mounting brackets to the rear of the display. Remove and retain the brackets.

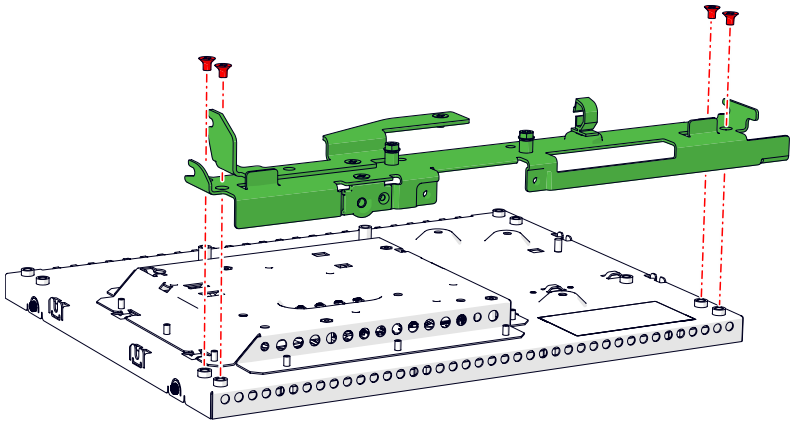

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


Replacement

Fitting the replacement display is the reverse of this process.

Touchscreen

Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Remove and retain the display. (See 'Display' instructions steps 3 to 8 only).
4. Disconnect the touchscreen flex from the controller. Remove the touchscreen.

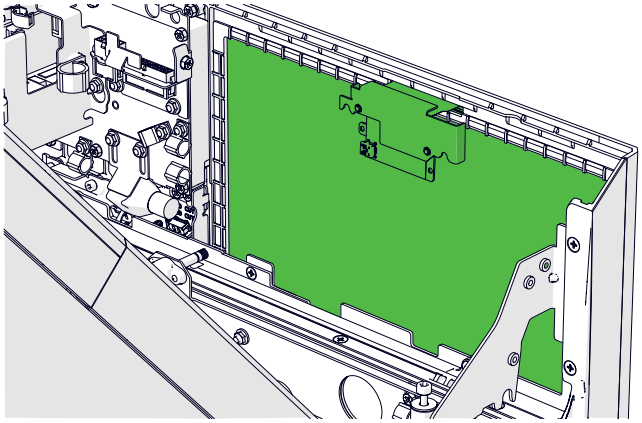

Replacement

Fitting the replacement touchscreen is the reverse of this process.

Scalable Recycler

Refer to the SR service chapter in this manual for instruction to remove the upper and lower modules.

REAR ACCESS


SR Shutter

Removal


1. Unlock and open the fascia. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).

NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

3. **Applies to units with barcode and camera only**. Loosen the two nuts securing the assembly to the shutter. Remove the assembly from the shutter.

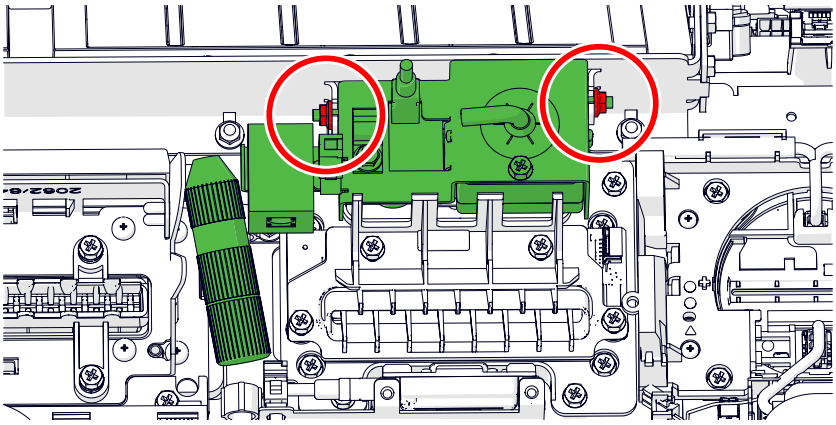


4. Disconnect the cables from the shutter control board.

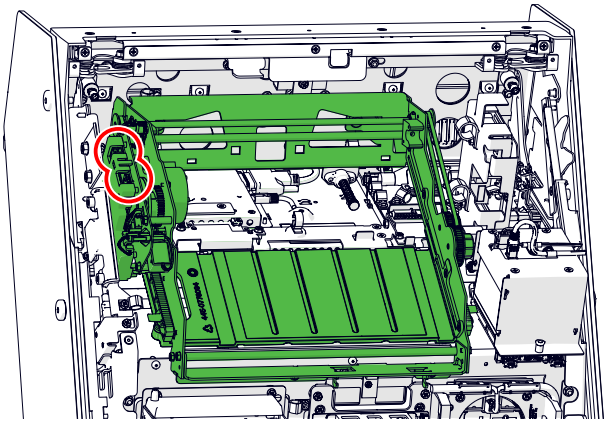


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

5. Remove and retain the two nuts securing the top of the shutter assembly to the fascia.

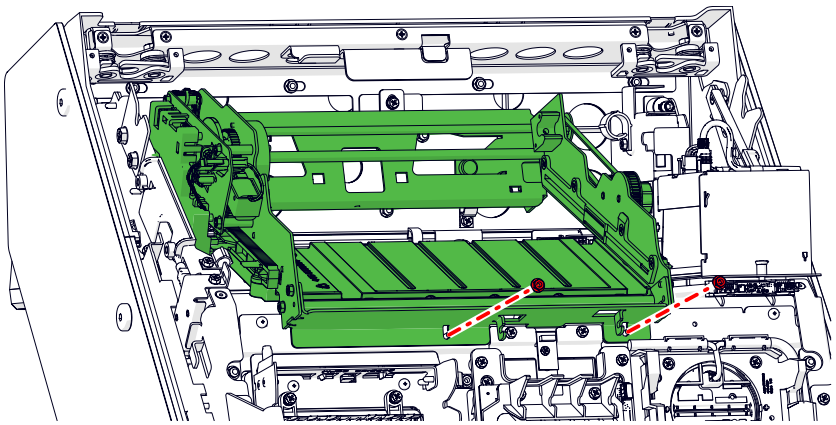

6. Unscrew the captive screws on the bottom of the shutter assembly. Remove the shutter assembly from the fascia.

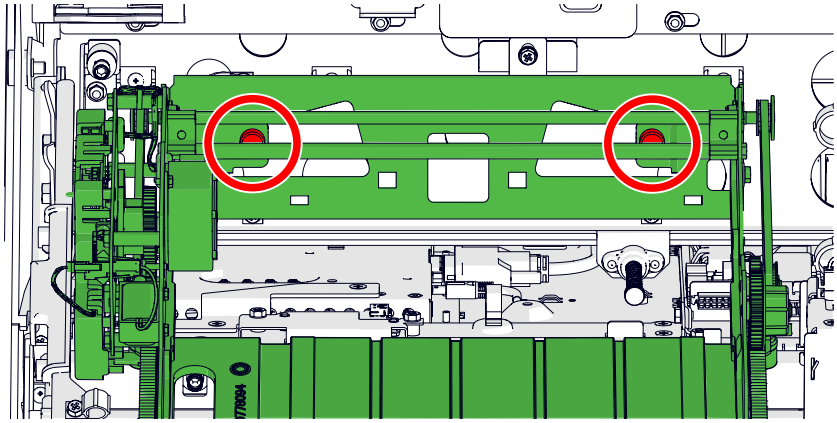

Replacement

Fitting the replacement shutter assembly is the reverse of this process.


Power Supply Unit (PSU)

Removal


1. Unlock and open the topbox rear door. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Rack out the SR upper module until the slides are fully extended.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


4. Disconnect the AC cable from the PSU.

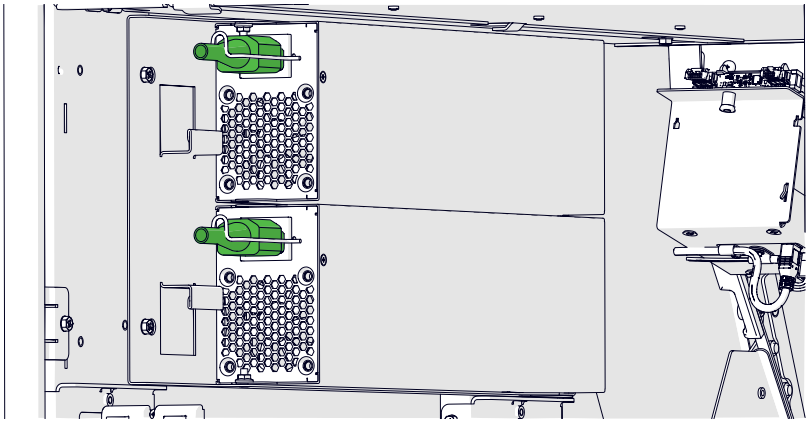

5. Remove and retain the nut securing the PSU to the tray.

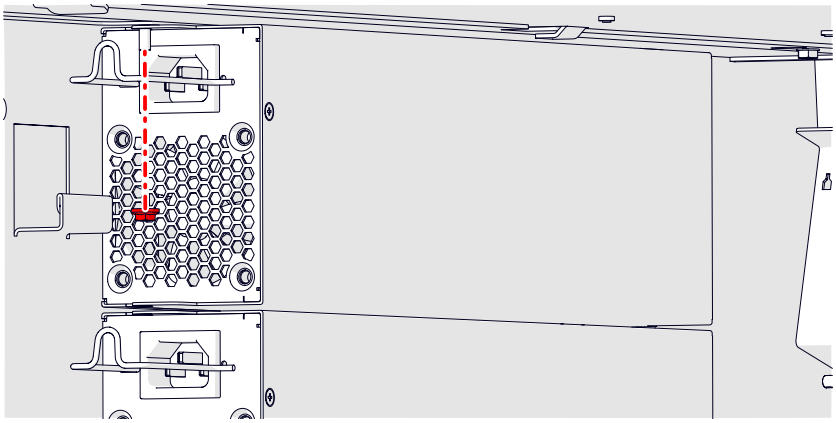

6. Carefully remove the PSU and disconnect the DC cables at the rear.

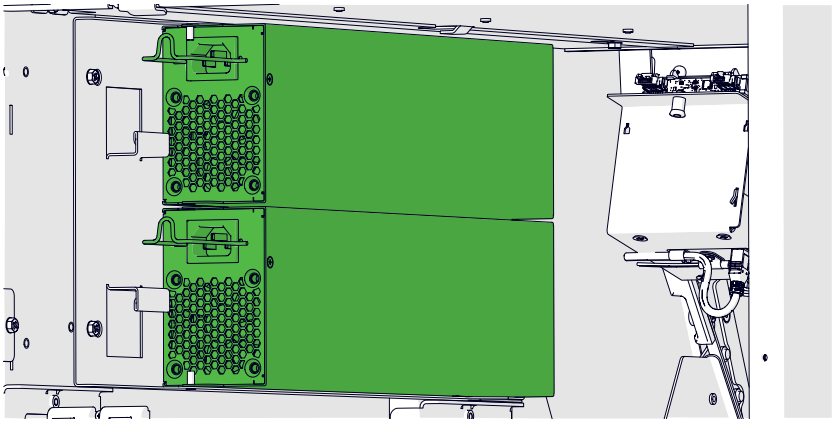

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


Replacement

Fitting the replacement power supply is the reverse of this process.


Keypad

Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. **Applies only to ATMs with contactless card reader (CCR).** Loosen the screw securing the CCR antenna assembly to the keypad back plate. Detach the CCR antenna assembly from under the screw.

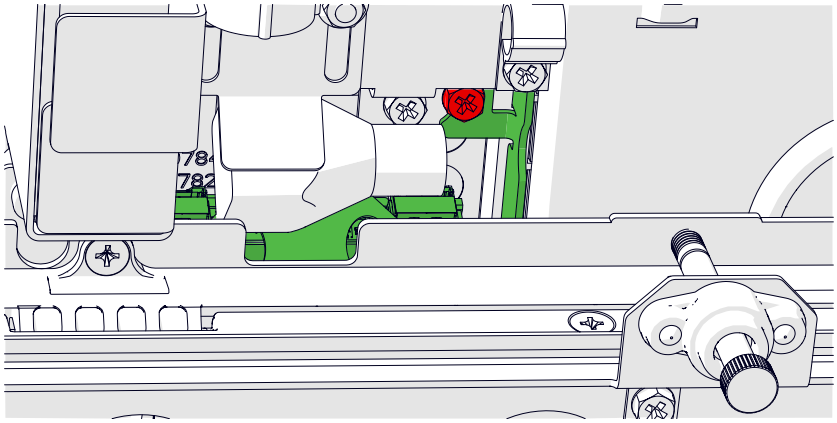


3. Remove and retain the screw securing the keypad backplate to the display bracket.

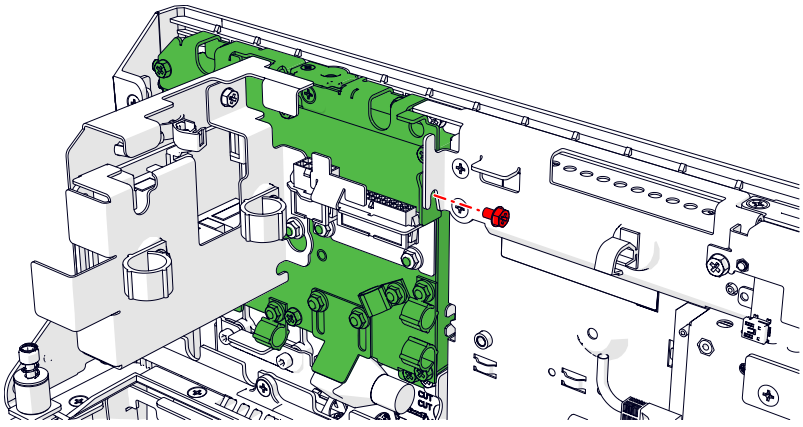


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

4. Remove and retain the countersink head screw securing the keypad backplate to the brace.

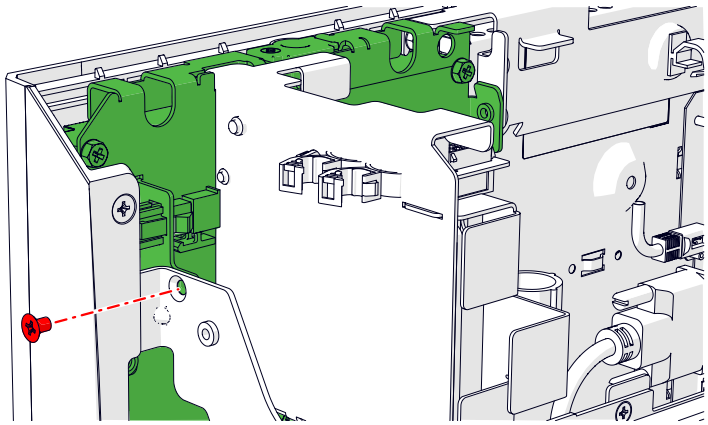


5. Disconnect the DC cable and USB extension cable.
6. Remove and retain the four screws securing the keypad to the shelf.

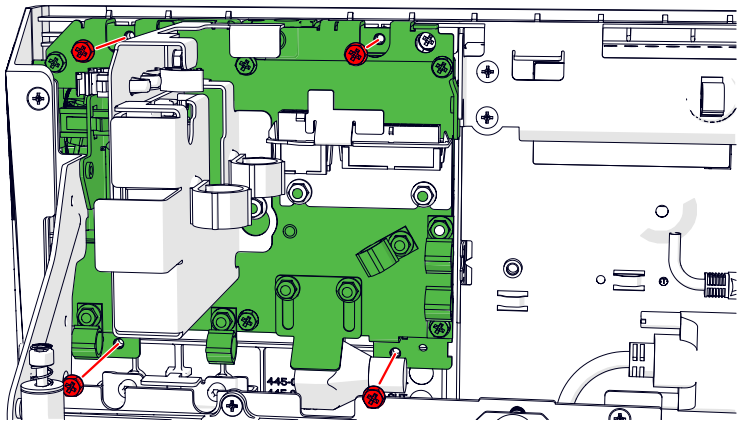

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

7. Remove and retain the six screws securing the back plate to the keypad. Remove the keypad.

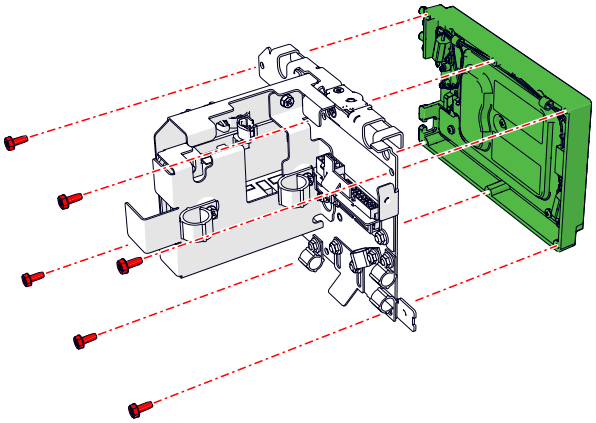

Replacement


Fitting the replacement keypad is the reverse of this process. Refer to the UEPP service chapter in this manual for the required detailed key loading information.

Miscellaneous Interface

Removal


The Miscellaneous Interface PCB is located on the under side of the top shelf.

1. Unlock and open the topbox door. (See 'Access' instructions).
2. Disconnect all cables from the miscellaneous interface.
3. Remove and retain the two screws securing the miscellaneous interface cover to the top shelf. Remove and retain the cover.

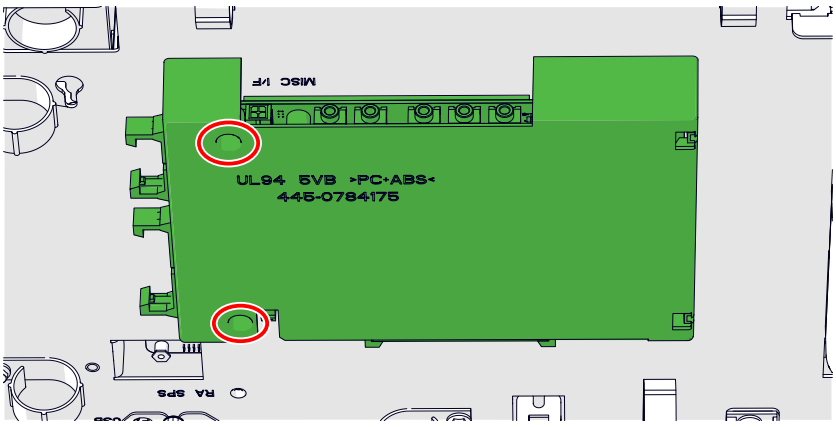

NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

4. Remove and retain the two screws securing the miscellaneous interface to the shelf.

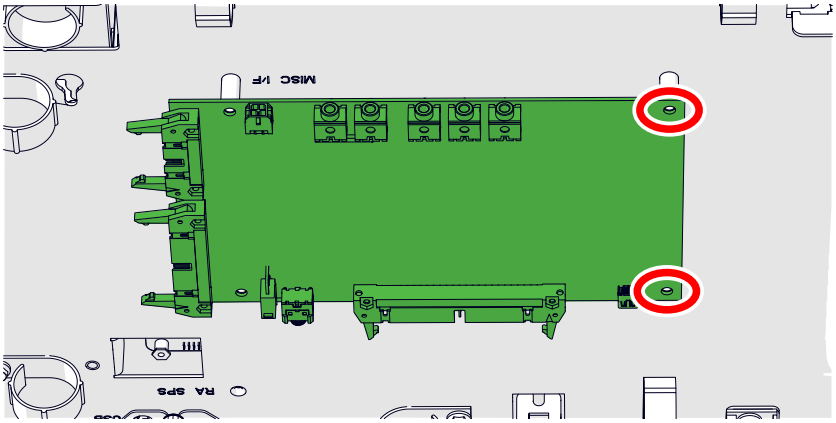

Replacement


Fitting the replacement miscellaneous interface is the reverse of this process.

PC Core

Removal

The Miscellaneous Interface PCB is located on the under side of the top shelf.

1. Unlock and open the fascia. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect all cables from the PC Core.
4. Remove and retain the two screws securing the PC Core.

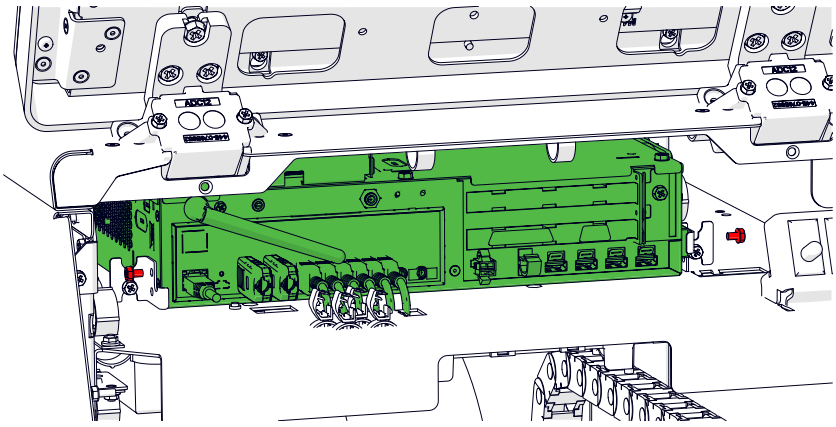

5. Remove the PC Core.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


Replacement

Fitting the replacement PC Core is the reverse of this process.


Display

Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect the display DVI , DC and USB cables from the display.
4. Remove and retain the two countersink screws securing the touchscreen flex bracket. Remove and retain the flex bracket.

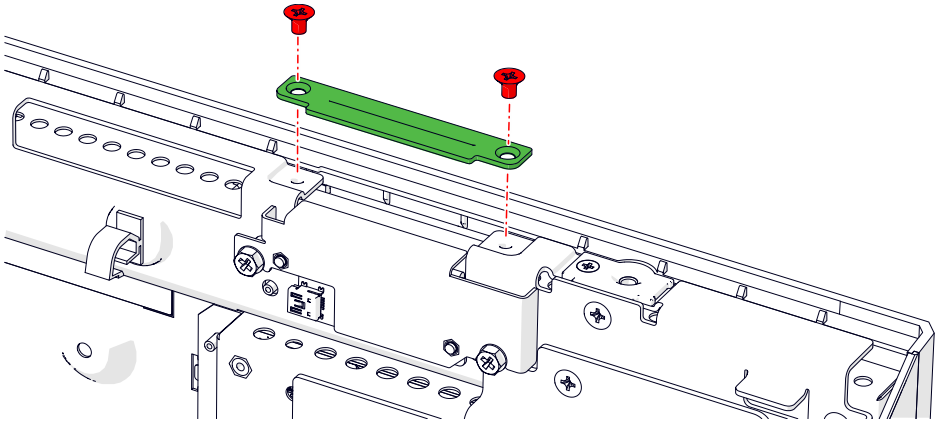


5. Loosen the two screws securing the touchscreen controller assembly to the display bracket. Detach the touchscreen controller assembly from under the screws.

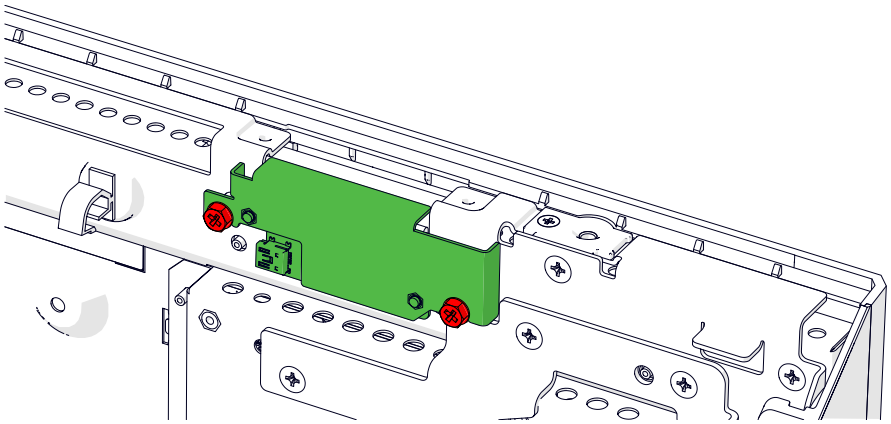


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


6. Loosen the two screws securing the display bracket to the keypad backplate and the shelf.

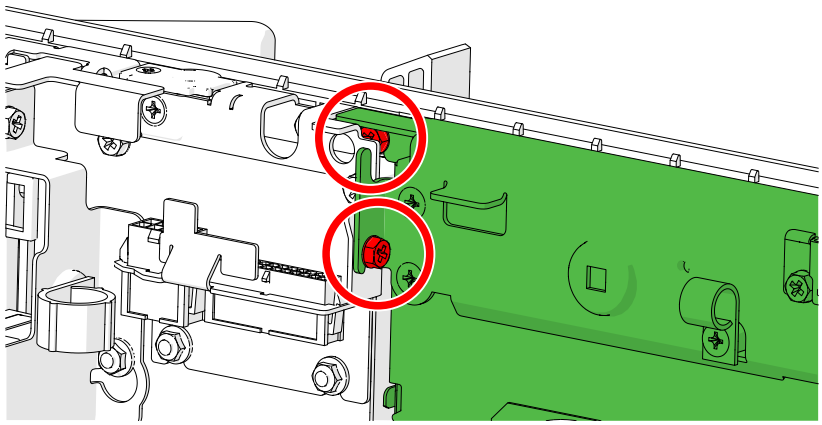

7. Loosen the two screws securing the display bracket to the shelf frame.

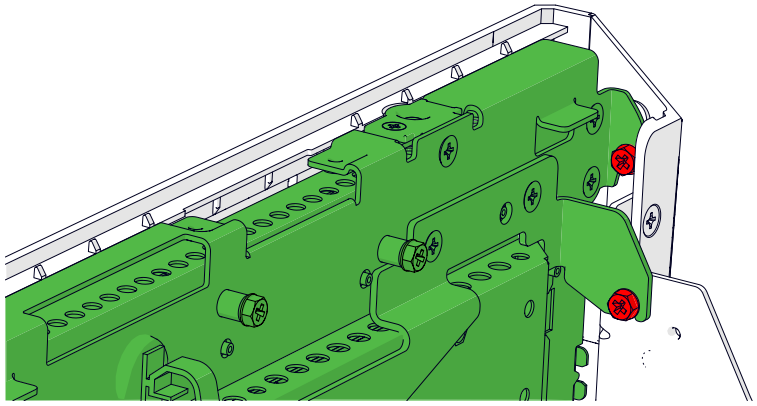


8. Carefully lift the display and bracket assembly upwards using the two finger grabs to remove it from the shelf assembly.

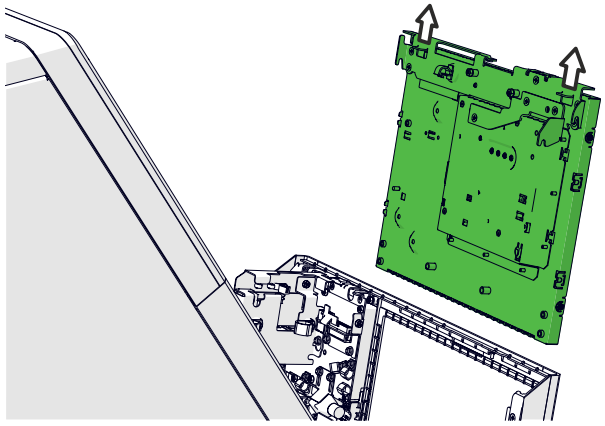

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

9. Remove and retain the four screws securing the mounting brackets to the rear of the display. Remove and retain the brackets.

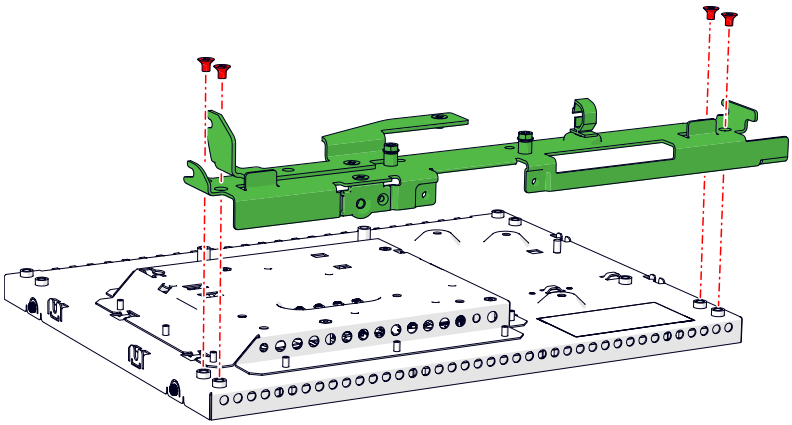


Replacement

Fitting the replacement display is the reverse of this process.

Touchscreen

Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Remove and retain the display. (See 'Display' instructions steps 3 to 8 only).
4. Disconnect the touchscreen flex from the controller. Remove the touchscreen.

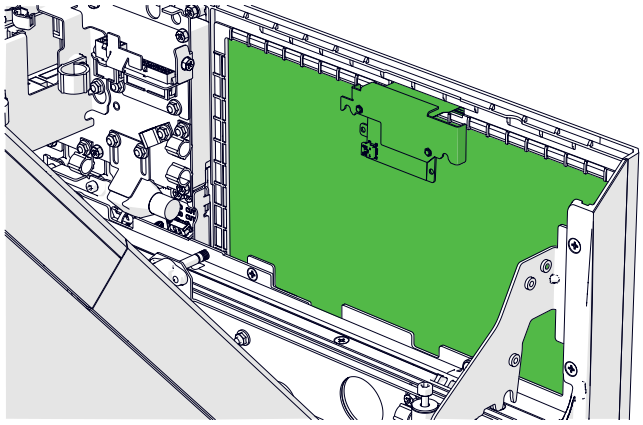

Replacement

Fitting the replacement touchscreen is the reverse of this process.

NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

Scalable Recycler

Refer to the SR service chapter in this manual for instruction to remove the upper and lower modules.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

REVISION

Date	Revision	Description of Change
February 2022	A.1	New publication

For problems with this publication please email:
FinancialHWL3.Support@ncr.com

For technical queries please contact your local NCR support.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*