
2064 MODULE REMOVAL

ACCESS THE TOPBOX MODULES


Insert the key into the rear door and hinge open.

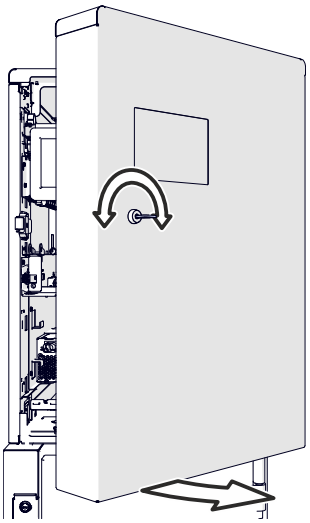

ACCESS THE FASCIA MODULES


Right-Hand Side Panel

1. Unlock and open the rear door.
2. Remove the screw securing the right-hand side topbox panel.

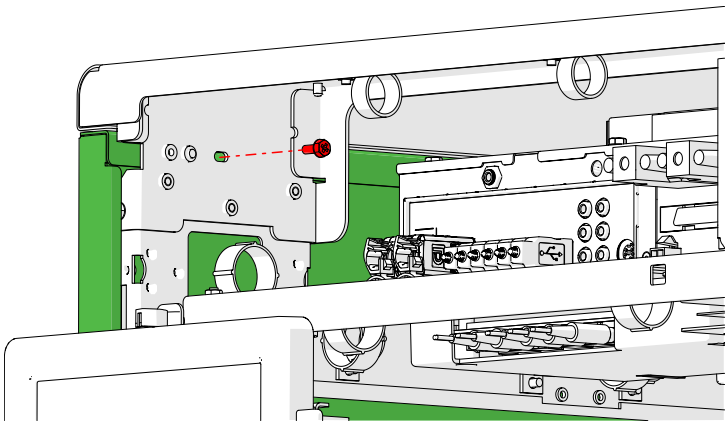


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

3. Remove the external earthing screw from the front of the panel. Slide the panel rearwards and out to disengage the four keyhole slots.

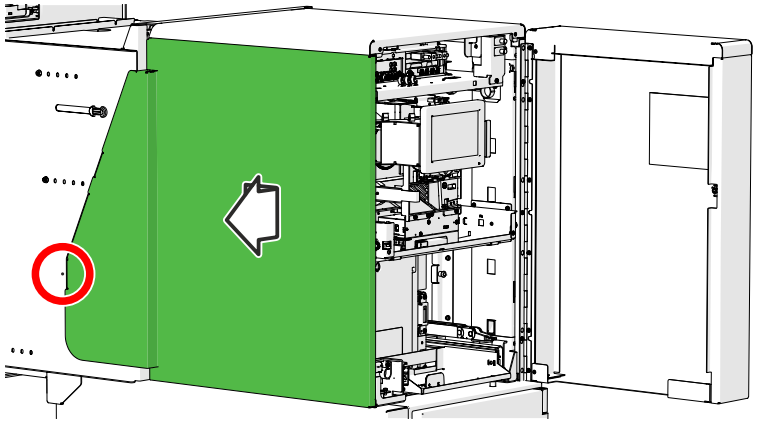


Left-Hand Side Panel

1. Unlock and open the rear door.
2. Remove the three screw securing the rear door to the topbox. Remove the door and place it on a clean flat surface.

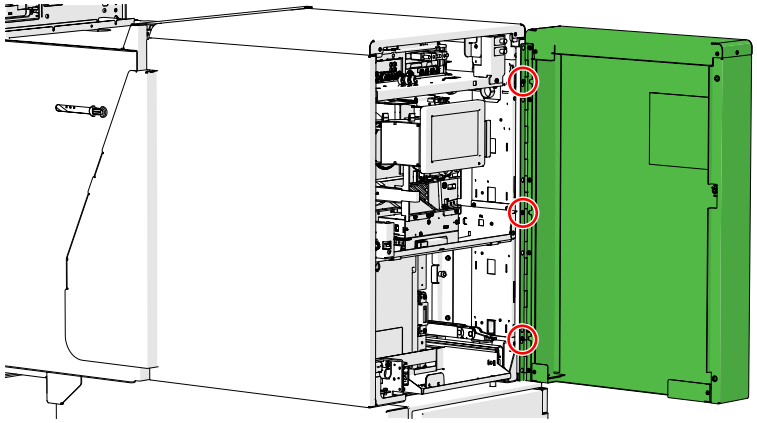


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

3. Remove the screw securing the left-hand side topbox panel.

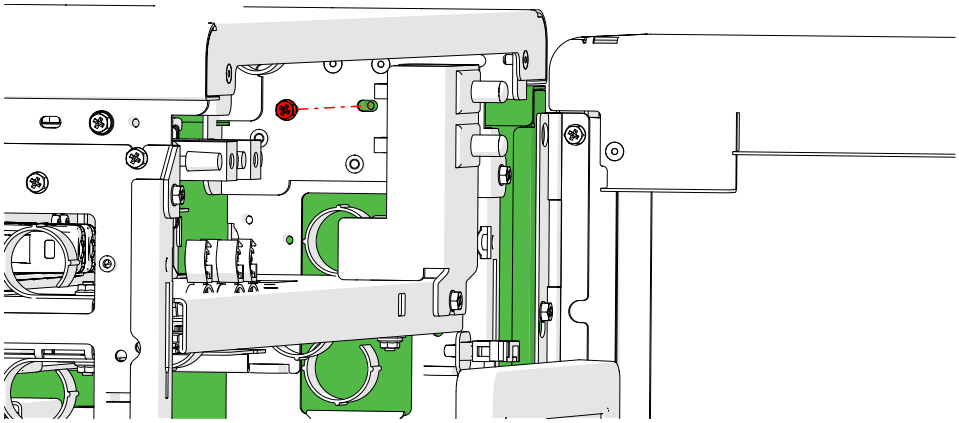


4. Remove the external earthing screw from the front of the panel. Slide the panel rearwards and out to disengage the four keyhole slots. Place the panel on a clean flat surface.

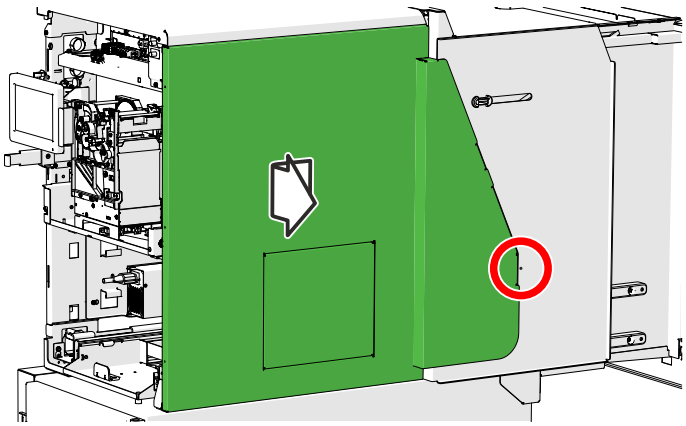

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


ACCESS THE UPS

Insert the key into the sidebox access panel and hinge open.

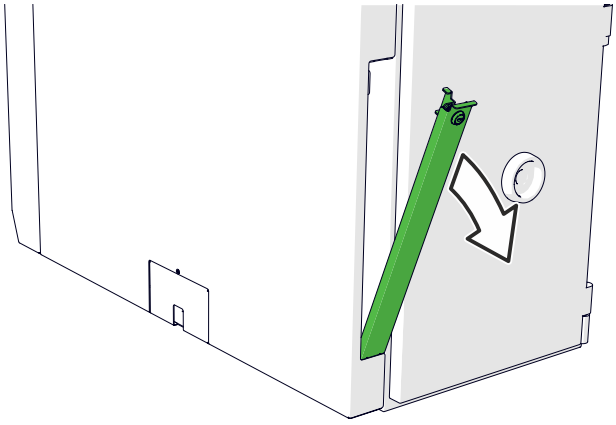


ACCESS THE SMART SHELF MODULES

1. Unlock and open the rear door.
2. Rack out the upper module until the slides are fully extended
3. If present: Loosen the lower right-hand captive screws securing the smart shelf to the fascia.

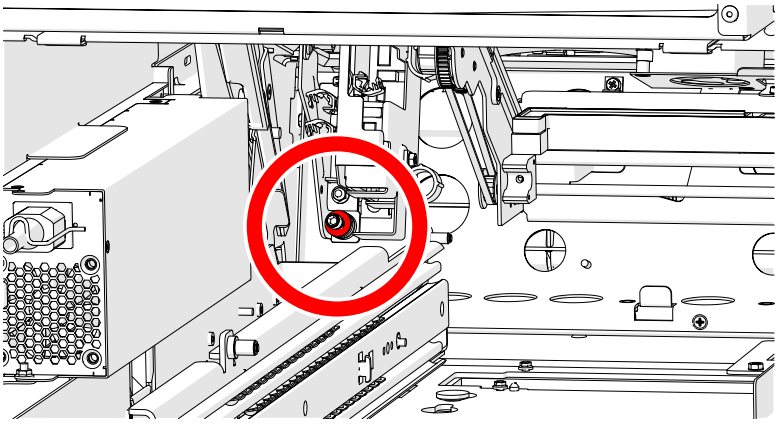


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


4. If present: Loosen the lower left-hand captive screws securing the smart shelf to the fascia.

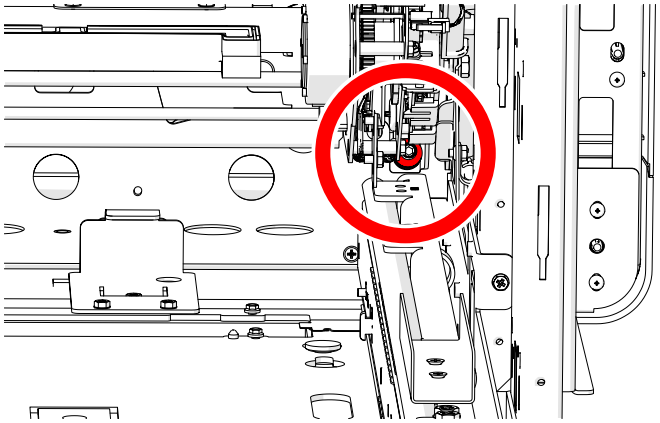

5. Loosen the upper right-hand captive screws securing the smart shelf to the fascia.

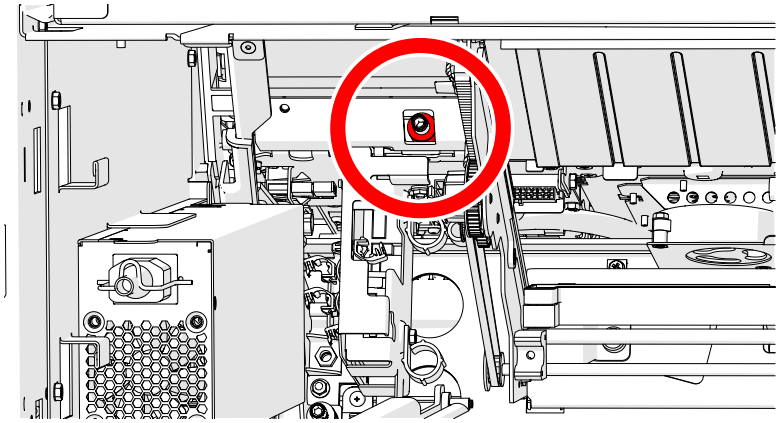



6. Loosen the upper left captive screws securing the smart shelf to the fascia.

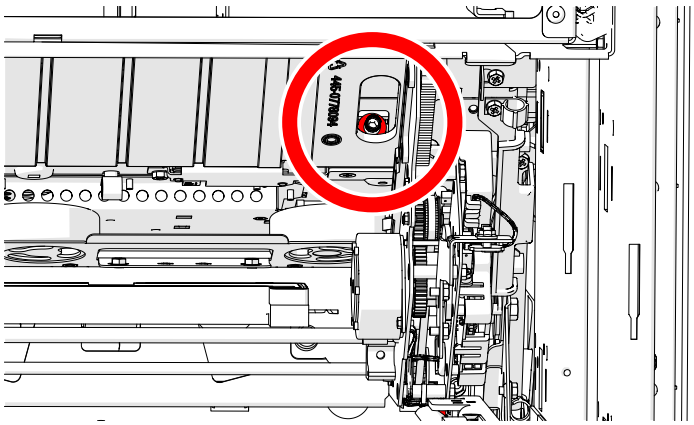


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

7. Insert a small screw driver fully into each of the two latch access holes in the vanity panel and hinge upwards to disengage the latches.

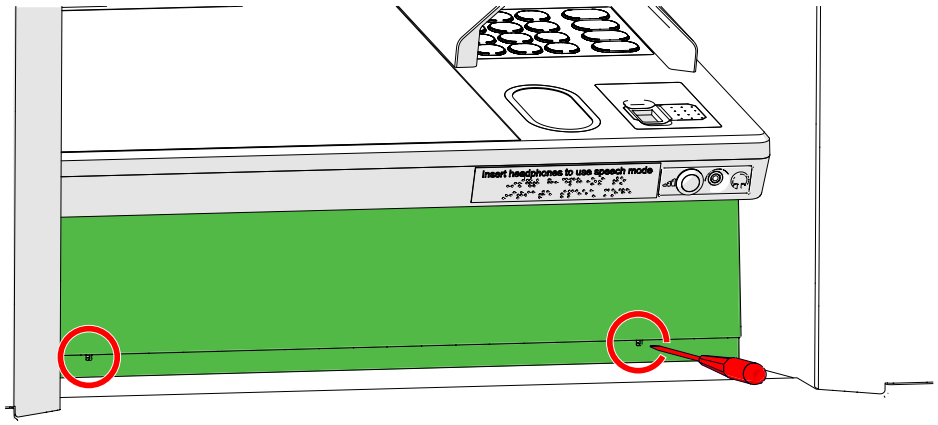

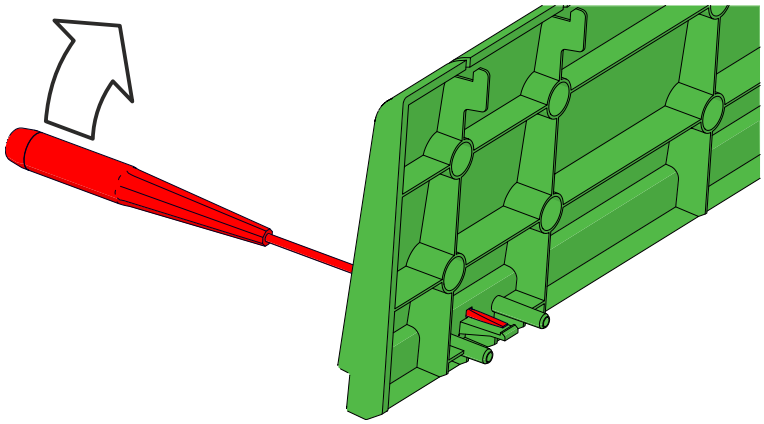


8. Remove and retain the vanity panel from the shelf.

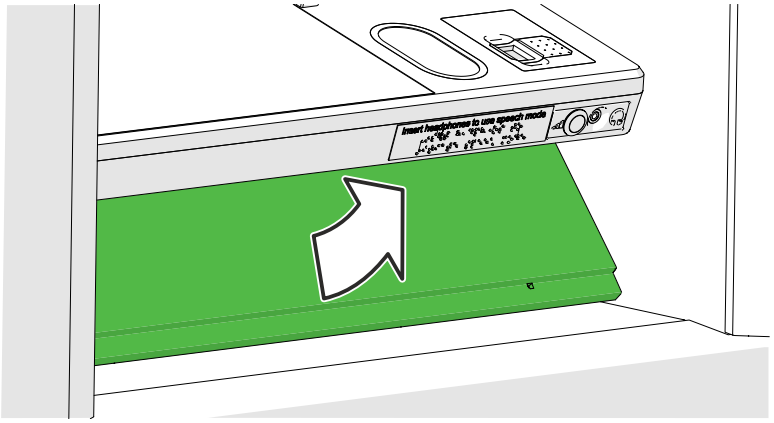


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


9. Remove and retain the two M6 screws securing the shelf to the fascia frame.

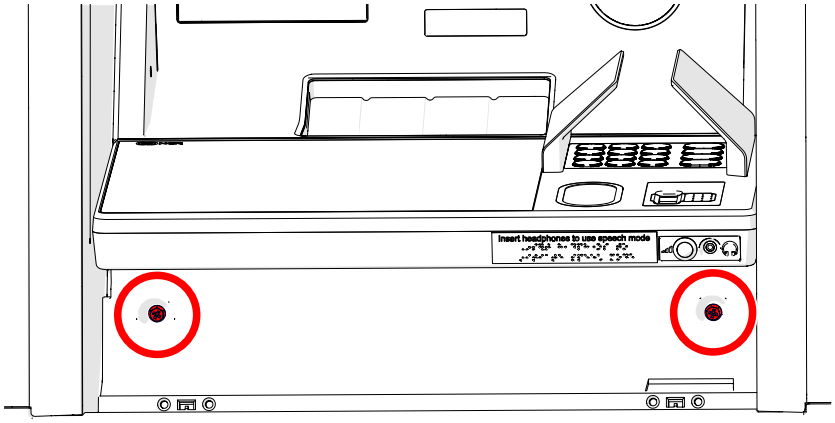

10. Carefully extract the smart shelf upwards and outwards.

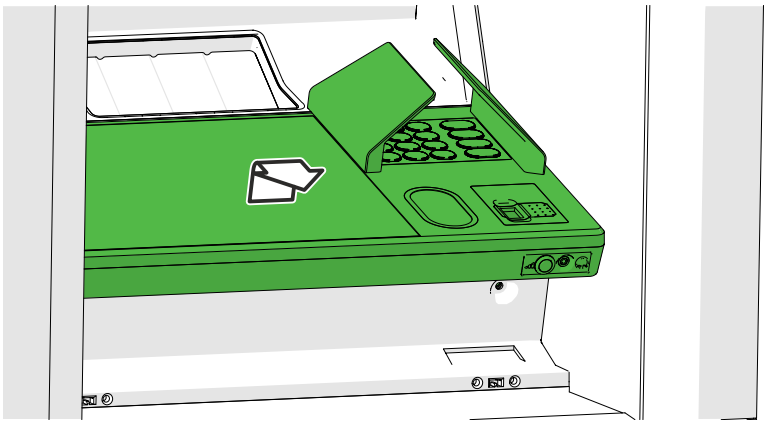


11. Tilt the smart shelf upwards and hook it onto the fascia in the service position. Ensure the two locating tabs are engaged.

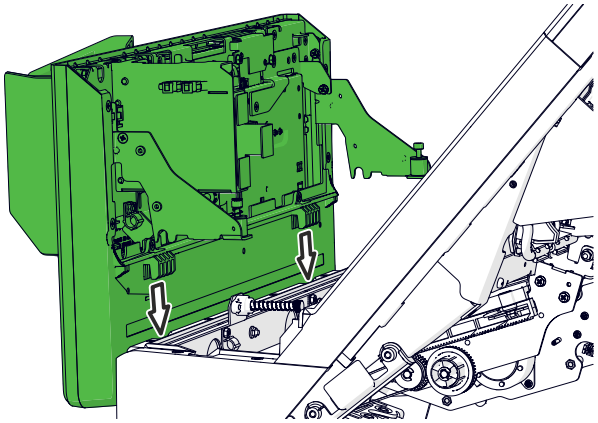

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


12. Note the harness routing from the ATM to the smart shelf.

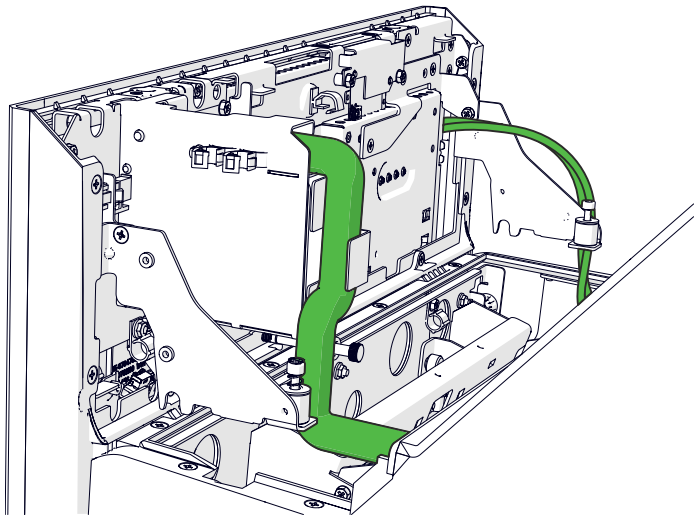

TRAY BASE

Removing the tray base between the upper module and the module tray improves access to the shelf, fascia and shutter.


1. Rack out the SR upper module until the sldes are fully extended.
2. Loosen the two screws at the front of the base. Disengage the base from the keyhole slots and remove.

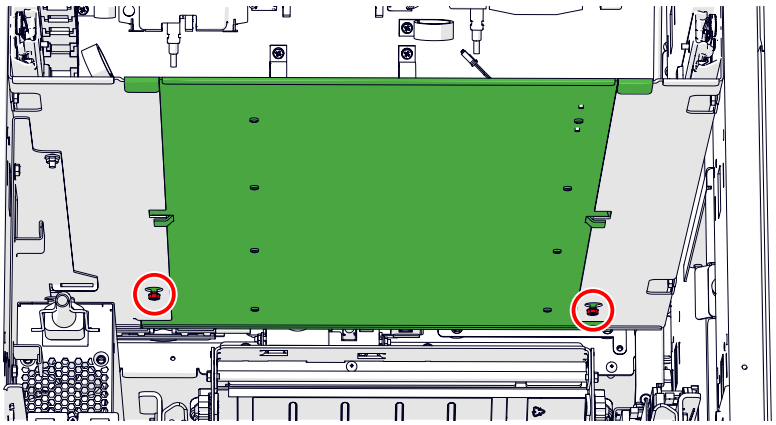


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

Power Isolation

The ATM power switch is located in the topbox on the right-hand side. See 'Access' instructions. Press the mains switch(s) to the OFF position "0".

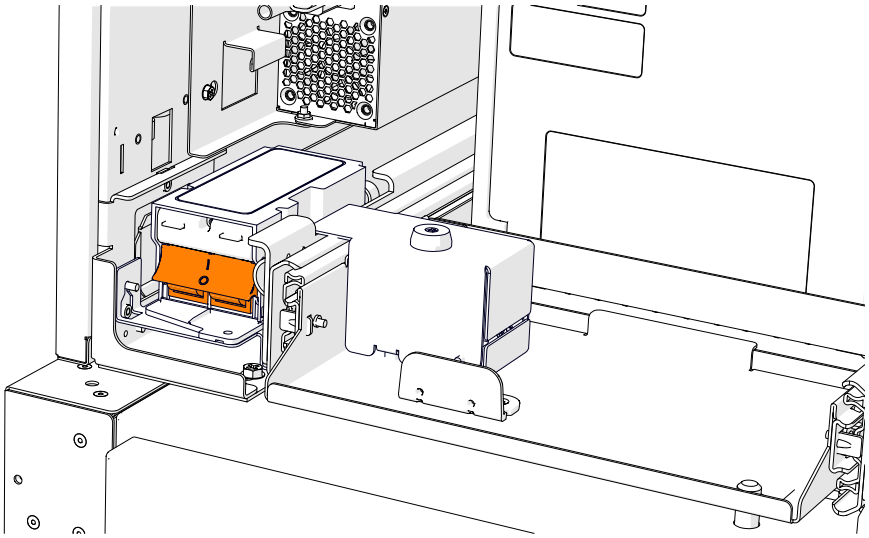

The UPS switch is located in the security enclosure sidebox on the right-hand side. See 'Access' instructions. Press and hold the UPS power button for at least 2 seconds.

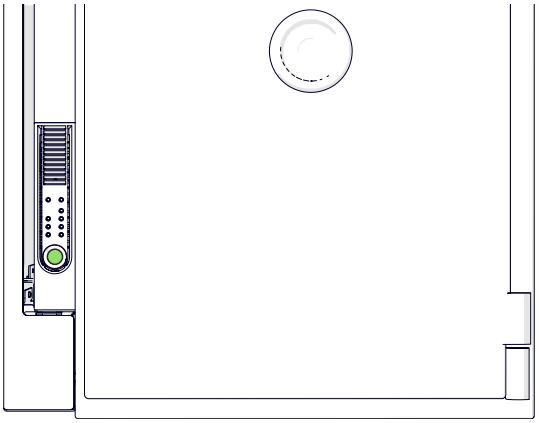


Switch the UPS back on before switching the mains switch back on.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


SR SHUTTER

Removal

1. Unlock and open the rear door.
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Remove and retain the right-hand side panel.
4. Rack out the top-box shelf.
5. Rack out the SR upper module until the slides are fully extended.
6. **Applies to units with barcode and camera only**. Loosen the two nuts securing the assembly to the shutter. Remove the assembly from the shutter.

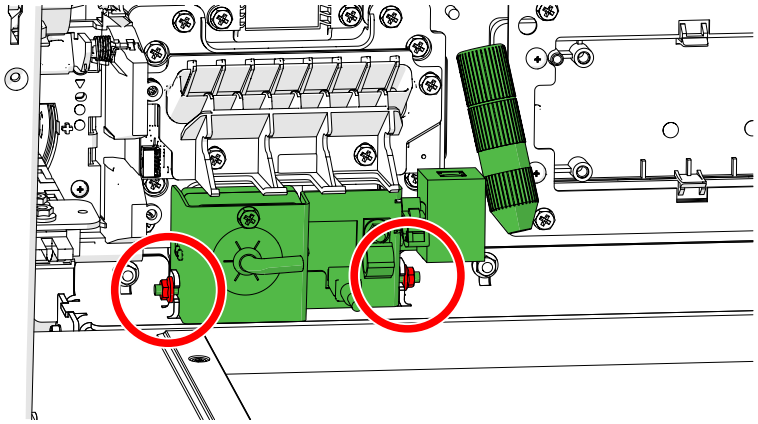


7. Reach through the left-hand side sleeve and disconnect the ATM USB and DC cables from the shutter control board.

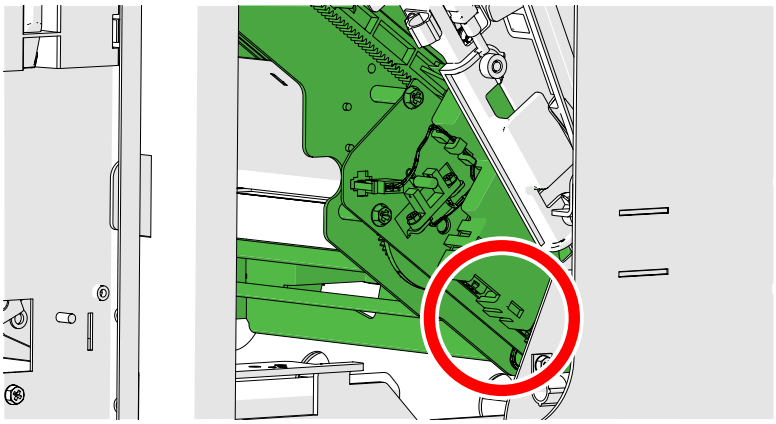


8. Remove and retain the water management tray that is attached to the shutter.

NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

9. Remove and retain the two nuts securing the top of the shutter assembly to the fascia.

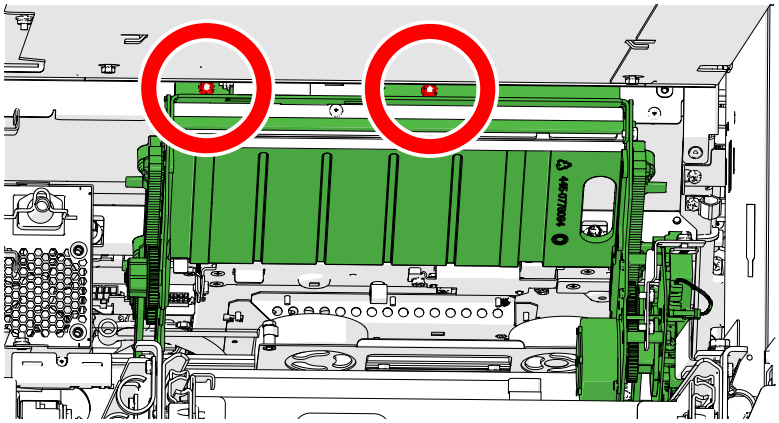

10. Unscrew the captive screws on the bottom of the shutter assembly. Disconnect the DC cable from the fan assembly. Remove the shutter assembly from the fascia.

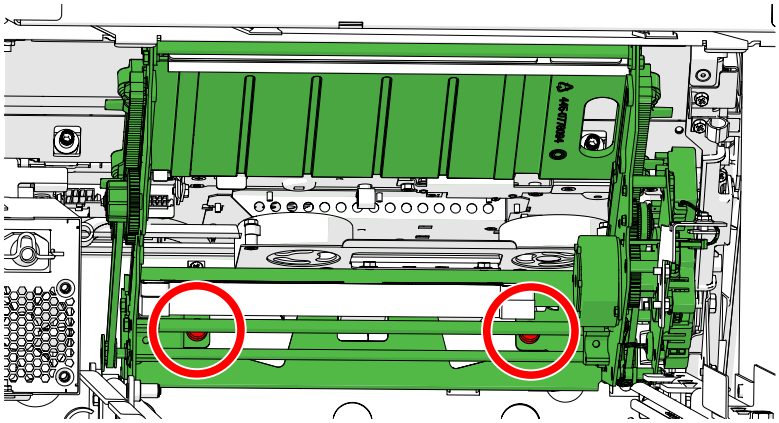

11. Remove the screws securing the fan assembly to the shutter. Remove the fan assembly.

Replacement


Fitting the replacement shutter assembly is the reverse of this process. Refit the shutter in the open position for ease of assembly.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


POWER SUPPLY UNIT (PSU)

Removal

1. Unlock and open the topbox rear door. (See 'Access' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Rack out the SR upper module until the slides are fully extended.
4. Disconnect the AC cable from the PSU.

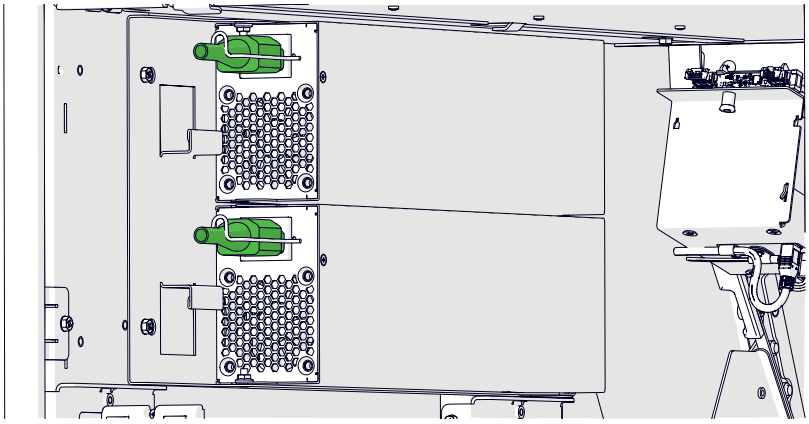


5. Remove and retain the nut securing the PSU to the tray.

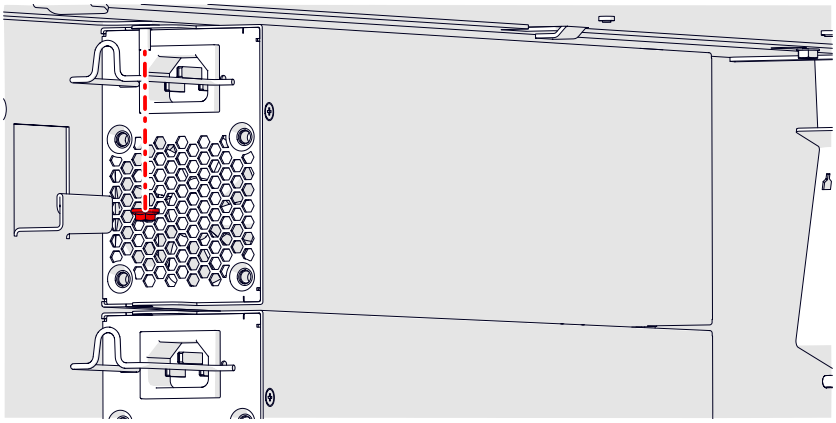

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

6. Carefully remove the PSU and disconnect the DC cables at the rear.

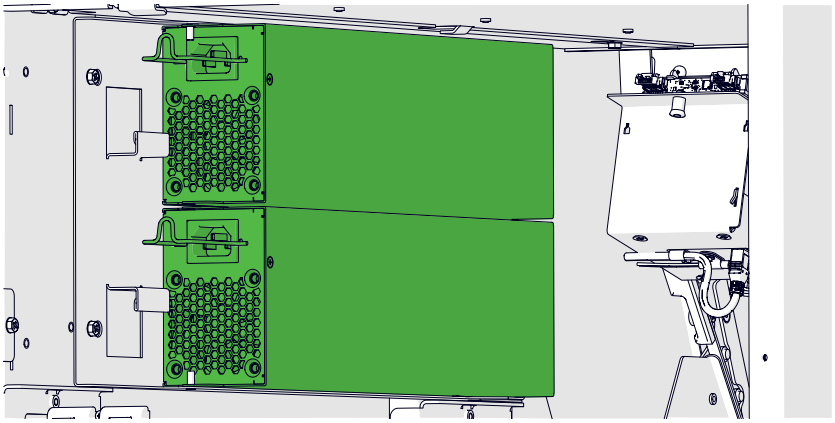


Replacement

Fitting the replacement power supply is the reverse of this process.

KEYPAD


Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. **Applies only to ATMs with contactless card reader (CCR).** Loosen the screw securing the CCR antenna assembly to the keypad backplate. Detach the CCR antenna assembly from under the screw.

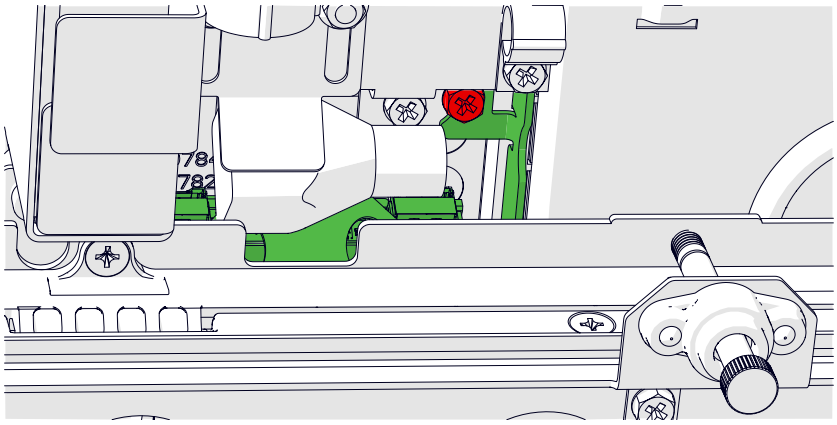


NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

3. Remove and retain the screw securing the keypad backplate to the display bracket.

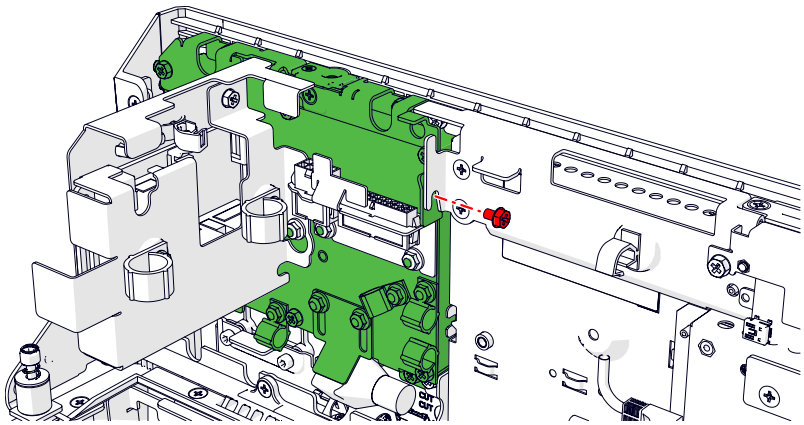


4. Remove and retain the countersink head screw securing the keypad backplate to the brace.

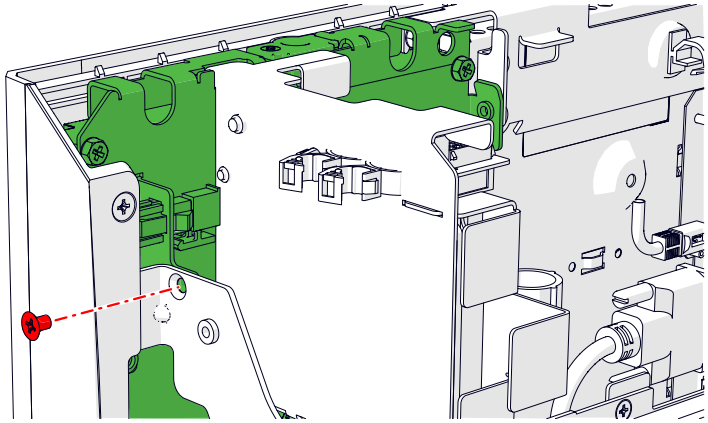


5. Disconnect the DC cable and USB extension cable.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

6. Remove and retain the four screws securing the keypad to the shelf.

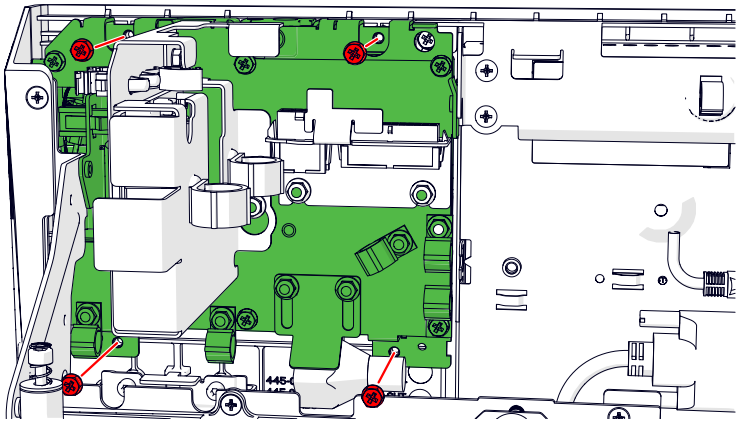

7. Remove and retain the six screws securing the back plate to the keypad. Remove the keypad.

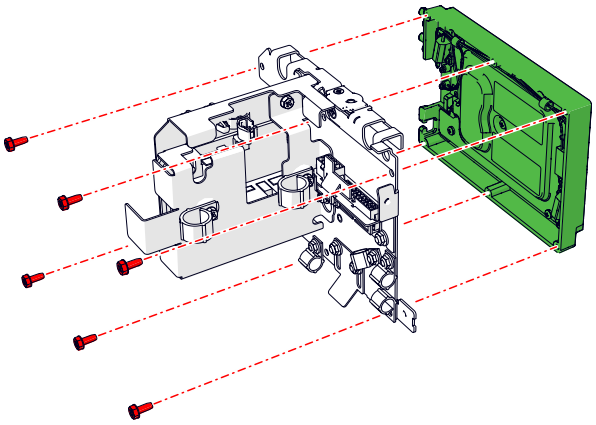

Replacement

Fitting the replacement keypad is the reverse of this process. Refer to the UEPP service chapter in this manual for the required detailed key loading information.

MISCELLANEOUS INTERFACE


Removal

The Miscellaneous Interface PCB is located on the under side of the top shelf.


1. Unlock and open the topbox door. (See 'Access' instructions).
2. Disconnect all cables from the miscellaneous interface.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

3. Remove and retain the two screws securing the miscellaneous interface cover to the top shelf. Remove and retain the cover.

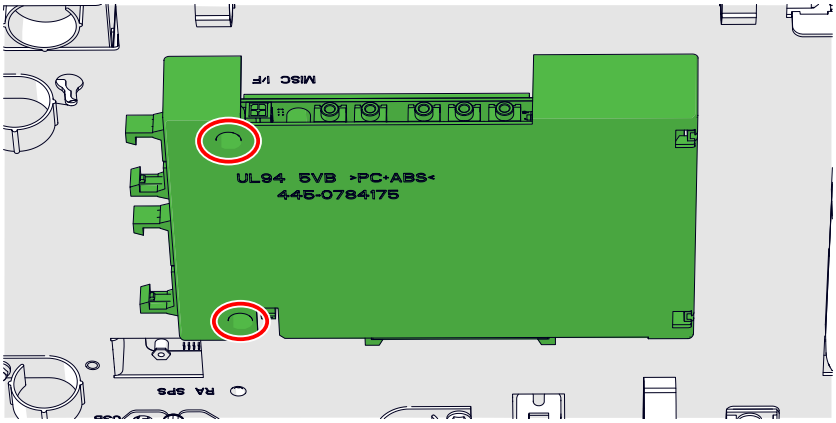

4. Remove and retain the two screws securing the miscellaneous interface to the shelf.

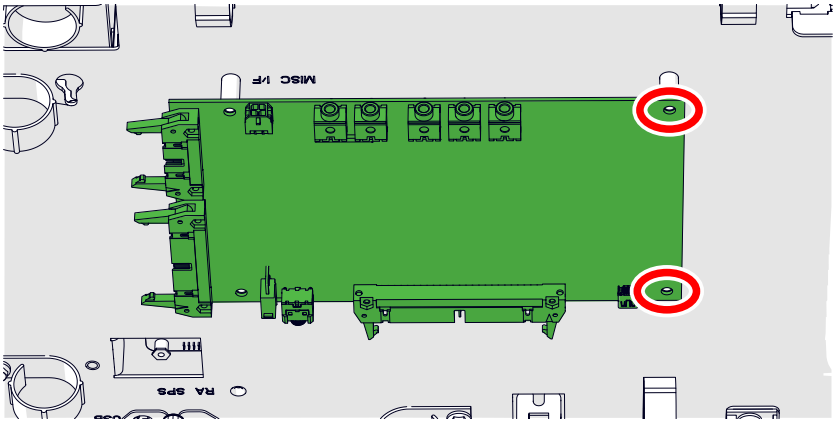

Replacement

Fitting the replacement miscellaneous interface is the reverse of this process.

PC CORE


Removal

The Miscellaneous Interface PCB is located on the under side of the top shelf.

1. Unlock and open the rear door.
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect all cables from the PC Core.

NCR - CONFIDENTIAL (RESTRICTED). Solely for distribution to and use by authorized persons, pursuant to company instructions.

4. Loosen the two screws under the system tray shelf securing the PC Core.

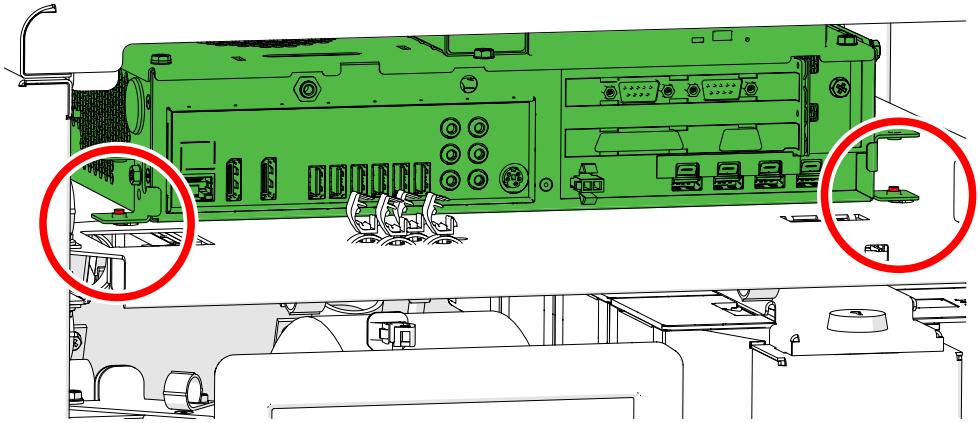

5. Pull the PC core slightly outwards and lift to clear the keyhole slots. Remove the PC Core.


Replacement

Fitting the replacement PC Core is the reverse of this process.

DISPLAY


Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Disconnect the display DVI , DC and USB cables from the display.
4. Remove and retain the two countersink screws securing the touchscreen flex bracket. Remove and retain the flex bracket.

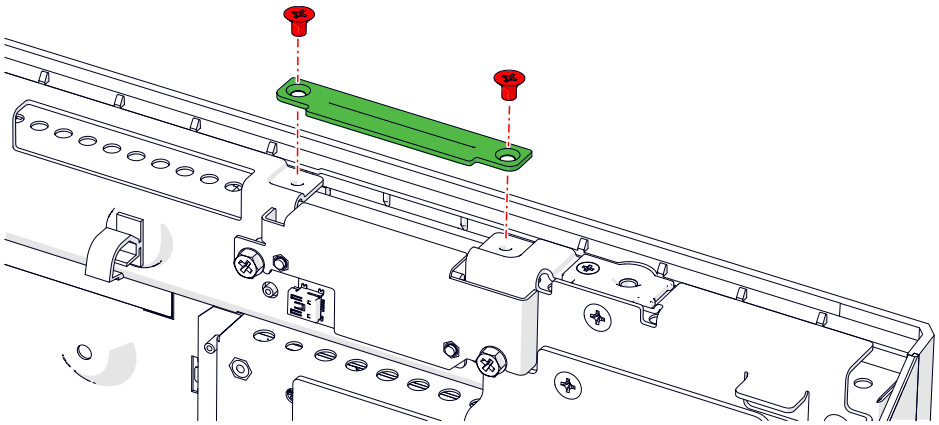


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

5. Loosen the two screws securing the touchscreen controller assembly to the display bracket. Detach the touchscreen controller assembly from under the screw.

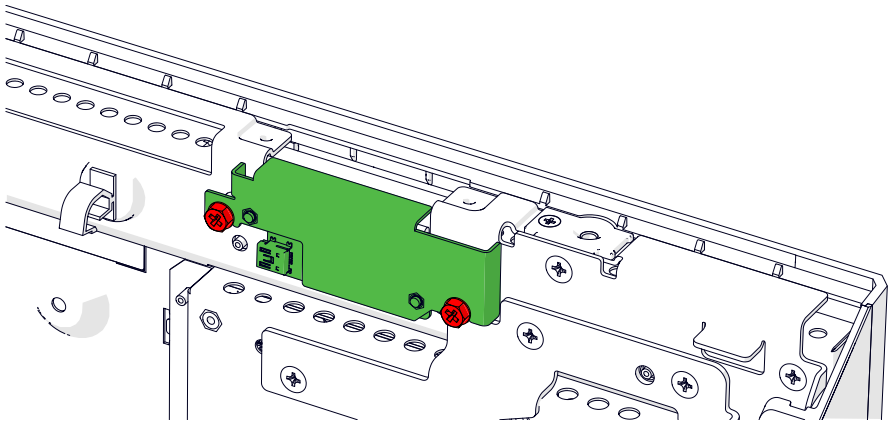


6. Loosen the two screws securing the display bracket to the keypad backplate and the shelf.

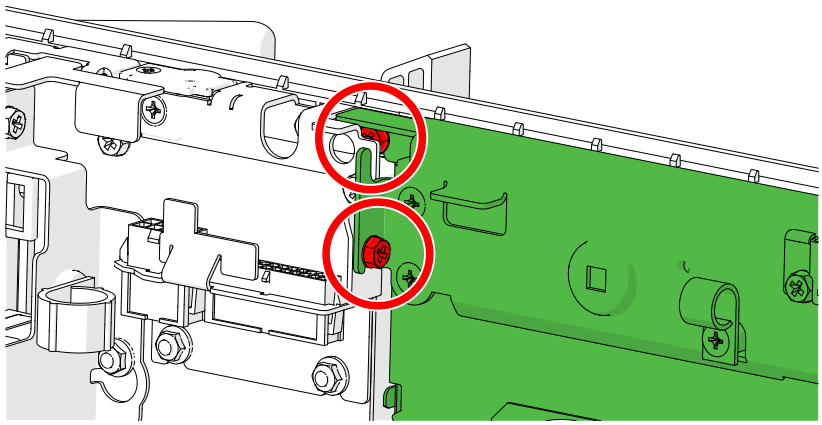


NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


7. Loosen the two screws securing the display bracket to the shelf frame.

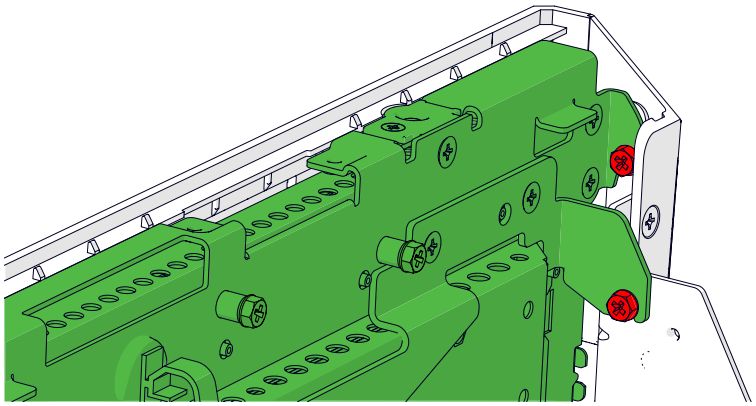

8. Carefully lift the display and bracket assembly upwards using the two finger grabs to remove it from the shelf assembly.

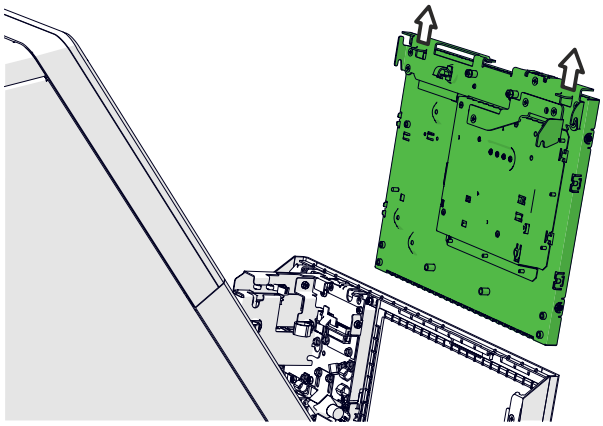

9. Remove and retain the four screws securing the mounting brackets to the rear of the display. Remove and retain the brackets.

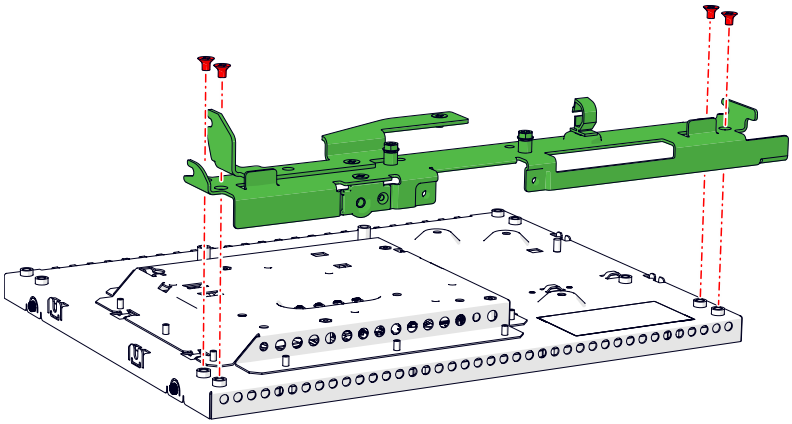

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*


Replacement

Fitting the replacement display is the reverse of this process.

TOUCHSCREEN

Removal

1. Place the smart shelf into the service position. (See 'Accessing the Smart Shelf Modules' instructions).
2. Isolate the ATM power. (see 'Isolation' instructions).
3. Remove and retain the display. (See 'Display' instructions steps 3 to 8 only).
4. Disconnect the touchscreen flex from the controller. Remove the touchscreen.

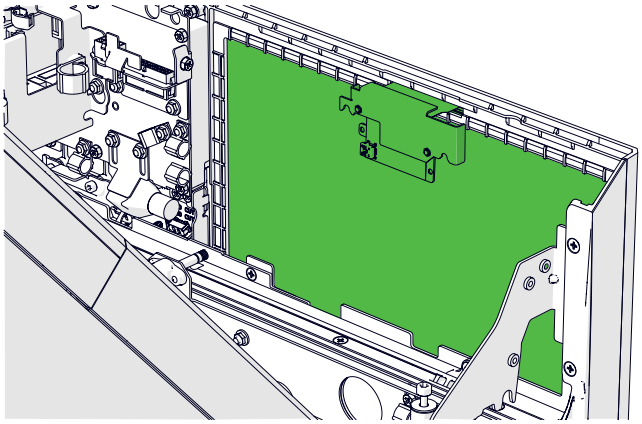

Replacement

Fitting the replacement touchscreen is the reverse of this process.

SCALABLE RECYCLER

Refer to the SR service chapter in this manual for instruction to remove the upper and lower modules.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*

REVISION

Date	Revision	Description of Change
February 2022	A.1	New publication

For problems with this publication please email:
FinancialHWL3.Support@ncr.com

For technical queries please contact your local NCR support.

NCR - CONFIDENTIAL (RESTRICTED). *Solely for distribution to and use by authorized persons, pursuant to company instructions.*