

PALO ALTO NETWORKS EDU-210



Lab 13: Active/Passive High Availability

Document Version: 2020-06-26

Copyright © 2020 Network Development Group, Inc. www.netdevgroup.com

NETLAB Academy Edition, NETLAB Professional Edition, and NETLAB+ are registered trademarks of Network Development Group, Inc.

Palo Alto Networks and the Palo Alto Networks logo are trademarks or registered trademarks of Palo Alto Networks, Inc.



Contents

Introduc	tion	3
Objectiv	es	3
Lab Topo	ology	4
•	ical Lab Topology	
	ings	
13 Acti	ive/Passive High Availability	6
	Load Lab Configuration	
13.1	Display the HA Widget	9
13.2	Configure the HA Interface	10
13.3	Configure Active/Passive HA	
13.4	Configure HA Monitoring	14
13.5	Observe the HA Widget	



Introduction


The board and the executives have become worried that we could experience downtime with the current configuration. They have therefore approved the purchase of a second Palo Alto Networks firewall like the first one and to implement Active/Passive High Availability to prevent possible downtime. We are going to test the process of configuring the feature before the second device arrives. We will then be able to duplicate the process when the second device arrives and turn it on.

Objectives


Display the Dashboard HA widget
Configure a dedicated HA interface
Configure active/passive HA
Configure HA monitoring
Observe the HA widget



Lab Topology

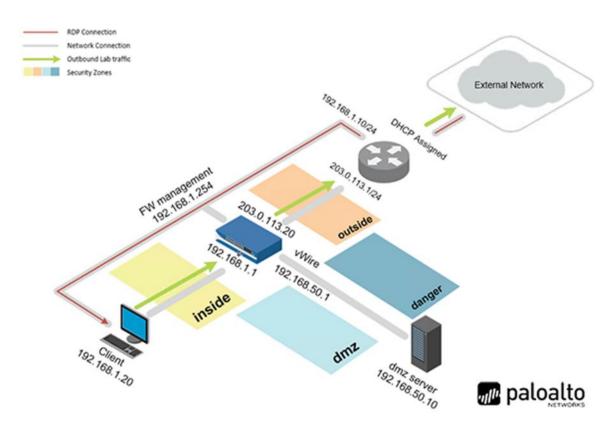

Theoretical Lab Topology

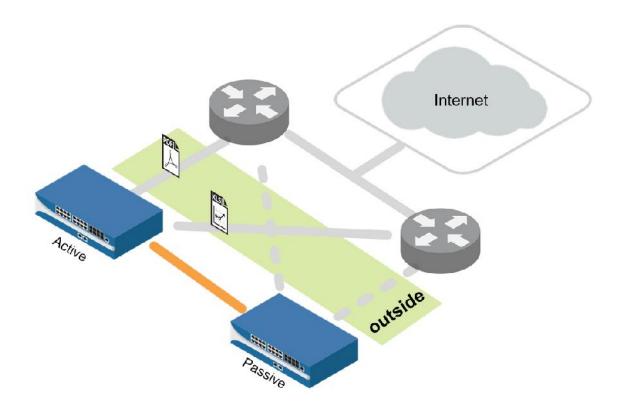



Lab Settings

The information in the table below will be needed in order to complete the lab. The task sections below provide details on the use of this information.

Virtual Machine	IP Address	Account (if needed)	Password (if needed)
Client	192.168.1.20	lab-user	Train1ng\$
Firewall	192.168.1.254	admin	Train1ng\$



13 Active/Passive High Availability

13.0 Load Lab Configuration

1. Launch the **Client** virtual machine to access the graphical login screen.



To launch the console window for a virtual machine, you may access by either clicking on the machine's graphic image from the topology page or by clicking on the machine's respective tab from the navigation bar.

2. Log in as lab-user using the password Training\$.



- 3. Launch the Chromium Web Browser and connect to https://192.168.1.254.
- 4. If a security warning appears, click **Advanced** and proceed by clicking on **Proceed to 192.168.1.254 (unsafe)**.
- 5. Log in to the *Palo Alto Networks* firewall using the following:


Parameter	Value
Name	admin
Password	Train1ng\$

6. In the web interface, select **Device > Setup > Operations**.






7. Click Load named configuration snapshot:

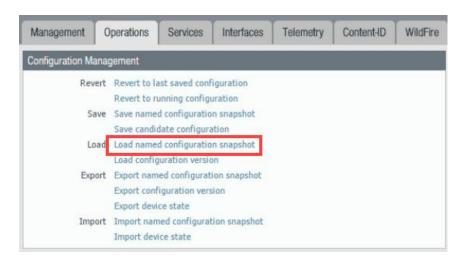

8. Click the dropdown list next to the *Name* text box and select **edu-210-lab-13.xml**. Click **OK**.



9. Click Close.

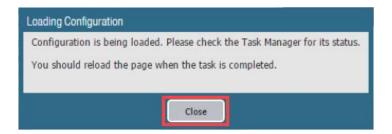




The following instructions are the steps to execute a "Commit All" as you will perform many times throughout these labs.

10. Click the **Commit** link at the top-right of the web interface.






11. Click **Commit** and wait until the commit process is complete.

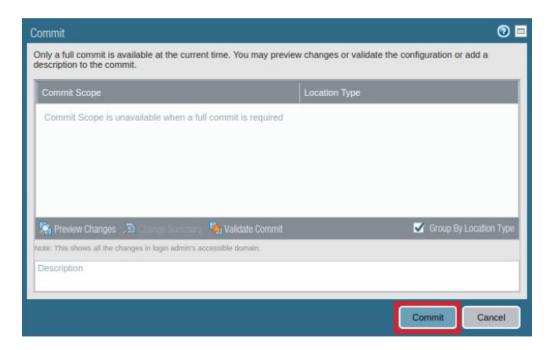

12. Once completed successfully, click **Close** to continue.

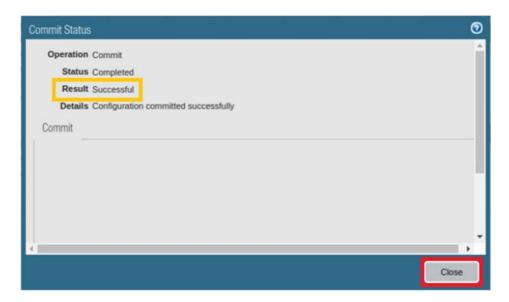




13.1 Display the HA Widget

If high availability (HA) is enabled, the *High Availability* widget on the *Dashboard* indicates the HA status.


1. In the web interface, click the **Dashboard** tab to display current firewall information.



2. If the *High Availability* panel is not displayed, select **Widgets > System > High Availability** to enable the display.

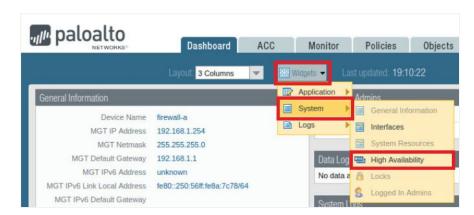

3. Notice the High Availability widget now appears.

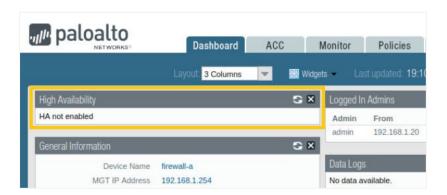




13.2 Configure the HA Interface

Each HA interface has a specific function: one interface is for configuration synchronization and heartbeats, and the other interface is for state synchronization (not configured in this lab).


1. In the web interface, navigate to **Network > Interfaces > Ethernet**.



2. Click ethernet1/6 to open the configuration window for that interface.

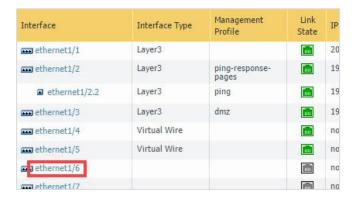

3. In the Ethernet Interface window, select **HA** from the *Interface Type* dropdown list and click **OK**.

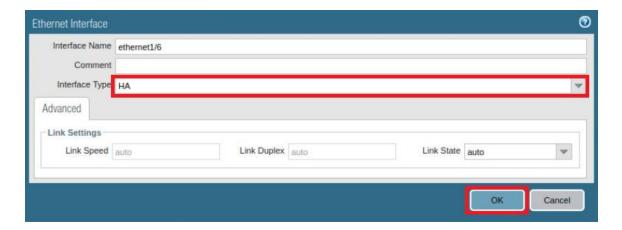



13.3 Configure Active/Passive HA

In this deployment, the active firewall continuously synchronizes its configuration and session information with the passive firewall over two dedicated interfaces. In the event of a hardware or software disruption on the active firewall, the passive firewall becomes active automatically without loss of service. Active/passive HA deployments are supported by the interface modes Virtual Wire, Layer 2, and Layer 3.

1. In the web interface, navigate to **Device > High Availability > General**.



- 2. Click the **Edit** icon from the *Setup* panel to open the *Setup* configuration window.
- 3. In the Setup window, configure the following. Once finished, click OK.


Parameter	Value
Enable HA	Check the checkbox
Group ID	Type 60 (This field is required and must be unique if multiple HA pairs reside on the same broadcast domain.)
Mode	Verify that the Active Passive radio button is selected
Enable Config Sync	Check the checkbox (Select this option to enable synchronization of configuration settings between the peers.)
Peer HA1 IP Address	Type 172.16.3.11



4. Click the **Edit** icon from the *Active/Passive Settings* panel.



5. In the Active/Passive Settings window, select the Auto radio button and click OK.

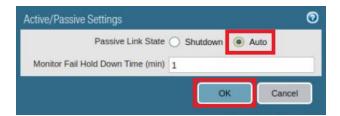




When *Auto* is selected, the links that have physical connectivity remain physically up but in a disabled state. They do not participate in ARP or packet forwarding. This configuration helps reduce convergence times during failover because no time is required to activate the links. To avoid network loops, do not select this option if the firewall has any Layer 2 interfaces configured.

- 6. Click the **Edit** icon from the *Election Settings* panel to configure failover behavior.
- 7. In the *Election Settings* window, configure the following. Once finished, click **OK**.

Parameter	Value
Device Priority	Type 80
	(Enter a priority value (range is 0-255) to identify the active firewall. The firewall with the lower value (higher priority) becomes the active firewall when the <i>Preemptive</i> capability is enabled on both firewalls in the pair.)
Preemptive	Check the checkbox
	(Enables the higher priority firewall to resume active operation after recovering from a failure. This parameter must be enabled on both firewalls but is not always a recommended practice.)
Heartbeat Backup	Uncheck the checkbox
	(Uses the management ports on the HA firewalls to provide a backup path for heartbeat and hello messages.)

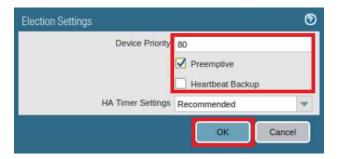




- 8. Click the **Edit** icon from the *Control Link (HA1)* panel to configure the HA1 link. The firewalls in an HA pair use HA links to synchronize data and maintain state information.
- 9. In the Control Link (HA1) window, configure the following. Once finished, click OK.

Parameter	Value
Port	Select ethernet1/6 from the dropdown list
IPv4/IPv6 Address	Type 172.16.3.10
Netmask	Type 255.255.255.0




- 10. Click the **Edit** icon from the *Data Link (HA2)* configuration window.
- 11. In the *Data Link (HA2)* windows, deselect the **Enable Session Synchronization** checkbox and click **OK**.

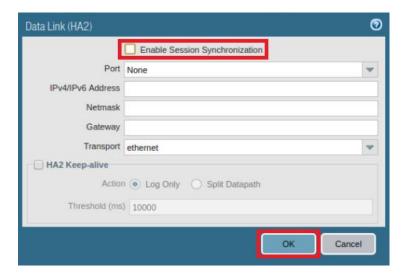



13.4 Configure HA Monitoring

1. In the web interface, navigate to **Device > High Availability > Link and Path Monitoring**.

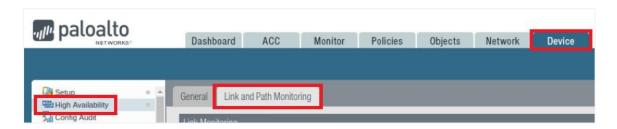

2. Click the **Edit** icon from the *Link Monitoring* panel to configure link failure detection.



Link monitoring enables failover to be triggered when a physical link or group of physical links fails.

3. In the *Link Monitoring* window, verify that the **Enabled** checkbox is checked and that the **Any** radio button is selected. Click **OK**.




4. Click **Add** in the *Link Group* panel to configure the traffic links to monitor.





5. In the Link Group window, configure the following. Once finished, click OK.

Parameter	Value
Name	Type traffic-links
Enabled	Verify that Enabled is checked
	(Note: Not supported on VM-series on ESXi.)
Failure Condition	Verify that the Any radio button is selected
Interface	Click Add and select the following from the dropdown list:
	ethernet1/1
	ethernet1/2

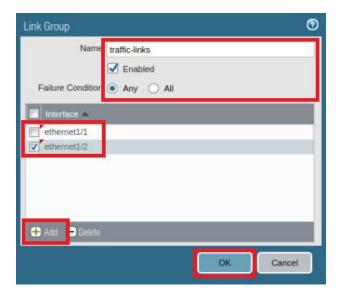

6. Click the **Edit** icon from the *Path Monitoring* panel to configure the *Path Failure* detection.



Path monitoring enables the firewall to monitor specified destination IP addresses by sending ICMP ping messages to ensure that they are responsive.

7. In the *Path Monitoring* window, verify that the **Enabled** checkbox is checked and that the **Any** radio button is selected. Click **OK**.






8. Find the *Path Group* panel and click **Add Virtual Router Path** to configure the path failure condition.



9. In the *HA Path Group Virtual Router* window, configure the following. Once finished, click **OK**.

Parameter	Value
Name	Select lab-vr from the dropdown list
Enabled	Verify that the Enabled checkbox is checked
Failure Condition	Verify that the Any radio button is selected
Destination IP	Click Add and type 8.8.8.8

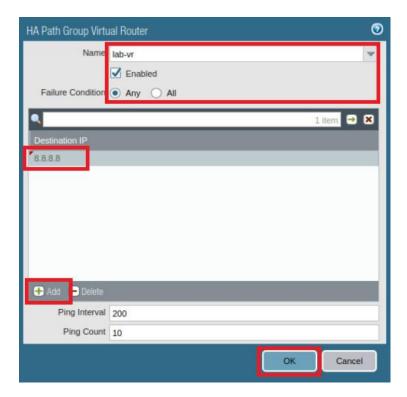

10. Commit all changes.



13.5 Observe the HA Widget


1. In the web interface, click the **Dashboard tab** and view the *High Availability* status widget for the firewall.





Active-passive mode should be enabled, and the local firewall should be active (green). You may need to refresh the High Availability pane if the local firewall still shows that it is initializing. However, because there is no peer firewall, the status of most monitored items is unknown (yellow). Because HA1 has no peer, its state is down (red).

2. If a peer was configured and was operating in passive mode, the *High Availability* widget on the *Dashboard* would appear as follows.

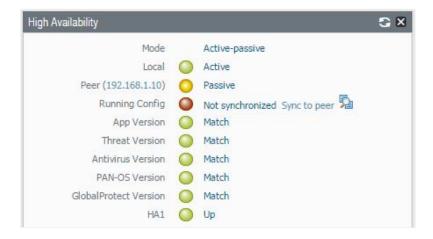





To avoid overwriting the wrong firewall configuration, the firewalls are not automatically synchronized. You must manually synchronize a firewall to the firewall with the "valid" configuration by clicking *Sync to peer*.

3. The lab is now complete; you may end the reservation.