
CE

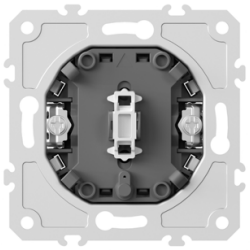

Switch User Manual

Product Models: E08KA111, E08KA112, E08KA113, E08KA211, E08KA212, E08KA213, E08KA311, E08KA215, F08KA111, F08KA112, F08KA113, F08KA211, F08KA212, F08KA311, F08KA215

Product Name: VOLTEROOM
Product Series - E Series and F Series

Product Type: 1 Gang mechanism for 1 way switch, 1 Gang mechanism for 2 way switch, 1 Gang mechanism for intermediate switch, 2 Gang mechanism for 1 way switch, 2 Gang mechanism for 2 way switch, 2 Gang mechanism for intermediate switch, 3 Gang mechanism for 1 way switch, Mechanism for roll-down shutter switch

I. Scope of Application

For indoor use only
Belongs to household products
250~
10A and 16A

II. Functions

Used for controlling the power supply of lighting equipment or other electrical appliances

III. Connection and Installation

Important Safety Notice!
All installation work must be carried out by qualified professionals in accordance with the electrical installation standards.
Before installation, the power supply must be cut off. The power supply should be turned off by the corresponding automatic circuit breaker.
It is prohibited to use the equipment when it is damaged or the power supply lines are broken.

Unit Description

a Switch panel

b Switch structure / Function module (Internal electrical connection)

c Back box / Installation base box, embedded in the wall

d Decorative frame (needs to be purchased separately)

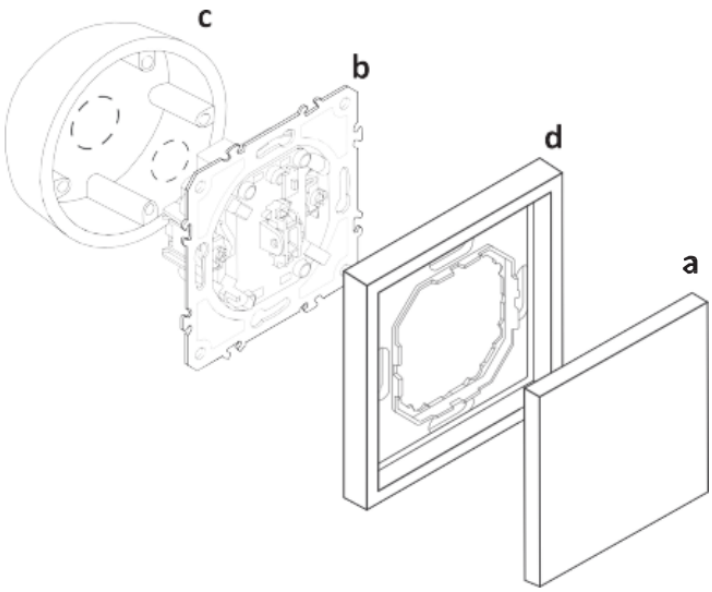


Figure 1

Installation sequence: c → b → d → a (from inside to outside)

Installation procedure:

1. Remove the panel

Remove the push-button panel (a) from the switch function piece (b) (as shown in Figure 1)

2. Connect wires:

Connect the pre-prepared wires to the switch according to the corresponding wiring diagram (see Figure 2)

3. Install the functional components:

Connect the pre-prepared wires to the switch according to the corresponding wiring diagram (see Figure 2). Insert the functional component (b) of the connected switch into the pre-installed mounting box (c).

Adjust the position of the functional component using a level gauge.

Fix the mechanism in the box (c) using screws or expansion clips.

4. Install decorative frame:

Install the decorative frame (d) (which needs to be purchased separately)

Make sure the frame is tightly attached to the support surface of the mechanism

5. Install the key panel:


Install the key panel (a) onto the functional piece (b)

Press until you hear a clicking sound for fixation

6. Test:


Turn on the power supply and test if the switch is functioning properly

Circuit diagram	Type	Description
The first diagram	Single control switch	Standard single-channel switch, controlling one light fixture
The second diagram	Dual control switch	One switch controls two independent circuits
The third diagram	Multi control switch	One switch controls three independent circuits
The fourth diagram	Single control path switch	Dual control switch (two locations controlling one light)
The fifth diagram	Dual control path switch	Dual control dual-path switch
The sixth diagram	Crossing switch	Intermediate switch in multi-control system

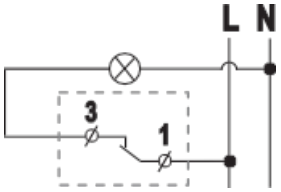


①

Single control switch

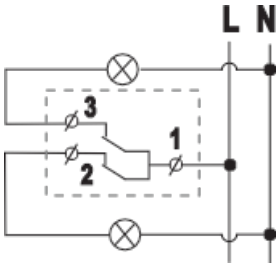


②

Dual control switch

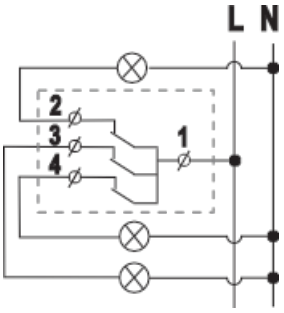


③

One switch controlling multiple devices

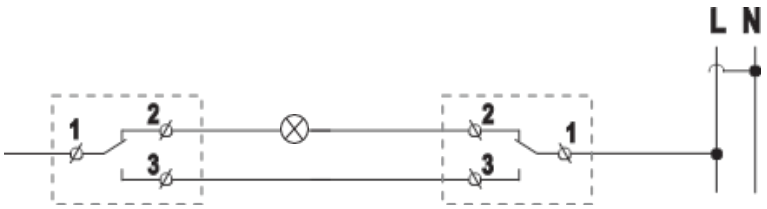


④

Single control path switch

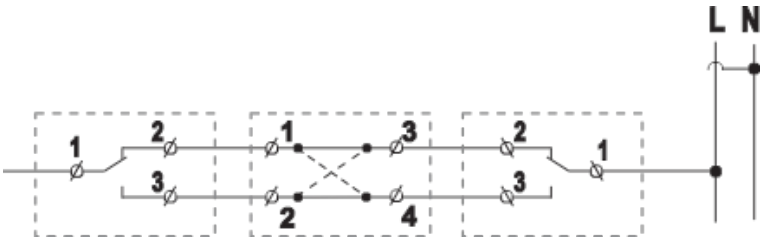

⑤

Dual-control path switch

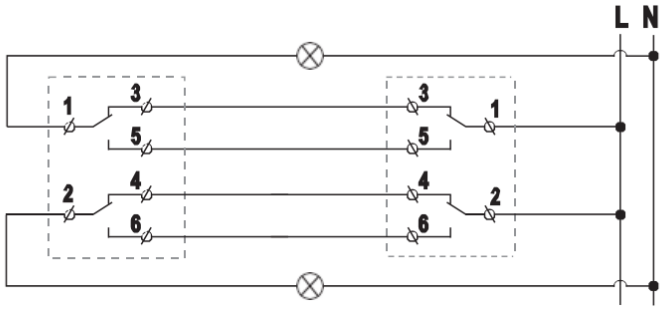

⑥

Multi-control switch

Figure 2

IV. <u>Technical Specifications</u>

The technical parameters are marked on the product itself

-25° C to +50° C

Humidity： no more than 80%

V. <u>Storage Conditions</u>

Store in a dry and well-ventilated room

Avoid direct sunlight

Storage temperature range: -25° C to +50° C

Relative humidity: no more than 80%

VI. <u>Information of Importer</u>

Brand: VOLTEROOM

Origin: Made in China

Company name: Volteroom s.r.o.

Address: Kopčianska 63, 851 01 Bratislava, Slovakia

Contact Number: +421 947 116 106

Email address: info@volteroom.com

VII. Quality Guarantee

Warranty period	5 years
Warranty scope	Technical components of Volteroom series products, ensuring their normal functionality
Warranty replacement conditions	Product loses working ability, and there is no mechanical damage, no traces of incorrect installation, no signs of third-party disassembly or overheating (color change)
Replacement requirements	Products need to be returned in their complete packaging, with the packaging undamaged (not losing the appearance of the product)
Warranty certificate	Correctly filled out warranty card (must include sales date, product name, warranty expiration date, signature and seal of the seller) + sales receipt
Invalid situations	Unfilled warranty cards will exempt the seller from the warranty responsibility
Warranty prerequisites	Compliance with usage rules, transportation and storage safety measures
Non-warranty situations	For production, profit purposes, or other non Volteroom product direct household use
Exemption clauses	Not liable for compensation for damage to other equipment connected to the switch