


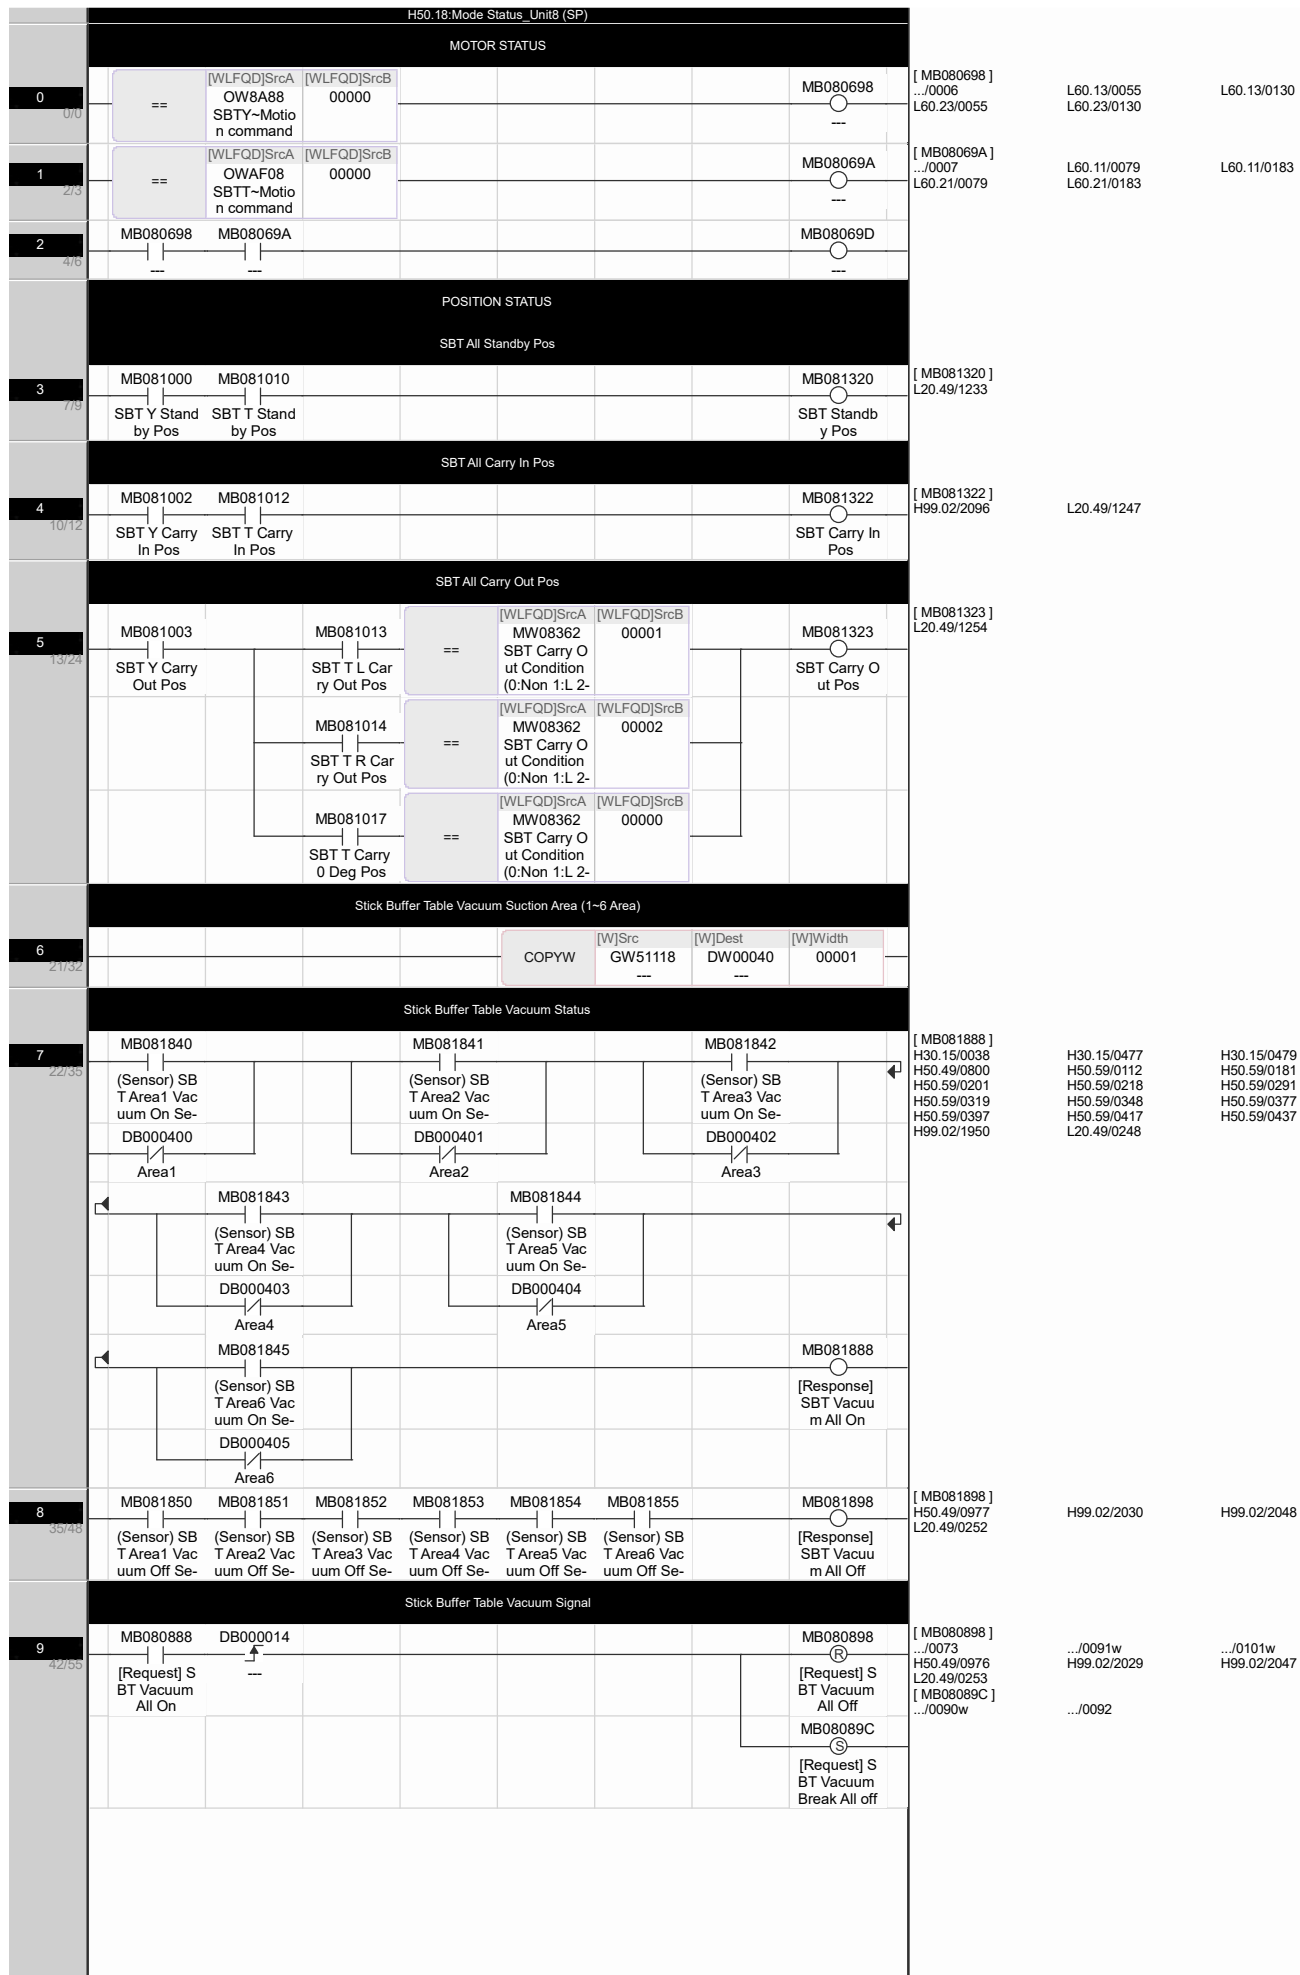

10 40/39	MB080888	DB000010	DB000400	MB080840	[MB080840] H50.49/0633 L10.69/0156i [MB080841] H50.49/0645 [MB080842] H50.49/0656 [MB080843] H50.49/0667 [MB080844] H50.49/0678 [MB080845] H50.49/0689	L10.59/0006i L10.69/0201i L20.49/0009 L20.49/0017 L20.49/0025 L20.49/0033 L20.49/0041	L10.59/0011iw L20.49/0001
	[Request] S BT Vacuum All On	---	Area1	(Sol) SBT Ar ea1 Vacuum On			
			DB000401	MB080841			
			Area2	(Sol) SBT Ar ea2 Vacuum On			
			DB000402	MB080842			
			Area3	(Sol) SBT Ar ea3 Vacuum On			
			DB000403	MB080843			
			Area4	(Sol) SBT Ar ea4 Vacuum On			
11 60/73	MB080898	DB000011	DB000404	MB080844			
	[Request] S BT Vacuum All Off	---	Area5	(Sol) SBT Ar ea5 Vacuum On			
			DB000405	MB080845			
			Area6	(Sol) SBT Ar ea6 Vacuum On			
				MB080850	[MB080850] H50.49/0810 L10.69/0158i [MB080851] H50.49/0821 [MB080852] H50.49/0833 [MB080853] H50.49/0844 [MB080854] H50.49/0855 [MB080855] H50.49/0866 [MB080888] .../0055 H50.49/0799	L10.59/0008iw L10.69/0199i L20.49/0013 L20.49/0021 L20.49/0029 L20.49/0037 L20.49/0045 .../0059 L20.49/0249	L10.59/0009i L20.49/0005 .../0107w
				(Sol) SBT Ar ea1 Vacuum Off			
				MB080851			
				(Sol) SBT Ar ea2 Vacuum Off			
12 80/82				MB080852			
				(Sol) SBT Ar ea3 Vacuum Off			
				MB080853			
				(Sol) SBT Ar ea4 Vacuum Off			
				MB080854			
				(Sol) SBT Ar ea5 Vacuum Off			
				MB080855			
				(Sol) SBT Ar ea6 Vacuum Off			
13 12/83				MB080888			
				[Request] S BT Vacuum All On			
14 74/87	Stick Buffer Table Blow Status						
	MB081860			MB08188C	[Response] SBT Vacuu m Break All-		
13 12/83	(Sensor) SB T Vacuum B reak On Se-						
	MB08088C						
13 12/83	[Request] S BT Vacuum Break All On						
	MB081870			MB08189C	[Response] SBT Vacuu m Break All-		
13 12/83	(Sensor) SB T Vacuum B reak Off Se-						
14 74/87	Stick Buffer Table Vacuum Break Signal						
	MB08088C	DB000015		MB080860	[MB080860] H50.49/0987 L10.69/0242i [MB08089C] .../0058w [MB080898] .../0057w H50.49/0976 L20.49/0253	L10.59/0025i L10.69/0287i .../0092 .../0073 H99.02/2029	L10.59/0030iw L20.49/0257 .../0101w H99.02/2047
14 74/87	[Request] S BT Vacuum Break All On	---		(Sol) SBT V acuum Brea k On			
				MB08089C			
14 74/87				[Request] S BT Vacuum Break All off			
				MB080898			
14 74/87				[Request] S BT Vacuum All Off			

H50.19 : Mode Status_Unit9 (SBT)

P00002

