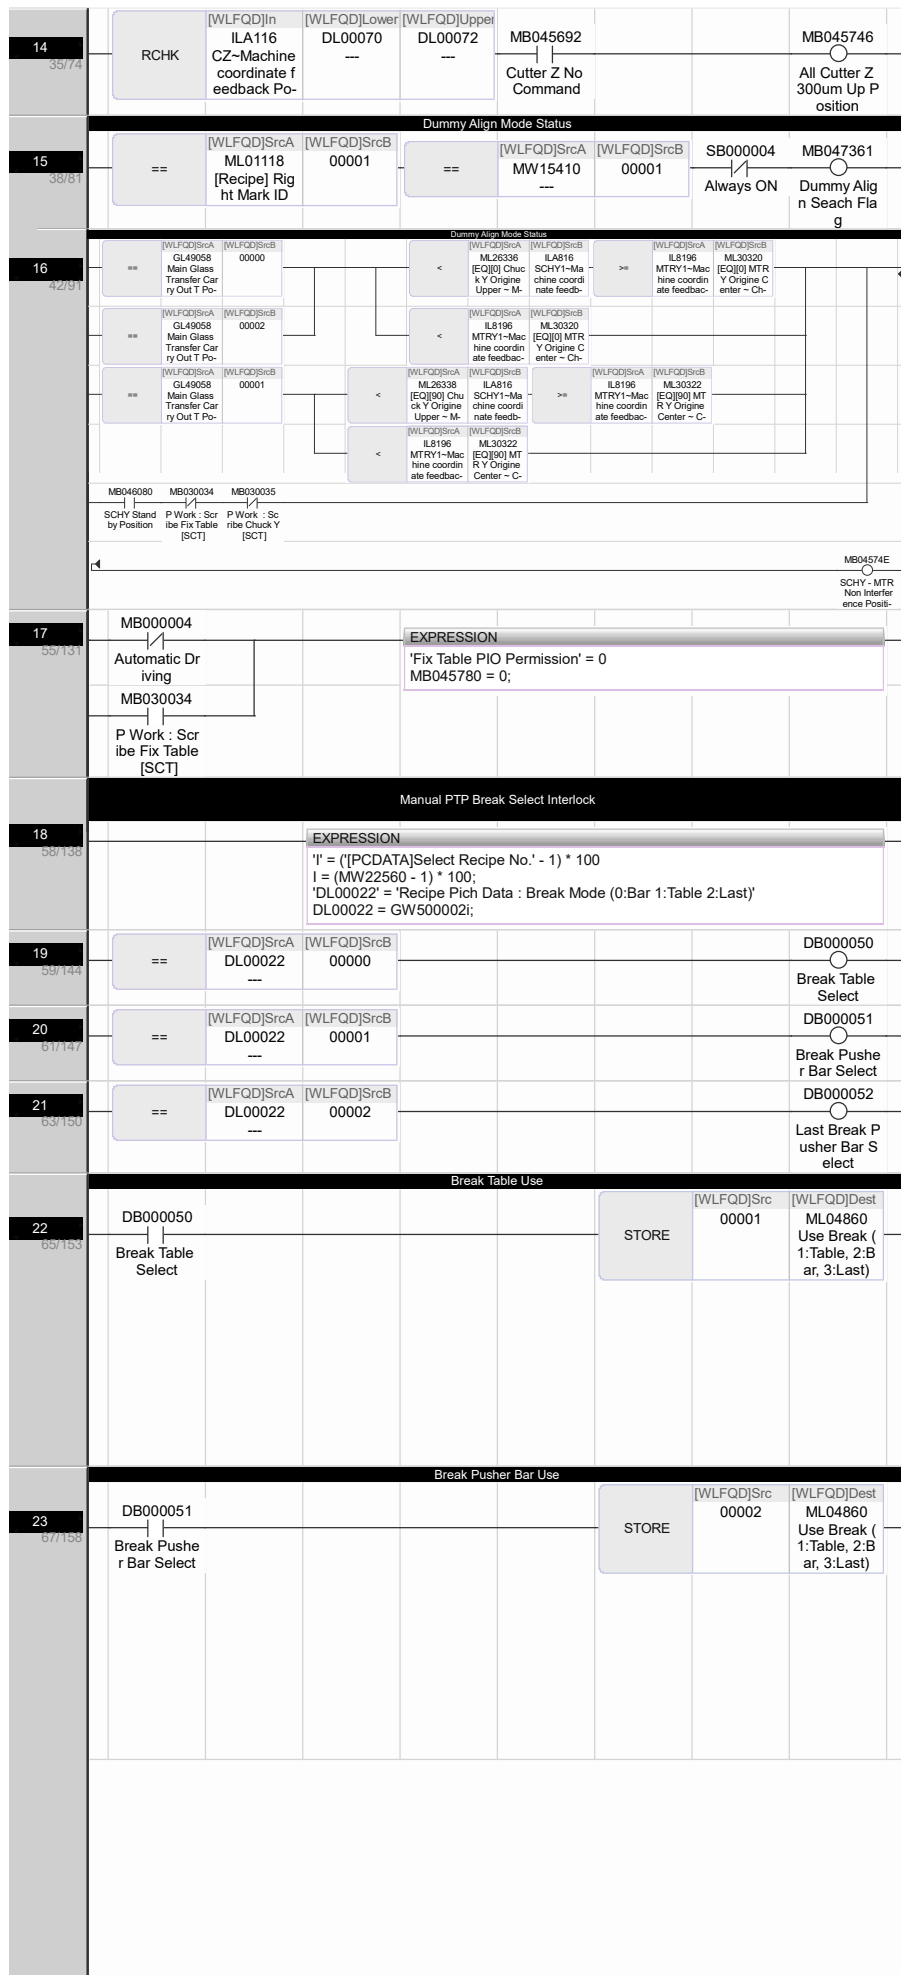


H50.12:SC Status									
Motor Status									
0	0/0	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWA808 SCHY1-Motion command	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWA888 SCHY2-Motion command	MB045690	[MB045690] H50.57/0342
								SCHY No Command	
1	3/9	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWA008 CX-Motion command	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWA088 CAMX-Motion command	MB045691	[MB045691] H50.52/0104 H50.52/0212 H50.52/0354 H50.52/0554 H50.52/0786
								Cutter X No Command	H50.52/0136 H50.52/0254 H50.52/0420 H50.52/0668 H50.52/0798
2	6/18	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWA108 CZ-Motion command				MB045692	[MB045692] .../0035 H50.52/0725
								Cutter Z No Command	.../0041
3	8/24	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWA188 CS-Motion command				MB045693	.../0079
								Cutter Shift No Command	
Position Status									
4	10/24	MB046020						MB045740	[MB045740] H50.52/0101 H50.52/0209 H50.52/0351 H50.52/0546 H50.52/0795 H50.54/0119 H50.54/0213 H50.54/0311 H50.54/0706 L60.12/0166 L80.22/0002 L80.22/0031 L80.22/0061 L80.22/0158 L80.22/0581 L80.24/0002 L80.24/0061 L80.24/0113 L80.24/0172 L80.24/0217 L80.24/0282 L80.24/0391 L80.24/0461 L80.24/0529 L80.24/0647
		CZ Wait Position						All Cutter Z Wait Position	H50.52/0133 H50.52/0251 H50.52/0417 H50.52/0661 H50.52/0834 H50.54/0158 H50.54/0239 H50.54/0668 L20.42/1411 L60.22/0046 L80.22/0010 L80.22/0041 L80.22/0090 L80.22/0192 L80.22/0587 L80.24/0015 L80.24/0084 L80.24/0131 L80.24/0185 L80.24/0233 L80.24/0295 L80.24/0405 L80.24/0491 L80.24/0546
		MB046024							
		CZ Cutting Wait Position							H50.52/0171 H50.52/0284 H50.52/0484 H50.52/0714 H50.54/0080 H50.54/0186 H50.54/0276 H50.54/0689 L60.12/0046 L60.22/0166 L80.22/0021 L80.22/0051 L80.22/0124 L80.22/0226 L80.22/0613 L80.24/0038 L80.24/0100 L80.24/0151 L80.24/0201 L80.24/0249 L80.24/0314 L80.24/0433 L80.24/0515 L80.24/0563
5	13/27	MB046000	MB046010					MB045741	[MB045741] H50.52/0493 H50.52/0799 H50.53/0216 H50.53/0321 H50.53/0410 H50.53/0598 L60.13/0070 L60.14/0070 L60.24/0091 L80.22/0126 L80.22/0228 L80.23/0040 L80.23/0067 L80.23/0184 L80.23/0221 L80.23/0267 L80.24/0039
		CX Wait Position	CAMX Wait Position					All Cutter X Wait Position	H50.52/0555 H50.53/0098 H50.53/0264 H50.53/0350 H50.53/0427 H50.53/0833 L60.13/0085 L60.23/0070 L60.24/0102 L80.22/0160 L80.23/0010 L80.23/0046 L80.23/0079 L80.23/0192 L80.23/0233 L80.23/0341 L80.24/0062
		MB04600A	MB046010						
		CX Cutting After Escape Position	CAMX Wait Position						H50.52/0671 H50.53/0155 H50.53/0287 H50.53/0371 H50.53/0456 L20.42/1418 L60.14/0059 L60.23/0085 L80.22/0092 L80.22/0194 L80.23/0029 L80.23/0058 L80.23/0104 L80.23/0204 L80.23/0253 L80.24/0016 L80.25/0034
6	16/32	MB046030						MB045742	[MB045742] L20.42/1425
		CS Wait Position						Cutter Shift Y Wait Position	
7	20/34	MB046024	MB045692					MB045743	[MB045743] H50.52/0796
		CZ Cutting Wait Position	Cutter Z No Command					All Cutter Z Cut Wait Position	
8	23/37	<=	[WLFQD]SrcA ILA116 CZ-Machine coordinate feedback Po-	[WLFQD]SrcB ML43446 ---	MB045692			MB045744	
					Cutter Z No Command			All Cutter Z 2000um Wait Position	
CX Escape Position - Use Data									
9	26/43	MB000181							
		SCT Use						EXPRESSION	
								'DL00060' = 'ML43270' - 1440000 DL00060 = ML43270 - 1440000;	
10	28/49	MB000182							
		LCCT Use						EXPRESSION	
								'DL00060' = 'ML43270' - 1240000 DL00060 = ML43270 - 1240000;	
11	30/55	MB000183							
		RCCT Use						EXPRESSION	
								'DL00060' = 'ML43270' + 1240000 DL00060 = ML43270 + 1240000;	
12	32/61	<	[WLFQD]SrcA DL00060 ---	[WLFQD]SrcB ILA016 CX-Machine coordinate feedback -				MB045745	[MB045745] H50.52/0111 L60.14/0061 L60.23/0087
								CX Escape Position Move	L60.13/0072 L60.14/0072 L60.24/0093
13	34/64	EXPRESSION							[DL00072] .../0076
								'DL00070' = 'EQ]Upper Cutter Z 0 Detect Position (Table Surface)' - 'Glass Thickness' - 300 - 100 DL00070 = ML26410 - GL21004 - 300 - 100; // UPCZ 'DL00072' = 'EQ]Upper Cutter Z 0 Detect Position (Table Surface)' - 'Glass Thickness' - 300 + 100 DL00072 = ML26410 - GL21004 - 300 + 100; // UPCZ	

[MB04574E]
H99.02/0546

H99.02/0552

[DL00022]
.../0144

.../0147

.../0150

[DB000050]
.../0153

.../0168


[DB000051]
.../0158


.../0169


[DB000052]
.../0163


.../0170

[ML04860]
.../0161w
.../0185
L80.22/0455
L80.22/0490
L80.22/0563
L80.22/0635
L80.22/0724
L80.23/0031
L80.23/0196
L80.23/0239
L80.24/0070
L80.24/0137
L80.24/0223
L80.24/0320
L80.24/0441
L80.24/0472
L80.24/0553.../0166w
.../0200
L80.22/0464
L80.22/0507
L80.22/0610
L80.22/0644
L80.22/0733
L80.23/0071
L80.23/0210
L80.24/0024
L80.24/0090
L80.24/0191
L80.24/0239
L80.24/0413
L80.24/0444
L80.24/0499.../0173w
.../0203
L80.22/0481
L80.22/0515
L80.22/0620
L80.22/0715
L80.23/0012
L80.23/0085
L80.23/0225
L80.24/0047
L80.24/0119
L80.24/0207
L80.24/0301
L80.24/0416
L80.24/0469
L80.24/0536[ML04860]
.../0156w
.../0185
L80.22/0455
L80.22/0490
L80.22/0563
L80.22/0635
L80.22/0724
L80.23/0031
L80.23/0196
L80.23/0239
L80.24/0070
L80.24/0137
L80.24/0223
L80.24/0320
L80.24/0441
L80.24/0472
L80.24/0553.../0166w
.../0200
L80.22/0464
L80.22/0507
L80.22/0610
L80.22/0644
L80.22/0733
L80.23/0071
L80.23/0210
L80.24/0024
L80.24/0090
L80.24/0191
L80.24/0239
L80.24/0413
L80.24/0444
L80.24/0499.../0173w
.../0203
L80.22/0481
L80.22/0515
L80.22/0620
L80.22/0715
L80.23/0012
L80.23/0085
L80.23/0225
L80.24/0047
L80.24/0119
L80.24/0207
L80.24/0301
L80.24/0416
L80.24/0469
L80.24/0536

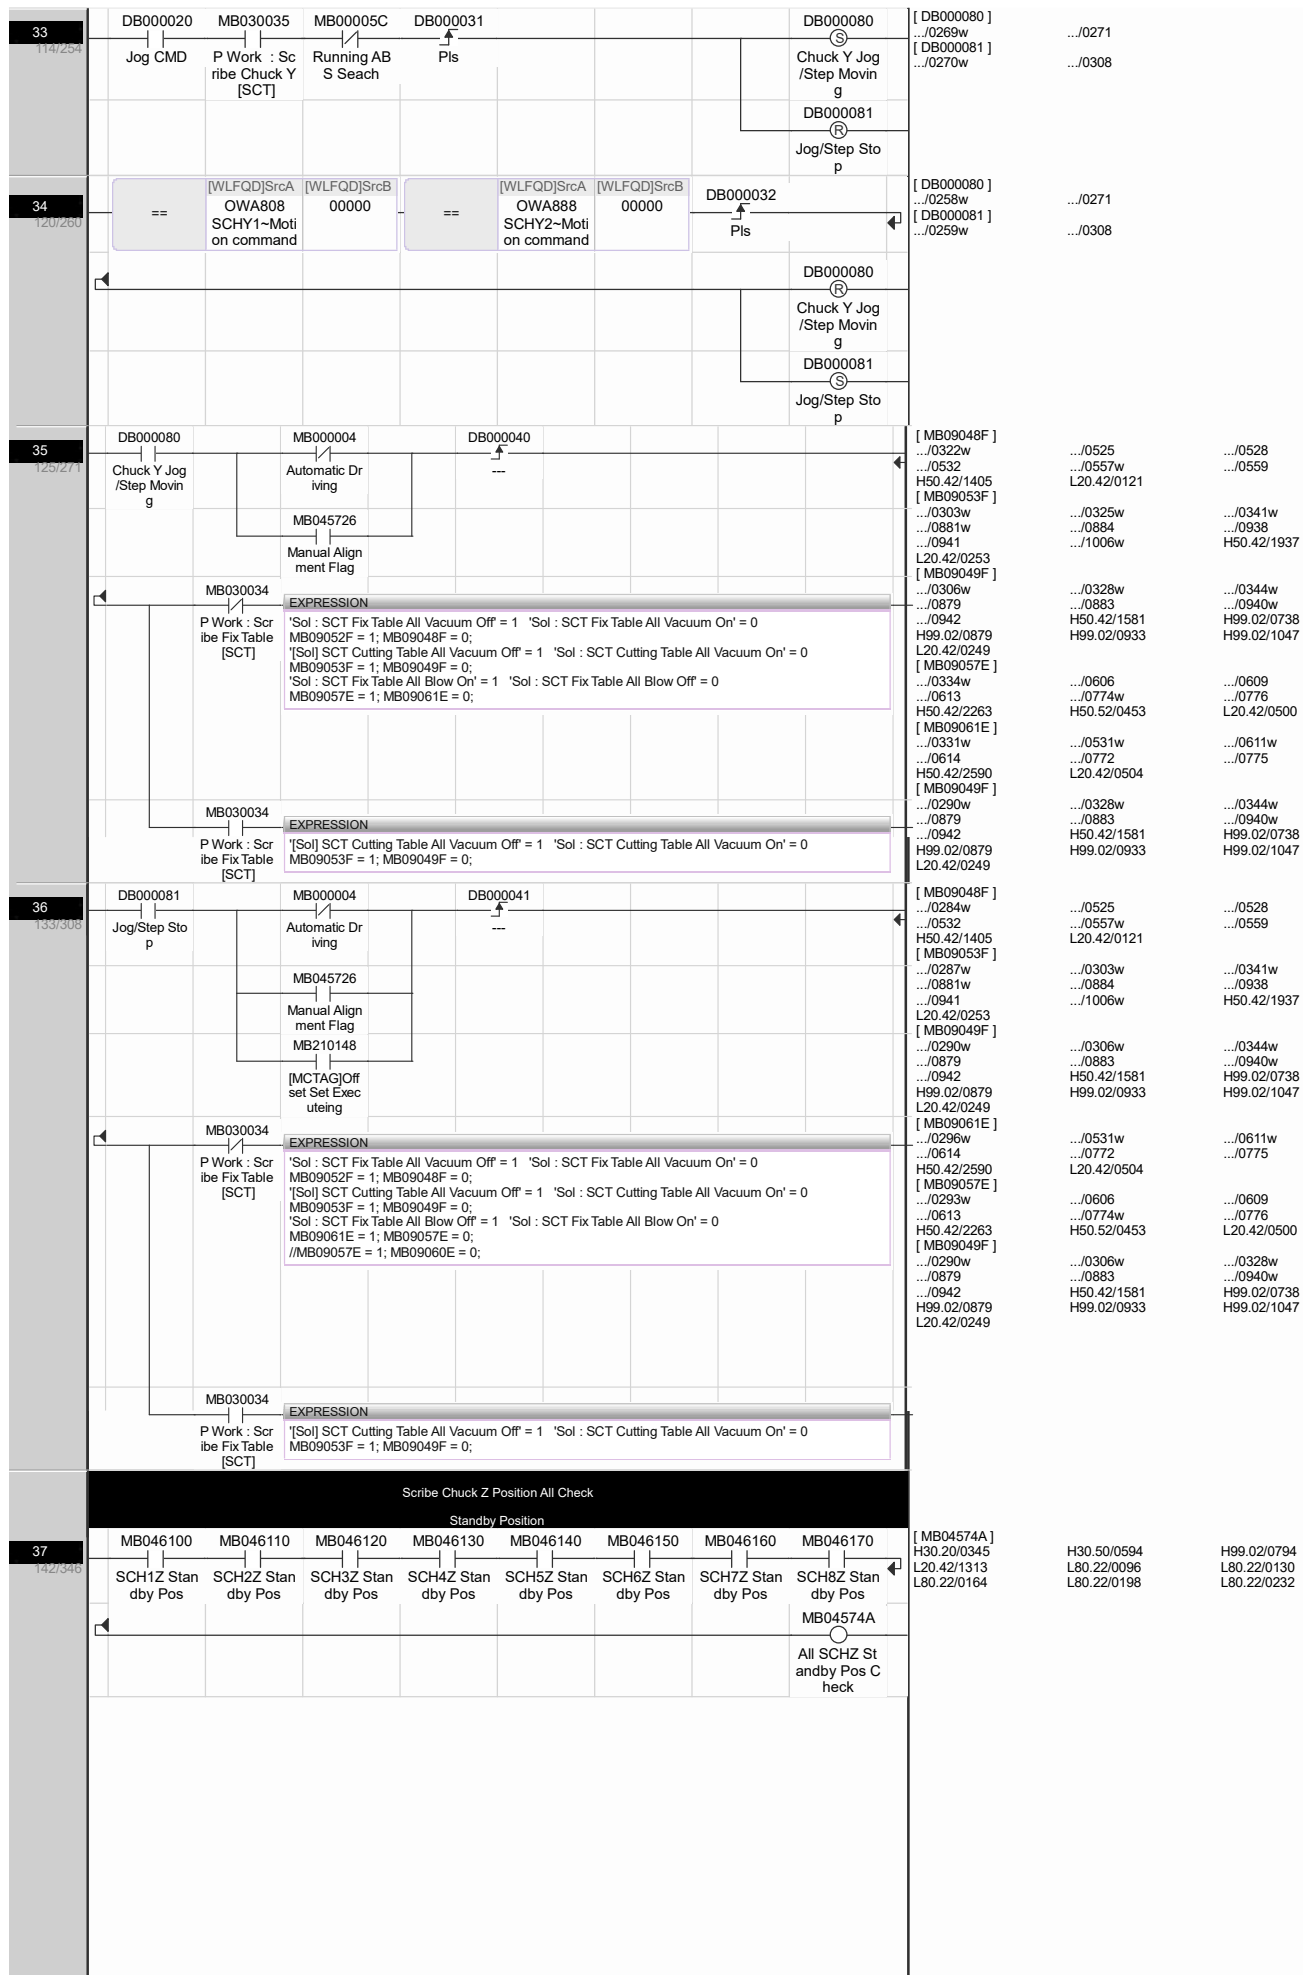

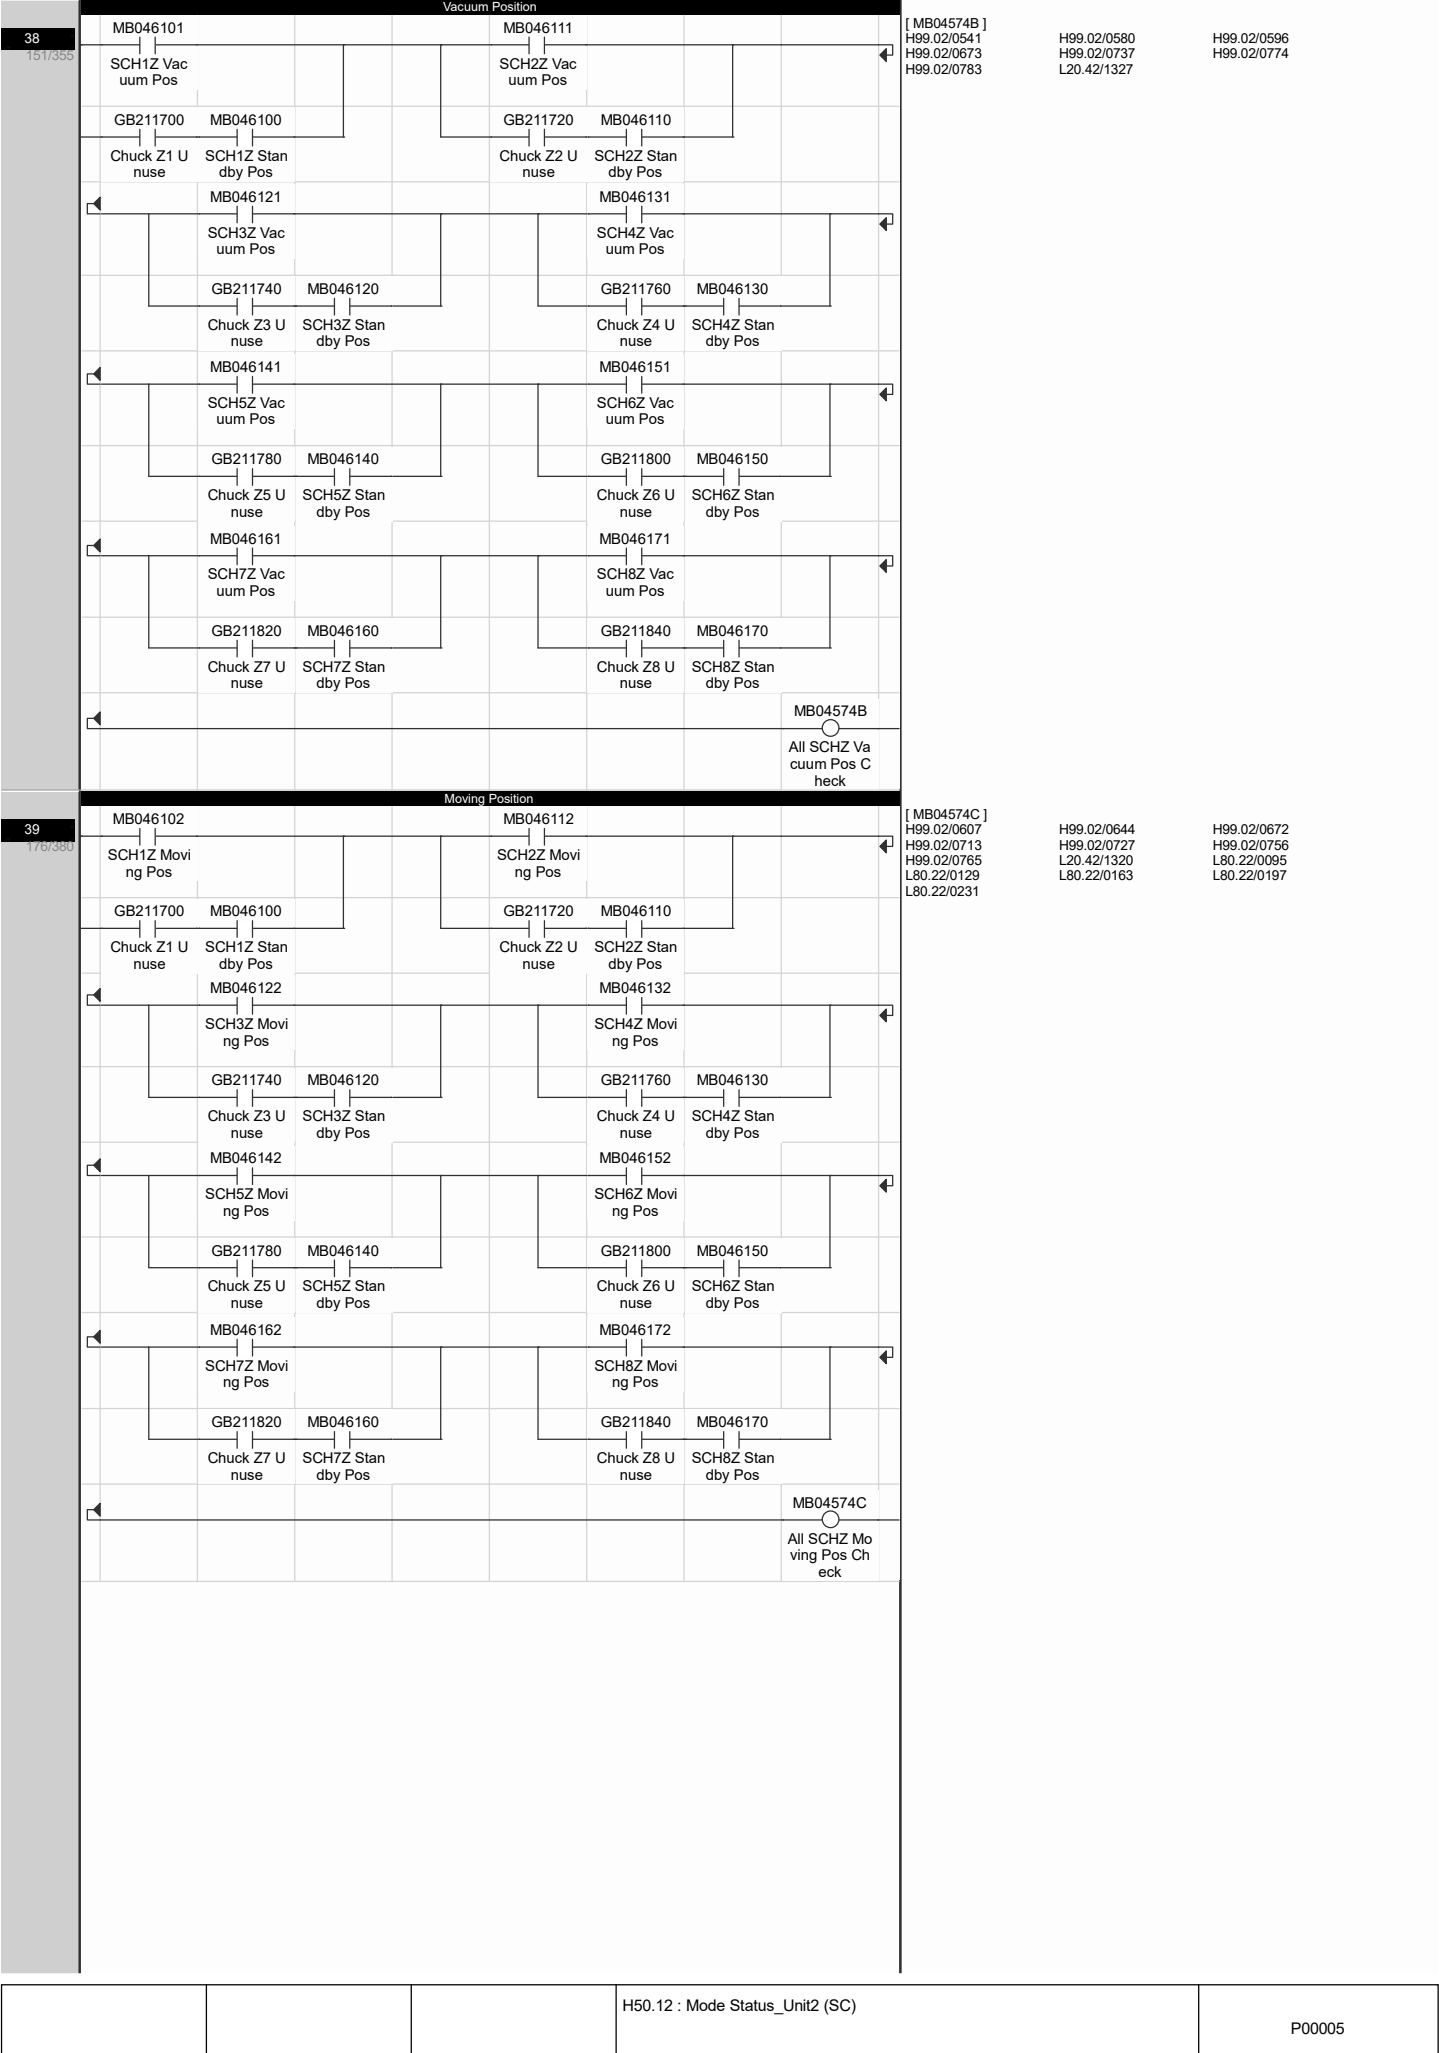

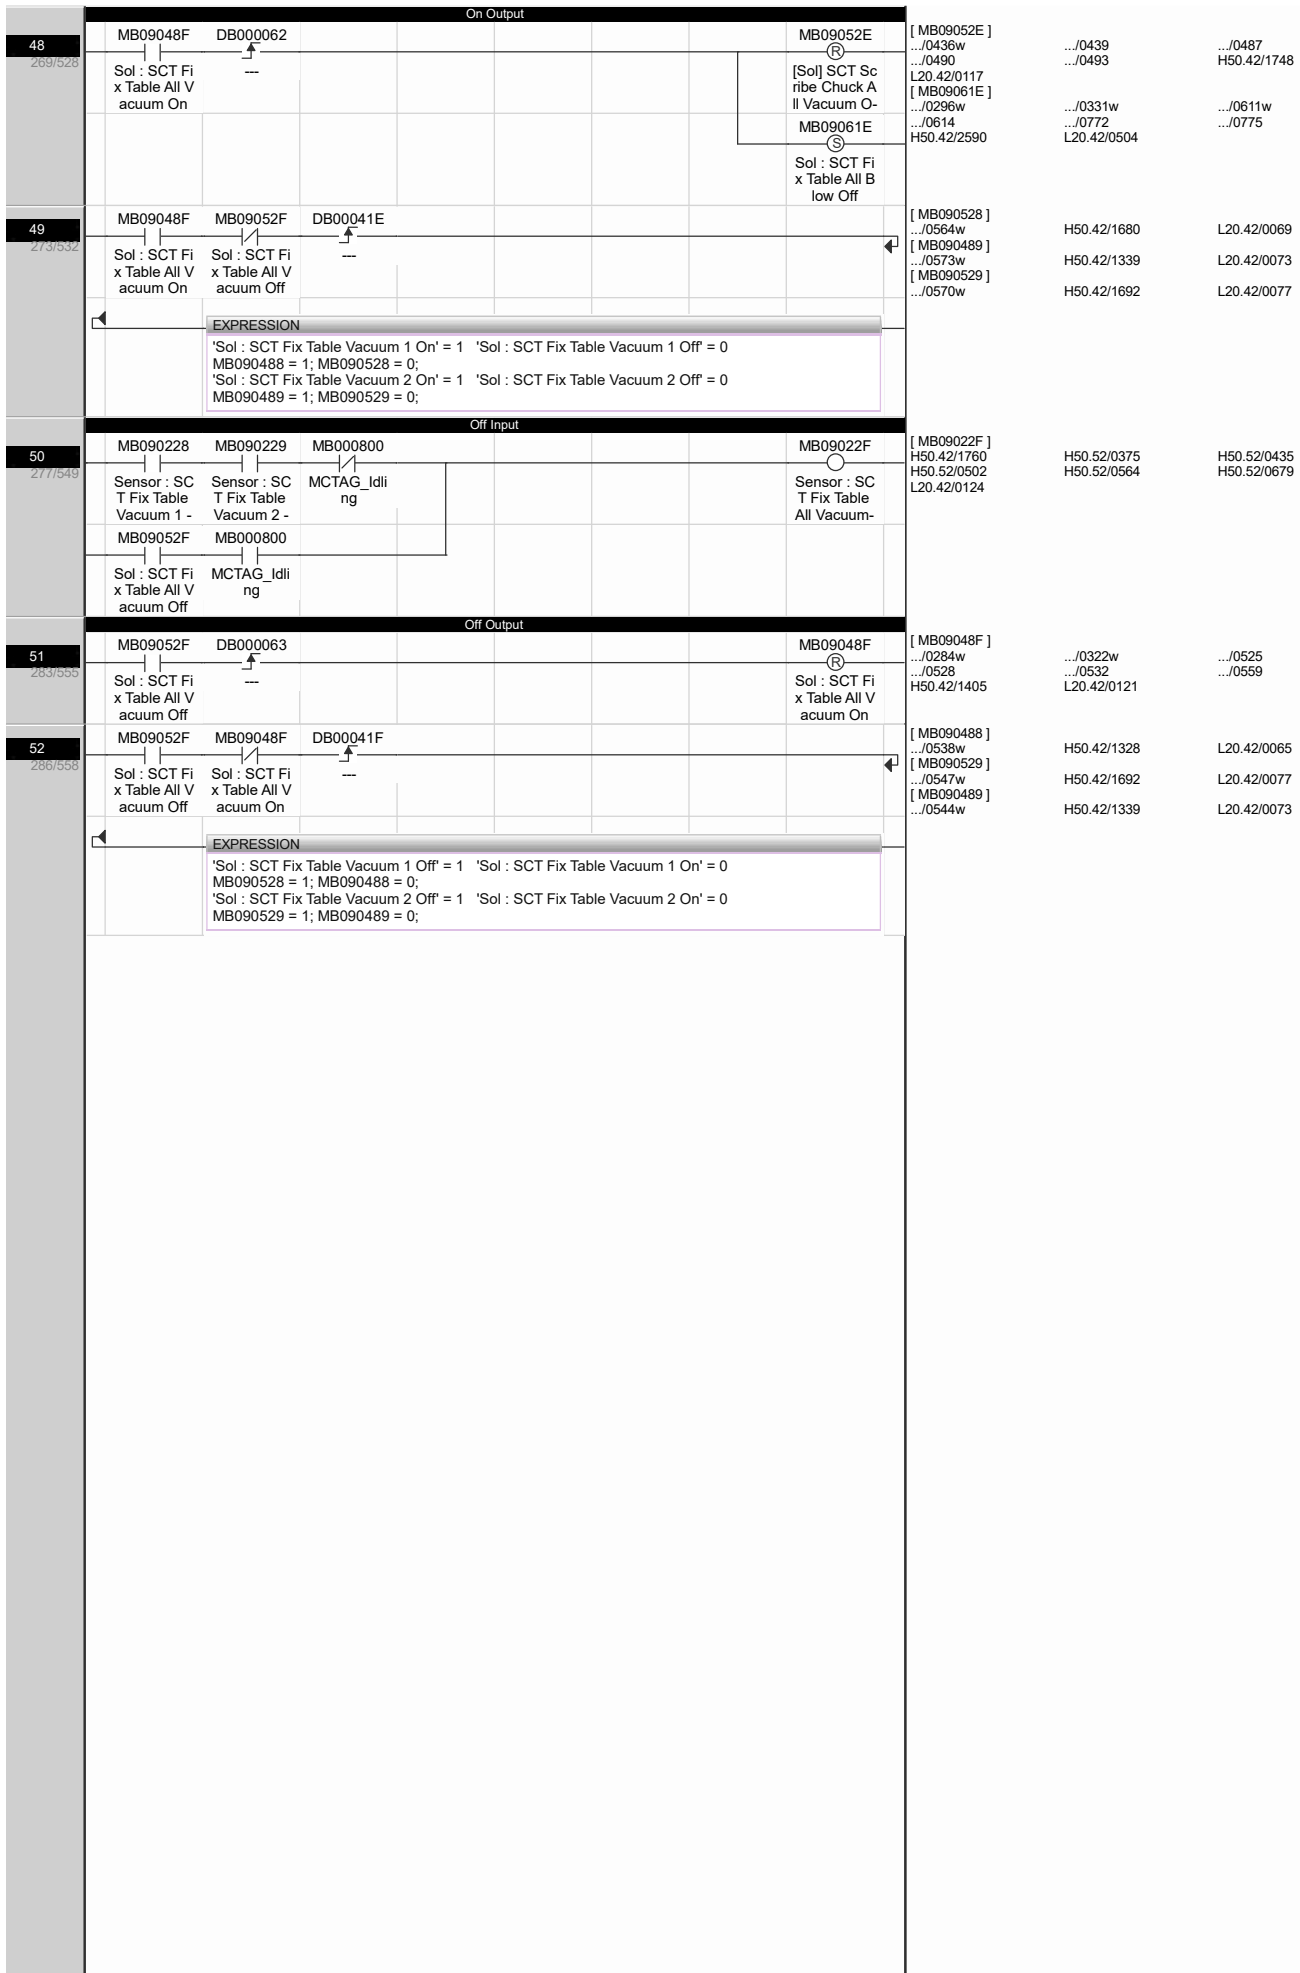

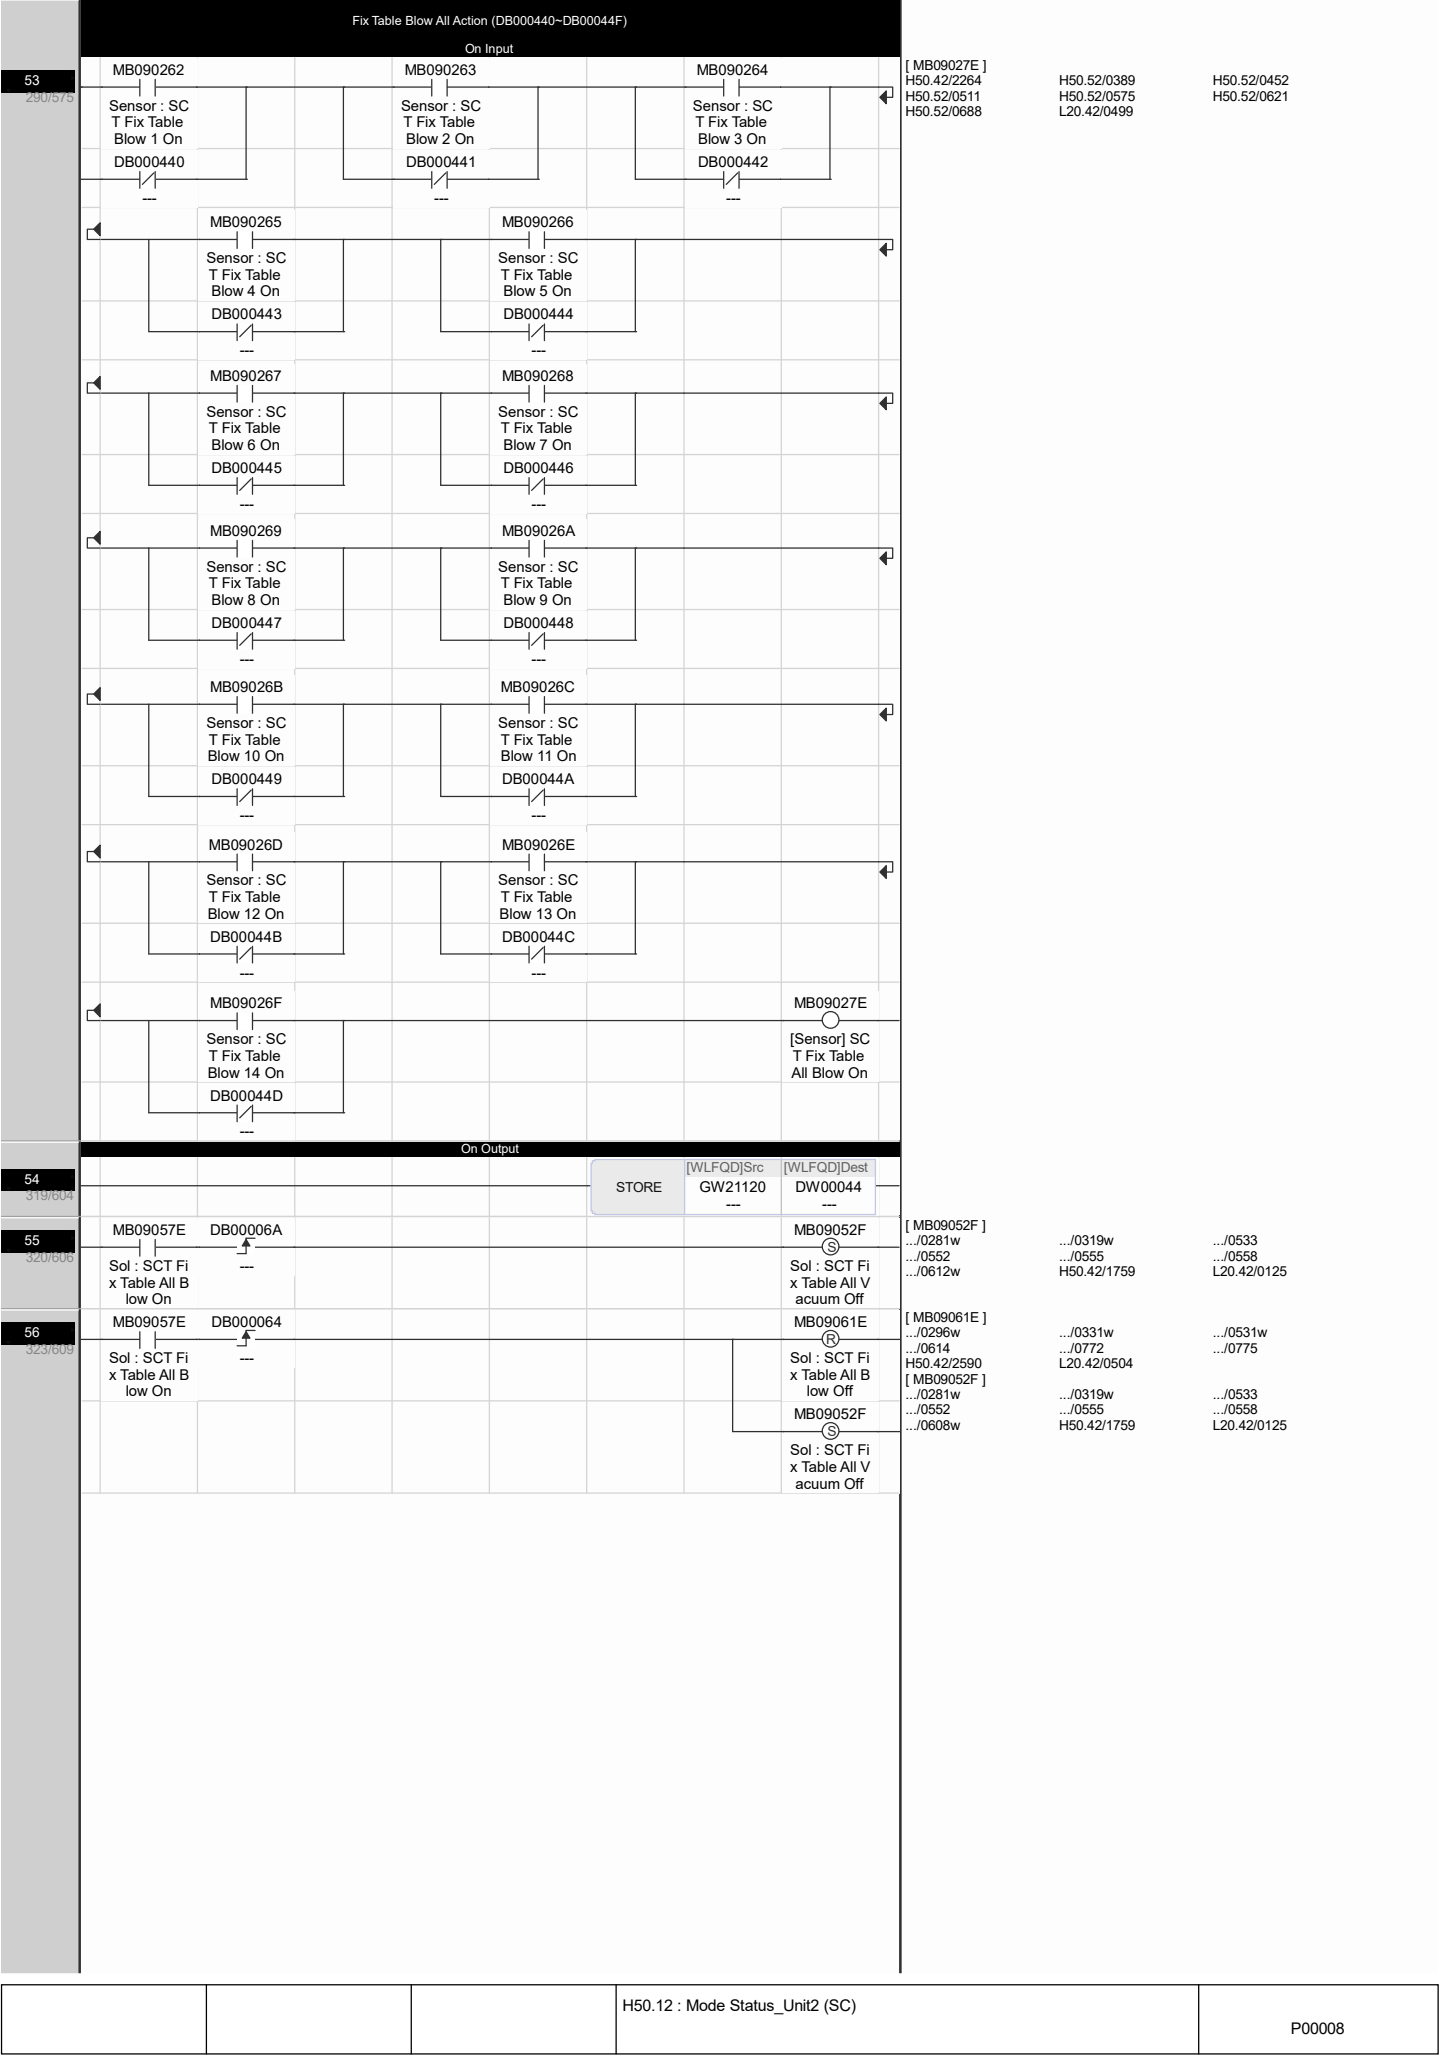





[MB09031E
H50.42/2591


[MB09057E
.../0293w
.../0609
H50.42/2263

58 358/757

59 373/772

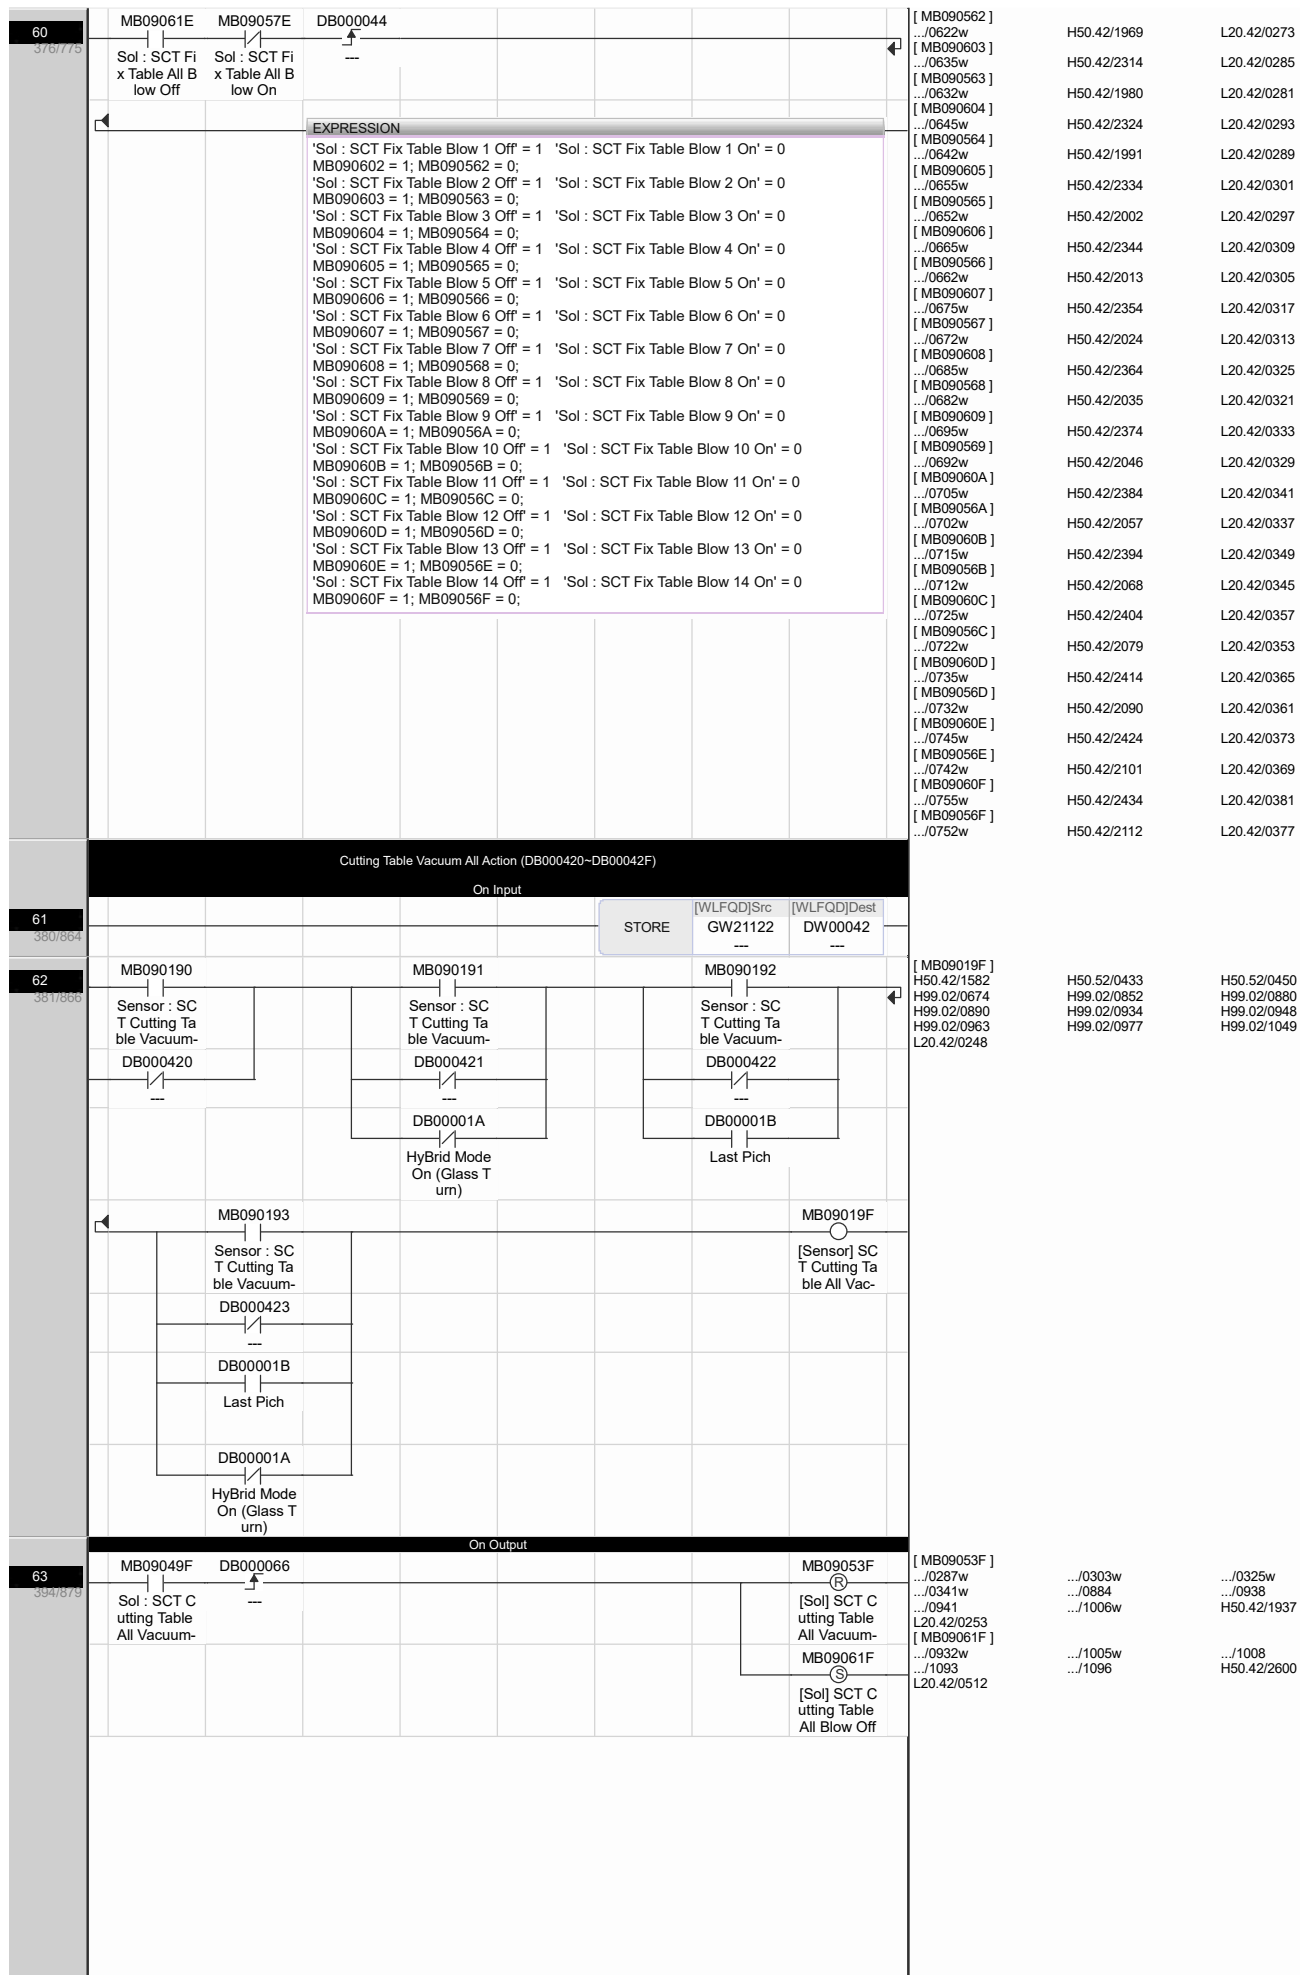

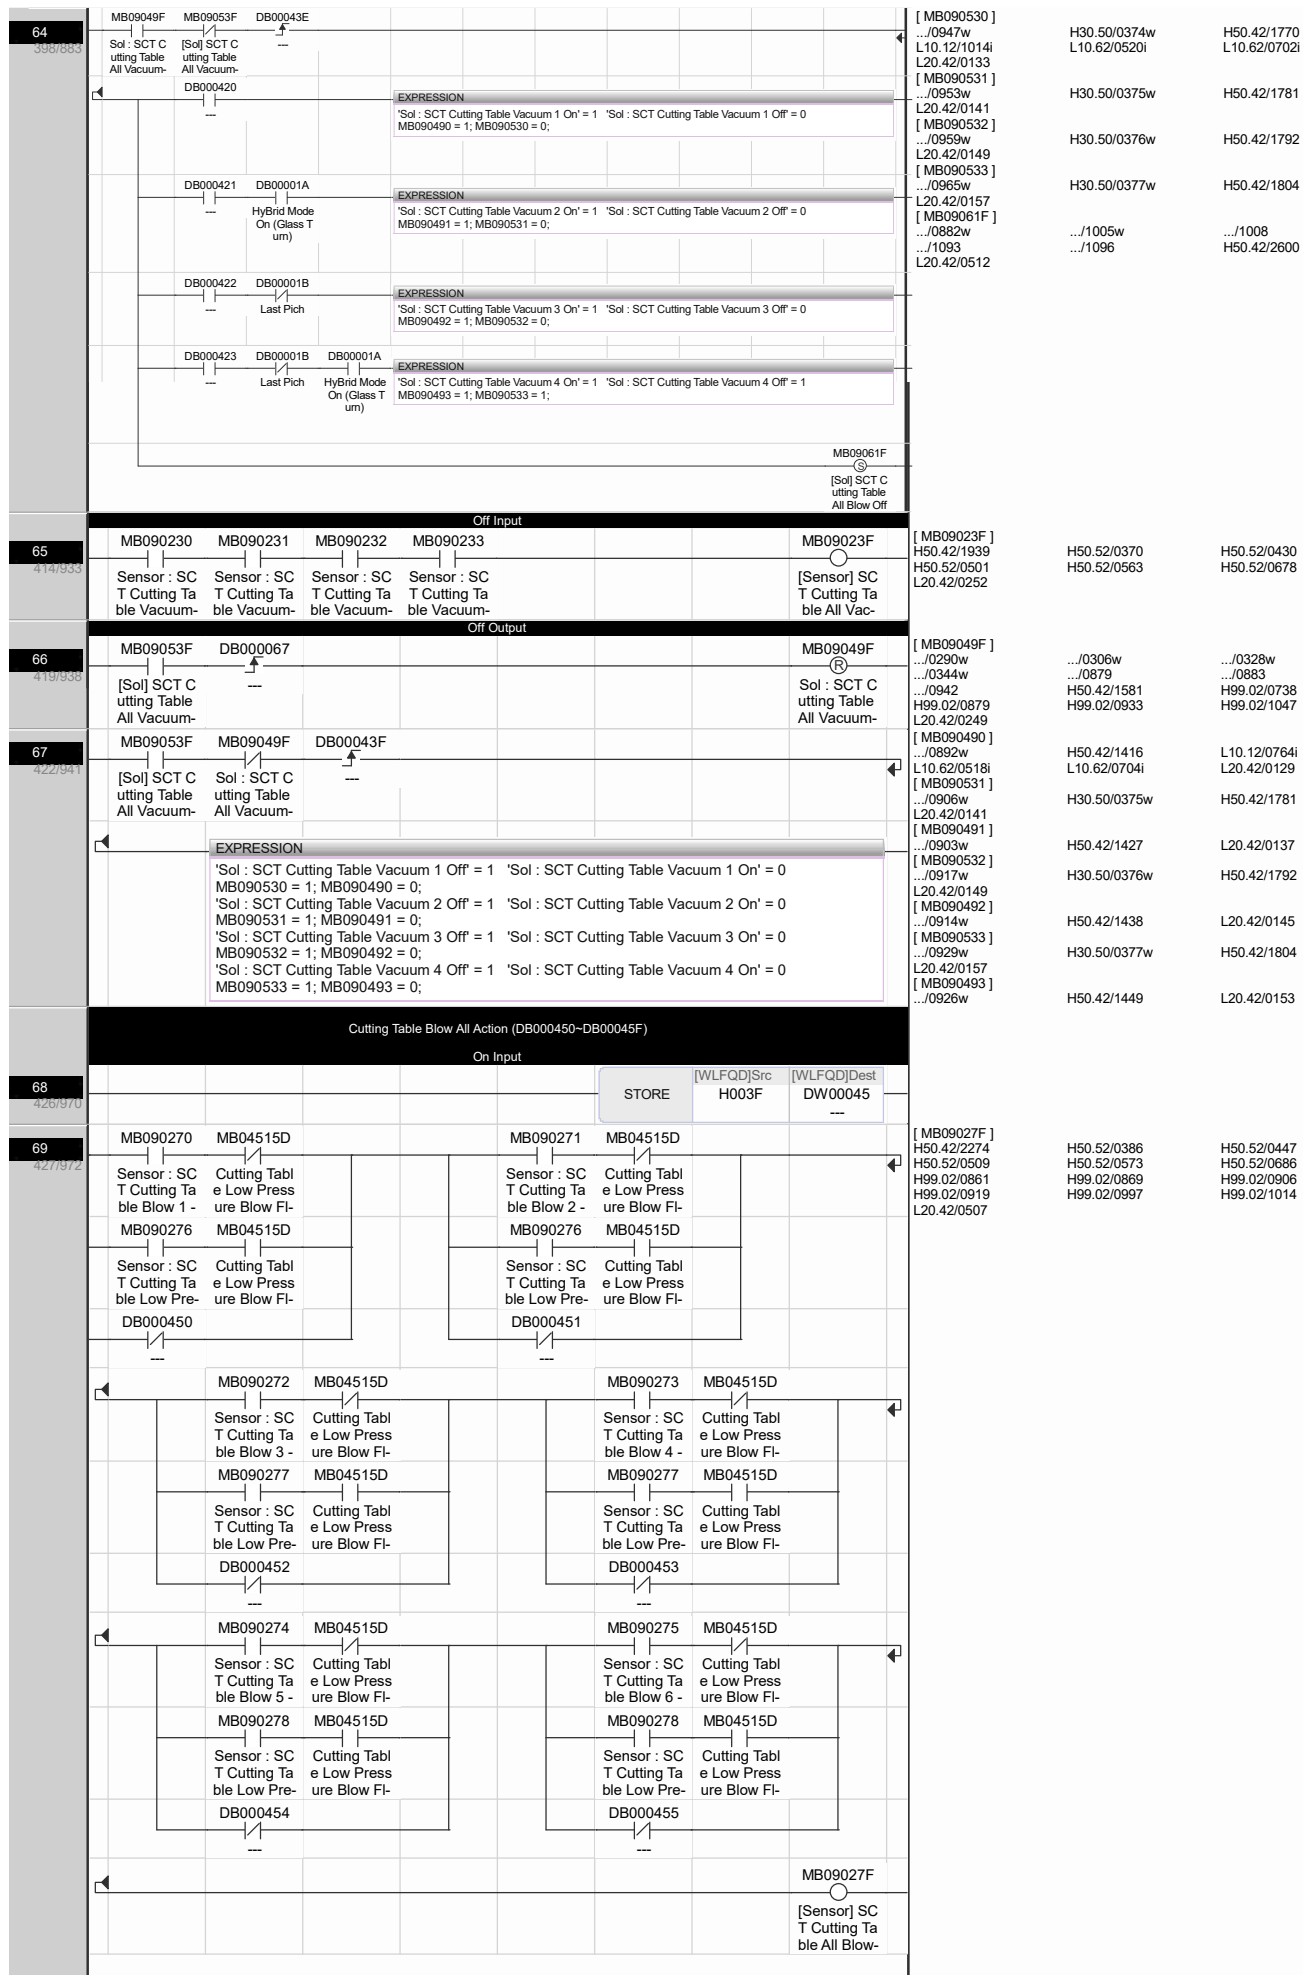

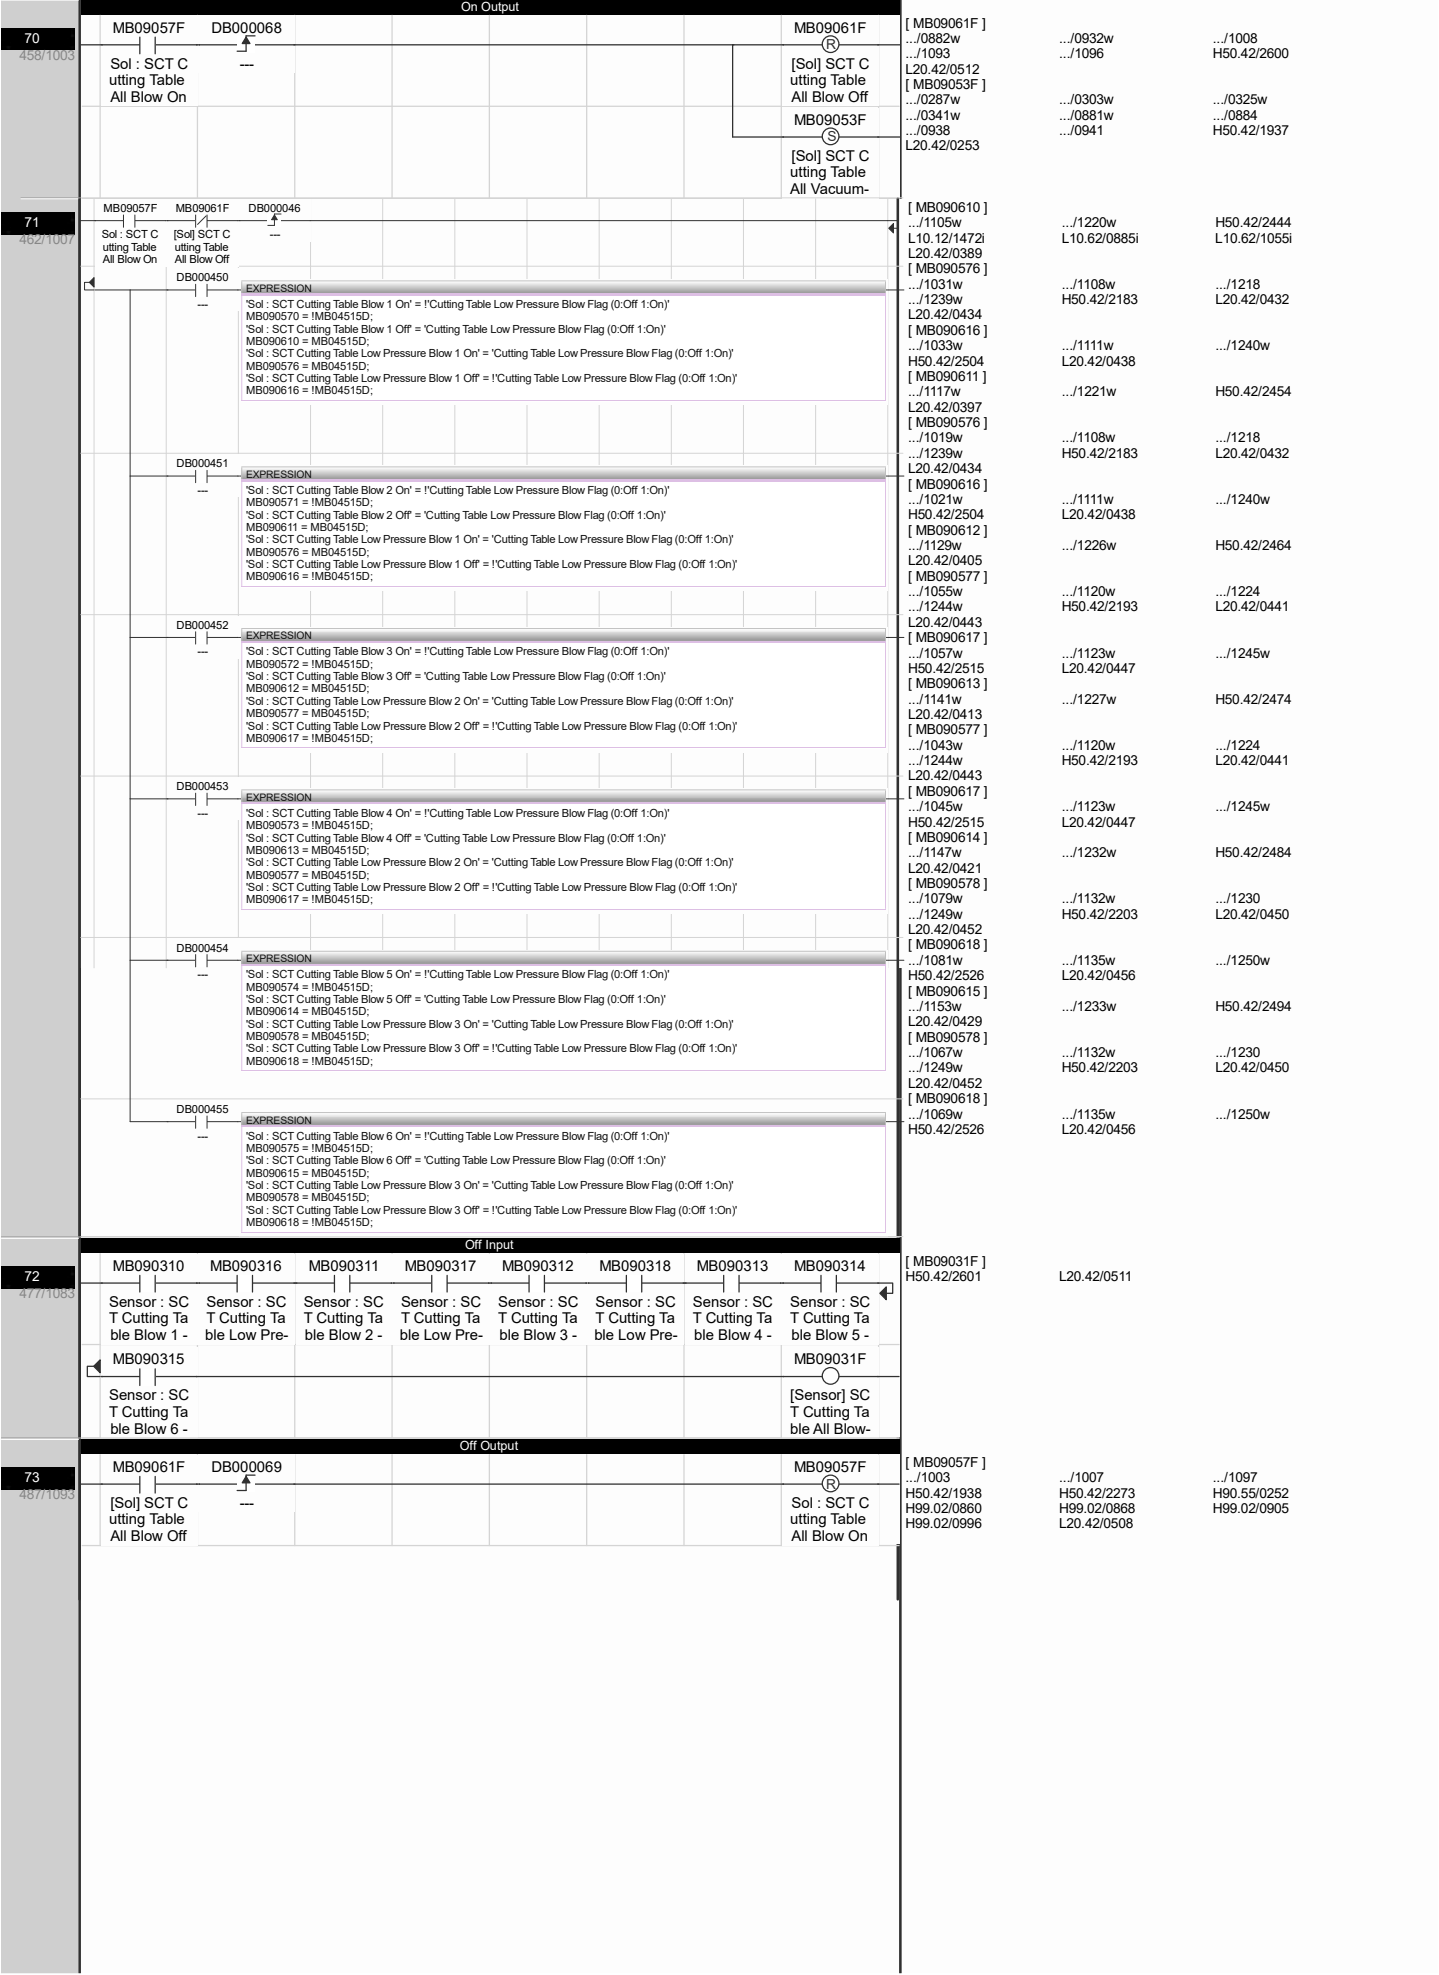

74 490/1030	MB09051FMB09057FDB00006B Sol : SCT Cutting Table All Blow OffSol : SCT Cutting Table All Blow On										[MB090610] .../1017w L10.12/1472 L20.42/0389			.../1220w L10.62/0885i H50.42/2444 L10.62/1055i		
	EXPRESSION 'Sol : SCT Cutting Table Blow 1 On' = 0 'Sol : SCT Cutting Table Blow 1 Off' = 1 MB090570 = 0; MB090510 = 1; MB090576 = 0; MB090516 = 1; 'Sol : SCT Cutting Table Blow 2 On' = 0 'Sol : SCT Cutting Table Blow 2 Off' = 1 MB090571 = 0; MB090511 = 1; MB090577 = 0; MB090517 = 1; 'Sol : SCT Cutting Table Blow 3 On' = 0 'Sol : SCT Cutting Table Blow 3 Off' = 1 MB090572 = 0; MB090512 = 1; MB090578 = 0; MB090518 = 1; 'Sol : SCT Cutting Table Blow 4 On' = 0 'Sol : SCT Cutting Table Blow 4 Off' = 1 MB090573 = 0; MB090513 = 1; 'Sol : SCT Cutting Table Blow 5 On' = 0 'Sol : SCT Cutting Table Blow 5 Off' = 1 MB090574 = 0; MB090514 = 1; 'Sol : SCT Cutting Table Blow 6 On' = 0 'Sol : SCT Cutting Table Blow 6 Off' = 1 MB090575 = 0; MB090515 = 1; 'Cutting Table Low Pressure Blow Flag (Off 1-On)' = 0 MB04515D = 0;										[MB090576] .../1019w .../1239w L20.42/0434 [MB090616] .../1021w H50.42/2504 [MB090571] .../1027w H50.42/2133 [MB090611] .../1029w L20.42/0397 [MB090577] .../1043w .../1244w L20.42/0443 [MB090617] .../1045w H50.42/2515 [MB090572] .../1039w H50.42/2143 [MB090612] .../1041w L20.42/0405 [MB090578] .../1067w .../1249w L20.42/0452 [MB090618] .../1069w H50.42/2526 [MB090573] .../1051w H50.42/2153 [MB090613] .../1053w L20.42/0413 [MB090574] .../1063w H50.42/2163 [MB090614] .../1065w L20.42/0421 [MB090575] .../1075w H50.42/2173 [MB090615] .../1077w L20.42/0429 [MB04515D] .../0973 .../0980 .../0988 .../0995 .../1014 .../1020 .../1030 .../1040 .../1050 .../1056 .../1066 .../1076			.../1031w H50.42/2183 .../1218 L20.42/0432 .../1033w L20.42/0438 .../1223w L20.42/0393 .../1221w H50.42/2454 .../1055w H50.42/2193 .../1224 L20.42/0441 .../1057w L20.42/0447 .../1228w L20.42/0401 .../1226w H50.42/2464 .../1079w H50.42/2203 .../1230 L20.42/0450 .../1081w L20.42/0456 .../1250w .../1229w L20.42/0409 .../1227w H50.42/2474 .../1234w L20.42/0417 .../1232w H50.42/2484 .../1235w L20.42/0425 .../1247 H50.42/2494 .../0975 .../0983 .../0990 .../0998 .../1016 .../1026 .../1032 .../1042 .../1052 .../1062 .../1068 .../1078		
75 494/1159	Fix Table Brush All Action (DB000460~DB00046F) Down Input MB090100MB090101 Sensor : SCT Fix Table Brush Down-Sensor : SCT Fix Table Brush Down-										[MB09010D] H50.42/0206			H99.02/0639 L20.42/0619		
	76 497/1161	Down Output MB09040DDB000090 Sol : SCT Fix Table Brush Down---										[MB090400] .../1175w L10.52/0011w L20.42/0516 [MB090401] .../1176w [MB090440] .../1173w L10.52/0009i L20.42/0520 [MB090441] .../1174w [MB09044D] .../1171 L20.42/0624			H50.42/0088 L10.62/0006i H50.42/0097 L20.42/0524 H50.42/0664 L10.62/0008i H50.42/0673 L20.42/0528 H50.42/0781 H99.02/0807	
77 504/1168		Up Input MB090140MB090141 Sensor : SCT Fix Table Brush Up (L)Sensor : SCT Fix Table Brush Up (R)										[MB09014D] H50.42/0782			H99.02/0808 L20.42/0623	

Down Output									
78 507/1171	MB09044D	DB000091						MB090440	[MB090440] .../1165w
	Sol : SCT Fi x Table Brus h Up	---						Sol : SCT Fi x Table Brus h Up (L)	H50.42/0664 L10.62/0008i
								MB090441	[MB090441] .../1166w
								Sol : SCT Fi x Table Brus h Up (R)	H50.42/0673
								MB090400	[MB090400] .../1163w
								Sol : SCT Fi x Table Brus h Up (R)	H50.42/0088 L10.62/0006i
								MB090400	[MB090401] .../1164w
79 514/1178	Cutting Table Brush All Action (DB000470~DB00047F)								
	Down Input								
	MB090102	MB090103						MB09010E	[MB09010E] H50.42/0215
	Sensor : SC T Cutting Ta ble Brush D-	Sensor : SC T Cutting Ta ble Brush D-						Sensor : SC T Cutting Ta ble Brush D-	L20.42/0627
	Down Output								
	MB09040E	DB000092						MB090402	[MB090402] .../1195w
	Sol : SCT C utting Table Brush Down	---						Sol : SCT C utting Table Brush Down-	H50.42/0106
80 517/1181								MB090403	[MB090403] .../1196w
								MB090403	[MB090442] .../1193w
								MB090403	[MB090443] .../1194w
								Sol : SCT C utting Table Brush Down-	H50.42/0682
								MB090442	[MB09044E] .../1191
								Sol : SCT C utting Table Brush Up (L)	H50.42/0691
								MB090443	L20.42/0544
81 524/1185								Sol : SCT C utting Table Brush Up (R)	L20.42/0632
								MB09044E	
								Sol : SCT C utting Table Brush Up	
	Up Input								
	MB090142	MB090143						MB09014E	[MB09014E] H50.42/0791
	Sensor : SC T Cutting Ta ble Brush U-	Sensor : SC T Cutting Ta ble Brush U-						Sensor : SC T Cutting Ta ble Brush Up	L20.42/0631
	Down Output								
82 527/1191	MB09044E	DB000093						MB090442	[MB090442] .../1185w
	Sol : SCT C utting Table Brush Up	---						Sol : SCT C utting Table Brush Up (L)	H50.42/0682
								MB090443	[MB090443] .../1186w
								MB090402	H50.42/0691
								MB090403	[MB090402] .../1183w
								Sol : SCT C utting Table Brush Up (R)	H50.42/0106
								MB090402	[MB090403] .../1184w
83 534/1195								MB090402	[MB09040E] .../1181
								Sol : SCT C utting Table Brush Down-	H50.42/0214
								MB090403	L20.42/0536
								Sol : SCT C utting Table Brush Down-	L20.42/0544
								MB09040E	L20.42/0532
								Sol : SCT C utting Table Brush Down-	L20.42/0540
								MB09040E	L20.42/0628
Dummy Shutter Brush All Action (DB000480~DB00048F)									
Down Input									
	MB090104	MB090105						MB09010F	[MB09010F] H50.42/0224
	Sensor : SC T Dummy Sh utter Fwd (L)	Sensor : SC T Dummy Sh utter Fwd (R)						Sensor : SC T Dummy Sh utter Fwd	L20.42/0635

84 537/1201	MB09040F	DB000094					MB090404	[MB090404] .../1215w L20.42/0548	H50.42/0124	H90.60/0073w
	Sol : SCT Dummy Shutter Fwd	--					Sol : SCT Dummy Shutter Fwd (L)	[MB090405] .../1216w L20.42/0556	H50.42/0133	H90.60/0074w
							MB090405	[MB090444] .../1213w H90.60/0081w	H50.42/0700	H90.60/0077w
							Sol : SCT Dummy Shutter Fwd (R)	[MB090445] .../1214w H90.60/0082w	H50.42/0709	H90.60/0078w
							MB090444	[MB09044F] .../1211	H50.42/0799	L20.42/0640
							Sol : SCT Dummy Shutter Bwd (L)			
							MB090445			
							Sol : SCT Dummy Shutter Bwd (R)			
85 543/1203	MB090144	MB090145					MB09014F	[MB09014F] H50.42/0800	L20.42/0639	
	Sensor : SCT Dummy Shutter Bwd (L)	Sensor : SCT Dummy Shutter Bwd (-)					Sensor : SCT Dummy Shutter Bwd			
86 547/1211	MB09044F	DB000095					MB090444	[MB090444] .../1205w H90.60/0081w	H50.42/0700	H90.60/0077w
	Sol : SCT Dummy Shutter Bwd	--					Sol : SCT Dummy Shutter Bwd (L)	[MB090445] .../1206w H90.60/0082w	H50.42/0709	H90.60/0078w
							MB090445	[MB090404] .../1203w L20.42/0548	H50.42/0124	H90.60/0073w
							Sol : SCT Dummy Shutter Bwd (R)	[MB090405] .../1204w L20.42/0556	H50.42/0133	H90.60/0074w
							MB090404	[MB09040F] .../1201	H50.42/0223	L20.42/0636
							Sol : SCT Dummy Shutter Fwd (L)			
							MB090405			
							Sol : SCT Dummy Shutter Fwd (R)			
87 534/1213	MB090576	DB000070					MB090610	[MB090610] .../1017w L10.12/1472i L20.42/0389	.../1105w L10.62/0885i	H50.42/2444 L10.62/1055i
	Sol : SCT Cutting Table Low Pressu-	--					Sol : SCT Cutting Table Blow 1 Off	[MB090611] .../1029w L20.42/0397	.../1117w	H50.42/2454
							MB090611	[MB090570] .../1015w H50.42/2123	.../1102w L10.12/1250i L20.42/0385	.../1236 L10.62/0883i
							Sol : SCT Cutting Table Blow 2 Off	[MB090571] .../1027w H50.42/2133	.../1114w L20.42/0393	.../1237
							MB090570			
							Sol : SCT Cutting Table Blow 1 On			
							MB090571			
							Sol : SCT Cutting Table Blow 2 On			
88 560/1224	MB090577	DB000071					MB090612	[MB090612] .../1041w L20.42/0405	.../1129w	H50.42/2464
	Sol : SCT Cutting Table Low Pressu-	--					Sol : SCT Cutting Table Blow 3 Off	[MB090613] .../1053w L20.42/0413	.../1141w	H50.42/2474
							MB090613	[MB090572] .../1039w H50.42/2143	.../1126w L20.42/0401	.../1241
							Sol : SCT Cutting Table Blow 4 Off	[MB090573] .../1051w H50.42/2153	.../1138w L20.42/0409	.../1242
							MB090572			
							Sol : SCT Cutting Table Blow 3 On			
							MB090573			
							Sol : SCT Cutting Table Blow 4 On			
--> Will Edit Again										

H50.12 : Mode Status_Unit2 (SC)

P00015

