


		L80.11:BTN Interlock_Unit9 (SBT)				
		ManualEnable(Sol)				
		=====				
		Vacuum				
		=====				
		Manual Interlock(Sol) (56.00)				
		Stick Buffer Table Area1 Vacuum On				
0	0/0	MB000080			MB877920	[MB877920] L20.59/0000
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.01)				
		Stick Buffer Table Area1 Vacuum Off				
1	2/2	MB000080			MB877930	[MB877930] L20.59/0002
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.02)				
		Stick Buffer Table Area2 Vacuum On				
2	4/4	MB000080			MB877940	[MB877940] L20.59/0004
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.03)				
		Stick Buffer Table Area2 Vacuum Off				
3	6/6	MB000080			MB877950	[MB877950] L20.59/0006
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.04)				
		Stick Buffer Table Area3 Vacuum On				
4	8/8	MB000080			MB877960	[MB877960] L20.59/0008
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.05)				
		Stick Buffer Table Area3 Vacuum Off				
5	10/10	MB000080			MB877970	[MB877970] L20.59/0010
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.06)				
		Stick Buffer Table Area4 Vacuum On				
6	12/12	MB000080			MB877980	[MB877980] L20.59/0012
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.07)				
		Stick Buffer Table Area4 Vacuum Off				
7	14/14	MB000080			MB877990	[MB877990] L20.59/0014
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.08)				
		Stick Buffer Table Area5 Vacuum On				
8	16/16	MB000080			MB878000	[MB878000] L20.59/0016
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.09)				
		Stick Buffer Table Area5 Vacuum Off				
9	18/18	MB000080			MB878010	[MB878010] L20.59/0018
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.10)				
		Stick Buffer Table Area6 Vacuum On				
10	20/20	MB000080			MB878020	[MB878020] L20.59/0020
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.11)				
		Stick Buffer Table Area6 Vacuum Off				
11	22/22	MB000080			MB878030	[MB878030] L20.59/0022
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.12)				
12	24/24	MB000080			MB878040	[MB878040] L20.59/0024
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.13)				
13	26/26	MB000080			MB878050	[MB878050] L20.59/0026
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.14)				
14	28/28	MB000080			MB878060	[MB878060] L20.59/0028
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.15)				
15	30/30	MB000080			MB878070	[MB878070] L20.59/0030
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.16)				
16	32/32	MB000080			MB878080	[MB878080] L20.59/0032
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.17)				
17	34/34	MB000080			MB878090	[MB878090] L20.59/0034
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.18)				
18	36/36	MB000080			MB878100	[MB878100] L20.59/0036
		Manual comm on IL(Sol)			---	
		Manual Interlock(Sol) (56.19)				
19	38/38	MB000080			MB878110	[MB878110] L20.59/0038
		Manual comm on IL(Sol)			---	

		Manual Interlock(Sol) (56.20)						
20	40/40	MB000080					MB878120	
		Manual comm on IL(Sol)					---	[MB878120] L20.59/0040
		Manual Interlock(Sol) (56.21)						
21	42/42	MB000080					MB878130	
		Manual comm on IL(Sol)					---	[MB878130] L20.59/0042
		Manual Interlock(Sol) (56.22)						
22	44/44	MB000080					MB878140	
		Manual comm on IL(Sol)					---	[MB878140] L20.59/0044
		Manual Interlock(Sol) (56.23)						
23	46/46	MB000080					MB878150	
		Manual comm on IL(Sol)					---	[MB878150] L20.59/0046
		Manual Interlock(Sol) (56.24)						
24	48/48	MB000080					MB878160	
		Manual comm on IL(Sol)					---	[MB878160] L20.59/0048
		Manual Interlock(Sol) (56.25)						
25	50/50	MB000080					MB878170	
		Manual comm on IL(Sol)					---	[MB878170] L20.59/0050
		Manual Interlock(Sol) (56.26)						
26	52/52	MB000080					MB878180	
		Manual comm on IL(Sol)					---	[MB878180] L20.59/0052
		Manual Interlock(Sol) (56.27)						
27	54/54	MB000080					MB878190	
		Manual comm on IL(Sol)					---	[MB878190] L20.59/0054
		Manual Interlock(Sol) (56.28)						
28	56/56	MB000080					MB878200	
		Manual comm on IL(Sol)					---	[MB878200] L20.59/0056
		Manual Interlock(Sol) (56.29)						
29	58/58	MB000080					MB878210	
		Manual comm on IL(Sol)					---	[MB878210] L20.59/0058
		Manual Interlock(Sol) (56.30)						
30	60/60	MB000080					MB878220	
		Manual comm on IL(Sol)					---	[MB878220] L20.59/0060
		Manual Interlock(Sol) (56.31)						
31	62/62	MB000080					MB878230	
		Manual comm on IL(Sol)					---	[MB878230] L20.59/0062
		Manual Interlock(Sol) (57.00)						
32	64/64	MB000080					MB878240	
		Manual comm on IL(Sol)					---	[MB878240] L20.59/0064
		Manual Interlock(Sol) (57.01)						
33	66/66	MB000080					MB878250	
		Manual comm on IL(Sol)					---	[MB878250] L20.59/0066
		Manual Interlock(Sol) (57.02)						
34	68/68	MB000080					MB878260	
		Manual comm on IL(Sol)					---	[MB878260] L20.59/0068
		Manual Interlock(Sol) (57.03)						
35	70/70	MB000080					MB878270	
		Manual comm on IL(Sol)					---	[MB878270] L20.59/0070
		Manual Interlock(Sol) (57.04)						
36	72/72	MB000080					MB878280	
		Manual comm on IL(Sol)					---	[MB878280] L20.59/0072
		Manual Interlock(Sol) (57.05)						
37	74/74	MB000080					MB878290	
		Manual comm on IL(Sol)					---	[MB878290] L20.59/0074
		Manual Interlock(Sol) (57.06)						
38	76/76	MB000080					MB878300	
		Manual comm on IL(Sol)					---	[MB878300] L20.59/0076
		Manual Interlock(Sol) (57.07)						
39	78/78	MB000080					MB878310	
		Manual comm on IL(Sol)					---	[MB878310] L20.59/0078
		Manual Interlock(Sol) (57.08)						
40	80/80	MB000080					MB878320	
		Manual comm on IL(Sol)					---	[MB878320] L20.59/0080
		Manual Interlock(Sol) (57.09)						
41	82/82	MB000080					MB878330	
		Manual comm on IL(Sol)					---	[MB878330] L20.59/0082
		Manual Interlock(Sol) (57.10)						
42	84/84	MB000080					MB878340	
		Manual comm on IL(Sol)					---	[MB878340] L20.59/0084

		Manual Interlock(Sol) (57.11)					
43	86/86	MB000080					MB878350
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.12)					
44	88/88	MB000080					MB878360
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.13)					
45	90/90	MB000080					MB878370
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.14)					
46	92/92	MB000080					MB878380
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.15)					
47	94/94	MB000080					MB878390
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.16)					
48	96/96	MB000080					MB878400
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.17)					
49	98/98	MB000080					MB878410
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.18)					
50	100/100	MB000080					MB878420
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.19)					
51	102/102	MB000080					MB878430
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.20)					
52	104/104	MB000080					MB878440
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.21)					
53	106/106	MB000080					MB878450
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.22)					
54	108/108	MB000080					MB878460
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.23)					
55	110/110	MB000080					MB878470
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.24)					
56	112/112	MB000080					MB878480
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.25)					
57	114/114	MB000080					MB878490
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.26)					
58	116/116	MB000080					MB878500
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.27)					
59	118/118	MB000080					MB878510
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.28)					
60	120/120	MB000080					MB878520
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.29)					
61	122/122	MB000080					MB878530
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.30) Stick Buffer Table Area All Vacuum On					
62	124/124	MB000080					MB878540
		Manual comm on IL(Sol)					---
		Manual Interlock(Sol) (57.31) Stick Buffer Table Area All Vacuum Off					
63	126/126	MB000080					MB878550
		Manual comm on IL(Sol)					---
		Blow					
		Manual Interlock(Sol) (58.00) Stick Buffer Table Vacuum Break On					
64	128/128	MB000080					MB878560
		Manual comm on IL(Sol)					---

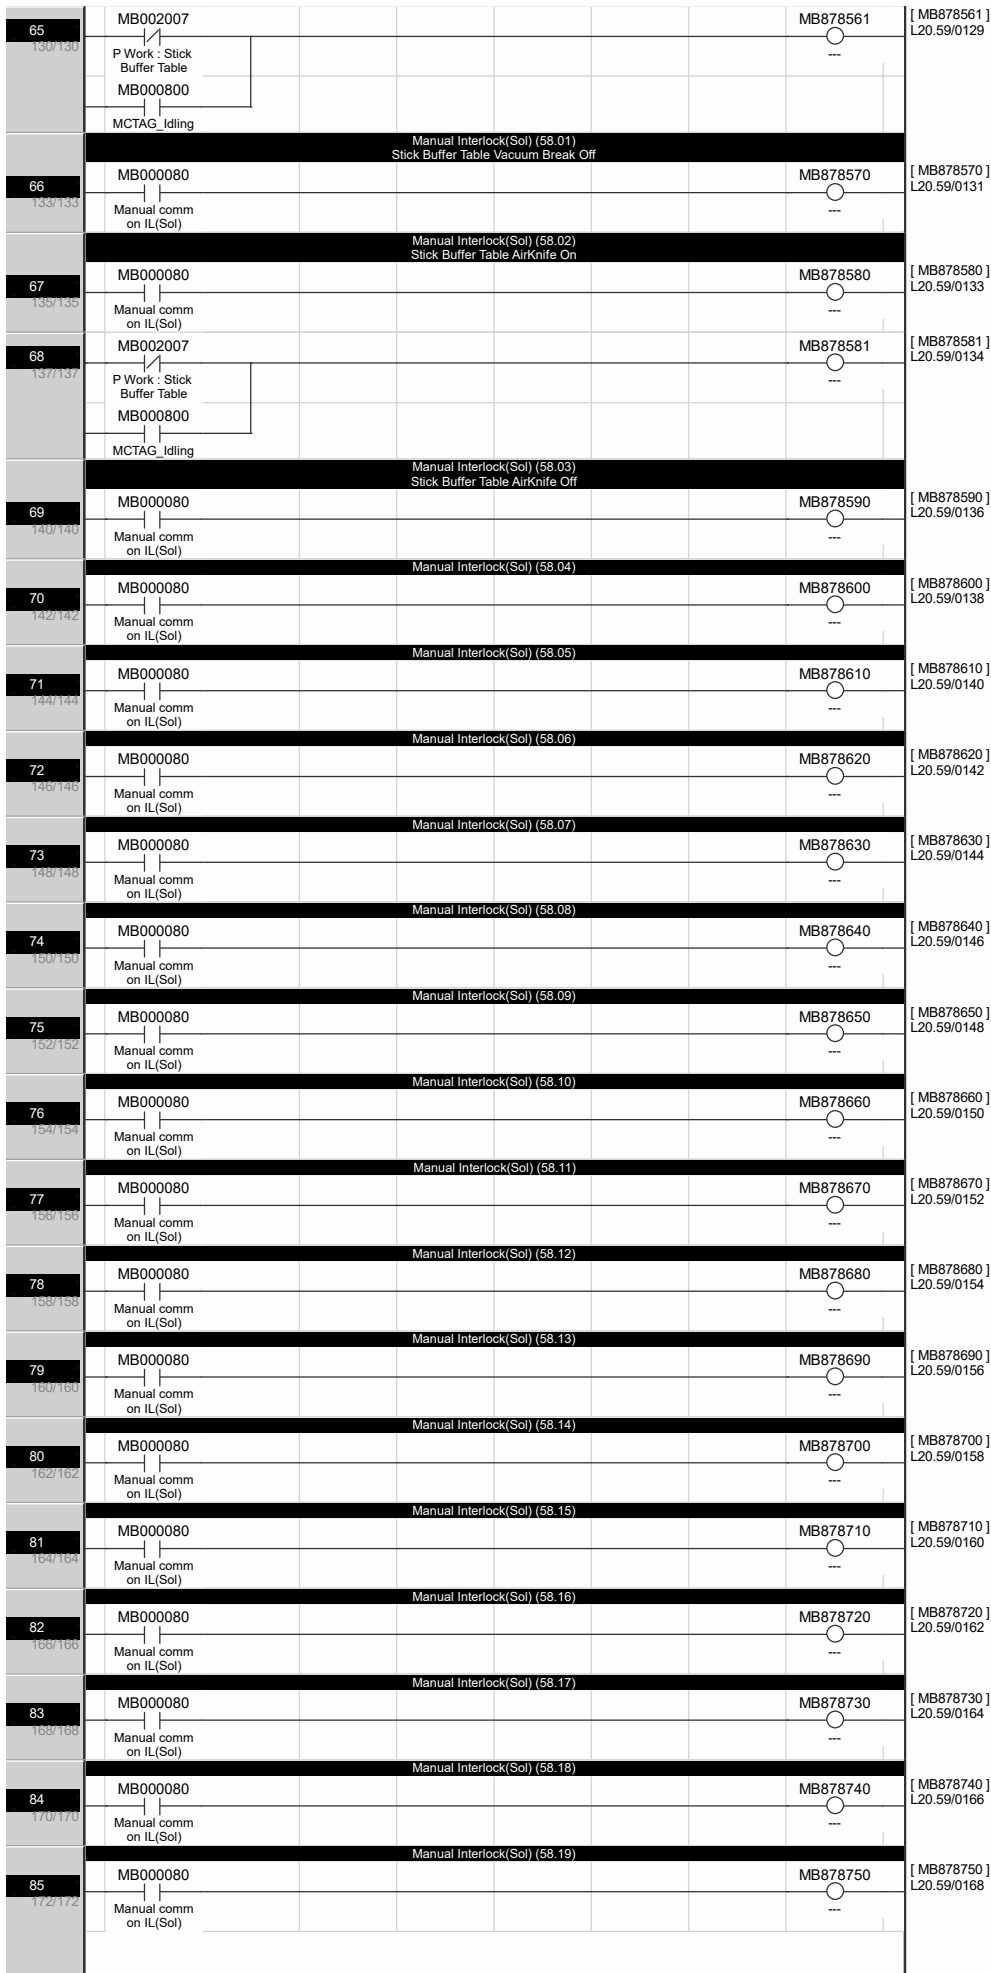

		Manual Interlock(Sol) (58.20)						
86	174/174	MB000080					MB878760	
		Manual comm on IL(Sol)					---	[MB878760] L20.59/0170
		Manual Interlock(Sol) (58.21)						
87	176/176	MB000080					MB878770	
		Manual comm on IL(Sol)					---	[MB878770] L20.59/0172
		Manual Interlock(Sol) (58.22)						
88	178/178	MB000080					MB878780	
		Manual comm on IL(Sol)					---	[MB878780] L20.59/0174
		Manual Interlock(Sol) (58.23)						
89	180/180	MB000080					MB878790	
		Manual comm on IL(Sol)					---	[MB878790] L20.59/0176
		Manual Interlock(Sol) (58.24)						
90	182/182	MB000080					MB878800	
		Manual comm on IL(Sol)					---	[MB878800] L20.59/0178
		Manual Interlock(Sol) (58.25)						
91	184/184	MB000080					MB878810	
		Manual comm on IL(Sol)					---	[MB878810] L20.59/0180
		Manual Interlock(Sol) (58.26)						
92	186/186	MB000080					MB878820	
		Manual comm on IL(Sol)					---	[MB878820] L20.59/0182
		Manual Interlock(Sol) (58.27)						
93	188/188	MB000080					MB878830	
		Manual comm on IL(Sol)					---	[MB878830] L20.59/0184
		Manual Interlock(Sol) (58.28)						
94	190/190	MB000080					MB878840	
		Manual comm on IL(Sol)					---	[MB878840] L20.59/0186
		Manual Interlock(Sol) (58.29)						
95	192/192	MB000080					MB878850	
		Manual comm on IL(Sol)					---	[MB878850] L20.59/0188
		Manual Interlock(Sol) (58.30)						
96	194/194	MB000080					MB878860	
		Manual comm on IL(Sol)					---	[MB878860] L20.59/0190
		Manual Interlock(Sol) (58.31)						
97	196/196	MB000080					MB878870	
		Manual comm on IL(Sol)					---	[MB878870] L20.59/0192
		Manual Interlock(Sol) (59.00)						
98	198/198	MB000080					MB878880	
		Manual comm on IL(Sol)					---	[MB878880] L20.59/0194
		Manual Interlock(Sol) (59.01)						
99	200/200	MB000080					MB878890	
		Manual comm on IL(Sol)					---	[MB878890] L20.59/0196
		Manual Interlock(Sol) (59.02)						
100	202/202	MB000080					MB878900	
		Manual comm on IL(Sol)					---	[MB878900] L20.59/0198
		Manual Interlock(Sol) (59.03)						
101	204/204	MB000080					MB878910	
		Manual comm on IL(Sol)					---	[MB878910] L20.59/0200
		Manual Interlock(Sol) (59.04)						
102	206/206	MB000080					MB878920	
		Manual comm on IL(Sol)					---	[MB878920] L20.59/0202
		Manual Interlock(Sol) (59.05)						
103	208/208	MB000080					MB878930	
		Manual comm on IL(Sol)					---	[MB878930] L20.59/0204
		Manual Interlock(Sol) (59.06)						
104	210/210	MB000080					MB878940	
		Manual comm on IL(Sol)					---	[MB878940] L20.59/0206
		Manual Interlock(Sol) (59.07)						
105	212/212	MB000080					MB878950	
		Manual comm on IL(Sol)					---	[MB878950] L20.59/0208
		Manual Interlock(Sol) (59.08)						
106	214/214	MB000080					MB878960	
		Manual comm on IL(Sol)					---	[MB878960] L20.59/0210
		Manual Interlock(Sol) (59.09)						
107	216/216	MB000080					MB878970	
		Manual comm on IL(Sol)					---	[MB878970] L20.59/0212
		Manual Interlock(Sol) (59.10)						
108	218/218	MB000080					MB878980	
		Manual comm on IL(Sol)					---	[MB878980] L20.59/0214

Manual Interlock(Sol) (59.11)									
109	MB000080							MB878990	[MB878990] L20.59/0216
220/220	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.12)									
110	MB000080							MB879000	[MB879000] L20.59/0218
222/222	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.13)									
111	MB000080							MB879010	[MB879010] L20.59/0220
224/224	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.14)									
112	MB000080							MB879020	[MB879020] L20.59/0222
226/226	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.15)									
113	MB000080							MB879030	[MB879030] L20.59/0224
228/228	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.16)									
114	MB000080							MB879040	[MB879040] L20.59/0226
230/230	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.17)									
115	MB000080							MB879050	[MB879050] L20.59/0228
232/232	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.18)									
116	MB000080							MB879060	[MB879060] L20.59/0230
234/234	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.19)									
117	MB000080							MB879070	[MB879070] L20.59/0232
236/236	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.20)									
118	MB000080							MB879080	[MB879080] L20.59/0234
238/238	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.21)									
119	MB000080							MB879090	[MB879090] L20.59/0236
240/240	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.22)									
120	MB000080							MB879100	[MB879100] L20.59/0238
242/242	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.23)									
121	MB000080							MB879110	[MB879110] L20.59/0240
244/244	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.24)									
122	MB000080							MB879120	[MB879120] L20.59/0242
246/246	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.25)									
123	MB000080							MB879130	[MB879130] L20.59/0244
248/248	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.26)									
124	MB000080							MB879140	[MB879140] L20.59/0246
250/250	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.27)									
125	MB000080							MB879150	[MB879150] L20.59/0248
252/252	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.28)									
126	MB000080							MB879160	[MB879160] L20.59/0250
254/254	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.29)									
127	MB000080							MB879170	[MB879170] L20.59/0252
256/256	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.30)									
128	MB000080							MB879180	[MB879180] L20.59/0254
258/258	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (59.31)									
129	MB000080							MB879190	[MB879190] L20.59/0256
260/260	Manual comm on IL(Sol)							---	
Cylinder									
Manual Interlock(Sol) (60.00) Stick Buffer Table Table Brush Up									
130	MB000080							MB879200	[MB879200] L20.59/0258
262/262	Manual comm on IL(Sol)							---	

Manual Interlock(Sol) (60.01) Stick Buffer Table Table Brush Down					
131	MB000080				MB879210
264/264	Manual comm on IL(Sol)				---
132	MB002007				MB879211
266/266	P Work : Stick Buffer Table				---
	MB000800				
	MCTAG_Idling				
Manual Interlock(Sol) (60.02)					
133	MB000080				MB879220
269/269	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.03)					
134	MB000080				MB879230
271/271	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.04)					
135	MB000080				MB879240
273/273	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.05)					
136	MB000080				MB879250
275/275	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.06)					
137	MB000080				MB879260
277/277	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.07)					
138	MB000080				MB879270
279/279	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.08)					
139	MB000080				MB879280
281/281	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.09)					
140	MB000080				MB879290
283/283	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.10)					
141	MB000080				MB879300
285/285	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.11)					
142	MB000080				MB879310
287/287	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.12)					
143	MB000080				MB879320
289/289	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.13)					
144	MB000080				MB879330
291/291	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.14)					
145	MB000080				MB879340
293/293	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.15)					
146	MB000080				MB879350
295/295	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.16)					
147	MB000080				MB879360
297/297	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.17)					
148	MB000080				MB879370
299/299	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.18)					
149	MB000080				MB879380
301/301	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.19)					
150	MB000080				MB879390
303/303	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.20)					
151	MB000080				MB879400
305/305	Manual comm on IL(Sol)				---
Manual Interlock(Sol) (60.21)					
152	MB000080				MB879410
307/307	Manual comm on IL(Sol)				---

[MB879210]
L20.59/0260[MB879211]
L20.59/0261[MB879220]
L20.59/0263[MB879230]
L20.59/0265[MB879240]
L20.59/0267[MB879250]
L20.59/0269[MB879260]
L20.59/0271[MB879270]
L20.59/0273[MB879280]
L20.59/0275[MB879290]
L20.59/0277[MB879300]
L20.59/0279[MB879310]
L20.59/0281[MB879320]
L20.59/0283[MB879330]
L20.59/0285[MB879340]
L20.59/0287[MB879350]
L20.59/0289[MB879360]
L20.59/0291[MB879370]
L20.59/0293[MB879380]
L20.59/0295[MB879390]
L20.59/0297[MB879400]
L20.59/0299[MB879410]
L20.59/0301

Manual Interlock(Sol) (60.22)									
153	MB000080							MB879420	[MB879420] L20.59/0303
309/309	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.23)									
154	MB000080							MB879430	[MB879430] L20.59/0305
311/311	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.24)									
155	MB000080							MB879440	[MB879440] L20.59/0307
313/313	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.25)									
156	MB000080							MB879450	[MB879450] L20.59/0309
315/315	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.26)									
157	MB000080							MB879460	[MB879460] L20.59/0311
317/317	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.27)									
158	MB000080							MB879470	[MB879470] L20.59/0313
319/319	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.28)									
159	MB000080							MB879480	[MB879480] L20.59/0315
321/321	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.29)									
160	MB000080							MB879490	[MB879490] L20.59/0317
323/323	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.30)									
161	MB000080							MB879500	[MB879500] L20.59/0319
325/325	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (60.31)									
162	MB000080							MB879510	[MB879510] L20.59/0321
327/327	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.00)									
163	MB000080							MB879520	[MB879520] L20.59/0323
329/329	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.01)									
164	MB000080							MB879530	[MB879530] L20.59/0325
331/331	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.02)									
165	MB000080							MB879540	[MB879540] L20.59/0327
333/333	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.03)									
166	MB000080							MB879550	[MB879550] L20.59/0329
335/335	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.04)									
167	MB000080							MB879560	[MB879560] L20.59/0331
337/337	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.05)									
168	MB000080							MB879570	[MB879570] L20.59/0333
339/339	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.06)									
169	MB000080							MB879580	[MB879580] L20.59/0335
341/341	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.07)									
170	MB000080							MB879590	[MB879590] L20.59/0337
343/343	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.08)									
171	MB000080							MB879600	[MB879600] L20.59/0339
345/345	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.09)									
172	MB000080							MB879610	[MB879610] L20.59/0341
347/347	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.10)									
173	MB000080							MB879620	[MB879620] L20.59/0343
349/349	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.11)									
174	MB000080							MB879630	[MB879630] L20.59/0345
351/351	Manual comm on IL(Sol)							---	
Manual Interlock(Sol) (61.12)									
175	MB000080							MB879640	[MB879640] L20.59/0347
353/353	Manual comm on IL(Sol)							---	

	Manual Interlock(Sol) (61.13)					
176	MB000080				MB879650	[MB879650] L20.59/0349
355/355	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.14)					
177	MB000080				MB879660	[MB879660] L20.59/0351
357/357	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.15)					
178	MB000080				MB879670	[MB879670] L20.59/0353
359/359	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.16)					
179	MB000080				MB879680	[MB879680] L20.59/0355
361/361	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.17)					
180	MB000080				MB879690	[MB879690] L20.59/0357
363/363	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.18)					
181	MB000080				MB879700	[MB879700] L20.59/0359
365/365	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.19)					
182	MB000080				MB879710	[MB879710] L20.59/0361
367/367	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.20)					
183	MB000080				MB879720	[MB879720] L20.59/0363
369/369	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.21)					
184	MB000080				MB879730	[MB879730] L20.59/0365
371/371	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.22)					
185	MB000080				MB879740	[MB879740] L20.59/0367
373/373	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.23)					
186	MB000080				MB879750	[MB879750] L20.59/0369
375/375	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.24)					
187	MB000080				MB879760	[MB879760] L20.59/0371
377/377	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.25)					
188	MB000080				MB879770	[MB879770] L20.59/0373
379/379	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.26)					
189	MB000080				MB879780	[MB879780] L20.59/0375
381/381	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.27)					
190	MB000080				MB879790	[MB879790] L20.59/0377
383/383	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.28)					
191	MB000080				MB879800	[MB879800] L20.59/0379
385/385	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.29)					
192	MB000080				MB879810	[MB879810] L20.59/0381
387/387	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.30)					
193	MB000080				MB879820	[MB879820] L20.59/0383
389/389	Manual comm on IL(Sol)				---	
	Manual Interlock(Sol) (61.31)					
194	MB000080				MB879830	[MB879830] L20.59/0385
391/391	Manual comm on IL(Sol)				---	
195	END					
393/393						