




L80.22:PtoP BTN Interlock_Unit2 (SC)					
ManualEnable(PTP)					
Interlock Check					
Manual Interlock(PTP) (66,0)					
0	0/0	MB000081		MB881120	[MB881120] L20.52/0394
		Manual comm on IL(PTP)		---	
1	2/2	MB045740		MB881121	[MB881121] L20.52/0395
		All Cutter Z Wa it Position		---	
2	4/4	MB045791		MB881122	[MB881122] L20.52/0396
		[SC] Head X ↔ Pusher Bar No n Interference		---	
3	6/6	MB045790		MB881123	[MB881123] L20.52/0397
		[SC] Head X ↔ Chuck Y Non I nterference		---	
Manual Interlock(PTP) (66,1)					
4	8/8	MB000081		MB881130	[MB881130] L20.52/0399
		Manual comm on IL(PTP)		---	
5	10/10	MB045740		MB881131	[MB881131] L20.52/0400
		All Cutter Z Wa it Position		---	
6	12/12	MB045791		MB881132	[MB881132] L20.52/0401
		[SC] Head X ↔ Pusher Bar No n Interference		---	
7	14/14	MB045790		MB881133	[MB881133] L20.52/0402
		[SC] Head X ↔ Chuck Y Non I nterference		---	
8	16/16	MB046010		MB881134	[MB881134] L20.52/0403
		CAMX Wait Po sition		---	
		MB046011			
		CAMX Alignme nt Position			
Manual Interlock(PTP) (66,2)					
9	18/18	MB000081		MB881140	[MB881140] L20.52/0405
		Manual comm on IL(PTP)		---	
10	20/20	MB045740		MB881141	[MB881141] L20.52/0406
		All Cutter Z Wa it Position		---	
11	22/22	MB045791		MB881142	[MB881142] L20.52/0407
		[SC] Head X ↔ Pusher Bar No n Interference		---	
12	24/24	MB045790		MB881143	[MB881143] L20.52/0408
		[SC] Head X ↔ Chuck Y Non I nterference		---	
Manual Interlock(PTP) (66,3)					
13	26/26	MB000081		MB881150	[MB881150] L20.52/0410
		Manual comm on IL(PTP)		---	
Manual Interlock(PTP) (66,4)					
14	28/28	MB000081		MB881160	[MB881160] L20.52/0412
		Manual comm on IL(PTP)		---	
15	30/30	MB045740		MB881161	[MB881161] L20.52/0413
		All Cutter Z Wa it Position		---	
16	32/32	MB045791		MB881162	[MB881162] L20.52/0414
		[SC] Head X ↔ Pusher Bar No n Interference		---	
17	34/34	MB045790		MB881163	[MB881163] L20.52/0415
		[SC] Head X ↔ Chuck Y Non I nterference		---	
18	36/36	MB046010		MB881164	[MB881164] L20.52/0416
		CAMX Wait Po sition		---	
Manual Interlock(PTP) (66,5)					
19	38/38	MB000081		MB881170	[MB881170] L20.52/0418
		Manual comm on IL(PTP)		---	
20	40/40	MB045740		MB881171	[MB881171] L20.52/0419
		All Cutter Z Wa it Position		---	
21	42/42	MB045791		MB881172	[MB881172] L20.52/0420
		[SC] Head X ↔ Pusher Bar No n Interference		---	
22	44/44	MB045790		MB881173	[MB881173] L20.52/0421
		[SC] Head X ↔ Chuck Y Non I nterference		---	

23	MB046010 CAMX Wait Position	MB881174	[MB881174] L20.52/0422
Manual Interlock(PTP) (66,6)			
24	MB000081 Manual comm on IL(PTP)	MB881180	[MB881180] L20.52/0424
25	MB045740 All Cutter Z Wait Position	MB881181	[MB881181] L20.52/0425
26	MB045791 [SC] Head X ↔ Pusher Bar Non Interference	MB881182	[MB881182] L20.52/0426
27	MB045790 [SC] Head X ↔ Chuck Y Non Interference	MB881183	[MB881183] L20.52/0427
28	MB046010 CAMX Wait Position	MB881184	[MB881184] L20.52/0428
Manual Interlock(PTP) (66,7)			
29	MB000081 Manual comm on IL(PTP)	MB881190	[MB881190] L20.52/0430
30	MB045740 All Cutter Z Wait Position	MB881191	[MB881191] L20.52/0431
31	MB045791 [SC] Head X ↔ Pusher Bar Non Interference	MB881192	[MB881192] L20.52/0432
32	MB045790 [SC] Head X ↔ Chuck Y Non Interference	MB881193	[MB881193] L20.52/0433
33	MB046010 CAMX Wait Position	MB881194	[MB881194] L20.52/0434
Manual Interlock(PTP) (66,8)			
34	MB000081 Manual comm on IL(PTP)	MB881200	[MB881200] L20.52/0436
Manual Interlock(PTP) (66,9)			
35	MB000081 Manual comm on IL(PTP)	MB881210	[MB881210] L20.52/0438
36	MB046000 CX Wait Position MB046001 CX Alignment Position	MB881211	[MB881211] L20.52/0439
Manual Interlock(PTP) (66,10)			
37	MB000081 Manual comm on IL(PTP)	MB881220	[MB881220] L20.52/0441
Manual Interlock(PTP) (66,11)			
38	MB000081 Manual comm on IL(PTP)	MB881230	[MB881230] L20.52/0443
Manual Interlock(PTP) (66,12)			
39	MB000081 Manual comm on IL(PTP)	MB881240	[MB881240] L20.52/0445
Manual Interlock(PTP) (66,13)			
40	MB000081 Manual comm on IL(PTP)	MB881250	[MB881250] L20.52/0447
Manual Interlock(PTP) (66,14)			
41	MB000081 Manual comm on IL(PTP)	MB881260	[MB881260] L20.52/0449
Manual Interlock(PTP) (66,15)			
42	MB000081 Manual comm on IL(PTP)	MB881270	[MB881270] L20.52/0451
Manual Interlock(PTP) (66,16)			
43	MB000081 Manual comm on IL(PTP)	MB881280	[MB881280] L20.52/0453
44	MB045740 All Cutter Z Wait Position	MB881281	[MB881281] L20.52/0454
45	MB045741 All Cutter X Wait Position	MB881282	[MB881282] L20.52/0455

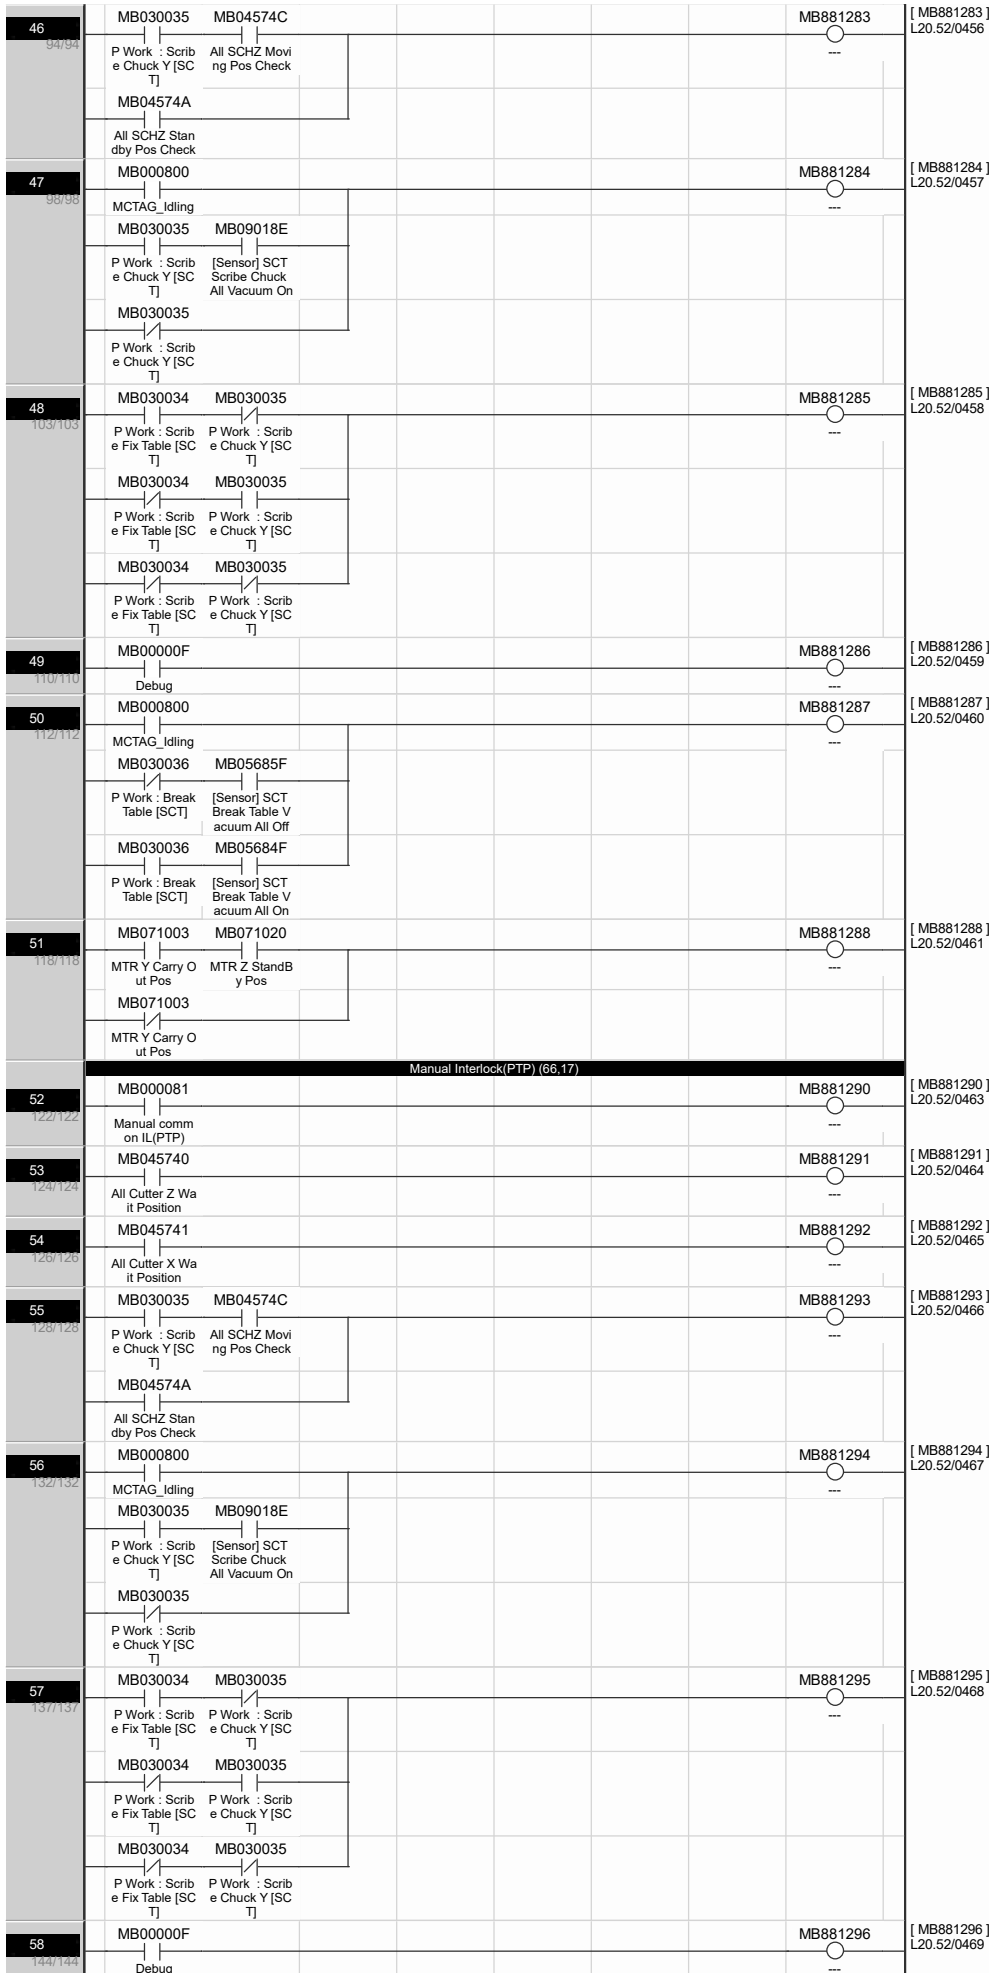

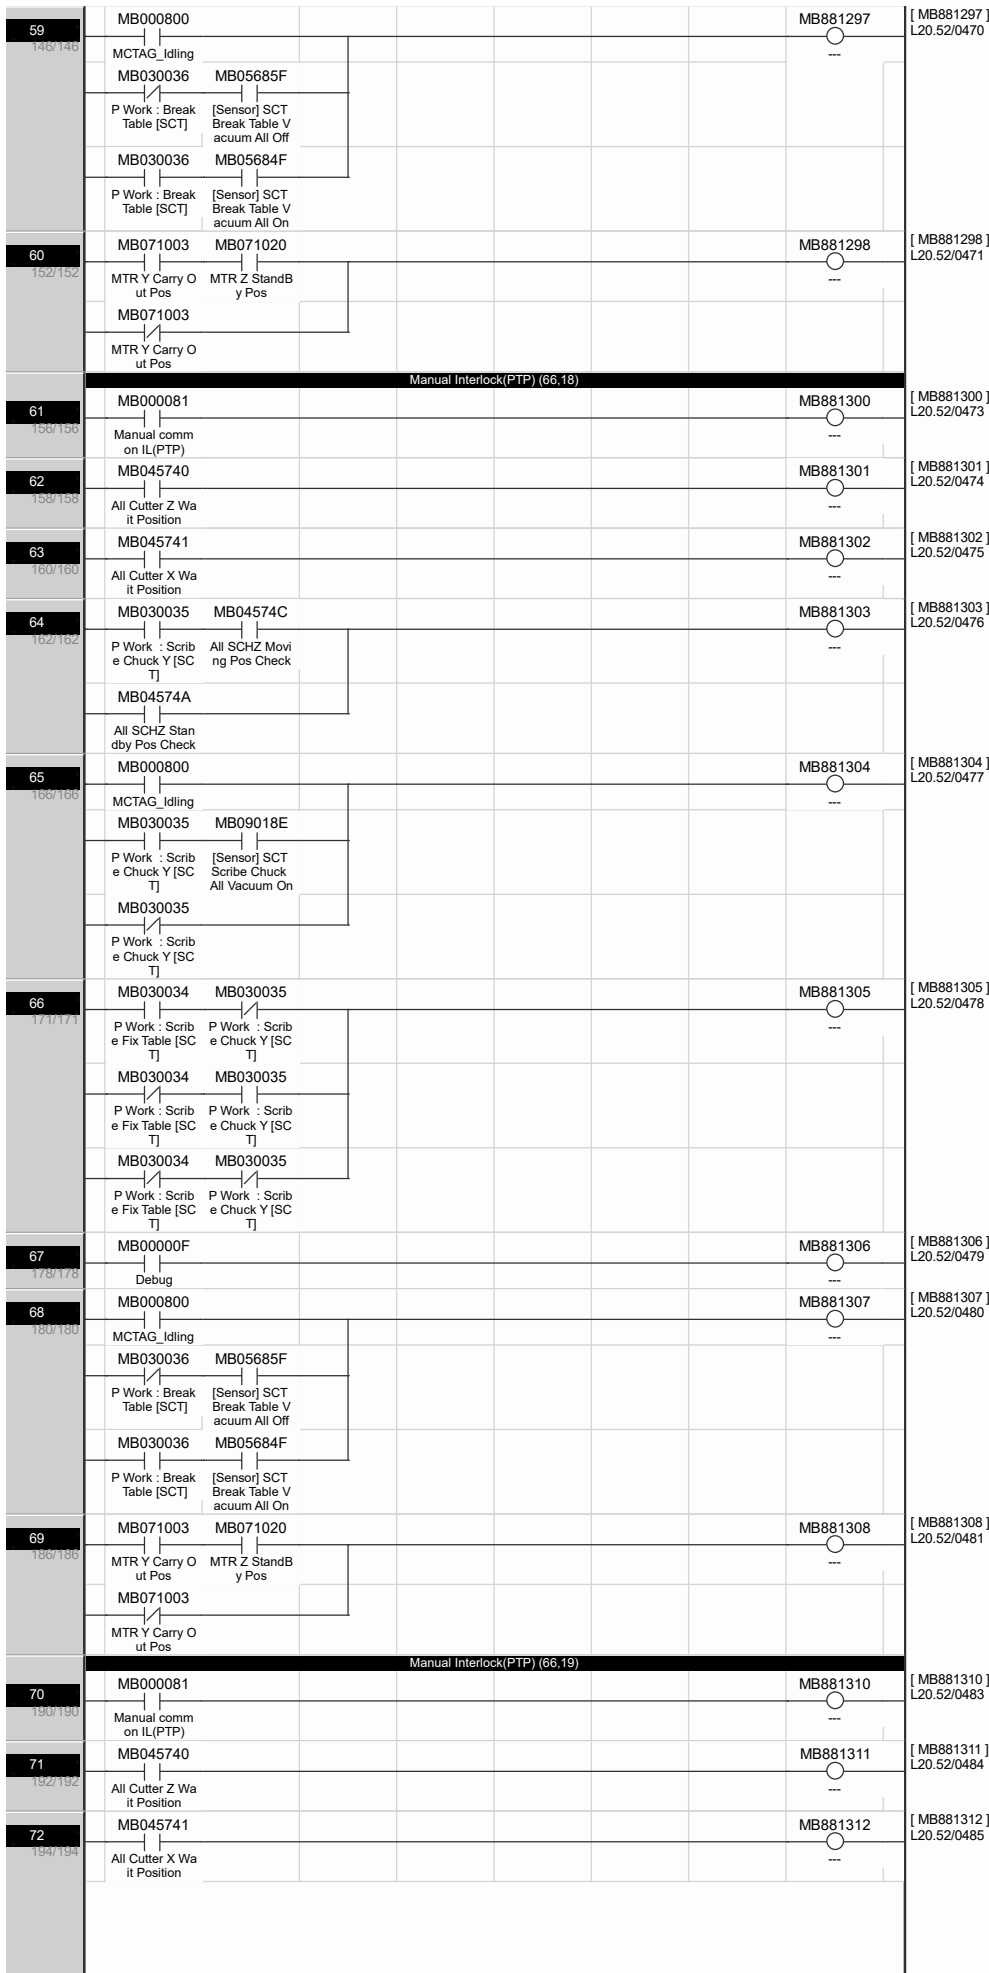


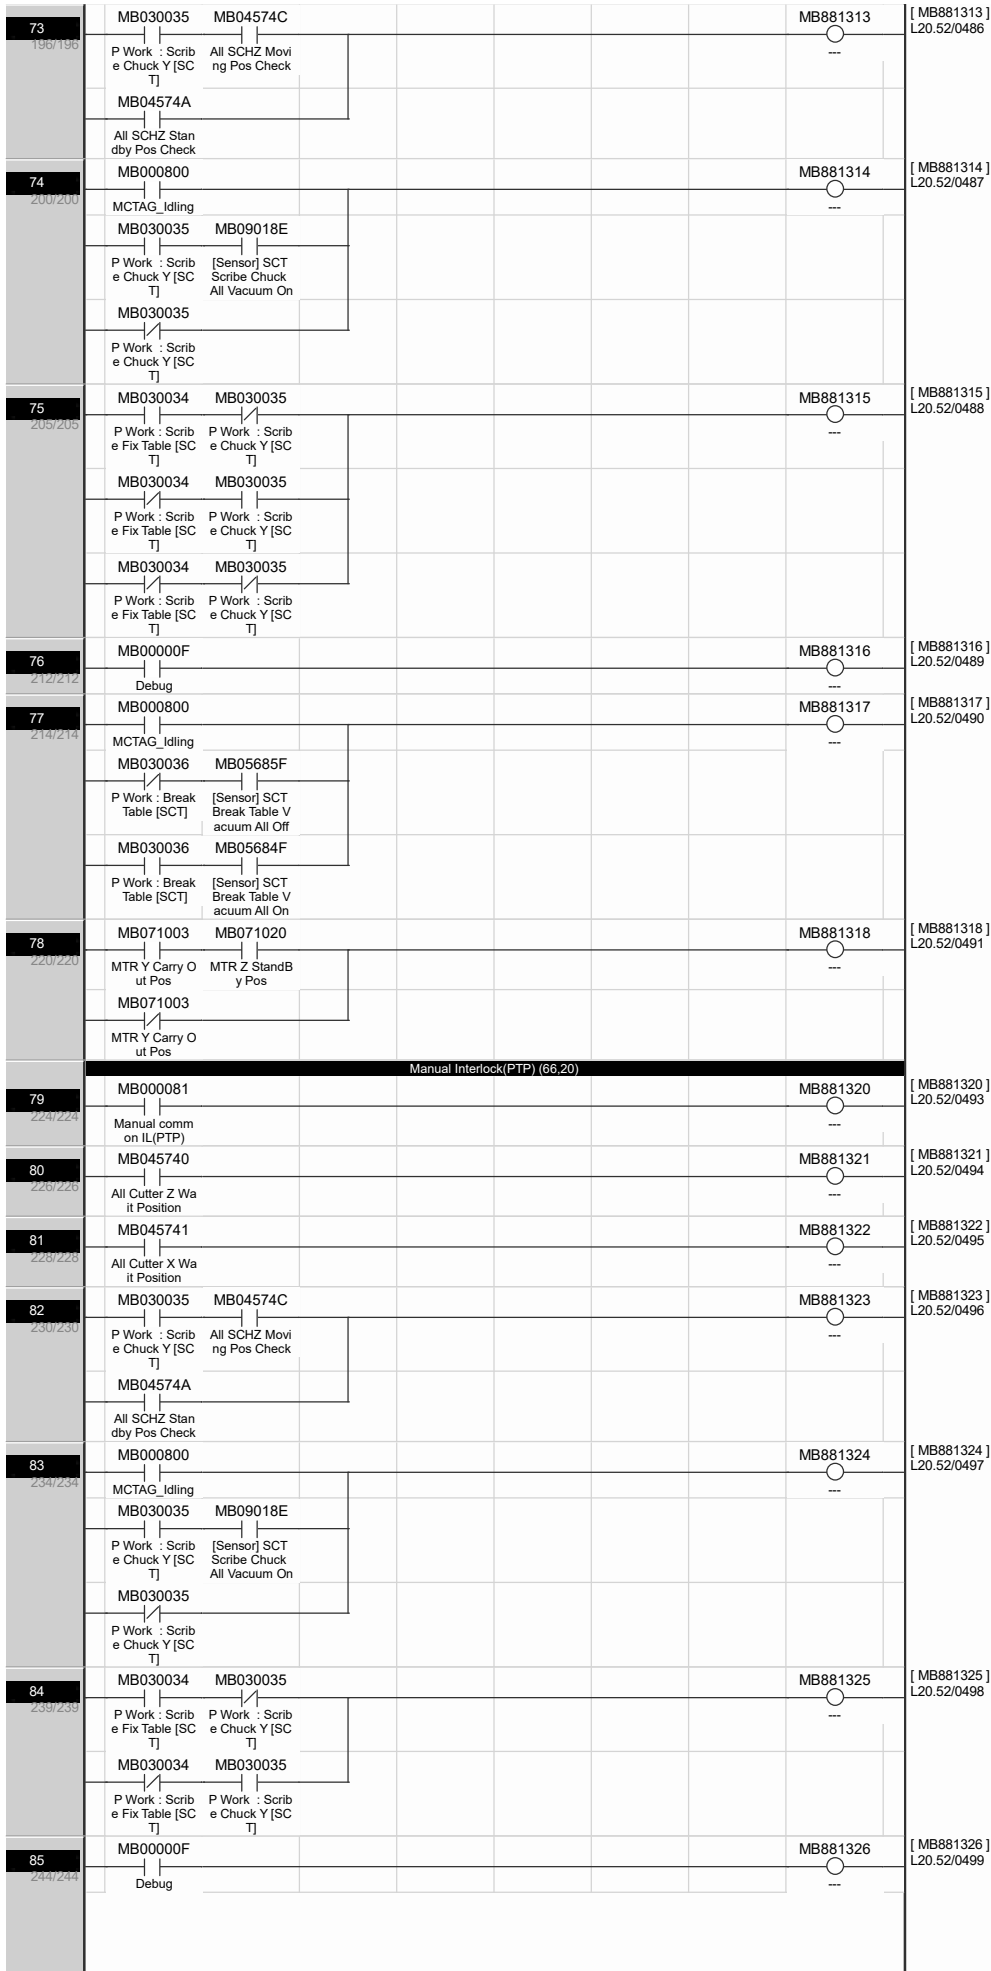



86	240/240	MB000800						MB881327	[MB881327] L20.52/0500	
		MCTAG_Idling						---		
		MB030036		MB05685F						
		P Work : Break Table [SCT]		[Sensor] SCT Break Table V acum All Off						
		MB030036		MB05684F						
87	252/252	P Work : Break Table [SCT]								
		MB071003		MB071020				MB881328	[MB881328] L20.52/0501	
		MTR Y Carry Out Pos		MTR Z Standby Pos				---		
		MB071003								
		MTR Y Carry Out Pos								
Manual Interlock(PTP) (66.21)										
88	258/258	MB000081						MB881330	[MB881330] L20.52/0503	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (66.22)										
89	258/258	MB000081						MB881340	[MB881340] L20.52/0505	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (66.23)										
90	260/260	MB000081						MB881350	[MB881350] L20.52/0507	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (66.24)										
91	262/262	MB000081						MB881360	[MB881360] L20.52/0509	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (66.25)										
92	264/264	MB000081						MB881370	[MB881370] L20.52/0511	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (66.26)										
93	266/266	MB000081						MB881380	[MB881380] L20.52/0513	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (66.27)										
94	268/274	MB21462A	==	[WLFQD]SrcA CX~ ResponseCode CX-Motion command response code	[WLFQD]SrcB 00000	==	[WLFQD]SrcA CAMX~ ResponseCode CAMX-Motion command response code	[WLFQD]SrcB 00000	MB881390	[MB881390] L20.52/0515
		MCTAGLine Check (화상 처리 모니터 표시 응답)							---	
Manual Interlock(PTP) (66.28)										
95	272/284	MB21462A	==	[WLFQD]SrcA CX~ ResponseCode CX-Motion command response code	[WLFQD]SrcB 00000	==	[WLFQD]SrcA CAMX~ ResponseCode CAMX-Motion command response code	[WLFQD]SrcB 00000	MB881400	[MB881400] L20.52/0517
		MCTAGLine Check (화상 처리 모니터 표시 응답)							---	
Manual Interlock(PTP) (66.29)										
96	276/294	MB21462A	==	[WLFQD]SrcA CX~ ResponseCode CX-Motion command response code	[WLFQD]SrcB 00000	==	[WLFQD]SrcA CAMX~ ResponseCode CAMX-Motion command response code	[WLFQD]SrcB 00000	MB881410	[MB881410] L20.52/0519
		MCTAGLine Check (화상 처리 모니터 표시 응답)							---	
Manual Interlock(PTP) (66.30)										
97	280/304	MB21462A	==	[WLFQD]SrcA CX~ ResponseCode CX-Motion command response code	[WLFQD]SrcB 00000	==	[WLFQD]SrcA CAMX~ ResponseCode CAMX-Motion command response code	[WLFQD]SrcB 00000	MB881420	[MB881420] L20.52/0521
		MCTAGLine Check (화상 처리 모니터 표시 응답)							---	
Manual Interlock(PTP) (66.31)										
98	284/314	MB21462A	==	[WLFQD]SrcA CX~ ResponseCode CX-Motion command response code	[WLFQD]SrcB 00000	==	[WLFQD]SrcA CAMX~ ResponseCode CAMX-Motion command response code	[WLFQD]SrcB 00000	MB881430	[MB881430] L20.52/0523
		MCTAGLine Check (화상 처리 모니터 표시 응답)							---	
Manual Interlock(PTP) (67.0)										
99	288/318	MB000081						MB881440	[MB881440] L20.52/0525	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (67.1)										
100	290/320	MB000081						MB881450	[MB881450] L20.52/0527	
		Manual comm on IL(PTP)						---		
Manual Interlock(PTP) (67.2)										
101	292/322	MB000081						MB881460	[MB881460] L20.52/0529	
		Manual comm on IL(PTP)						---		
102	294/324	MB046003						MB881461	[MB881461] L20.52/0530	
		CX Load Measurement Position						---		
Manual Interlock(PTP) (67.3)										
103	296/326	MB000081						MB881470	[MB881470] L20.52/0532	
		Manual comm on IL(PTP)						---		
104	298/328	MB046004						MB881471	[MB881471] L20.52/0533	
		CX 0 Point Position						---		


Manual Interlock(PTP) (67.4)					
105	MB000081			MB881480	[MB881480] L20.52/0535
300/330	Manual comm on IL(PTP)			---	
106	MB04600C			MB881481	[MB881481] L20.52/0536
302/332	CX Wheel Clea ning Start Posit ion			---	
Manual Interlock(PTP) (67.5)					
107	MB000081			MB881490	[MB881490] L20.52/0538
304/334	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.6)					
108	MB000081			MB881500	[MB881500] L20.52/0540
306/336	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.7)					
109	MB000081			MB881510	[MB881510] L20.52/0542
308/338	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.8)					
110	MB000081			MB881520	[MB881520] L20.52/0544
310/340	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.9)					
111	MB000081			MB881530	[MB881530] L20.52/0546
312/342	Manual comm on IL(PTP)			---	
112	MB046003			MB881531	[MB881531] L20.52/0547
314/344	CX Load Meas urement Positi on			---	
Manual Interlock(PTP) (67.10)					
113	MB000081			MB881540	[MB881540] L20.52/0549
316/346	Manual comm on IL(PTP)			---	
114	MB046007			MB881541	[MB881541] L20.52/0550
318/348	CX Wheel Cha nge Position			---	
Manual Interlock(PTP) (67.11)					
115	MB000081			MB881550	[MB881550] L20.52/0552
320/350	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.12)					
116	MB000081			MB881560	[MB881560] L20.52/0554
322/352	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.13)					
117	MB000081			MB881570	[MB881570] L20.52/0556
324/354	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.14)					
118	MB000081			MB881580	[MB881580] L20.52/0558
326/356	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.15)					
119	MB000081			MB881590	[MB881590] L20.52/0560
328/358	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.16)					
120	MB000081			MB881600	[MB881600] L20.52/0562
330/360	Manual comm on IL(PTP)			---	
121	MB090221			MB881601	[MB881601] L20.52/0563
332/362	Sensor : SCT Scribe Chuck 2 Vacuum Off			---	
Manual Interlock(PTP) (67.17)					
122	MB000081			MB881610	[MB881610] L20.52/0565
334/364	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.18)					
123	MB000081			MB881620	[MB881620] L20.52/0567
336/366	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.19)					
124	MB000081			MB881630	[MB881630] L20.52/0569
338/368	Manual comm on IL(PTP)			---	
125	MB090221			MB881631	[MB881631] L20.52/0570
340/370	Sensor : SCT Scribe Chuck 2 Vacuum Off			---	
Manual Interlock(PTP) (67.20)					
126	MB000081			MB881640	[MB881640] L20.52/0572
342/372	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.21)					
127	MB000081			MB881650	[MB881650] L20.52/0574
344/374	Manual comm on IL(PTP)			---	

Manual Interlock(PTP) (67.22)					
128	MB000081			MB881660	[MB881660] L20.52/0576
340/376	Manual comm on IL(PTP)			---	
129	MB090222			MB881661	[MB881661] L20.52/0577
348/378	Sensor : SCT Scribe Chuck 3 Vacuum Off			---	
Manual Interlock(PTP) (67.23)					
130	MB000081			MB881670	[MB881670] L20.52/0579
350/380	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.24)					
131	MB000081			MB881680	[MB881680] L20.52/0581
352/382	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.25)					
132	MB000081			MB881690	[MB881690] L20.52/0583
354/384	Manual comm on IL(PTP)			---	
133	MB090223			MB881691	[MB881691] L20.52/0584
356/386	Sensor : SCT Scribe Chuck 4 Vacuum Off			---	
Manual Interlock(PTP) (67.26)					
134	MB000081			MB881700	[MB881700] L20.52/0586
358/388	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.27)					
135	MB000081			MB881710	[MB881710] L20.52/0588
360/390	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.28)					
136	MB000081			MB881720	[MB881720] L20.52/0590
362/392	Manual comm on IL(PTP)			---	
137	MB090224			MB881721	
364/394	Sensor : Unit2 Vacuum 5 Off			---	
Manual Interlock(PTP) (67.29)					
138	MB000081			MB881730	[MB881730] L20.52/0592
366/396	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.30)					
139	MB000081			MB881740	[MB881740] L20.52/0594
368/398	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (67.31)					
140	MB000081			MB881750	[MB881750] L20.52/0596
370/400	Manual comm on IL(PTP)			---	
141	MB090222			MB881751	[MB881751] L20.52/0597
372/402	Sensor : SCT Scribe Chuck 3 Vacuum Off			---	
Manual Interlock(PTP) (68.0)					
142	MB000081			MB881760	[MB881760] L20.52/0599
374/404	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (68.1)					
143	MB000081			MB881770	[MB881770] L20.52/0601
376/406	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (68.2)					
144	MB000081			MB881780	[MB881780] L20.52/0603
378/408	Manual comm on IL(PTP)			---	
145	MB090221			MB881781	[MB881781] L20.52/0604
380/410	Sensor : SCT Scribe Chuck 2 Vacuum Off			---	
Manual Interlock(PTP) (68.3)					
146	MB000081			MB881790	[MB881790] L20.52/0606
382/412	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (68.4)					
147	MB000081			MB881800	[MB881800] L20.52/0608
384/414	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (68.5)					
148	MB000081			MB881810	[MB881810] L20.52/0610
386/416	Manual comm on IL(PTP)			---	
149	MB090221			MB881811	[MB881811] L20.52/0611
388/418	Sensor : SCT Scribe Chuck 2 Vacuum Off			---	
Manual Interlock(PTP) (68.6)					
150	MB000081			MB881820	[MB881820] L20.52/0613
390/420	Manual comm on IL(PTP)			---	

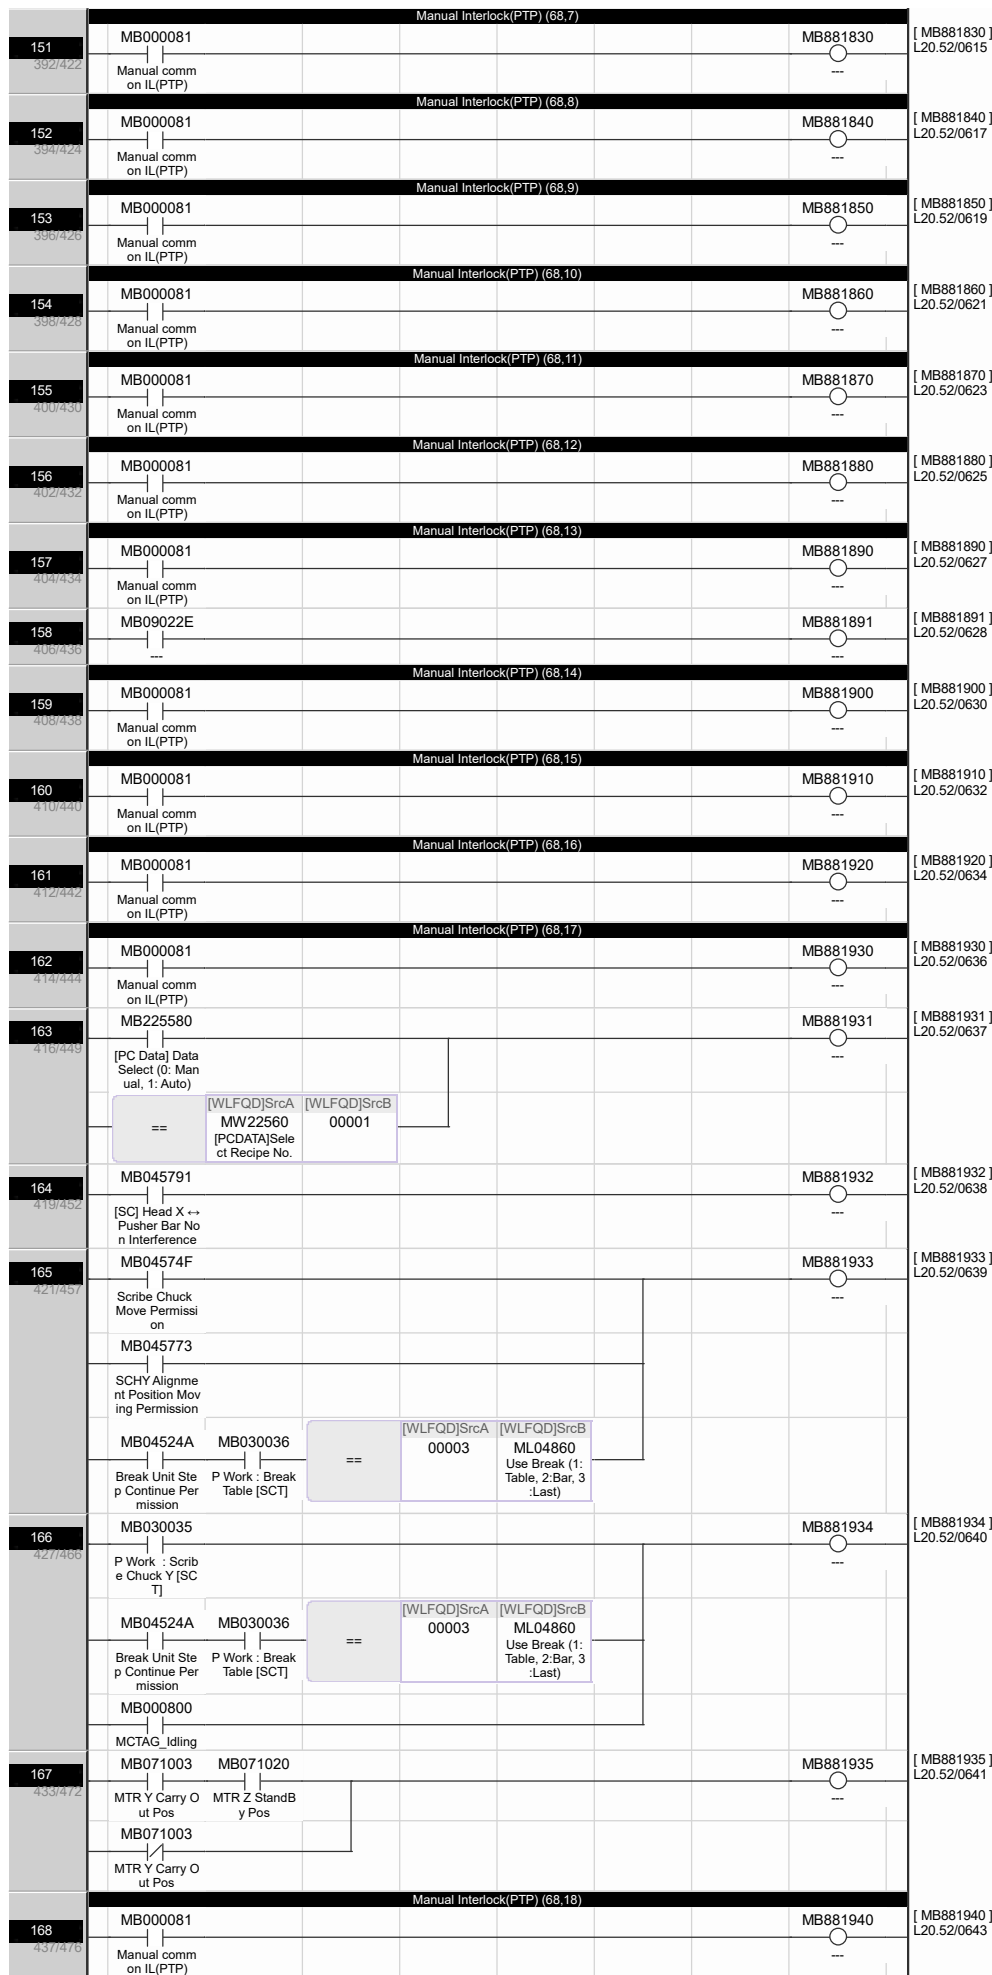

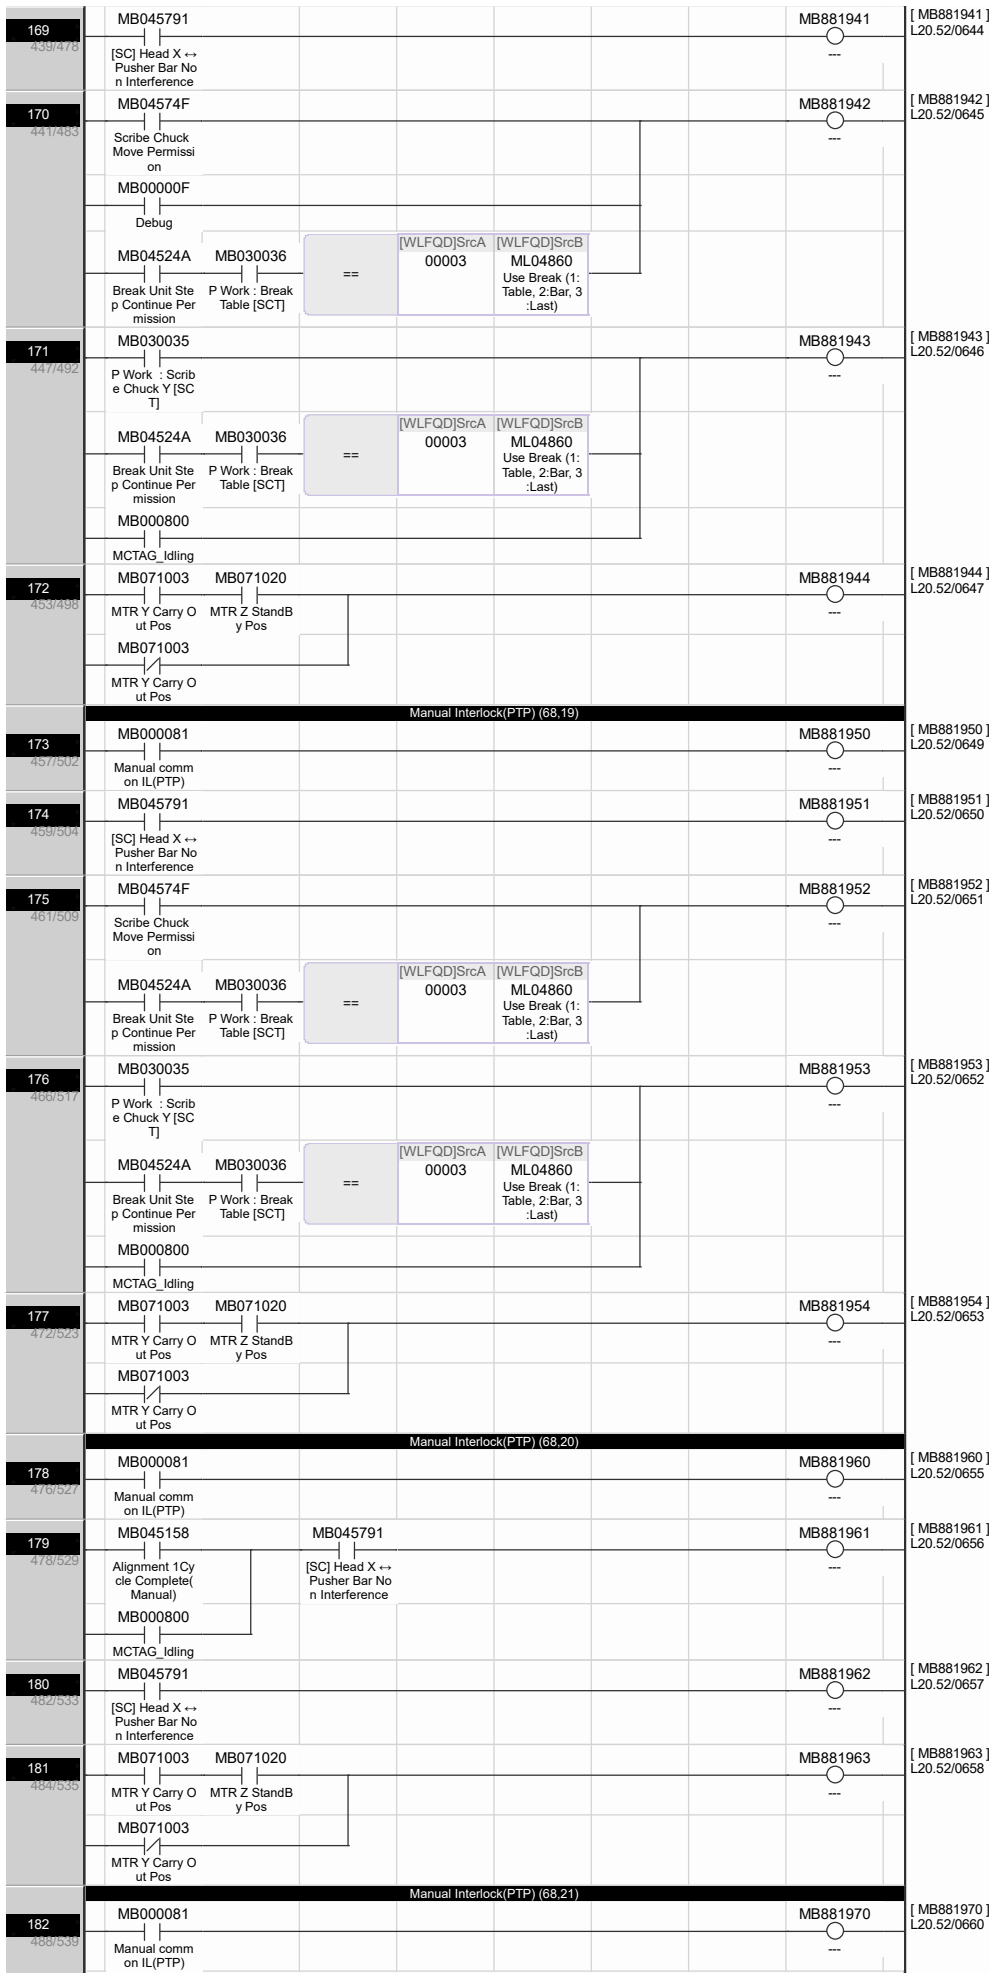

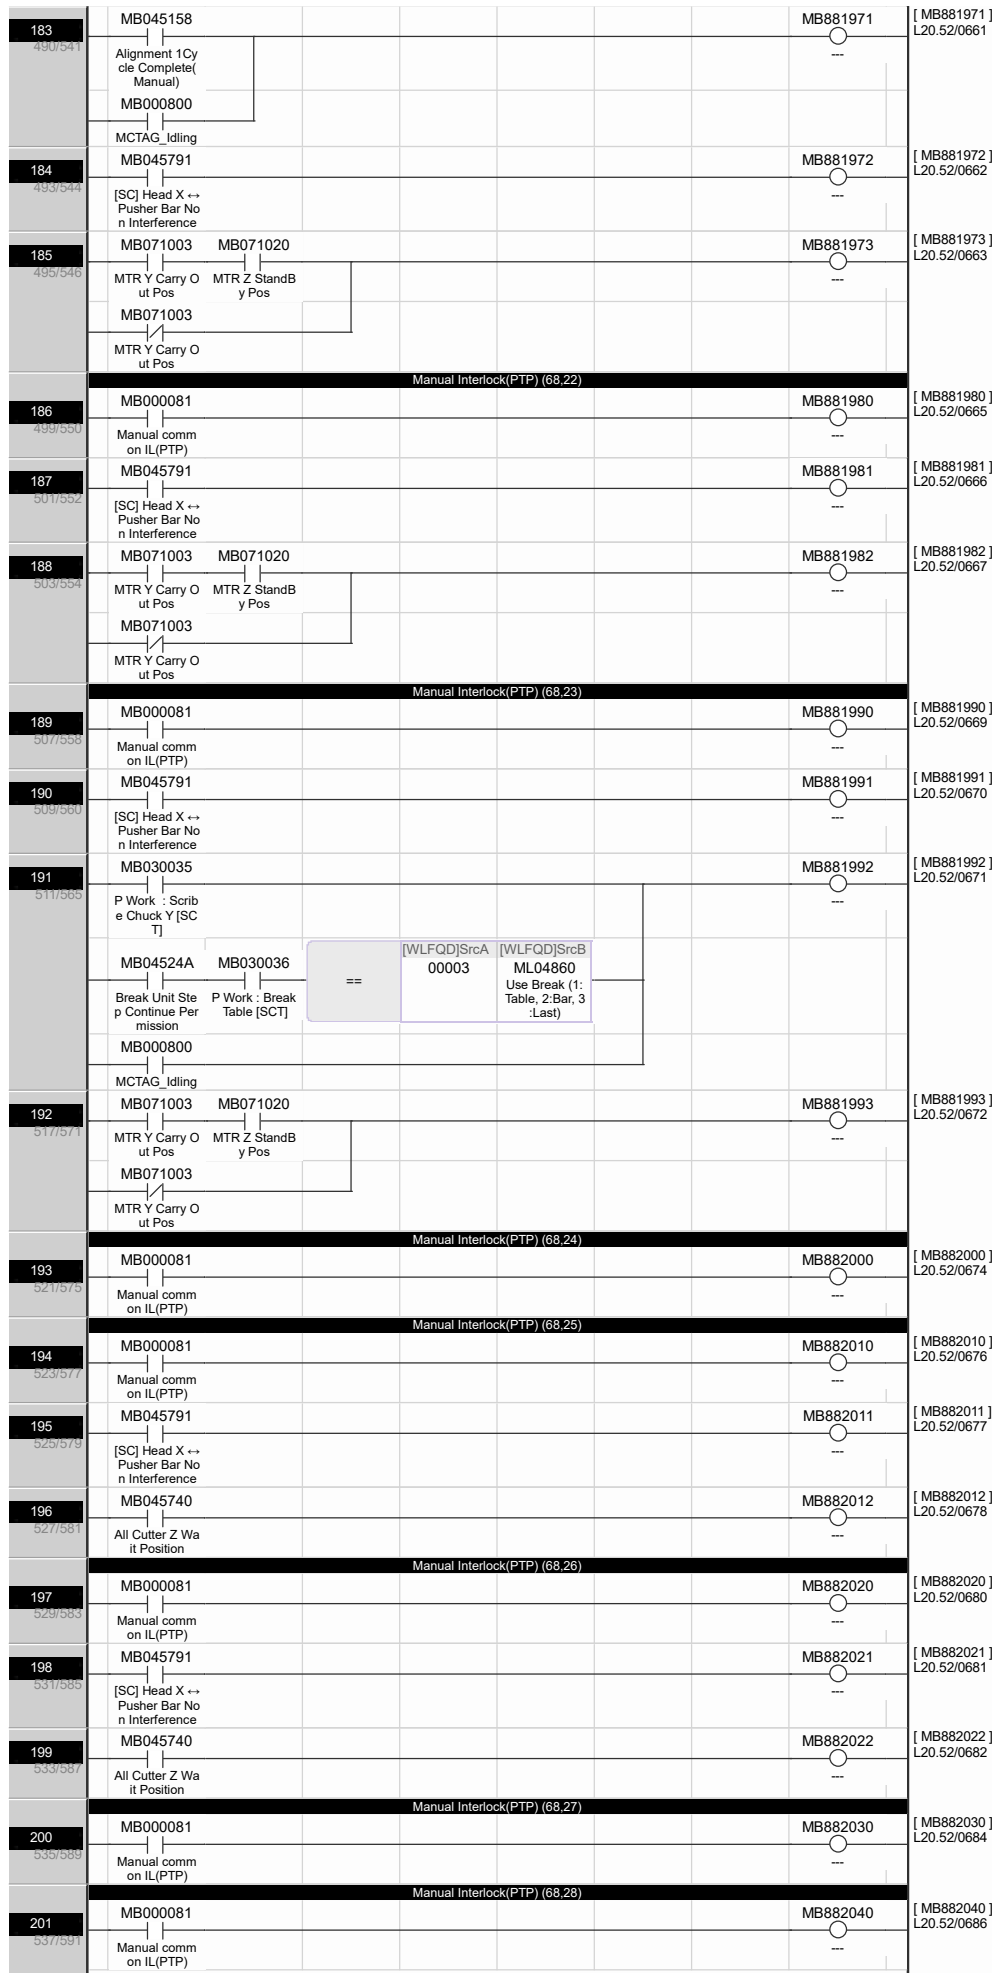

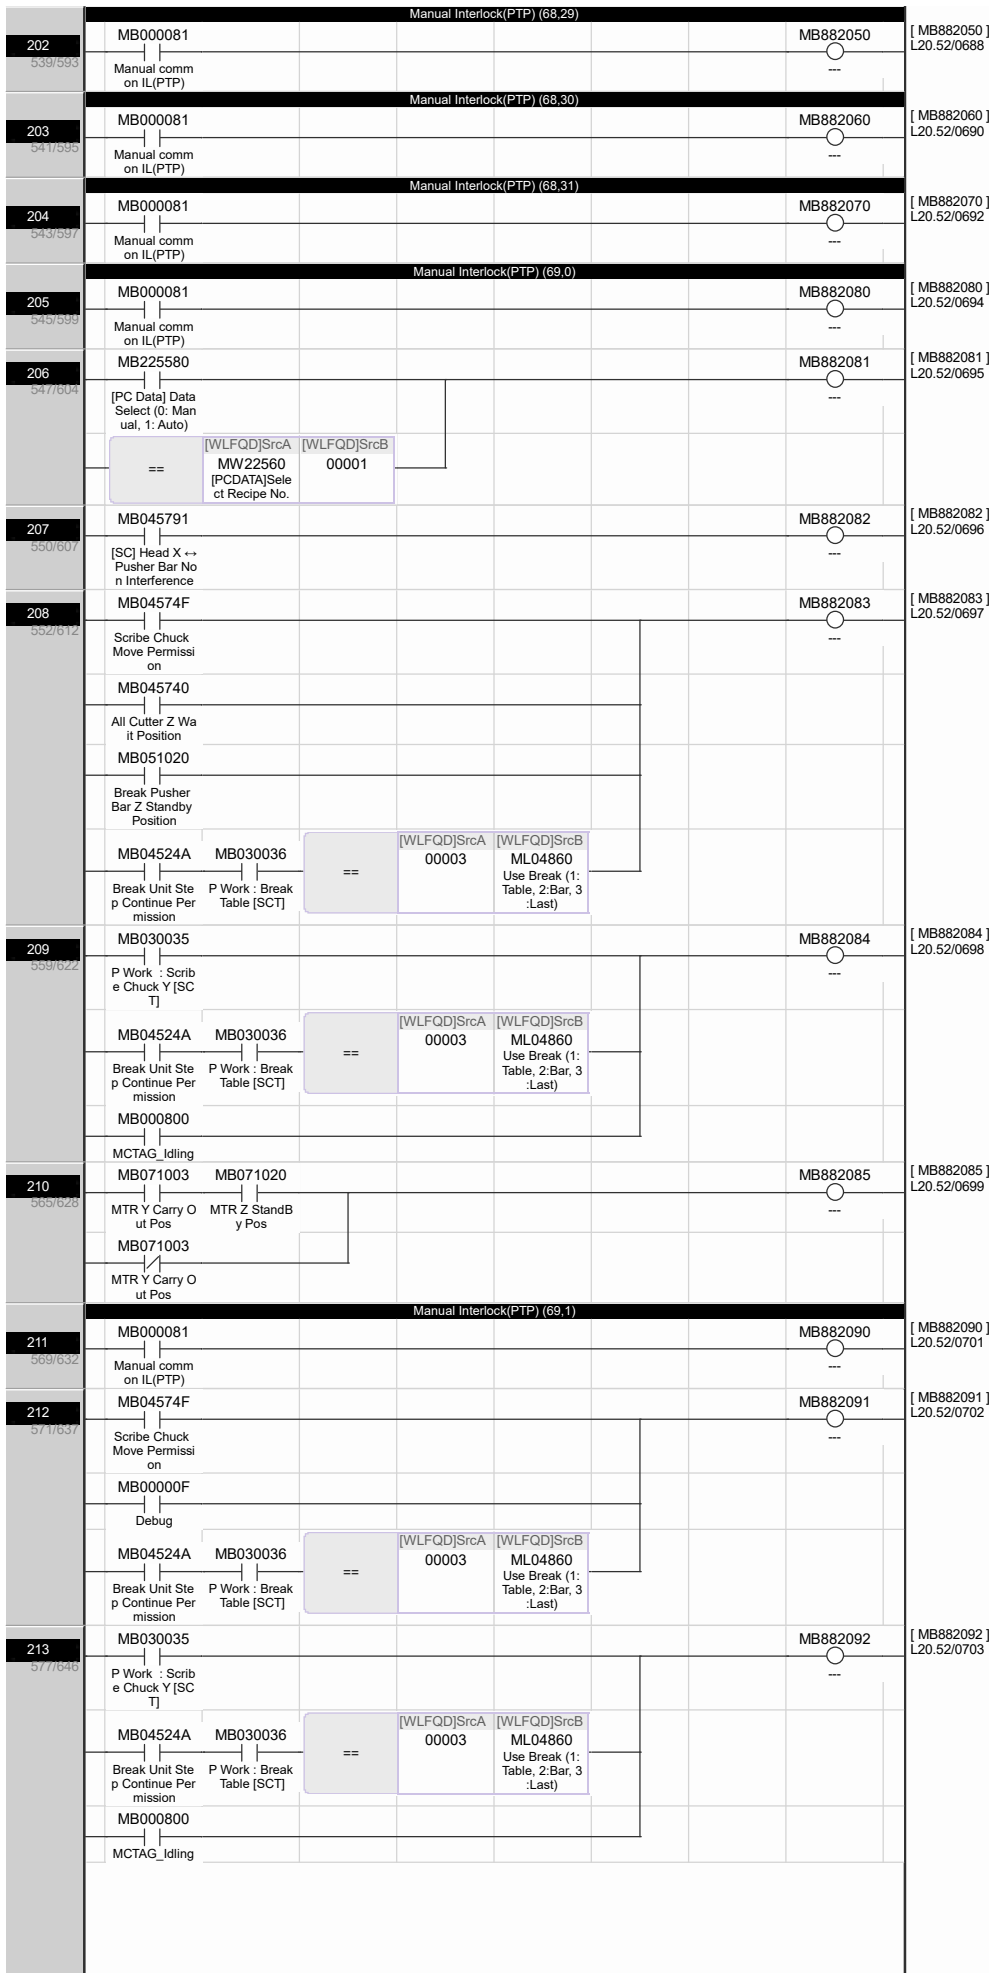

214	353/652	MB071003 MTR Y Carry Out Pos MB071020 MTR Z Standby Pos MB071003 MTR Y Carry Out Pos	MB882093	[MB882093] L20.52/0704
Manual Interlock(PTP) (69,2)				
215	357/655	MB000081 Manual comm on IL(PTP)	MB882100	[MB882100] L20.52/0706
Manual Interlock(PTP) (69,3)				
216	359/655	MB000081 Manual comm on IL(PTP)	MB882110	[MB882110] L20.52/0708
Manual Interlock(PTP) (69,4)				
217	359/660	MB000081 Manual comm on IL(PTP)	MB882120	[MB882120] L20.52/0710
218	353/662	MB045791 [SC] Head X ↔ Pusher Bar No n Interference	MB882121	[MB882121] L20.52/0711
219	353/664	MB030035 P Work : Scribe Chuck Y [SCT]	MB882122	[MB882122] L20.52/0712
220	357/666	== [WLFQD]SrcA MW22560 [PCDATA]Select Recipe No. [WLFQD]SrcB 00001	MB882123	[MB882123] L20.52/0713
221	353/669	MB071003 MTR Y Carry Out Pos MB071020 MTR Z Standby Pos MB071003 MTR Y Carry Out Pos	MB882124	[MB882124] L20.52/0714
Manual Interlock(PTP) (69,5)				
222	603/673	MB000081 Manual comm on IL(PTP)	MB882130	[MB882130] L20.52/0716
223	603/673	MB045791 [SC] Head X ↔ Pusher Bar No n Interference	MB882131	[MB882131] L20.52/0717
224	607/677	MB030035 P Work : Scribe Chuck Y [SCT] MB030036 P Work : Break Table [SCT] MB000800 MCTAG_Idling	MB882132	[MB882132] L20.52/0718
225	611/681	MB04574F Scribe Chuck Move Permission MB00000F Debug	MB882133	[MB882133] L20.52/0719
226	614/684	MB071003 MTR Y Carry Out Pos MB071020 MTR Z Standby Pos MB071003 MTR Y Carry Out Pos	MB882134	[MB882134] L20.52/0720
Manual Interlock(PTP) (69,6)				
227	618/688	MB000081 Manual comm on IL(PTP)	MB882140	[MB882140] L20.52/0722
228	620/690	MB045158 Alignment 1Cycle Complete(Manual) MB000800 MCTAG_Idling	MB882141	[MB882141] L20.52/0723
229	623/693	MB045791 [SC] Head X ↔ Pusher Bar No n Interference	MB882142	[MB882142] L20.52/0724
230	623/693	MB030035 P Work : Scribe Chuck Y [SCT] MB030036 P Work : Break Table [SCT] MB000800 MCTAG_Idling	MB882143	[MB882143] L20.52/0725
231	623/693	MB071003 MTR Y Carry Out Pos MB071020 MTR Z Standby Pos MB071003 MTR Y Carry Out Pos	MB882144	[MB882144] L20.52/0726

Manual Interlock(PTP) (69,7)					
232	MB000081			MB882150	[MB882150] L20.52/0728
633/703	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,8)					
233	MB000081			MB882160	[MB882160] L20.52/0730
635/705	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,9)					
234	MB000081			MB882170	[MB882170] L20.52/0732
637/707	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,10)					
235	MB000081			MB882180	[MB882180] L20.52/0734
639/709	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,11)					
236	MB000081			MB882190	[MB882190] L20.52/0736
641/711	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,12)					
237	MB000081			MB882200	[MB882200] L20.52/0738
643/713	Manual comm on IL(PTP)			---	
238	==	[WLFQD]SrcA ML04860 Use Break (1:T able, 2:Bar, 3:L ast)	[WLFQD]SrcB 00002	MB882201	[MB882201] L20.52/0739
645/715				---	
239	MB045132			MB882202	[MB882202] L20.52/0740
647/717	Scribe Comp			---	
240	MB045135			MB882203	[MB882203] L20.52/0741
649/719	Break Pusher Bar Breaing Ex ecute Pos Co-			---	
Manual Interlock(PTP) (69,13)					
241	MB000081			MB882210	[MB882210] L20.52/0743
651/721	Manual comm on IL(PTP)			---	
242	==	[WLFQD]SrcA ML04860 Use Break (1:T able, 2:Bar, 3:L ast)	[WLFQD]SrcB 00001	MB882211	[MB882211] L20.52/0744
653/723				---	
243	MB045132			MB882212	[MB882212] L20.52/0745
655/725	Scribe Comp			---	
244	MB04513D			MB882213	[MB882213] L20.52/0746
657/727	Break Table Br eaking Execute Pos Comp			---	
Manual Interlock(PTP) (69,14)					
245	MB000081			MB882220	[MB882220] L20.52/0748
659/731	Manual comm on IL(PTP)			---	
246	==	[WLFQD]SrcA ML04860 Use Break (1:T able, 2:Bar, 3:L ast)	[WLFQD]SrcB 00003	MB882221	[MB882221] L20.52/0749
661/733				---	
247	MB045132			MB882222	[MB882222] L20.52/0750
663/735	Scribe Comp			---	
248	MB04513A			MB882223	[MB882223] L20.52/0751
665/737	Last Break Bre aking Execute Pos Comp			---	
Manual Interlock(PTP) (69,15)					
249	MB000081			MB882230	[MB882230] L20.52/0753
667/740	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,16)					
250	MB000081			MB882240	[MB882240] L20.52/0755
669/742	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,17)					
251	MB000081			MB882250	[MB882250] L20.52/0757
671/744	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,18)					
252	MB000081			MB882260	[MB882260] L20.52/0759
673/746	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,19)					
253	MB000081			MB882270	[MB882270] L20.52/0761
675/748	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,20)					
254	MB000081			MB882280	[MB882280] L20.52/0763
677/750	Manual comm on IL(PTP)			---	
Manual Interlock(PTP) (69,21)					
255	MB000081			MB882290	[MB882290] L20.52/0765
679/752	Manual comm on IL(PTP)			---	

Manual Interlock(PTP) (69.22)									
256	MB000081							MB882300	[MB882300] L20.52/0767
651/754	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.23)									
257	MB000081							MB882310	[MB882310] L20.52/0769
653/756	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.24)									
258	MB000081							MB882320	[MB882320] L20.52/0771
655/758	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.25)									
259	MB000081							MB882330	[MB882330] L20.52/0773
657/760	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.26)									
260	MB000081							MB882340	[MB882340] L20.52/0775
659/762	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.27)									
261	MB000081							MB882350	[MB882350] L20.52/0777
661/764	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.28)									
262	MB000081							MB882360	[MB882360] L20.52/0779
663/766	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.29)									
263	MB000081							MB882370	[MB882370] L20.52/0781
665/768	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.30)									
264	MB000081							MB882380	[MB882380] L20.52/0783
667/770	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (69.31)									
265	MB000081							MB882390	[MB882390] L20.52/0785
669/772	Manual comm on IL(PTP)							---	
266	END								
701/774									