


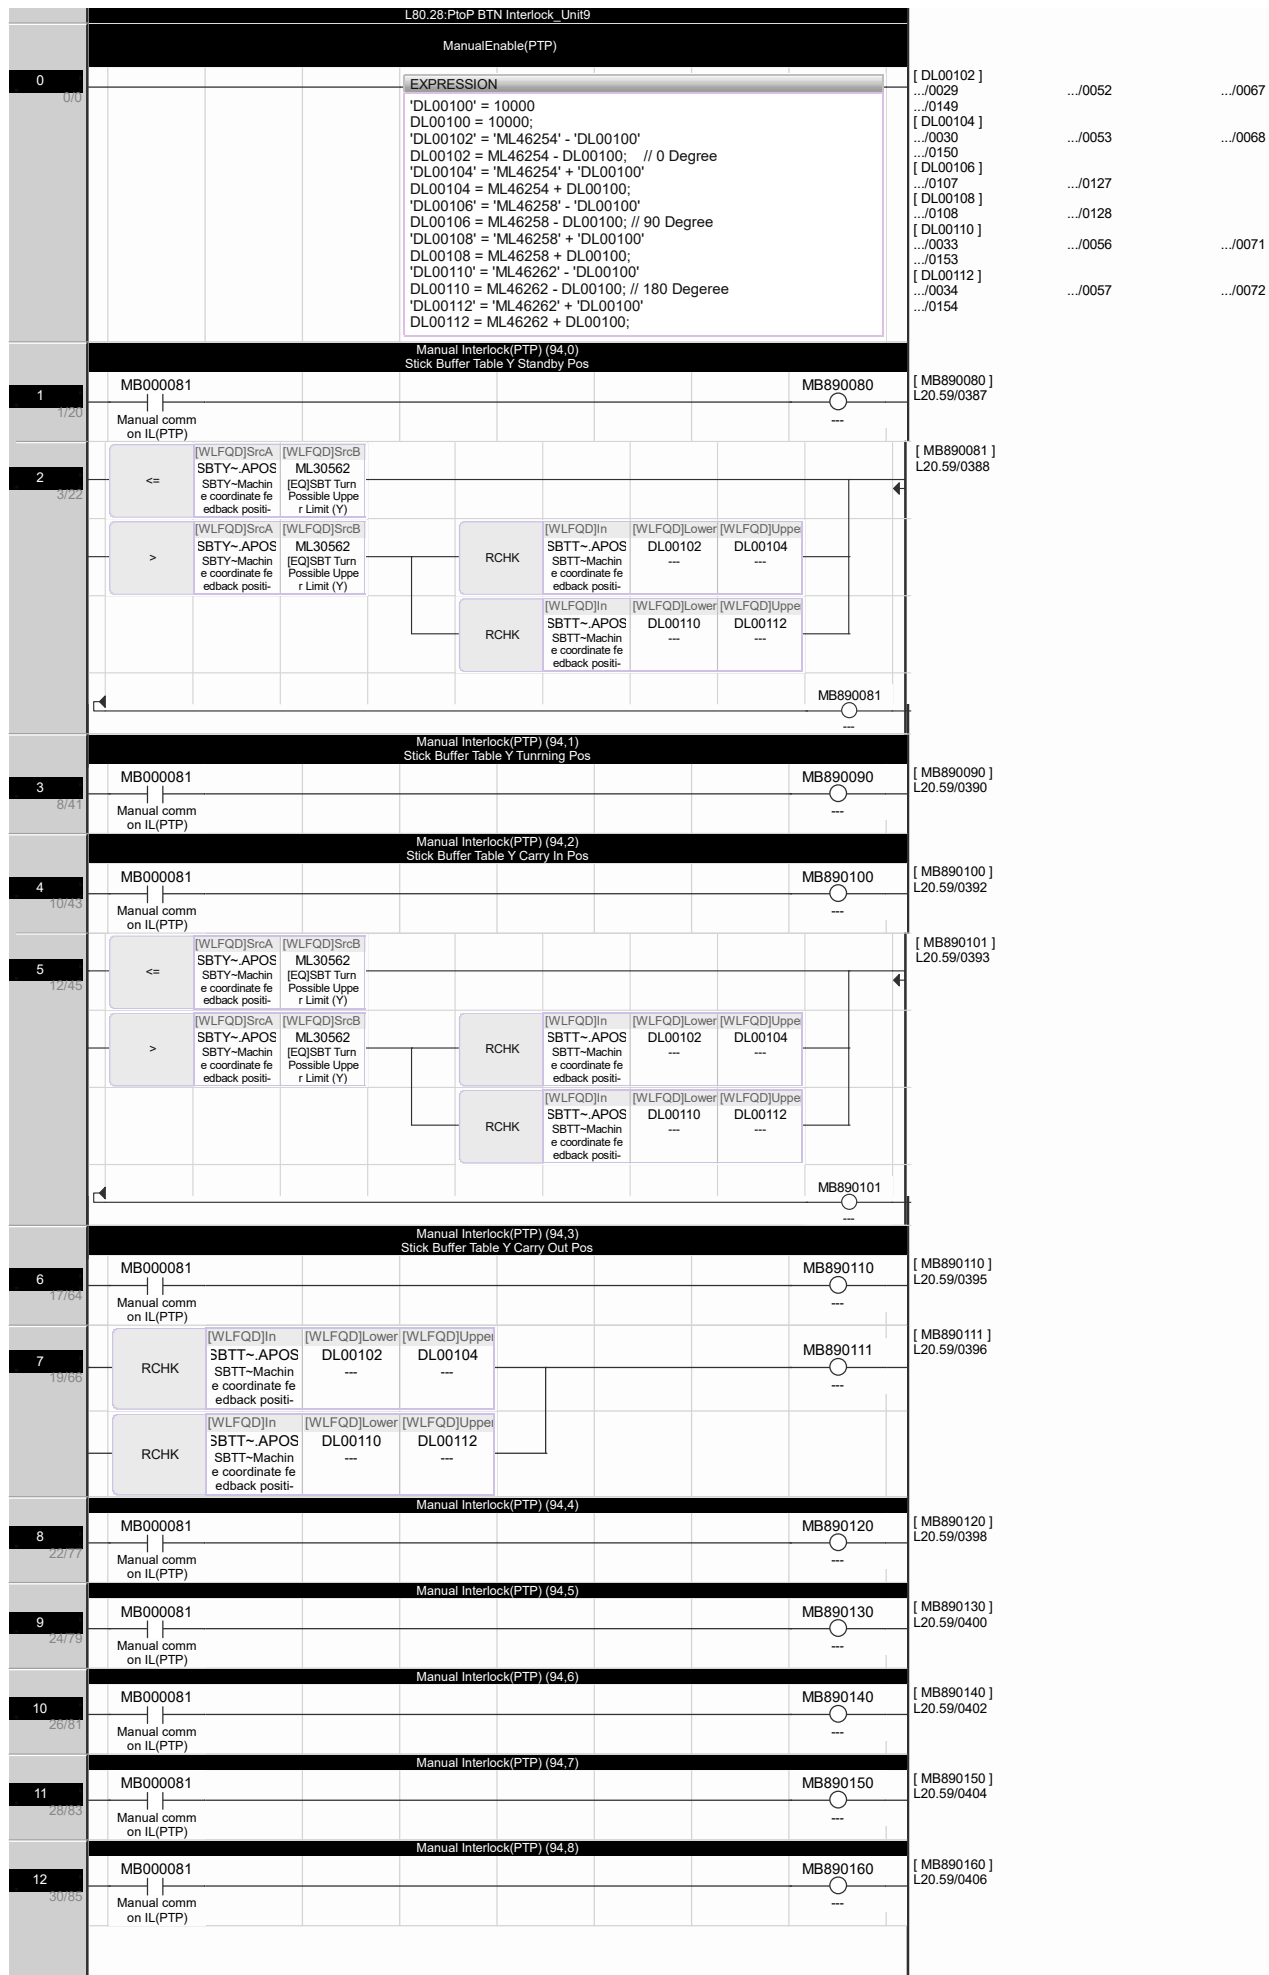

		Manual Interlock(PTP) (94.20) Stick Buffer Table T 0 Deg					
27	70/162	MB000081				MB890280	[MB890280] L20.59/0433
		Manual comm on IL(PTP)				---	
28	72/164	MB081001				MB890281	[MB890281] L20.59/0434
		SBT Y Turning Pos				---	
		Manual Interlock(PTP) (94.21) Stick Buffer Table T 90 Deg					
29	74/166	MB000081				MB890290	[MB890290] L20.59/0436
		Manual comm on IL(PTP)				---	
30	76/168	MB081001				MB890291	[MB890291] L20.59/0437
		SBT Y Turning Pos				---	
		Manual Interlock(PTP) (94.22) Stick Buffer Table T 180 Deg					
31	78/170	MB000081				MB890300	[MB890300] L20.59/0439
		Manual comm on IL(PTP)				---	
32	80/172	MB081001				MB890301	[MB890301] L20.59/0440
		SBT Y Turning Pos				---	
		Manual Interlock(PTP) (94.23)					
33	82/174	MB000081				MB890310	[MB890310] L20.59/0442
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.24)					
34	84/176	MB000081				MB890320	[MB890320] L20.59/0444
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.25)					
35	86/178	MB000081				MB890330	[MB890330] L20.59/0446
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.26)					
36	88/180	MB000081				MB890340	[MB890340] L20.59/0448
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.27)					
37	90/182	MB000081				MB890350	[MB890350] L20.59/0450
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.28)					
38	92/184	MB000081				MB890360	[MB890360] L20.59/0452
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.29)					
39	94/186	MB000081				MB890370	[MB890370] L20.59/0454
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.30)					
40	96/188	MB000081				MB890380	[MB890380] L20.59/0456
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (94.31)					
41	98/190	MB000081				MB890390	[MB890390] L20.59/0458
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.0)					
42	100/192	MB000081				MB890400	[MB890400] L20.59/0460
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.1)					
43	102/194	MB000081				MB890410	[MB890410] L20.59/0462
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.2)					
44	104/196	MB000081				MB890420	[MB890420] L20.59/0464
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.3)					
45	106/198	MB000081				MB890430	[MB890430] L20.59/0466
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.4)					
46	108/200	MB000081				MB890440	[MB890440] L20.59/0468
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.5)					
47	110/202	MB000081				MB890450	[MB890450] L20.59/0470
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.6)					
48	112/204	MB000081				MB890460	[MB890460] L20.59/0472
		Manual comm on IL(PTP)				---	
		Manual Interlock(PTP) (95.7)					
49	114/206	MB000081				MB890470	[MB890470] L20.59/0474
		Manual comm on IL(PTP)				---	

Manual Interlock(PTP) (95,8)									
50	MB000081							MB890480	[MB890480] L20.59/0476
110/208	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,9)									
51	MB000081							MB890490	[MB890490] L20.59/0478
118/210	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,10)									
52	MB000081							MB890500	[MB890500] L20.59/0480
120/212	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,11)									
53	MB000081							MB890510	[MB890510] L20.59/0482
122/214	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,12)									
54	MB000081							MB890520	[MB890520] L20.59/0484
124/216	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,13)									
55	MB000081							MB890530	[MB890530] L20.59/0486
126/218	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,14)									
56	MB000081							MB890540	[MB890540] L20.59/0488
128/220	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,15)									
57	MB000081							MB890550	[MB890550] L20.59/0490
130/222	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,16)									
58	MB000081							MB890560	[MB890560] L20.59/0492
132/224	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,17)									
59	MB000081							MB890570	[MB890570] L20.59/0494
134/226	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,18)									
60	MB000081							MB890580	[MB890580] L20.59/0496
136/228	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,19)									
61	MB000081							MB890590	[MB890590] L20.59/0498
138/230	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,20)									
62	MB000081							MB890600	[MB890600] L20.59/0500
140/232	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,21)									
63	MB000081							MB890610	[MB890610] L20.59/0502
142/234	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,22)									
64	MB000081							MB890620	[MB890620] L20.59/0504
144/236	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,23)									
65	MB000081							MB890630	[MB890630] L20.59/0506
146/238	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,24)									
66	MB000081							MB890640	[MB890640] L20.59/0508
148/240	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,25)									
67	MB000081							MB890650	[MB890650] L20.59/0510
150/242	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,26)									
68	MB000081							MB890660	[MB890660] L20.59/0512
152/244	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,27)									
69	MB000081							MB890670	[MB890670] L20.59/0514
154/246	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,28)									
70	MB000081							MB890680	[MB890680] L20.59/0516
156/248	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,29)									
71	MB000081							MB890690	[MB890690] L20.59/0518
158/250	Manual comm on IL(PTP)							---	
Manual Interlock(PTP) (95,30)									
72	MB000081							MB890700	[MB890700] L20.59/0520
160/252	Manual comm on IL(PTP)							---	

	Manual Interlock(PTP) (95.31)						
73	MB000081					MB890710	[MB890710]
162/254	Manual comm on IL(PTP)					---	L20.59/0522
	Manual Interlock(PTP) (96.0)						
	[1Cycle] Stick Buffer Table Standby Pos						
74	MB000081					MB890720	[MB890720]
164/256	Manual comm on IL(PTP)					---	L20.59/0524
	Manual Interlock(PTP) (96.1)						
	[1Cycle] Stick Buffer Table Turning Pos						
75	MB000081					MB890730	[MB890730]
166/258	Manual comm on IL(PTP)					---	L20.59/0526
	Manual Interlock(PTP) (96.2)						
	[1Cycle] Stick Buffer Table Carry In Pos						
76	MB000081					MB890740	[MB890740]
168/260	Manual comm on IL(PTP)					---	L20.59/0528
	Manual Interlock(PTP) (96.3)						
	[1Cycle] Stick Buffer Table Carry Out Pos						
77	MB000081					MB890750	[MB890750]
170/262	Manual comm on IL(PTP)					---	L20.59/0530
	Manual Interlock(PTP) (96.4)						
78	MB000081					MB890760	[MB890760]
172/264	Manual comm on IL(PTP)					---	L20.59/0532
	Manual Interlock(PTP) (96.5)						
79	MB000081					MB890770	[MB890770]
174/266	Manual comm on IL(PTP)					---	L20.59/0534
	Manual Interlock(PTP) (96.6)						
80	MB000081					MB890780	[MB890780]
176/268	Manual comm on IL(PTP)					---	L20.59/0536
	Manual Interlock(PTP) (96.7)						
81	MB000081					MB890790	[MB890790]
178/270	Manual comm on IL(PTP)					---	L20.59/0538
	Manual Interlock(PTP) (96.8)						
82	MB000081					MB890800	[MB890800]
180/272	Manual comm on IL(PTP)					---	L20.59/0540
	Manual Interlock(PTP) (96.9)						
83	MB000081					MB890810	[MB890810]
182/274	Manual comm on IL(PTP)					---	L20.59/0542
	Manual Interlock(PTP) (96.10)						
84	MB000081					MB890820	[MB890820]
184/276	Manual comm on IL(PTP)					---	L20.59/0544
	Manual Interlock(PTP) (96.11)						
85	MB000081					MB890830	[MB890830]
186/278	Manual comm on IL(PTP)					---	L20.59/0546
	Manual Interlock(PTP) (96.12)						
86	MB000081					MB890840	[MB890840]
188/280	Manual comm on IL(PTP)					---	L20.59/0548
	Manual Interlock(PTP) (96.13)						
87	MB000081					MB890850	[MB890850]
190/282	Manual comm on IL(PTP)					---	L20.59/0550
	Manual Interlock(PTP) (96.14)						
88	MB000081					MB890860	[MB890860]
192/284	Manual comm on IL(PTP)					---	L20.59/0552
	Manual Interlock(PTP) (96.15)						
89	MB000081					MB890870	[MB890870]
194/286	Manual comm on IL(PTP)					---	L20.59/0554
	Manual Interlock(PTP) (96.16)						
90	MB000081					MB890880	[MB890880]
196/288	Manual comm on IL(PTP)					---	L20.59/0556
	Manual Interlock(PTP) (96.17)						
91	MB000081					MB890890	[MB890890]
198/290	Manual comm on IL(PTP)					---	L20.59/0558
	Manual Interlock(PTP) (96.18)						
92	MB000081					MB890900	[MB890900]
200/292	Manual comm on IL(PTP)					---	L20.59/0560
	Manual Interlock(PTP) (96.19)						
93	MB000081					MB890910	[MB890910]
202/294	Manual comm on IL(PTP)					---	L20.59/0562
	Manual Interlock(PTP) (96.20)						
94	MB000081					MB890920	[MB890920]
204/296	Manual comm on IL(PTP)					---	L20.59/0564

Manual Interlock(PTP) (96.21)									
95	206/298	MB000081						MB890930	[MB890930] L20.59/0566
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.22)									
96	208/300	MB000081						MB890940	[MB890940] L20.59/0568
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.23)									
97	210/302	MB000081						MB890950	[MB890950] L20.59/0570
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.24)									
98	212/304	MB000081						MB890960	[MB890960] L20.59/0572
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.25)									
99	214/306	MB000081						MB890970	[MB890970] L20.59/0574
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.26)									
100	216/308	MB000081						MB890980	[MB890980] L20.59/0576
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.27)									
101	218/310	MB000081						MB890990	[MB890990] L20.59/0578
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.28)									
102	220/312	MB000081						MB891000	[MB891000] L20.59/0580
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.29)									
103	222/314	MB000081						MB891010	[MB891010] L20.59/0582
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.30)									
104	224/316	MB000081						MB891020	[MB891020] L20.59/0584
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (96.31)									
105	226/318	MB000081						MB891030	[MB891030] L20.59/0586
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.0)									
106	228/320	MB000081						MB891040	[MB891040] L20.59/0588
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.1)									
107	230/322	MB000081						MB891050	[MB891050] L20.59/0590
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.2)									
108	232/324	MB000081						MB891060	[MB891060] L20.59/0592
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.3)									
109	234/326	MB000081						MB891070	[MB891070] L20.59/0594
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.4)									
110	236/328	MB000081						MB891080	[MB891080] L20.59/0596
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.5)									
111	238/330	MB000081						MB891090	[MB891090] L20.59/0598
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.6)									
112	240/332	MB000081						MB891100	[MB891100] L20.59/0600
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.7)									
113	242/334	MB000081						MB891110	[MB891110] L20.59/0602
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.8)									
114	244/336	MB000081						MB891120	[MB891120] L20.59/0604
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.9)									
115	246/338	MB000081						MB891130	[MB891130] L20.59/0606
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.10)									
116	248/340	MB000081						MB891140	[MB891140] L20.59/0608
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.11)									
117	250/342	MB000081						MB891150	[MB891150] L20.59/0610
		Manual comm on IL(PTP)						---	

Manual Interlock(PTP) (97.12)									
118	232/344	MB000081						MB891160	[MB891160] L20.59/0612
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.13)									
119	254/346	MB000081						MB891170	[MB891170] L20.59/0614
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.14)									
120	256/348	MB000081						MB891180	[MB891180] L20.59/0616
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.15)									
121	238/350	MB000081						MB891190	[MB891190] L20.59/0618
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.16)									
122	260/352	MB000081						MB891200	[MB891200] L20.59/0620
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.17)									
123	262/354	MB000081						MB891210	[MB891210] L20.59/0622
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.18)									
124	264/356	MB000081						MB891220	[MB891220] L20.59/0624
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.19)									
125	266/358	MB000081						MB891230	[MB891230] L20.59/0626
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.20)									
126	268/360	MB000081						MB891240	[MB891240] L20.59/0628
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.21)									
127	270/362	MB000081						MB891250	[MB891250] L20.59/0630
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.22)									
128	272/364	MB000081						MB891260	[MB891260] L20.59/0632
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.23)									
129	274/366	MB000081						MB891270	[MB891270] L20.59/0634
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.24)									
130	276/368	MB000081						MB891280	[MB891280] L20.59/0636
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.25)									
131	278/370	MB000081						MB891290	[MB891290] L20.59/0638
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.26)									
132	280/372	MB000081						MB891300	[MB891300] L20.59/0640
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.27)									
133	282/374	MB000081						MB891310	[MB891310] L20.59/0642
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.28)									
134	284/376	MB000081						MB891320	[MB891320] L20.59/0644
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.29)									
135	286/378	MB000081						MB891330	[MB891330] L20.59/0646
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.30)									
136	288/380	MB000081						MB891340	[MB891340] L20.59/0648
		Manual comm on IL(PTP)						---	
Manual Interlock(PTP) (97.31)									
137	290/382	MB000081						MB891350	[MB891350] L20.59/0650
		Manual comm on IL(PTP)						---	
138	292/384	END							