Rouse Operating Manual

The connected bedside alarm clock

For Rouse firmware 1.0.0 · November 2026

Contents

Meet Rouse

- The parts of the clock

First setup

- 1. Plug it in
- 2. Connect it to your WiFi
- 3. Open the clock’s web page
- 4. Set your location and first alarm

Everyday use

- The clock screen
- The menu
- When an alarm rings
- The snooze bar
- Tapping the case
- Night mode

The web page

Alarms

- Adding or editing an alarm
- Alarm behavior

Display and themes

- The preview
- Choosing and editing themes
- Photos
- Slideshow

Sounds

- Sleep sounds
- Alarm sounds
- Your own sounds
- Hourly chime

Settings

- Time
- Weather
- Day and night
- Hardware
- Network
- Web page PIN
- Backup

Updating the firmware

- Installing an update from the web page
- Installing a file yourself

Troubleshooting

Specifications

Meet Rouse

Rouse is a bedside alarm clock with a touch screen and its own web page. Day to day, you use it like any alarm clock: glance at the time, tap the screen, snooze in the morning. For everything else (setting alarms, choosing a look, adding photos and sounds) you use the clock's web page on your phone, tablet or computer. There is no app to install and no account to create.

Rouse can:

- Wake you with up to 10 alarms, each with its own days, sound, volume and snooze.
- Wake you gently: the volume can rise slowly and the screen can brighten like a sunrise before the alarm.
- Wake you firmly: **Extra loud** is there for heavy sleepers.
- Show the weather, the date and your next alarm.
- Dim itself and switch to a night theme while you sleep.
- Show your own photos, one at a time or as a slideshow.
- Play sleep sounds (white noise, rain, ocean waves and others) with a sleep timer.
- Keep time through a power outage on its backup battery (if your clock has one).



Rouse on a nightstand

The parts of the clock



The snooze bar on top, the screen, and the USB-C port on the right side



The back, with the RESET hole near the left edge

- **Screen.** The time and everything else. Tap it to open the menu.
- **Snooze bar** (on top, if your clock has one). Press it to snooze, hold it to stop the alarm. Clocks without a snooze bar use the **Snooze** button on the screen instead. On the Waveshare, you can simply **tap the case** (see *Tapping the case*).
- **USB-C port** (right side). Power. Any USB phone charger works.

- **Speaker** (underneath). Sound comes out through the grille in the base.
- **RESET hole** (back). A paperclip pressed gently into it restarts the clock. You will rarely need it.
- **Stylus holder** (some cases). Holds the stylus for clocks with a pressure-sensitive (resistive) screen.

Three kinds of Rouse. Rouse runs on three different display boards. They work the same way, with a few small differences, which this manual points out where they matter. To see which one you have, open the web page and look at **Settings → Status → Board**:

- **CYD** (ESP32 3.5″ display, E32R35T). Pressure-sensitive touch screen; a stylus works best. Holds up to 3 photos.
- **Freenove** (FNK0104N). Glass touch screen like a phone's; use your finger. Holds up to 64 photos.
- **Waveshare** (ESP32-S3-Touch-LCD-3.5). Glass touch screen; use your finger. Holds up to 64 photos.

First setup

1. Plug it in



The USB-C cable plugs into the right side

Connect the clock to a USB charger with a USB-C cable. The screen lights up within a few seconds. A brand-new clock (or one that has forgotten its WiFi) shows **WiFi setup** instructions.



The clock waiting to be set up

2. Connect it to your WiFi

1. On your phone, open the WiFi settings and join the network the clock shows, named **Rouse-** followed by four characters (for example *Rouse-3F2A*). It has no password.
2. A setup page usually opens by itself. If it doesn't, open a web browser and go to **http://192.168.4.1**.
3. Pick your home WiFi network from the list, type its password and tap **Join network**.
4. The clock connects, shows the time, and turns off its setup network about a minute later.
5. Reconnect your phone to your home WiFi.

Rouse uses 2.4 GHz WiFi, which almost every home router provides. If your router uses separate names for 2.4 GHz and 5 GHz, pick the 2.4 GHz one.

3. Open the clock's web page

On any phone, tablet or computer on your home WiFi, open a browser and go to:

http://rouse.local

The address is also shown at the bottom of the clock's menu (tap the clock screen once). If **rouse.local** doesn't open, type the number address shown there instead, for example *http://192.168.1.40*.

Add it to your home screen. On an iPhone or iPad, tap the Share button and choose **Add to Home Screen**. On Android, open the browser menu and choose **Add to Home screen** or **Install**. You get a Rouse icon that opens the clock's page like an app.

More than one Rouse? The first clock on your network takes the name **rouse.local**; the next ones take **rouse-2.local**, **rouse-3.local** and so on. You can give each one a friendlier name in **Settings → Network → Clock name**, for example *rouse-bedroom*.

4. Set your location and first alarm

1. In the web page, open **Settings**. Under **Time**, check the time zone. Under **Weather**, search for your town so the clock can show the weather.
2. Open **Alarms**, tap **+ Add alarm**, set the time and days, and tap **Save**.

That’s it. The rest of this manual covers everything else you can do.

Everyday use

The clock screen




A day theme: time, date, weather and status icons

Depending on the theme and layout you choose, the clock screen can show the time, the date, the weather, your next alarm, and small WiFi and battery icons.

The menu


Tap the clock screen to open the menu. It closes by itself after 30 seconds, or tap **Done**.

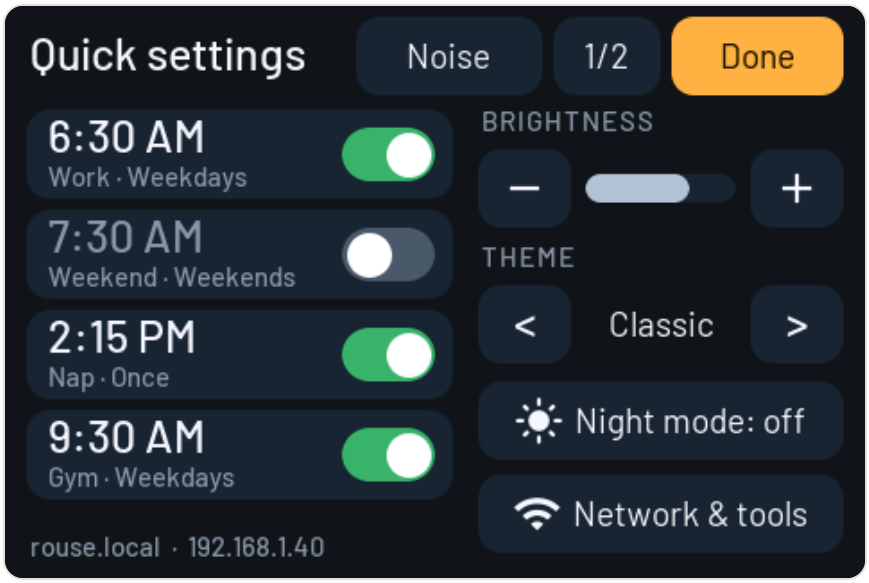

The menu on the clock

- **Alarms list.** Tap an alarm to turn it on or off. If you have more than four alarms, **1/2** shows the next page.
- **Brightness. –** and **+** change the brightness for the current mode (day or night).
- **Theme. <** and **>** step through your themes.
- **Night mode.** Turns night mode on or off right now (see Night mode).
- **Noise.** Opens the sleep sounds.
- **Network & tools.** The clock's address and WiFi, a fixed network address, saved WiFi networks and, on the CYD, touch calibration.
- **Cancel snooze.** Shown instead of Network & tools while an alarm is snoozing.

When an alarm rings

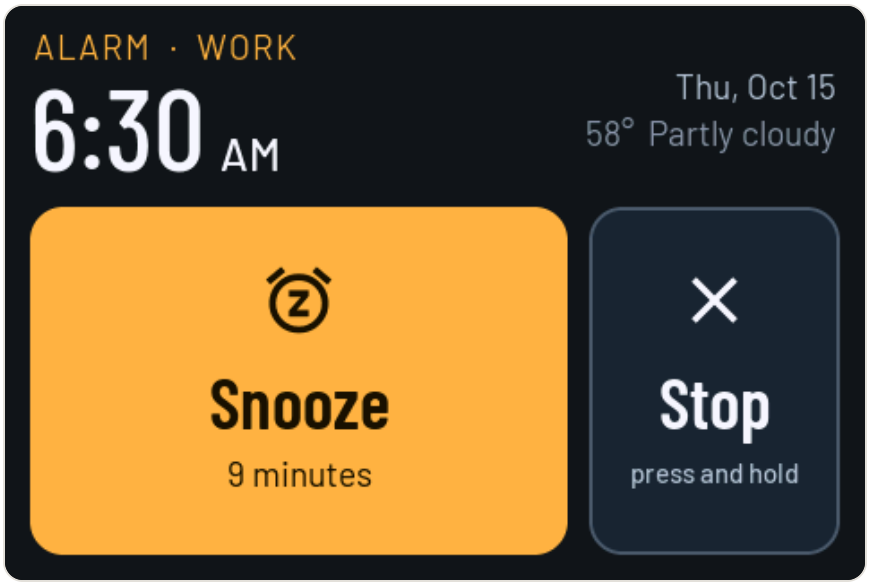

An alarm ringing

- **Snooze:** tap **Snooze**, press the snooze bar, or (Waveshare) tap the case once. The alarm rings again after the snooze time (9 minutes unless you change it).
- **Stop:** press and hold **Stop** for one second (a ring fills as you hold), hold the snooze bar down for about 1½ seconds, or (Waveshare) tap the case twice quickly. Holding prevents stopping an alarm by accident while half asleep. If you prefer a single tap, turn off **Settings → Alarm behavior → Press and hold to stop**.
- An alarm nobody stops turns itself off after 15 minutes (you can change this).
- While snoozing, the clock screen shows when the alarm will ring again. To cancel the snooze, open the menu and tap **Cancel snooze**, hold the snooze bar, or (Waveshare) tap the case twice quickly.



Snoozing until 6:39 AM

The snooze bar

If your clock has a snooze bar:



Pressing the snooze bar while an alarm rings

When	Press	Hold (1½ s)
An alarm is ringing	Snooze (or stop, if snooze is off for that alarm)	Stop the alarm

When	Press	Hold (1½ s)
Snoozing	Light up the screen	Cancel the snooze
A sleep sound is playing	Stop the sound	
At night	Light up the screen for a few seconds	
The menu is open	Close the menu	

Tapping the case

The Waveshare board has a motion sensor, so a Waveshare clock needs no snooze bar: while an alarm rings, tap anywhere on the case.

When	One tap	Two quick taps
An alarm is ringing	Snooze	Stop the alarm
Snoozing	(nothing)	Cancel the snooze


- Tap firmly with a fingertip, like knocking on a door. For two taps, make them about the same strength, a quarter of a second apart.
- After one tap the clock waits a moment (under a second) to see whether a second tap follows, then snoozes.
- Taps only do something while an alarm is ringing or snoozing. At other times they're ignored, so bumping the nightstand does nothing.
- A hard bump of the nightstand can count as a tap. That can snooze the alarm, but never stop it: stopping always takes two taps.
- Turn it on or off, and choose how hard a tap must be, in **Settings → Hardware** (see *Hardware*). It's on, at **Normal tap**, on a new Waveshare clock.

Night mode

Night mode dims the screen and switches to a dark night theme on a schedule (from 10:00 PM to 6:30 AM unless you change it). At night:

- Tap the screen to brighten it for a few seconds (10 unless you change it). Tap again while it's bright to open the menu.
- When an alarm rings, the screen brightens so you can see it.
- If an alarm uses the **sunrise light**, the screen starts brightening before it rings and switches back to your day theme.

To change the schedule, the night theme or the night brightness, use **Settings → Day and night**. To switch night mode on or off right now, use the menu on the clock, or **Settings → Day and night → Right now**.

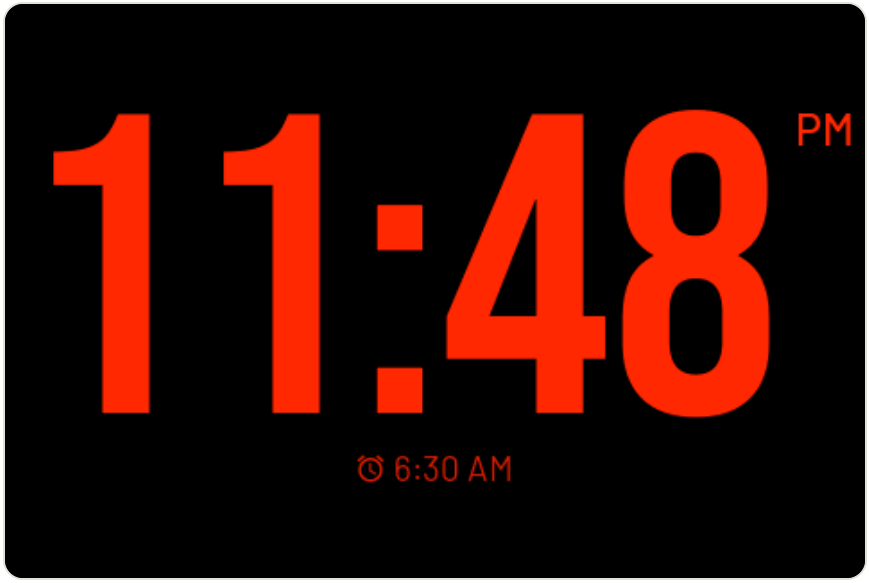

A night theme



Night mode in a dark bedroom


How dark the night screen can get depends on the board. The Freenove and Waveshare screens get much darker than the CYD's, so you can use a slightly higher night brightness for easier reading without lighting up the room.

The web page

The web page has four tabs (**Display**, **Alarms**, **Sounds** and **Settings**) plus **Clock**, which shows a live view of the clock screen. Changes save to the clock as you make them; there is no Save button except in the alarm editor.

If your clock has a PIN (see Web page PIN), the page asks for it the first time you open it in a browser.

Alarms

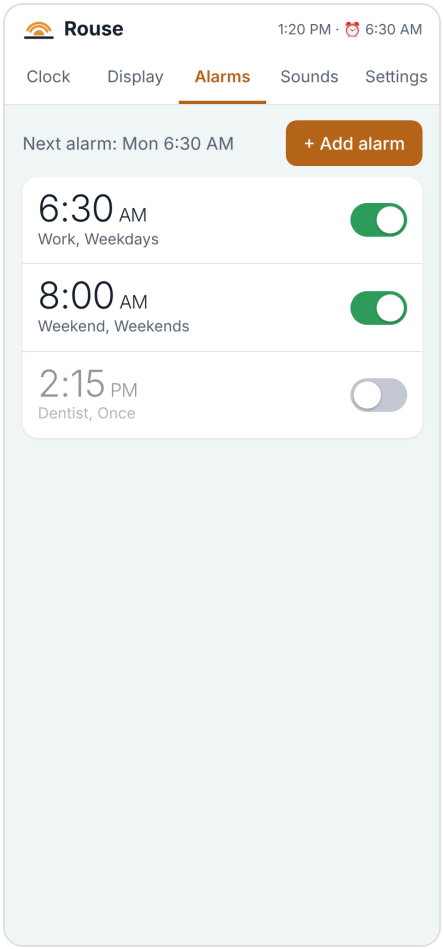


The Alarms tab

The **Alarms** tab lists your alarms with the next one at the top. Use the switch beside an alarm to turn it on or off, or tap the alarm to edit it. You can have up to 10.

Adding or editing an alarm

Tap **+ Add alarm**, or tap an existing alarm. When you're done, tap **Save**.

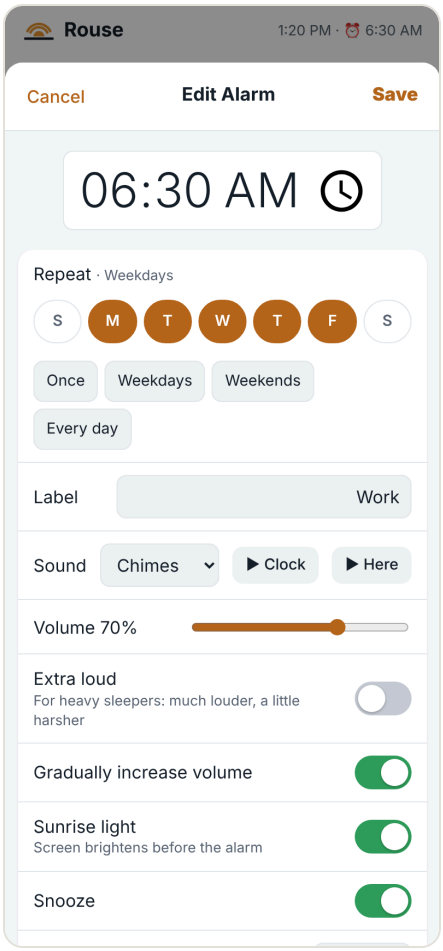


Editing an alarm

- **Time.** Tap the time to change it.
- **Repeat.** Tap the days it should ring, or use **Once**, **Weekdays**, **Weekends** or **Every day**. A **Once** alarm turns itself off after it rings.
- **Label.** A name shown on the clock when it rings, for example *Work*.
- **Sound.** Pick a built-in sound or one of your own. **▶ Clock** plays it on the clock; **▶ Here** plays it on your phone.
- **Volume.** How loud the alarm gets.
- **Extra loud.** For heavy sleepers: much louder, a little harsher. Try it with **▶ Clock** before relying on it.
- **Gradually increase volume.** Starts quietly and rises to the full volume over about 30 seconds.
- **Sunrise light.** The screen slowly brightens before the alarm, like dawn (starting 15 minutes before unless you change it in **Settings → Alarm behavior**).
- **Snooze** and **Snooze length.** Whether this alarm can be snoozed, and for how long.
- **Skip next alarm.** Skips just the next time it would ring (a holiday, say), then carries on as normal.
- **Ring it now (test)** rings the alarm right away so you can check it. **Delete Alarm** removes it.

Alarm behavior

Settings → Alarm behavior sets how every alarm behaves:

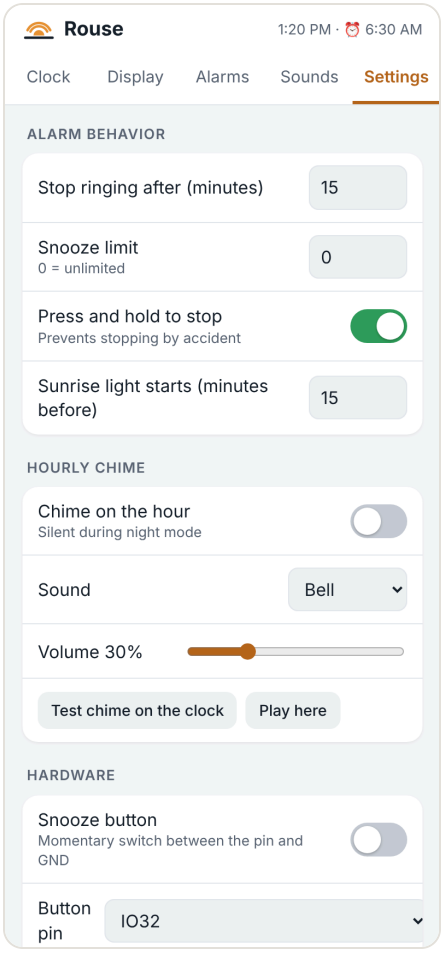


Alarm behavior settings

- **Stop ringing after.** An alarm nobody stops goes quiet after this many minutes.
- **Snooze limit.** How many times an alarm can be snoozed (0 = no limit).
- **Press and hold to stop.** Stopping needs a one-second hold, so you can’t stop it by accident.
- **Sunrise light starts.** How many minutes before the alarm the screen starts to brighten.

Display and themes

A **theme** is the look of the clock screen: its layout, time font, colors and background. Rouse comes with seven themes. You can change them, make copies, and create your own. One theme is used by day and one at night.

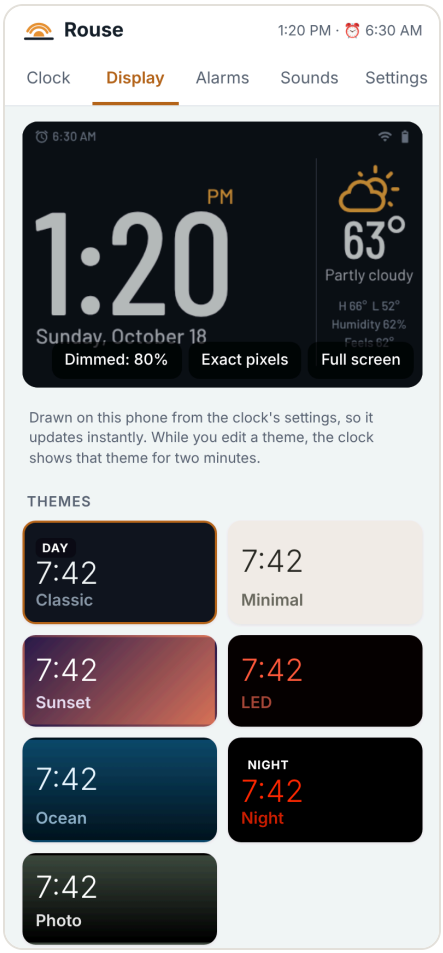

The Display tab: a preview of the clock and your themes

The preview

The picture at the top of **Display** shows what the clock is showing right now. It is drawn on your phone, so it updates instantly as you edit.

- **Dimmed: 80%** shows the preview at the clock's current brightness. Tap it to switch to **Full bright**, which is easier to see while you choose colors.
- **Exact pixels** fetches the real screen from the clock, pixel for pixel.
- **Full screen** shows a bigger preview. Turn your phone sideways for the biggest view.

Choosing and editing themes

Tap a theme to edit it. While you edit, the clock shows that theme for two minutes, then goes back to normal. To use a theme, choose **Use as: Day theme** or **Night theme** at the top of the editor.

- **Duplicate theme** makes a copy of the theme you are editing. This is also how you make a new theme (see below). Up to 10 themes.
- **Delete theme** removes the theme you are editing.
- **Restore built-in themes** puts back the original seven (and removes your own).

Making your own theme

New themes always start as a copy of an existing one:


1. Tap the theme that's closest to what you want.
2. Tap **Duplicate theme**. The copy appears at the end of the list, named after the original with "copy" added, and opens in the editor.
3. Give it a **Name**, then change its layout, font, colors and background as you like.
4. To use it, choose **Use as: Day theme** or **Night theme**.

Your original theme stays as it was, so it's safe to experiment.

The theme editor

The editor has these sections:


- **Layout.** Where the time and other information go: **Time + side column**, **Weather column left**, **Bottom strip**, **Photo corner** (small time, made for photos) and **Centered** (time only, with one small line).
- **Time.** The font (Modern, Light, Serif, Bold, Rounded, LED Segments, Tech), its size, whether the colon blinks, and for LED Segments whether the unlit segments show faintly. The time shrinks automatically if it doesn't fit.
- **Date format.** From *Thursday, October 15* to *10/15/2026*.
- **Colors.** The time, the accent color (AM/PM, icons and the Snooze button) and the secondary text.
- **Background.** A solid color, a gradient, or a photo (see below).
- **Show on the clock.** Tick the items you want: date, temperature, weather icon, conditions, high/low, humidity, feels like, wind, sunrise/sunset, next alarm, WiFi and battery icons, and AM/PM. Items the chosen layout has no room for are greyed out.

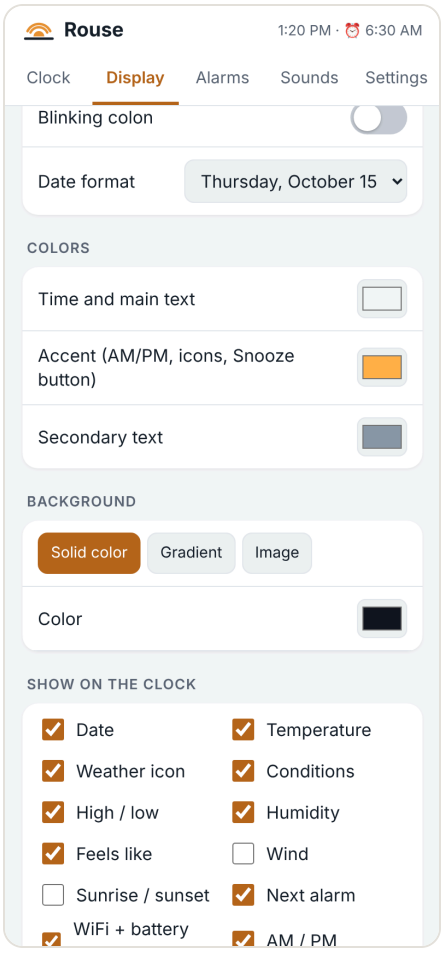

Choosing what shows on the clock

Photos

Set **Background** to **Image** to use a photo.

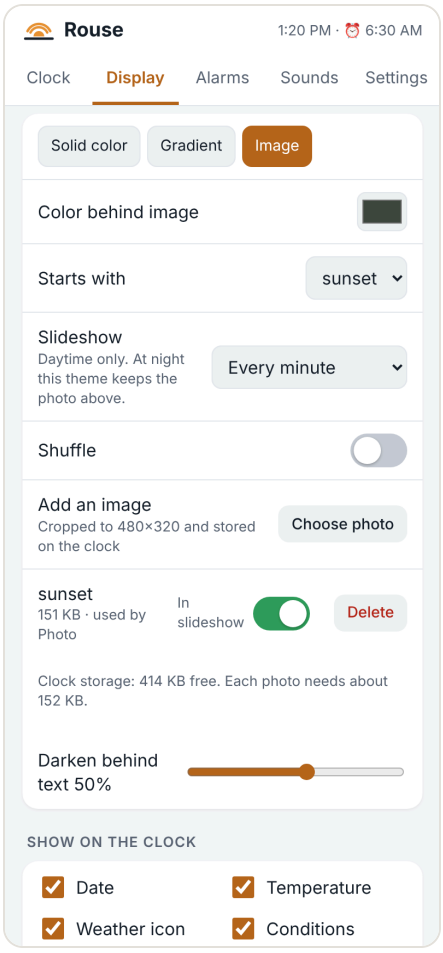

A photo theme with a slideshow

- **Add an image → Choose photo** picks a photo from your phone or computer. The page crops it to the clock's screen (480 × 320) and stores it on the clock.
- **Photo** chooses which photo this theme shows.
- **Darken behind text** shades the photo behind the time and text so they stay readable.
- Below the list of photos, the page shows how much room is left. Each photo needs about 150 KB. The CYD has room for up to 3 photos; the Freenove and Waveshare for up to 64.
- **Delete** removes a photo from the clock. A theme that was using it switches to a gradient.



A photo theme on the clock


Slideshow

A photo theme can change photo by itself:

- **Slideshow** sets how often: every 10 seconds, 30 seconds, minute, 5 minutes or 15 minutes. **Off** keeps one photo.
- When the slideshow is on, the photo setting becomes **Starts with**: the photo it begins from.
- **Shuffle** shows the photos in random order; otherwise they go in order by name.
- **In slideshow**, beside each photo, leaves a photo out of the slideshow when turned off.

The slideshow runs only while the photo theme is your **day** theme. It pauses while an alarm rings or the menu is open. At night (even if the same theme is used at night) the clock keeps the **Starts with** photo, so a bright picture never appears at 3 a.m.

Sounds

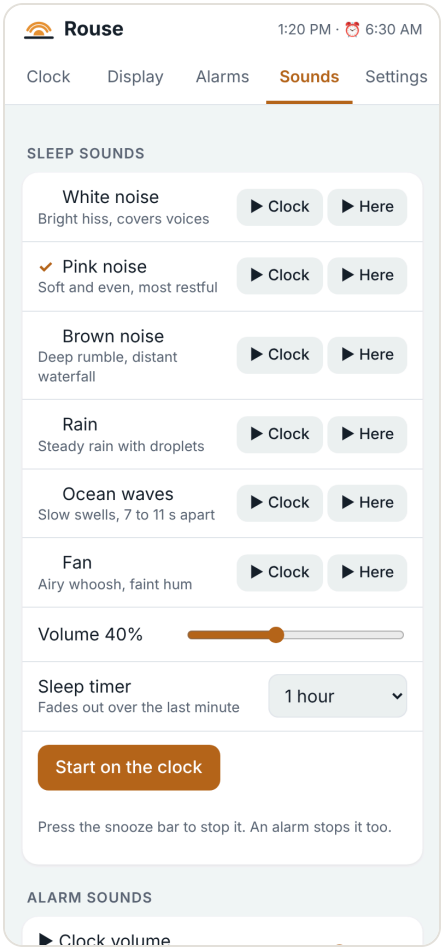


The Sounds tab

Sleep sounds

Rouse can play a soothing sound to help you fall asleep: **White noise**, **Pink noise**, **Brown noise**, **Rain**, **Ocean waves** or **Fan**.

- On the clock: tap the screen, tap **Noise**, choose a sound, and tap **Start**. Use **–** and **+** for the volume and **Sleep timer** for how long it plays.
- On the web page: **Sounds → Sleep sounds** has the same choices. **▶ Clock** and **▶ Here** let you listen first. **Start on the clock** starts it.
- The sound fades out over the last minute of the timer. **All night** plays until morning.
- Press the snooze bar to stop it. An alarm stops it too.

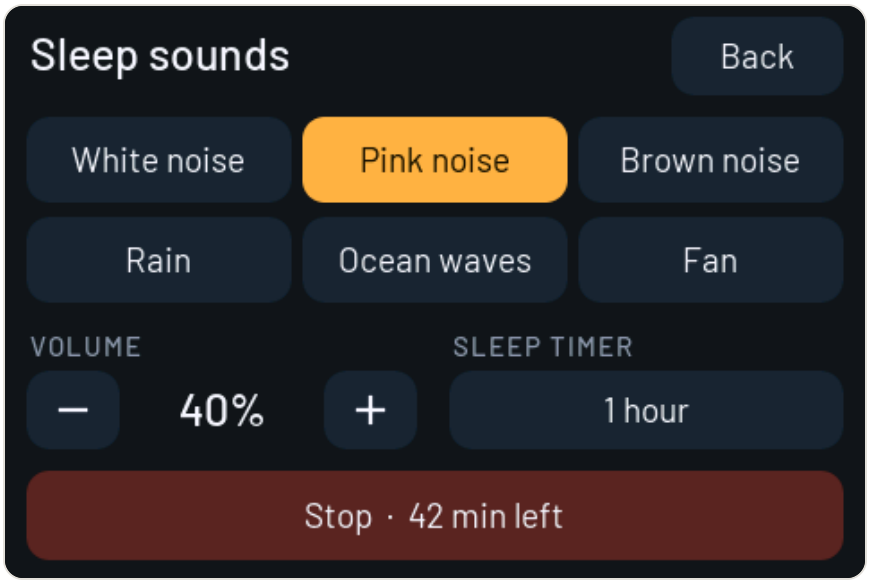


Sleep sounds on the clock

Alarm sounds

Rouse has eight built-in alarm sounds: **Morning Chimes**, **Marimba**, **Gentle Rise**, **Harp**, **Birdsong**, **Classic Beep**, **Digital Alarm** and **Soft Bell**. **Sounds → Alarm sounds** lets you listen to each one on the clock or on your phone. **Clock volume** sets the volume for these previews.

Your own sounds

You can add your own alarm sounds: a song, a rooster, anything.

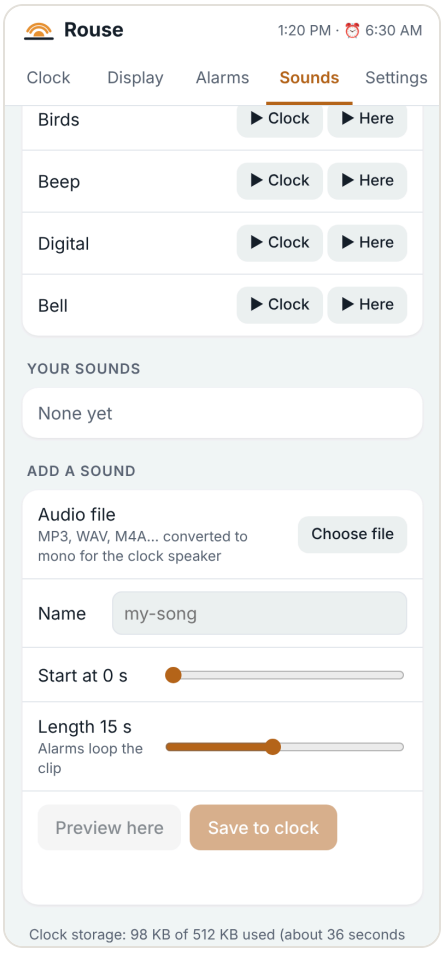

Adding your own sound

1. Under **Add a sound**, tap **Choose file** and pick an audio file (MP3, WAV, M4A and most other formats).
2. Give it a **Name**.
3. Use **Start at** and **Length** to choose the part to keep (3 to 30 seconds). Alarms repeat the clip until stopped.
4. Tap **Preview here** to listen, then **Save to clock**.


Your sounds appear under **Your sounds** and in every alarm's sound list, marked *(yours)*.

Hourly chime

Settings → Hourly chime plays a short sound on the hour. It stays silent during night mode.

Settings

Time

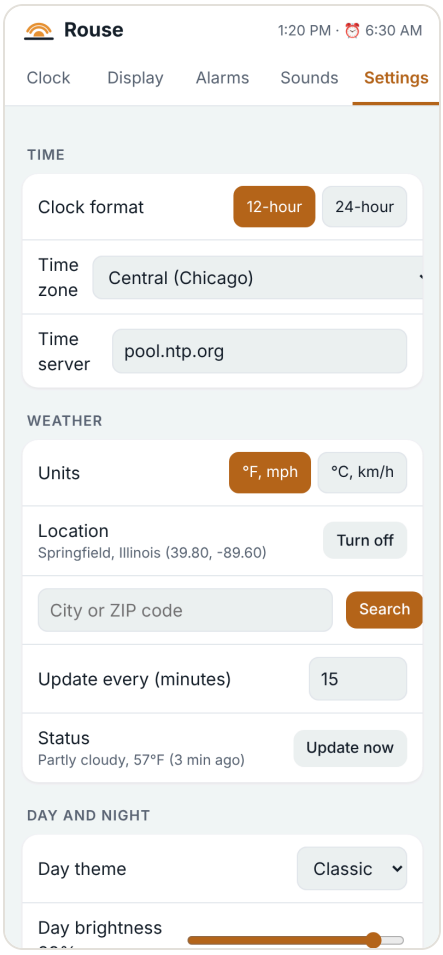

Time and weather settings

- **Clock format.** 12-hour or 24-hour.
- **Time zone.** Daylight saving time is handled automatically. (**POSIX time zone** and **Time server** are for unusual setups; leave them alone.)

The clock sets its own time over the internet. It keeps time through short WiFi outages.


Weather

- **Units.** °F and mph, or °C and km/h.
- **Location.** Search by town or ZIP code. **Turn off** hides the weather.
- **Update every.** How often the clock checks the weather.

- **Status** shows when the weather was last updated. **Update now** checks right away.

Weather comes from Open-Meteo, a free weather service. No account is needed.


Day and night

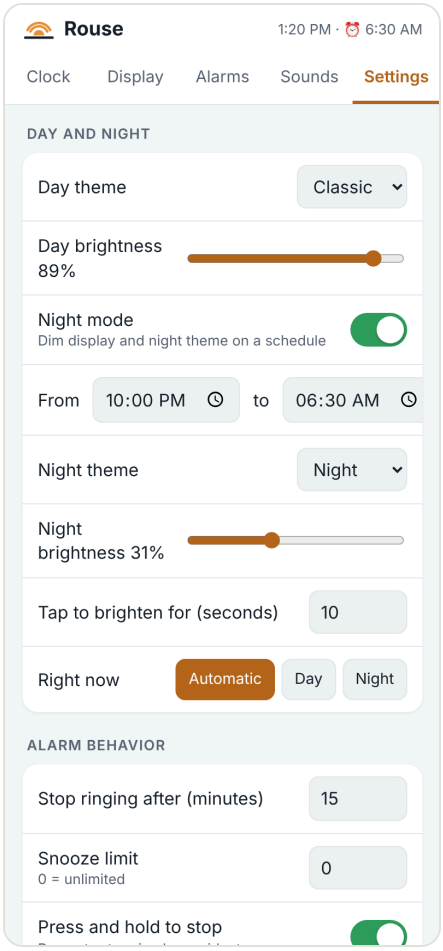

Day and night settings

- **Day theme** and **Day brightness.**
- **Night mode** turns the schedule on or off; **From** and **to** set it.
- **Night theme** and **Night brightness.**
- **Tap to brighten for.** How long the screen brightens when tapped at night.
- **Right now. Automatic** follows the schedule. **Day** or **Night** overrides it until the schedule next changes over (so night mode switched off at 11 PM comes back on the following night).

Hardware

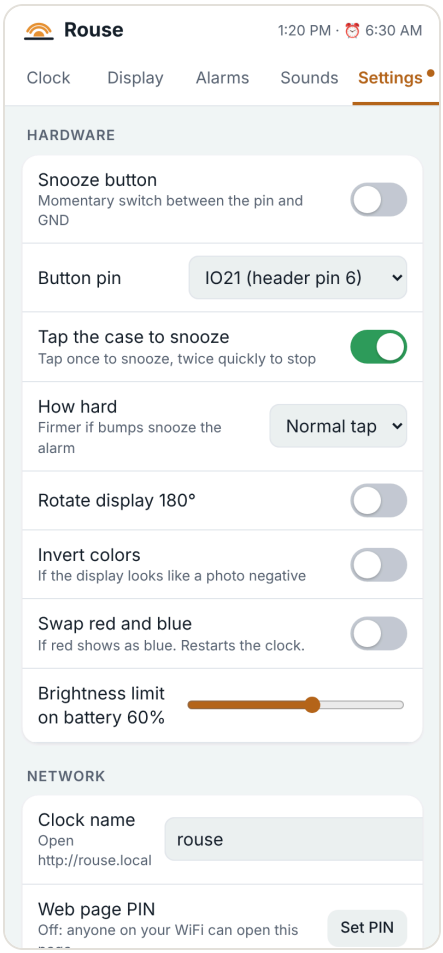


Hardware settings

- **Snooze button.** Turn this on if your clock has a snooze bar. **Button pin** is the connection the snooze switches are wired to. The right one for your board is chosen already; change it only if the build guide told you to. The line under the switch shows whether the clock sees the button and when it was last pressed, which is handy for testing.
- **Tap the case to snooze** (Waveshare only). One tap snoozes, two quick taps stop (see *Tapping the case*). The line under the switch shows how hard your last tap was, which helps when choosing the next setting.
- **How hard** (Waveshare only). **Gentle tap**, **Normal tap** or **Firm tap**. Choose **Firm tap** if bumps of the nightstand snooze your alarm, **Gentle tap** if your taps aren't noticed.
- **Rotate display 180°.** For a clock mounted upside down.
- **Invert colors** and **Swap red and blue.** For display boards whose colors look wrong (like a photo negative, or red showing as blue). You won't need them on a clock that already looks right.

- **Brightness limit on battery.** During a power outage the screen is held to this brightness to make the battery last longer.
- **Recalibrate touch** (CYD only). If taps land in the wrong place, this shows targets to tap.


Network

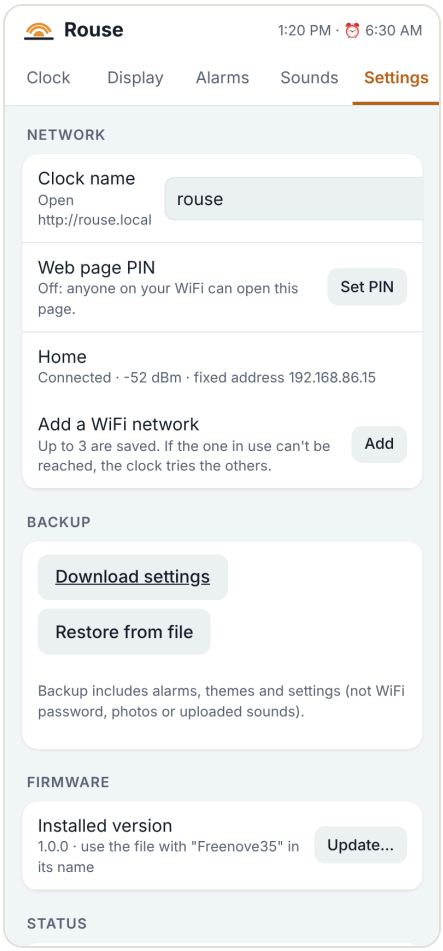

Network settings

- **Clock name.** The clock's web address: *rouse* means **http://rouse.local**. Changing it restarts the clock.
- **Web page PIN.** See below.
- **WiFi networks.** Up to three WiFi networks can be saved. If the one in use can't be reached, the clock tries the others. **Add** looks for networks nearby.

The clock's own **Network & tools** screen (tap the screen, then **Network & tools**) shows its address and signal, and can give it a **fixed address**, which avoids trouble on some routers.

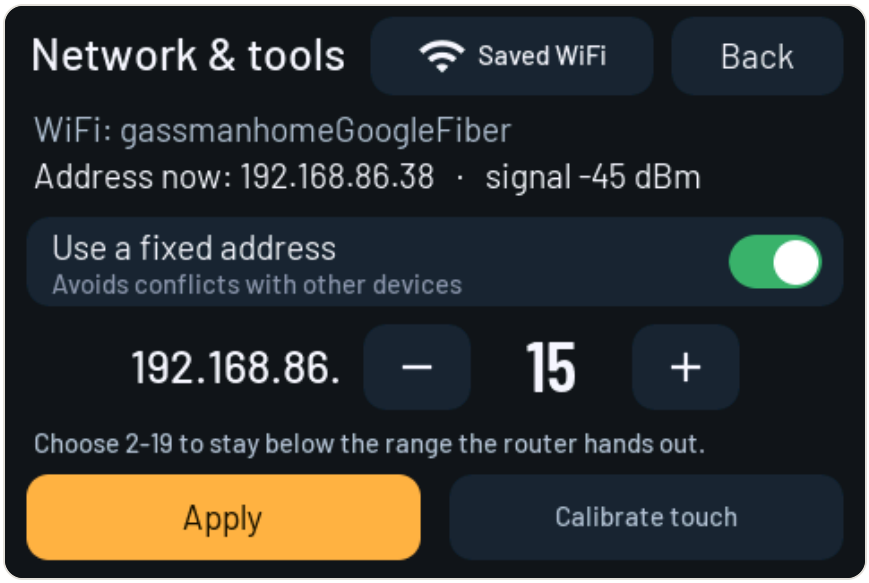


Network & tools on the clock

Web page PIN

Without a PIN, anyone on your home WiFi can open the clock's web page and change its alarms. That is fine for most homes. If you'd like to keep it private, set a PIN:


1. In **Settings → Network → Web page PIN**, tap **Set PIN**.
2. Enter 4 to 8 digits and tap **Save PIN**.

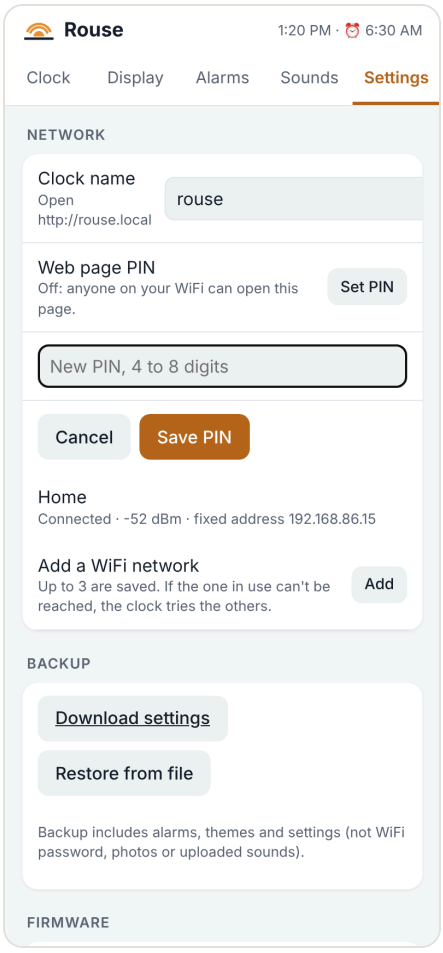

Setting a PIN

How it works:


- Each phone, tablet or computer asks for the PIN once, then stays signed in for a year, even when the clock restarts. The clock remembers up to eight devices.
- Changing the PIN signs out every other device; the one you changed it from stays signed in.
- The PIN protects everything on the page, including photos and firmware updates.
- After five wrong tries, the clock makes you wait a minute.
- The PIN is stored scrambled and is never included in a settings backup.
- Setting up a new clock (or one that has lost its WiFi) through its setup network never asks for the PIN.
- **Turn off PIN** removes it.

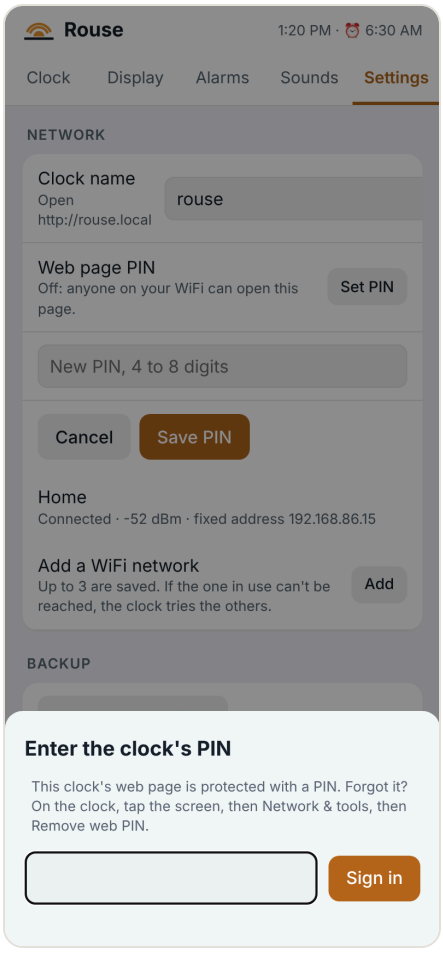

Signing in

Forgot the PIN? On the clock, tap the screen, then **Network & tools**, then **Remove web PIN**. You have to be at the clock to do this, which is the point. Then set a new PIN in the web page.

Backup

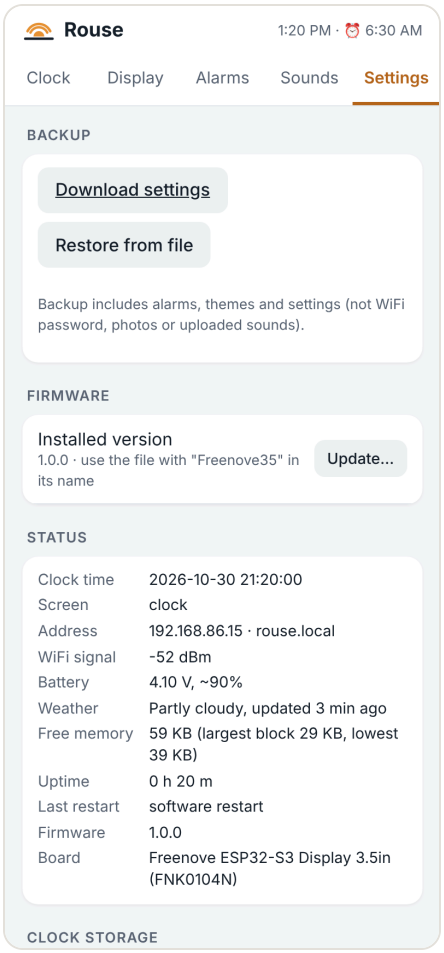

Backup and firmware settings


Download settings saves your alarms, themes and settings to a file; **Restore from file** puts them back, for example after a factory reset or onto a second clock. The backup does not include WiFi passwords, the PIN, photos or your own sounds.

Updating the firmware

New versions of Rouse add features and fix problems. Updating takes less than a minute and keeps all your settings, photos and sounds.

Installing an update from the web page

When you open the clock's web page, it checks **rouseclock.com** for a newer version for your board. If there is one, a dot appears on the **Settings** tab, and **Settings → Firmware** shows **Update available**, with a line about what's new and a **What's new** link to the full list of changes on rouseclock.com.

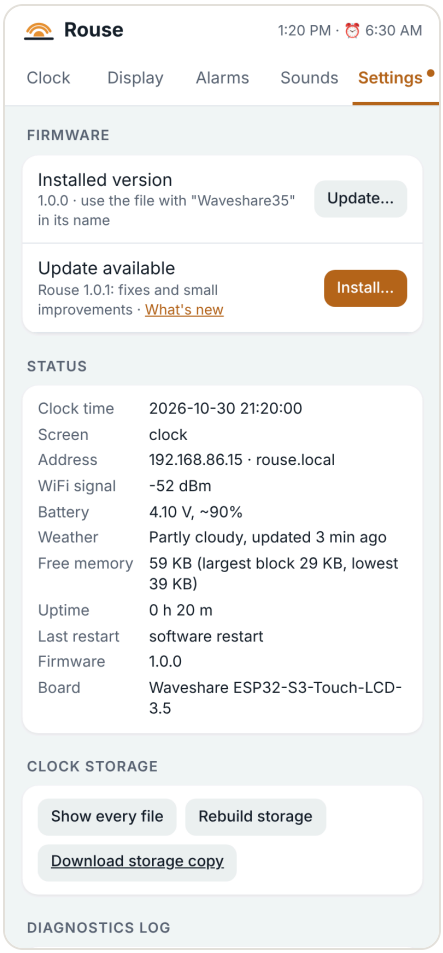

An update on offer: Settings → Firmware

1. Tap **Install...** and confirm. Nothing is installed until you do.
2. The page downloads the update from rouseclock.com and passes it to the clock. Keep the clock plugged in and the page open; the clock restarts by itself when done.

The check is made by your phone or computer, not the clock: an ordinary web request to rouseclock.com, with nothing about you or your clock in it. If the download doesn't work (no internet on that device, for example), the page links to the downloads page instead: use the steps below.

Installing a file yourself

1. Download the new firmware file for **your** board. Each release has one file per board, with the board's name in the file name: **CYD**, **Freenove35** or **Waveshare35**. **Settings → Firmware** reminds you which one your clock needs.
2. In **Settings → Firmware**, tap **Update...** and choose the file.
3. Keep the clock plugged in. A progress bar shows the upload; the clock restarts by itself when done.

If you pick the wrong file, the clock refuses it and says which file it needs. Nothing is changed.

> The very first install on a new board is done over USB from a computer, as described in the build guide. After that, every update goes through the web page.

Troubleshooting

The clock shows “WiFi setup” again. It started up and couldn’t reach any saved WiFi network for a minute: the router may be off, or its name or password changed. Join the clock’s **Rouse-** network with your phone and choose your WiFi again (see First setup). If the router was only restarting, the clock also keeps trying your saved networks in the background.

rouse.local doesn’t open. Some phones and networks don’t support *.local* names. Use the number address shown at the bottom of the clock’s menu instead. Make sure your phone is on the same WiFi as the clock, not on mobile data or a guest network.

I want to move the clock to a different WiFi network. Before you move it, go to **Settings → Network**, tap **Add**, and enter the new network (it can be saved even when it’s out of range). If you’ve already moved it, unplug the clock and plug it back in: when it can’t reach any saved network for a minute after starting, it opens its **Rouse-** setup network again.

I forgot the web page PIN. On the clock: tap the screen, **Network & tools**, **Remove web PIN**.

Touches land in the wrong place (CYD). Tap the screen, **Network & tools**, **Calibrate touch**, and tap each target as it appears. A stylus or fingernail works best.

The alarm is too quiet. Raise the alarm’s **Volume**, turn on **Extra loud**, or both. Test with **▶ Clock**.

The screen is too bright at night. Lower **Night brightness**, and choose a night theme with dark colors (the built-in **Night** theme is made for this).

The weather says “Updating…” for a long time. Check the location in **Settings → Weather**, then tap **Update now**. The weather needs a working internet connection.

The clock seems stuck. Press a paperclip gently into the **RESET** hole on the back. Your settings are kept.

Something isn’t working right. Settings → Diagnostics log shows what the clock has been doing. **Copy log** copies it so you can send it along when asking for help.

Start over. Settings → Factory reset erases all alarms, themes and settings and restarts the clock. It stays connected to your WiFi, and your photos and sounds stay on the clock. Download a backup first if you might want your settings back.

Still stuck? Email **support@tuscanygroup.com**. A copy of the clock’s log (**Settings → Diagnostics log → Copy log**) helps a lot.

Specifications

	CYD	Freenove	Waveshare
Board	ESP32 3.5″ display (E32R35T)	Freenove FNK0104N	Waveshare ESP32-S3-Touch-LCD-3.5
Screen	3.5″ 480 × 320	3.5″ 480 × 320 IPS	3.5″ 480 × 320 IPS
Touch	Pressure-sensitive (stylus)	Glass, finger	Glass, finger
Room for photos	up to 3	up to 64	up to 64
Touch calibration	Yes	Not needed	Not needed
Snooze	Snooze bar (optional)	Snooze bar (optional)	Tap the case
Firmware file name	…-CYD-…	…-Freenove35-…	…-Waveshare35-…

All three:

- **WiFi:** 2.4 GHz.
- **Power:** USB-C, 5 V.
- **Backup battery:** optional. On the CYD, a 1100 mAh battery runs the clock for about 7½ hours, and a 2000 mAh one about twice as long; other boards may draw a little more.
- **Alarms:** up to 10. **Themes:** up to 10. **Saved WiFi networks:** up to 3.
- **Internet services:** time (NTP time servers) and weather (Open-Meteo). Nothing else leaves your home network, and no account is needed.