Installing STM32CUBE IDE

STEP-1

STM32CubeIDE - Integrated Development Environment for STM32 - STMicroelectronics

Create an account first and then download the version 18.0 of the Cube Ide for WINDOWS.

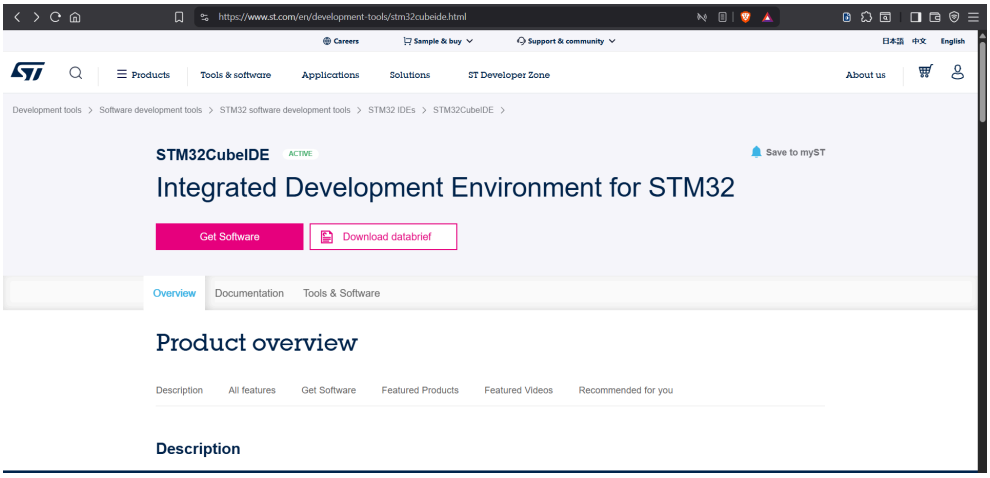

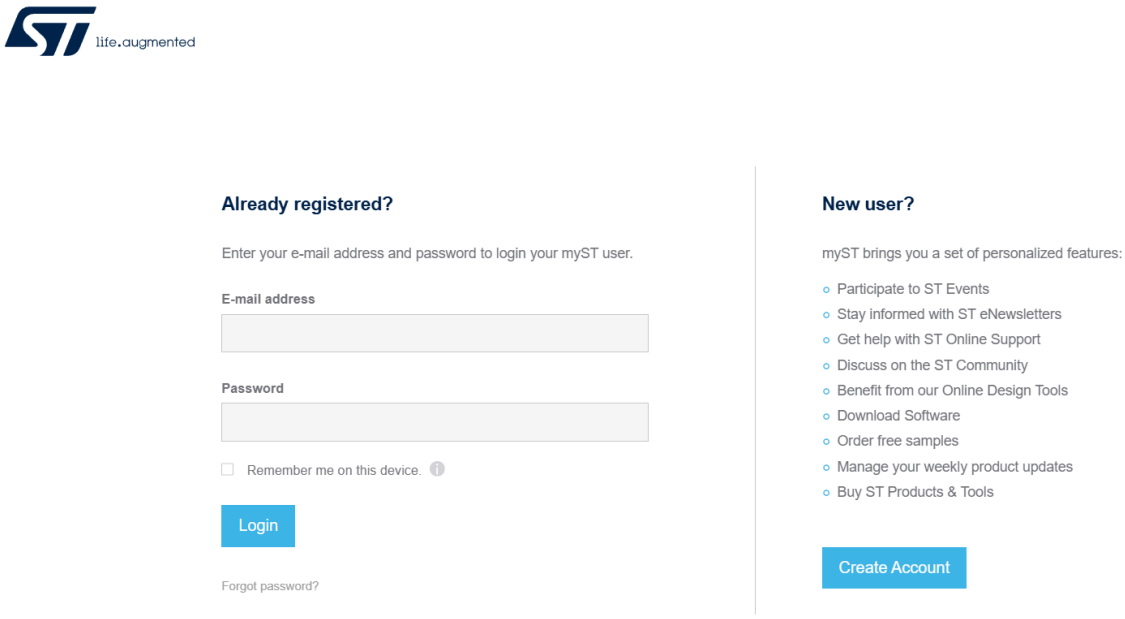

Click on **Create Account**

Get Software

	Part Number	General Description	Latest version	Download	All versions
+	STM32CubeIDE-DEB	STM32CubeIDE Debian Linux Installer	1.15.1	Get latest	Select version
+	STM32CubeIDE-Lnx	STM32CubeIDE Generic Linux Installer	1.15.1	Get latest	Select version
+	STM32CubeIDE-Mac	STM32CubeIDE macOS Installer	1.15.1	Get latest	Select version
+	STM32CubeIDE-RPM	STM32CubeIDE RPM Linux Installer	1.15.1	Get latest	Select version
+	STM32CubeIDE-Win	STM32CubeIDE Windows Installer	1.15.1	Get latest	Select version

On this click on the select version and select 18.0

+	STM32CubeIDE-Win	STM32CubeIDE Windows Installer	1.19.0	Get latest	Select version

STMicroelectronics recommends always keeping your software up to date

1.19.0
1.18.1
1.18.0

STEP-2

After Downloading Install the software and then open the STM32 CUBE IDE.