



RS6x_7x RadarDebugTool User Guide

Number of Pages:22

Document Version:1.3

Release Date:2026-08-31

Revision History

Version	Revision Description	Date
1.3	1、 Added an introduction to entering download mode by sending the download command; 2、 Added instructions for IIC communication; 3、 Added descriptions of common data formats; 4、 Added the Q&A chapter.	2026-06-15
1.2	1. Added an introduction to DataCube data parsing. 2. Added the DataCube retransmission switch.	2025-10-16
1.1	Updated the spectrum view description.	2025-10-13
1.0	Initial release.	2025-09-17

Table of Contents

Revision History	ii
Table of Contents	iii
List of Figures	iv
List of Tables	v
1 Overview	1
2 Software Introduction	2
2.1 GUI Interface	2
2.1.1 Port and Baud Rate Settings	3
2.1.2 Firmware Download	3
2.1.2.1 Enter Download Mode by Detecting the IO State	3
2.1.2.2 Enter Download Mode by Sending a Download Command	4
2.1.3 Receive Data	5
2.1.4 Menu Bar	5
2.1.4.1 Drawing Management	5
2.1.4.2 Data Management	6
2.1.4.3 Retransmit Setting	6
2.1.5 Data View	7
2.1.6 Spectrum View	8
2.2 Setting Interface	10
3 Basic Operation	12
4 Data Formats	13
4.1 Point Cloud	13
4.2 DataCube	13
4.3 Frame_Info	15
5 Q&A	16
5.1 How to View a 2D Point-Cloud Plot in Another Plane (for example, y-z or x-z)	16

List of Figures

Figure 2-1	RadarDebugTool Software Interface	2
Figure 2-2	Right-click Menu in the Data Reception Area	2
Figure 2-3	Port Selection	3
Figure 2-4	Firmware File Selection	4
Figure 2-5	Downloading Firmware Through the Command Port	4
Figure 2-6	Error Caused by Downloading Firmware Through the Data Port	4
Figure 2-7	Downloading Firmware by Sending a Download Command	5
Figure 2-8	Drawing Management Menu	5
Figure 2-9	Data Management Menu	6
Figure 2-10	Data File Storage Location	6
Figure 2-11	Data Playback Window	6
Figure 2-12	DataCube Retransmission Switch	7
Figure 2-13	Right-click Menu in the Data View	7
Figure 2-14	3D View	8
Figure 2-15	Spectrum Data	8
Figure 2-16	Range-Spectrum Processing	8
Figure 2-17	Velocity-Spectrum Display	9
Figure 2-18	Range-Spectrum Display	9
Figure 2-19	Setting Interface	10
Figure 2-20	Radar Parameter Configuration Process	10
Figure 2-21	Save Configuration File	11
Figure 2-22	Load Configuration File	11
Figure 4-1	Point-Cloud Data Saved by the Host Application	13
Figure 4-2	BIN File Data Format3	14
Figure 5-1	2D view of the motion point cloud	16

List of Tables

Table 4-1	Point-Cloud Data Format	13
Table 4-3	BIN File Data Format	14
Table 4-5	Frame_info Data Format	15

1 Overview

This document describes how to use RadarDebugTool for the RS6x_7x series mmWave radar sensor chips. The tool parses data reported by the embedded device through the HIF protocol and provides data visualization and storage functions.

This document is intended for demo presentation and engineering debugging of RS6x_7x series mmWave radar sensor chips.

2 Software Introduction

RadarDebugTool has two interfaces: the GUI interface and the Setting interface. The GUI interface displays and stores received data, while the Setting interface configures radar parameters.

2.1 GUI Interface

Figure 2-1 shows the RadarDebugTool GUI interface, which is divided into three areas.

(1) The area on the left is used to set the port, data communication mode, and baud rate. Click Download to download firmware.

(2) The center area consists of two sections. The upper section is the Menu Bar, where display modes, automatic data saving, and other view-related parameters can be configured. The lower section is the data view, where parsed data is displayed.

(3) The area on the right consists of two sections. The upper section is the data reception area. Right-click in this area to open the menu shown in Figure 2-2, where you can choose whether to display transmitted data, received data, timestamps, and hexadecimal data. Because received data is continuously refreshed and may affect tool performance, displaying received data is generally not recommended. The lower section is the data transmission area, which functions like a serial-port assistant and is normally used only during debugging.

If the data reception and transmission area on the right is not required, click the collapse arrow between the center and right areas to hide it and obtain a larger data-view area.

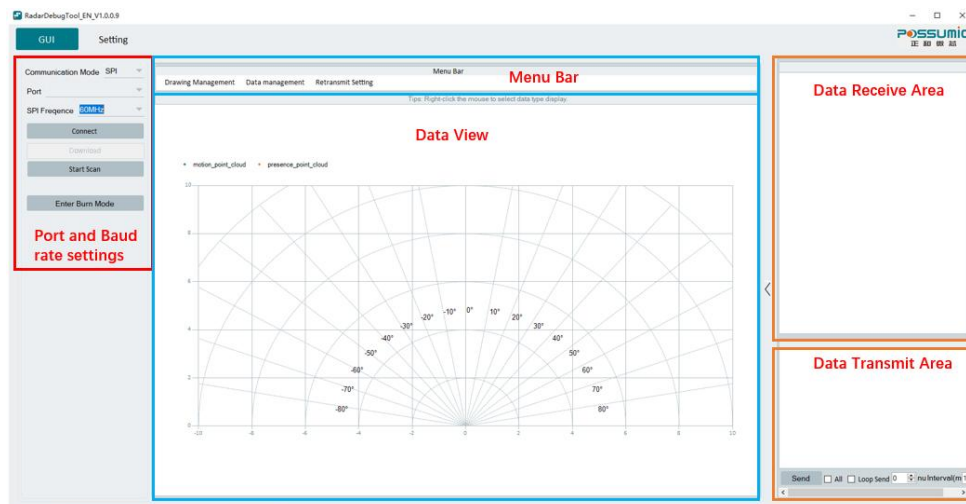


Figure 2-1 RadarDebugTool Software Interface

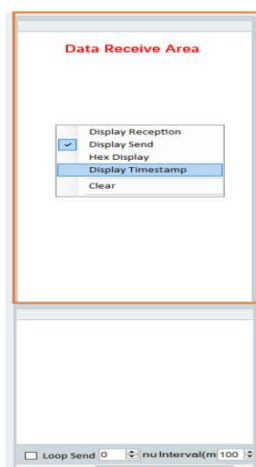


Figure 2-2 Right-click Menu in the Data Reception Area

2.1.1 Port and Baud Rate Settings

In the left area of the interface, select a port connected to the PC and set the data communication mode and baud rate. UART, SPI, and IIC are supported. The development board uses a command port and a data port. The command port is used to view debugging information. The high-speed data port is connected through the USB interface on the development board and carries HIF protocol data. RadarDebugTool requires only the high-speed port. To view debugging information, use a serial-port assistant to connect to the command port.

(1) For UART communication, the command port is usually the COM port with the smaller number and the data port is the COM port with the larger number. This is not absolute; select the ports according to the PC. A baud rate of 1000000 is recommended for the data port, as shown in Figure 2-3(a).

(2) For SPI communication, the host application is the host and the development board is the slave. Select the port whose name contains CH347T.M1:USB2.0ToSPI&IIC. An SPI frequency of 60 MHz is recommended, as shown in Figure 2-3(b).

(3) For IIC communication, select the port whose name contains CH347T.M1:USB2.0ToSPI&IIC, as shown in Figure 2-3(c).

Note: The data communication mode and baud rate are determined by the firmware. The mode and baud rate selected in the host application must match the firmware to ensure correct data reception. MRS6130_P1806 supports UART only, while MRS6130_P1812 and the MRS624x series support UART, IIC, and SPI. Because SPI is faster than UART and IIC, UART is recommended for MRS6130_P1806, and SPI is recommended for MRS6130_P1812 and the MRS624x series.

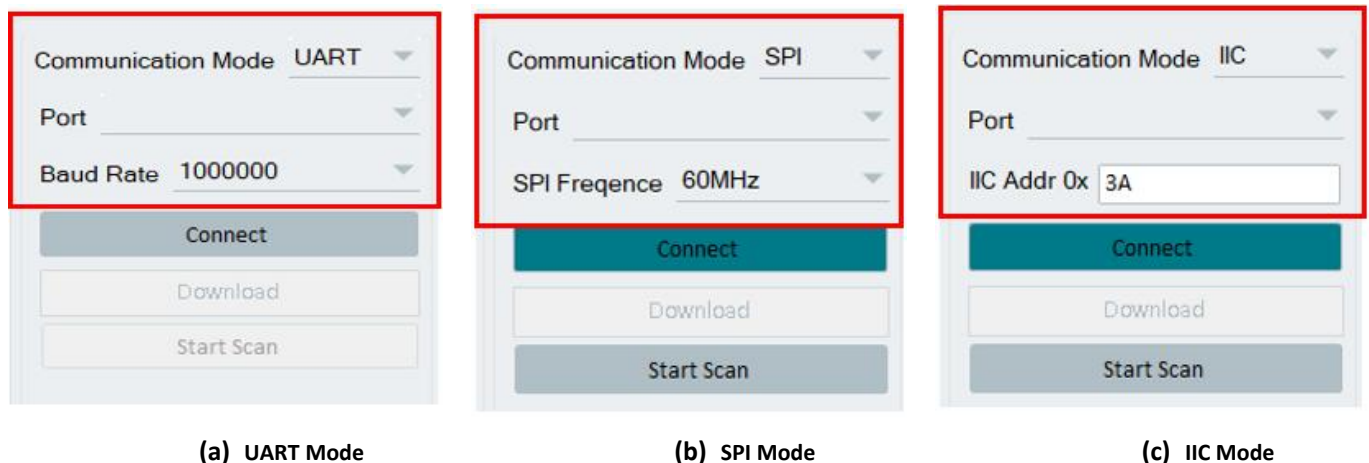


Figure 2-3 Port Selection

2.1.2 Firmware Download

Using the sleep project as an example, the firmware is located at /Software_Kit/04_Image/sleep_[board_name].img. After this firmware is downloaded, spectrum data, point-cloud data, and debugging information can be uploaded. There are two ways to enter download mode: detecting the IO state and sending a download command.

2.1.2.1 Enter Download Mode by Detecting the IO State

To enter download mode by detecting the IO state and download firmware, perform the following steps:

1. Set the DIP switch on the development board to the required communication mode. For DIP-switch operations, refer to the Development Board Settings section in RS6x_7x_mmWave_Radar_Evaluation_Quick_Start_Guide_EN.
2. Connect the development board to the PC through USB and set the POWER switch to OFF.
3. While holding down the UPD button on the development board, turn the POWER switch on to power-cycle the radar. The radar enters download mode.

Follow the procedure in Section 2.1.1 and click Connect to connect to the device.

(1) For UART, connect to the command port, not the data port, to download firmware and set the command-port baud rate to 115200. (2) For SPI, connect to the SPI port and set the frequency to 60 MHz. (3) For IIC, connect to the IIC port.

4、Click Download. In the dialog box shown in Figure 2-4, select the firmware file to download.



Figure 2-4 Firmware File Selection

Note: For UART, use the command port to download firmware, as shown in Figure 2-5. If the data port is selected by mistake, the error shown in Figure 2-6 appears. After firmware is downloaded successfully, reconnect to the data port and set its baud rate to 921600.

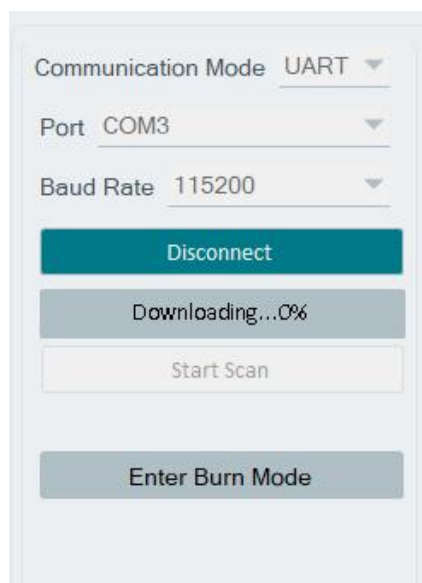


Figure 2-5 Downloading Firmware Through the Command Port

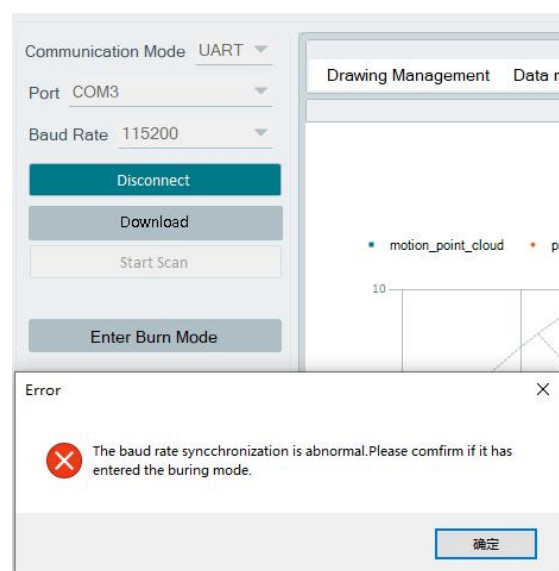


Figure 2-6 Error Caused by Downloading Firmware Through the Data Port

5、After download is complete, power-cycle the board or press the NRST reset button on the development board for the new firmware to take effect.

2.1.2.2 Enter Download Mode by Sending a Download Command

Note: This function is supported only in SDK V2.1.0 and later releases. Before using this method, ensure that firmware based on SDK V2.1.0 or later has already been downloaded to the radar.

To enter download mode by sending a download command and download firmware, perform the following steps:

- (1) Power on the development board and connect it to the PC through USB.
- (2) Follow the procedure in Section 2.1.1 and click Connect to connect to the device.
- (3) Click Enter Download Mode on the left side of the tool. The data reception area then displays a message indicating that the command to enter download mode has been sent.

(4) Click Download and select the firmware file to download. Note: For SPI or IIC, after sending the command to enter download mode, click Stop Scan before clicking Download.

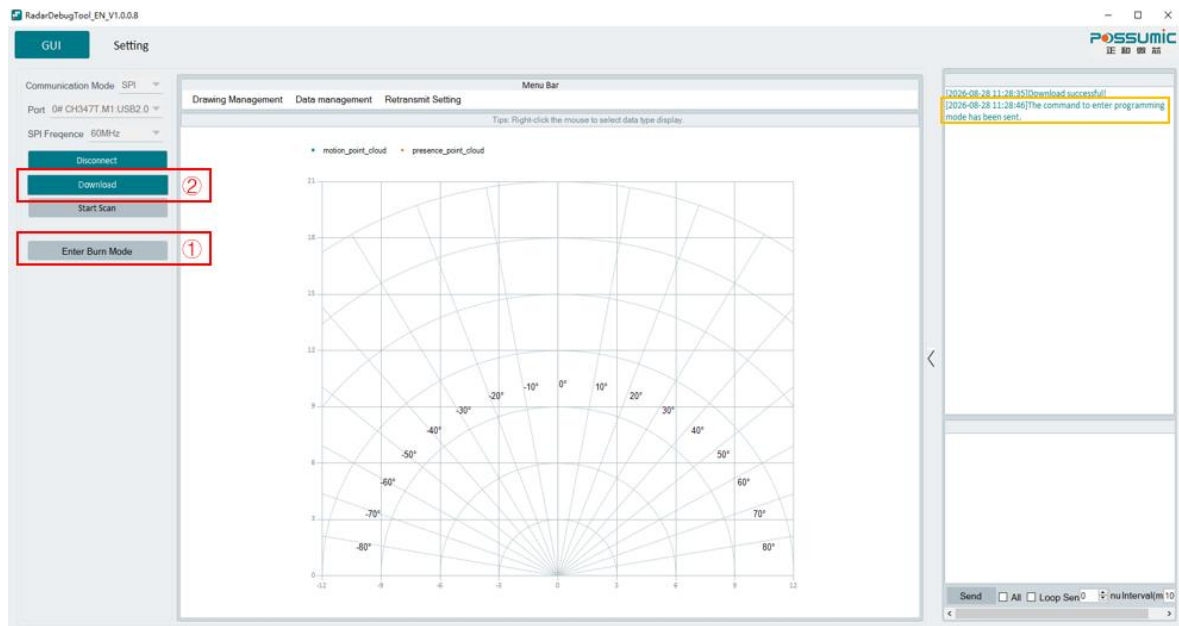


Figure 2-7 Downloading Firmware by Sending a Download Command

2.1.3 Receive Data

(1) For UART, after firmware download is complete and the new firmware takes effect, reconnect to the data port. RadarDebugTool then starts receiving data reported by the radar.

(2) For SPI, after firmware download is complete and the new firmware takes effect, click Start Scan. RadarDebugTool then starts receiving data reported by the radar.

(3) For IIC, after firmware download is complete and the new firmware takes effect, click Start Scan. RadarDebugTool then starts receiving data reported by the radar.

2.1.4 Menu Bar

The center area of the GUI contains the Menu Bar at the top. It has three options: Drawing Management, Data Management, and Retransmit Setting.

2.1.4.1 Drawing Management

Figure 2-8 shows the Drawing Management menu. It provides three drawing-related parameters: Drawing Enable, Cumulative Depth (frames num), and Eye Pattern Depth (frames num).

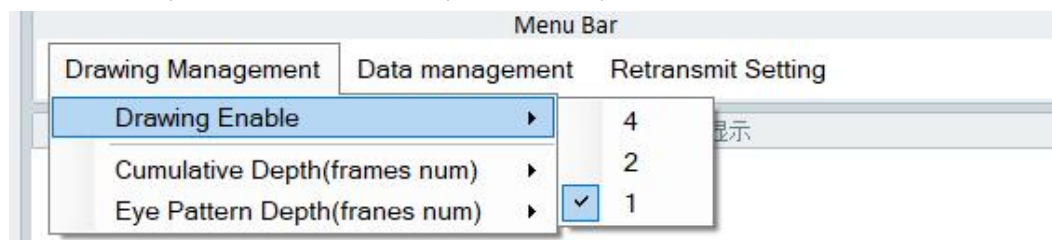


Figure 2-8 Drawing Management Menu

(1) Drawing Enable switches the data-view layout among a single view, a two-panel layout, and a four-panel layout.

(2) When Cumulative Graph is selected, Cumulative Depth (frames num) sets the maximum number of retained frames. The horizontal axis of a cumulative graph represents time, and the vertical axis represents the y-coordinate of the data received in each frame. This is useful for observing continuously changing physical quantities.

(3) When Eye Pattern is selected, Eye Pattern Depth (frames num) sets the number of retained frames. Eye Pattern plots data from multiple time points in the same view, which is useful for observing the trend of a long signal.

2.1.4.2 Data Management

Figure 2-9 shows the Data Management menu, which provides two options: Auto Save Data and Data Playback.



Figure 2-9 Data Management Menu

1、After Auto Save Data is selected, the host application stores parsed radar data in the DataStorage directory under the application folder and saves it in a folder named with the current time, as shown in Figure 2-10. If the DataStorage folder does not exist, create it manually. The sleep project reports point-cloud data, DataCube data, and frame information. For details, see Chapter 4. The *_datacube_time_stamp.csv file is generated automatically by the host application, and *_frame_info.csv contains frame information reported by the radar.



Figure 2-10 Data File Storage Location

2. Data Playback facilitates data analysis. Click Data Playback to open the window shown in Figure 2-11. Click the button in the lower-left corner and select a *_rawData.bin file; only this file type is supported. Click Play to start playback. Total Frames is the total number of frames in the source data, Current Frames is the current frame, and Play Speed is the playback speed. Select a speed from the options on the right. The progress bar indicates playback progress. Click Suspend to pause playback. Click Single Frame to advance one frame at a time. To view a specific frame, enter its number in the field to the right of Jump to Specified Frame and press Enter.

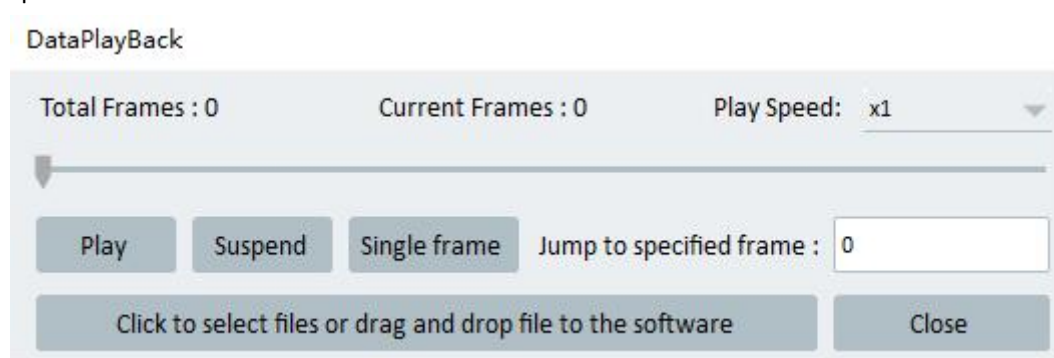


Figure 2-11 Data Playback Window

2.1.4.3 Retransmit Setting

Because DataCube contains a large volume of data, transmission errors may occur. To ensure continuity between frames when reporting DataCube data, enable the retransmission mechanism by selecting Enable Retransmit in Figure 2-12.



Figure 2-12 DataCube Retransmission Switch

2.1.5 Data View

Right-click in any view to open the menu shown in Figure 2-13. Select options as required.

- (1) Highlight Maximum/Minimum Value: Highlights the maximum and minimum values.
- (2) Display Radiation Pattern: Enables the radiation pattern so that point-cloud angles can be viewed more intuitively.
- (3) Switch to 3D Graph: Switches to the 3D view. If the firmware reports point-cloud information, such as `motion_point_cloud` or `presence_point_cloud`, or reports three-dimensional data through the PSIC debugging protocol, select this option to plot the 3D view. After switching to the 3D view, as shown in Figure 2-14, the signal names in the red box are the received point-cloud or 3D data variable names. In this menu, the host application displays and plots only point-cloud or 3D data variables.
- (4) Switch to Cumulative Graph: Switches to a cumulative graph. A cumulative graph can plot only 1D data. Its maximum accumulation count is set by Cumulative Depth (frames num) under Drawing Enable on the Menu Bar.
- (5) XY-Axis Range Setting: Sets the X- and Y-axis display ranges. Peak adjusts the range automatically according to the values. Custom allows you to specify the X- and Y-axis display ranges.
- (6) Clear Peak: Clears the Peak values displayed in the graph.
- (7) Clear Point: Clears the points displayed in the graph.
- (8) Clear Signal: Clears the received variables.
- (9) In Figure 2-13, the signal names in the red box are the DataCube, `motion_point_cloud`, `presence_point_cloud`, and `frame_info` signals reported by the radar. The orange box contains the three point-cloud dimensions parsed by the host application. Select the signals to view and plot. For point clouds, the x-y plane is plotted by default. Two drawing modes are available: Scatter Plot plots each data point and is normally used for point clouds; Eye Pattern overlays data from multiple frames in the view.

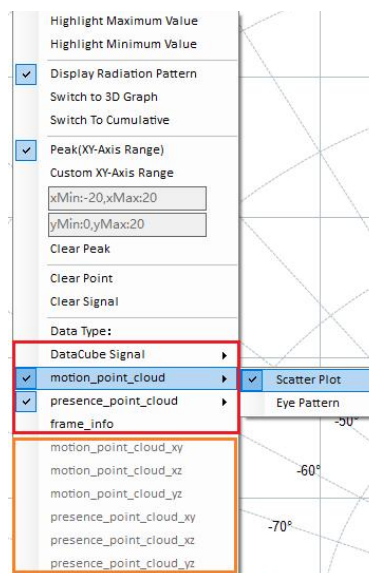


Figure 2-13 Right-click Menu in the Data View

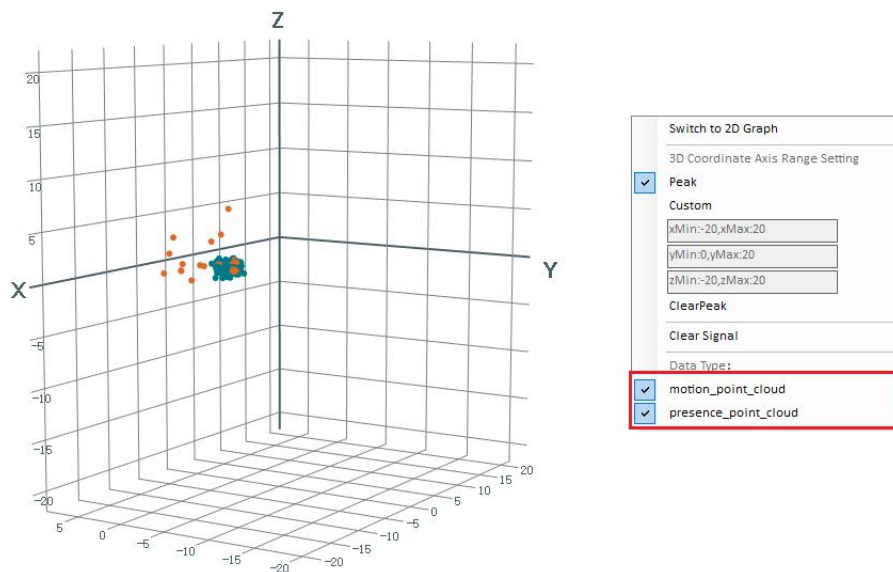


Figure 2-14 3D View

2.1.6 Spectrum View

If the radar reports spectrum data, the host application groups spectrum-related signals so that they are separated from point-cloud and other data, as shown in Figure 2-15. The signals in the red box are spectrum data. Select the spectrum to view, or click Select All Range/Speed Spectrum to view all range and velocity spectra. In Figure 2-16, the following processing can be applied to range-spectrum data: (1) Static Removal.

(2) Single Frame.

(3) Smoothing. For more information about range-spectrum data processing, refer to the Data View Display (DataCube) section in RS6x_7x_RadarAnalysisTool_User_Manual_EN.

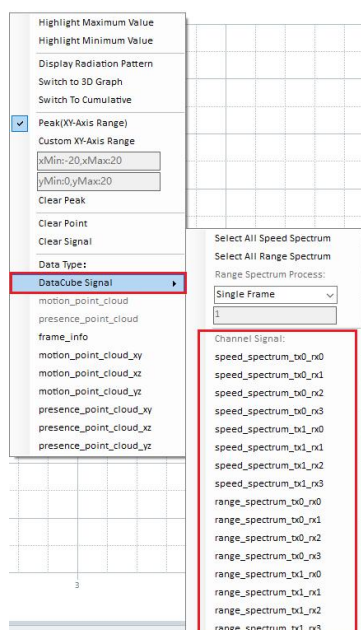


Figure 2-15 Spectrum Data

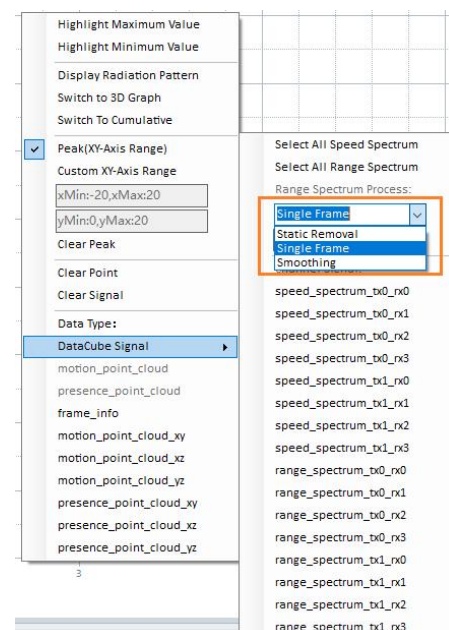


Figure 2-16 Range-Spectrum Processing

Figure 2-17 and Figure 2-18 show the velocity spectrum and range spectrum of each antenna, respectively.



Figure 2-17 Velocity-Spectrum Display

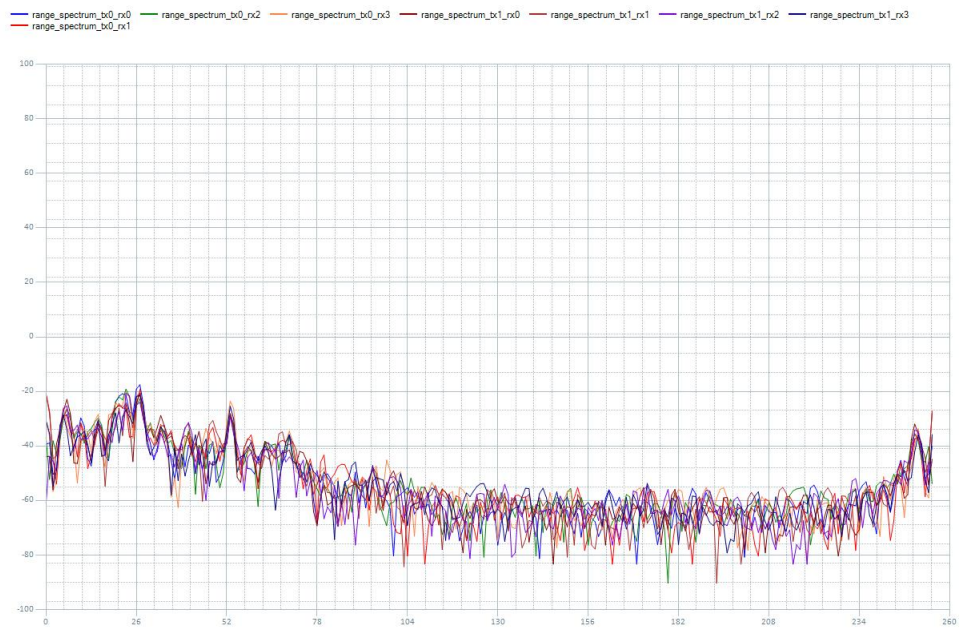


Figure 2-18 Range-Spectrum Display

2.2 Setting Interface

Figure 2-19 shows the RadarDebugTool Setting interface. It is used to configure parameters such as maximum detection range, range resolution, maximum detection velocity, and velocity resolution. Change these parameters as required. The sleep sample can parse RadarDebugTool configurations, and developers can build their own projects on the sleep project framework. The firmware is located at:

/Software_Kit/04_Image/sleep_[board_name].img

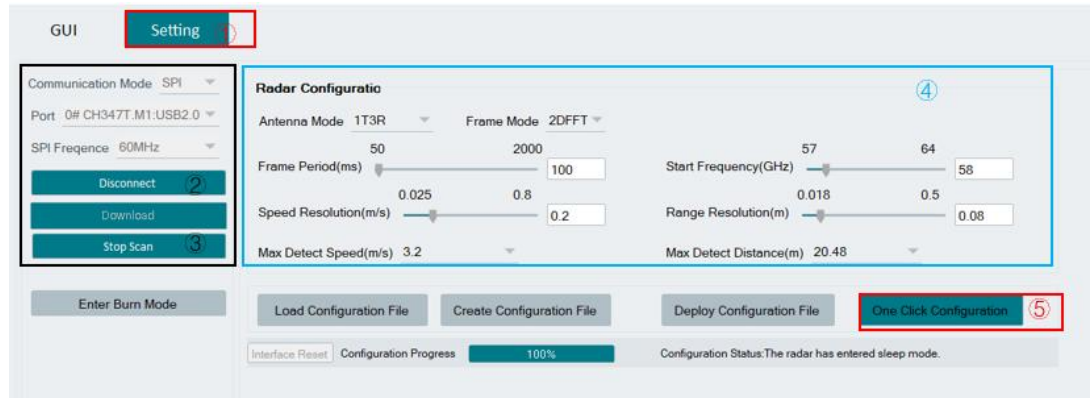


Figure 2-19 Setting Interface

After configuring the radar parameters, click One-click Configuration to apply them to the radar. As shown in Figure 2-20, the blue box displays the current configuration progress and status. The data reception area on the right also displays the current radar configuration status.



Figure 2-20 Radar Parameter Configuration Process

Note: If an error such as a radar wake-up failure occurs during configuration, reset or power-cycle the radar, or restart the software. Then reconnect to the radar and configure it again.

After configuring the radar parameters, click Generate Configuration File to record them. In the dialog box shown in Figure 2-21, select the save path, enter a filename, and save the file.

To read a previously saved configuration, click Load Configuration File. In the dialog box shown in Figure 2-22, select the required configuration file. The configuration is then displayed in the Setting interface. To apply a saved configuration directly to the radar, click Send Configuration File. This follows the same steps as Load Configuration File, except that the host application applies the parameters to the radar immediately after reading the file.

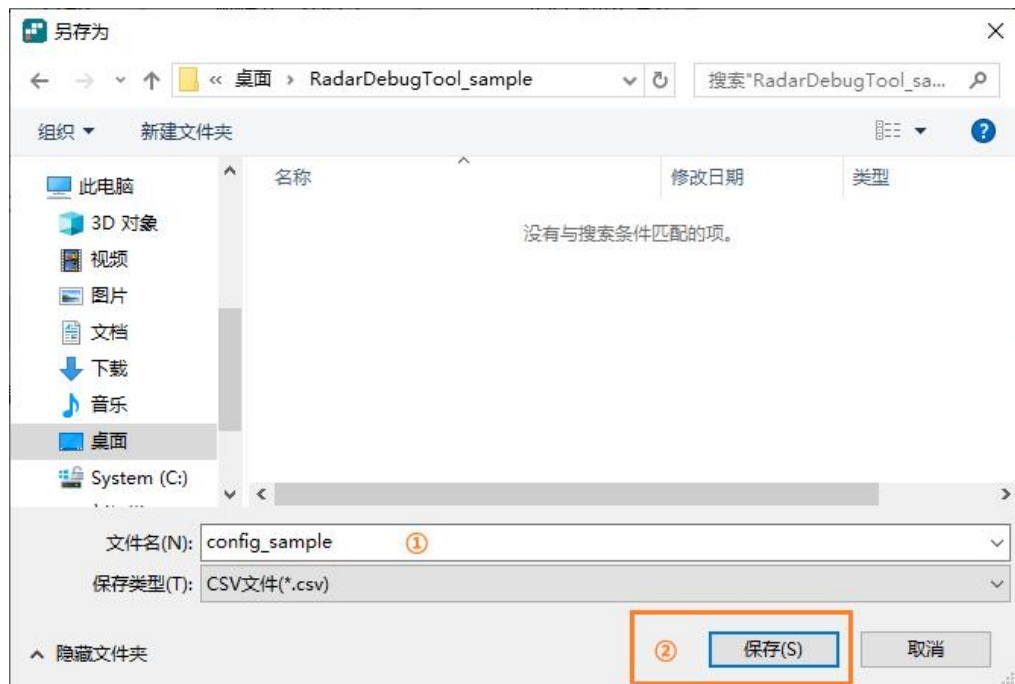


Figure 2-21 Save Configuration File

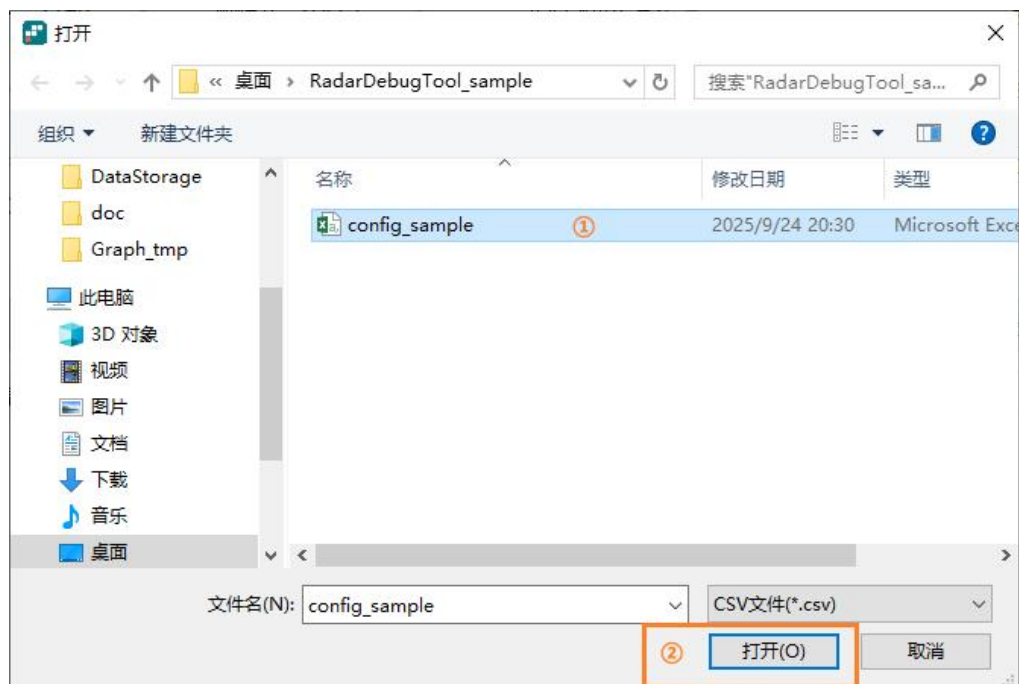


Figure 2-22 Load Configuration File

3 Basic Operation

- Step 1: Connect the development board to the PC through USB.
- Step 2: On the left side of the software, select the communication mode used by the hardware, select the port connected to the PC, and configure the baud rate.
- Step 3: Download the firmware. Skip this step if the appropriate firmware has already been downloaded to the device.
- Step 4: Under Drawing Management on the Menu Bar, select the required data-view layout using Drawing Enable.
- Step 5: Right-click in the data view and select whether to plot a cumulative graph or switch to the radiation coordinate system.
- Step 6: Click Connect on the left side of the interface. If the port fails to open, check whether it is occupied and then click Connect again. For SPI, also click Start Scan to receive data.
- Step 7: Configure the radar parameters as described in Section 2.2, Setting Interface. Skip this step if radar parameter configuration is not required.
- Step 8: After the host application receives data reported by the radar, it parses the signal names. Right-click in the data view and select the variables to view.
- Step 9: If the radar reports spectrum data, view it as described in Section 2.1.6, Spectrum View.
- Step 10: To analyze data on another platform, locate the raw data in the DataStorage folder under the host application folder.
- Step 11: To play back data, click Data Playback under Data Management on the Menu Bar and follow the procedure in Section 2.1.4.2.
- It is recommended that you click Connect again after every firmware update or CPU restart.

4 Data Formats

The sleep project reports three types of data: point-cloud data, DataCube data, and frame information (frame_info). This chapter describes these data types.

4.1 Point Cloud

The HIF_MSGID of point-cloud data is 0xC3. The sleep project reports motion point clouds and presence point clouds. Each point contains five values: x, y, z, velocity, and SNR. Table 4-1 describes these values. Figure 4-1 shows motion point-cloud data parsed by the host application and saved as a CSV file. The blue box contains one point, and the orange box contains two points.

Table 4-1 Point-Cloud Data Format

Parameter	Description
x	X-coordinate of the point in the user coordinate system, in m.
y	Y-coordinate of the point in the user coordinate system, in m.
z	Z-coordinate of the point in the user coordinate system, in m.
velocity	Point velocity, in m/s.
SNR	Signal-to-noise ratio, in dB.

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	2026.06.1	1.78E+12	-0.7	0.26	0.27	0.4	16										
2	2026.06.1	1.78E+12	-0.69	0.31	0.24	0.4	15.68										
3	2026.06.1	1.78E+12	x	y	z	velocity	SNR										
4	2026.06.1	1.78E+12															
5	2026.06.1	1.78E+12	-0.54	-0.59	-0.63	-0.84	0.25	0.24	0.22	0.35	-0.04	-0.03	-0.04	-0.1	0.4	0.4	0.4
6	2026.06.1	1.78E+12	-0.55	-0.57	-0.63	-0.62	-0.7	-0.71	0.31	0.28	0.25	0.25	0.16	0.08	0	-0.01	0.02
7	2026.06.1	1.78E+12	-0.59	-0.6	-0.62	-0.62	-0.63	-0.84	0.22	0.2	0.26	0.25	0.28	0.36	-0.04	-0.04	-0.06
8	2026.06.1	1.78E+12	-0.59	-0.61	-0.61	-0.62	-0.66	-0.66	-0.73	-0.71	0.78	-0.86	-0.89	0	0.21	0.26	
9	2026.06.1	1.78E+12	-0.66	-0.68	-0.68	-0.72	-0.86	-0.92	-0.93	-0.92	-0.96	-0.53	-0.45	-0.39	-0.25	0.22	0.03
10	2026.06.1	1.78E+12	-0.54	-0.69	-0.75	-0.77	-0.9	-0.87	-0.95	-0.98	-0.97	-1.05	0.43	0.16	0.09	0.16	0.37
11	2026.06.1	1.78E+12	-0.69	-0.69	-0.73	-0.99	0.1	0.14	0.15	0.06	0.41	2.05	-0.27	-0.27	-0.31	-0.31	-0.52
12	2026.06.1	1.78E+12	-0.79	-0.82	0.13	0.11	0.18	0.26	0.67	0.53	-0.31	-0.31	-0.88	-0.97	1	1	1
13	2026.06.1	1.78E+12	-0.7	0.27	0.24	0.4	15.43										
14	2026.06.1	1.78E+12															
15	2026.06.1	1.78E+12	-0.32	-0.32	-0.33	-0.32	0.09	0.16	0.17	0.19	-0.34	-0.37	-0.35	-0.41	0.4	-0.4	0.4
16	2026.06.1	1.78E+12	-0.31	-0.3	-0.32	-0.33	0.17	0.21	0.26	0.34	-0.32	-0.35	-0.3	-0.29	0.4	-0.4	0.4
17	2026.06.1	1.78E+12	-0.32	0.24	-0.32	0.4	16.06										
18	2026.06.1	1.78E+12	-0.29	-0.33	0.15	0.25	-0.44	-0.42	0.4	0.4	17.43	16.31					
19	2026.06.1	1.78E+12	x1	x2	y1	y2	z1	z2	vel1	vel2	SNR1	SNR2					
20	2026.06.1	1.78E+12															
21	2026.06.1	1.78E+12	-0.69	0.3	0.26	0.4	16.87										
22	2026.06.1	1.78E+12	-0.69	0.28	0.26	0.4	15.87										
23	2026.06.1	1.78E+12	-0.34	-0.34	-0.7	0.13	0.26	0.27	-0.42	-0.41	0.26	-0.4	-0.4	0.4	21.06	19.75	16.25

Figure 4-1 Point-Cloud Data Saved by the Host Application

4.2 DataCube

The HIF_MSGID of DataCube data is 0xC2. The host application stores DataCube data in a BIN file. Figure 4-2 shows the file format, and Table 4-2 defines the fields. When storing a DataCube file, the host application also generates a timestamp file named *_datacube_time_stamp.csv. If timestamps are required, parse the timestamp file together with the DataCube file.

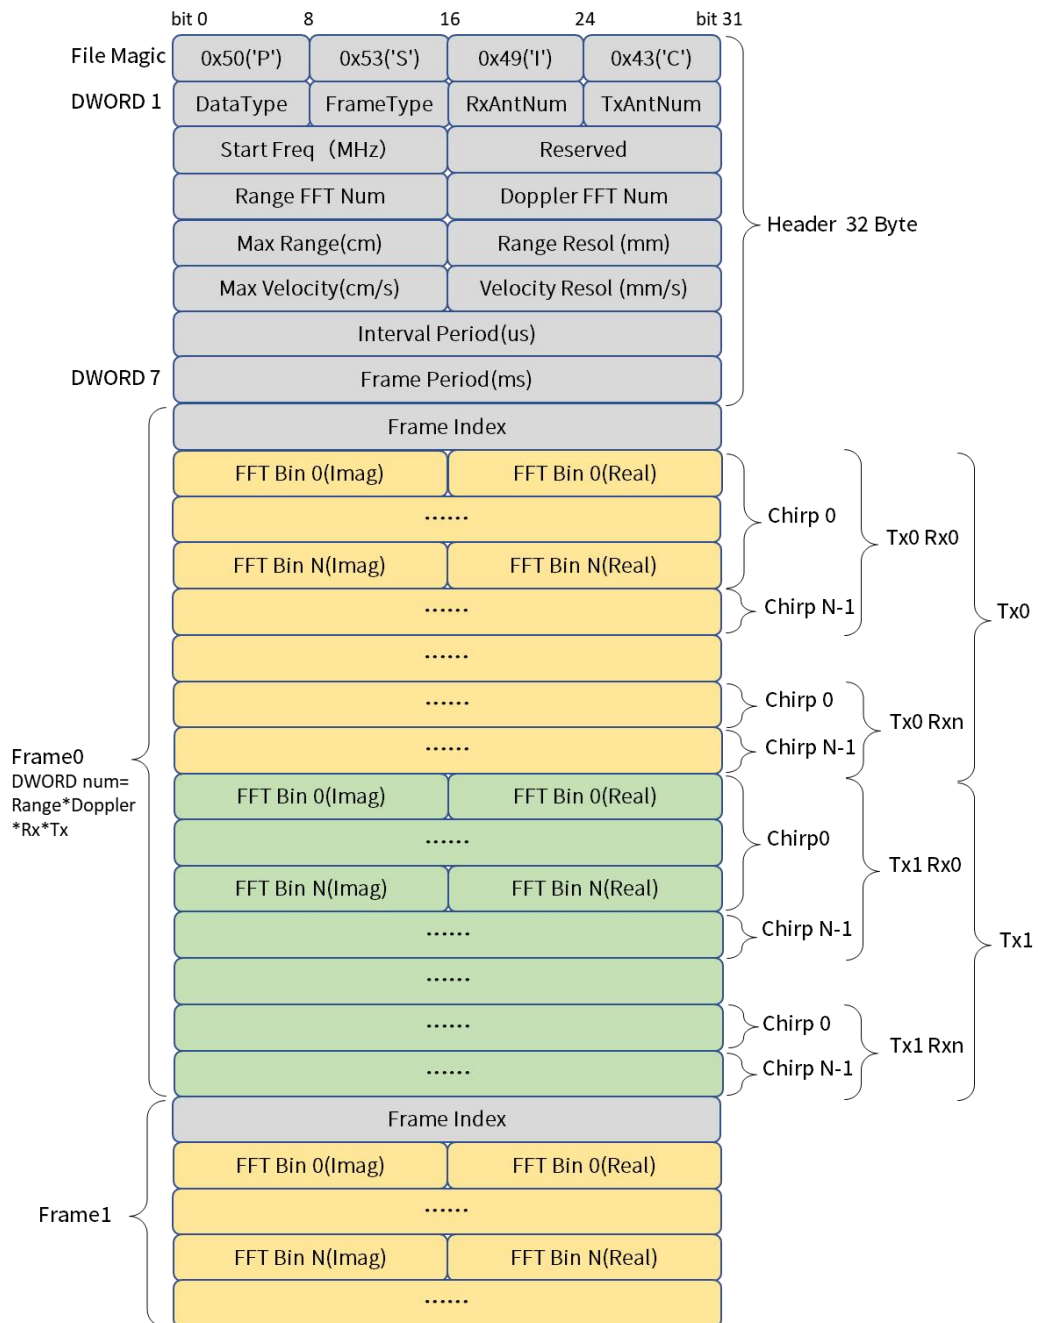


Figure 4-2 BIN File Data Format3

Table 4-3 BIN File Data Format

Parameter	Description
File Magic	File header identifier. Fixed string PSIC; one DWORD.
DataType	0: FFT data; 4: point-cloud data; 6: tracking data. One byte.
FrameType	1: 1D FFT; 2: 2D FFT. One byte.
RxAntNum	Number of receive channels. One byte.
TxAntNum	Number of transmit channels. One byte.
StartFreq	Chirp start-frequency configuration, in MHz.
Range FFT Num	Two bytes.

Parameter	Description
Doppler FFT Num	Two bytes.
Max Range	Maximum detection range, in cm. Two bytes.
Range Resol	Range resolution, in mm. Two bytes.
Max Velocity	Maximum detection velocity, in cm/s. Two bytes.
Velocity Resol	Velocity resolution, in mm/s. Two bytes.
Interval Period(us)	Interval period, in us.
Frame Period(ms)	Frame period, in ms.
FrameIndex	Frame index. Four bytes.
FFT Bin N (Imag)	Imaginary part of FFT data point N. A 16-bit signed integer in the lower 16 bits of the DWORD.
FFT Bin N (Real)	Real part of FFT data point N. A 16-bit signed integer in the upper 16 bits of the DWORD.

4.3 Frame_Info

The HIF_MSGID of Frame_info (frame information) is 0xC6. This message ID belongs to the PSIC debugging protocol. It reports radar-related parameters, as described in Table 4-3.

Table 4-5 Frame_info Data Format

Parameter	Description
Frame_Idx	Frame sequence number, counted from the time radar transmission starts.
TxRx_Mode	Antenna operating mode. 1 indicates 1T3R and 4 indicates 2T4R. For more information about txrx_mode, refer to its definition in mmw_ctrl.h.
Period	Actual radar frame period, in ms.
Range Resol	Range resolution, in mm.
Range FFT Num	Number of range FFT points. Maximum detection range = Range_Resol * (2^Range_FFT_Num).
Velocity Resol	Velocity resolution, in mm/s.
Doppler FFT Num	Number of Doppler FFT points. The maximum measurable velocity $V_{max} = \text{Velocity_Resol} * (2^{\text{Doppler_FFT_NUM}})$; therefore, the velocity measurement range is $[-V_{max}/2, V_{max}/2]$.
Run Time	Callback processing time, including the total calculation time for motion and presence point clouds, in 0.1 ms.
Min Free Byte Remaining	Historical minimum free heap size, used to ensure sufficient heap space when many points are present.
Motion Pointcloud Num	Number of valid motion points.
Presence Pointcloud Num	Number of valid presence points.

Developers using the SDK can also report custom debugging information through the PSIC debugging protocol. For more information about the reported-data format, refer to the PSIC Debugging Protocol section in RS6x_7x_mmWave_Radar_Development_Quick_Start_Guide_EN.

5 Q&A

5.1 How to View a 2D Point-Cloud Plot in Another Plane (for example, y-z or x-z)

In the data view, right-click to display the x-y 2D view of the motion or presence point cloud by default. To view another plane, such as y-z or x-z, first clear `motion_point_cloud`, and then select `motion_point_cloud_yz` or `motion_point_cloud_xz`.

Note: To view 2D plots in all three planes simultaneously, switch to the four-panel layout by following the procedure in Section 2.1.4.1.

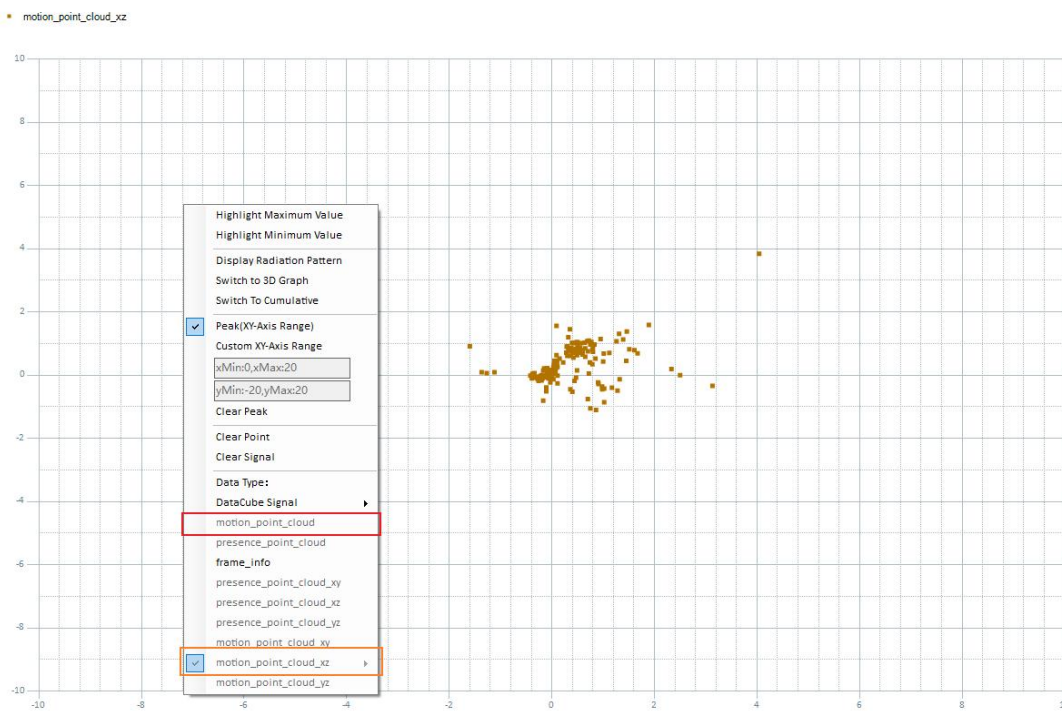


Figure 5-1 2D view of the motion point cloud

Disclaimer and Copyright Notice

The information provided by our company in this document is accurate to the best of our knowledge, but we do not guarantee that the content is completely error-free. All liability for any damages arising from the use of this document (including but not limited to indirect, incidental, or special losses) or any improper use resulting from non-compliance with the instructions herein (including but not limited to over-voltage, over-frequency, or over-temperature operations) is explicitly disclaimed.

The content in this document, including URL references, may differ from the actual content due to product version upgrades or other reasons, and is subject to change without notice.

THIS DOCUMENT IS PROVIDED "AS IS" WITH NO WARRANTIES. NO WARRANTY IS PROVIDED TO THIS DOCUMENT FOR ITS MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, NOR DOES ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE.

All liability, including liability for infringement of any patent rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

Copyright © 2026 Possumic Technology Co., Ltd. All rights reserved.