RumiCar

RumiCar Hands-On!

Take on the Challenge of Self-Driving Algorithms

Lecturer: Rumika CHIBA
RumiCar Development Team
Project Owner

RumiCar Meet the Team



Rumika CHIBA



Yoshiteru CHIBA



Hideaki KATAOKA



Osamu ONODERA



Shoko ISHIGAKI



Shigeki INADAMA

© RumiCar Development Team

Index

- What You Will Learn
- Introducing the RumiCar
- Preparation
- Distance Measurement
  - Exercise-1.1 Ranging with the Central Sensor!
  - Exercise-1.2 Ranging with 3 Sensors
  - Exercise-1.3 Using the Serial Plotter
- Motor Control
  - Exercise-2.1 Steering
  - Exercise-2.2 Speed Control
  - Exercise-2.3 Forward and Reverse
  - Exercise-2.4 Zig-Zag Driving
- Autonomous Driving Basics
  - Exercise-3.1 Stopping the Car Safely
  - Exercise-3.2 Driving in Urban Areas
- Improving Programs with AI
  - Exercise-4.1 Smooth Forward & Reverse
  - Exercise-4.2 Getting Unstuck at a Corner

Blue items involve programming


© RumiCar Development Team

What You Will Learn

- How RumiCar Works
  - Sensors
  - Motor Driver
- Distance Measurement with Laser Ranging Modules
- Motor Driver Control
- Autonomous Driving Basics
- Improving programs with an AI (how to ask, how to check)
- You will also learn why turning code into functions matters for good program development

© RumiCar Development Team


Introducing the RumiCar

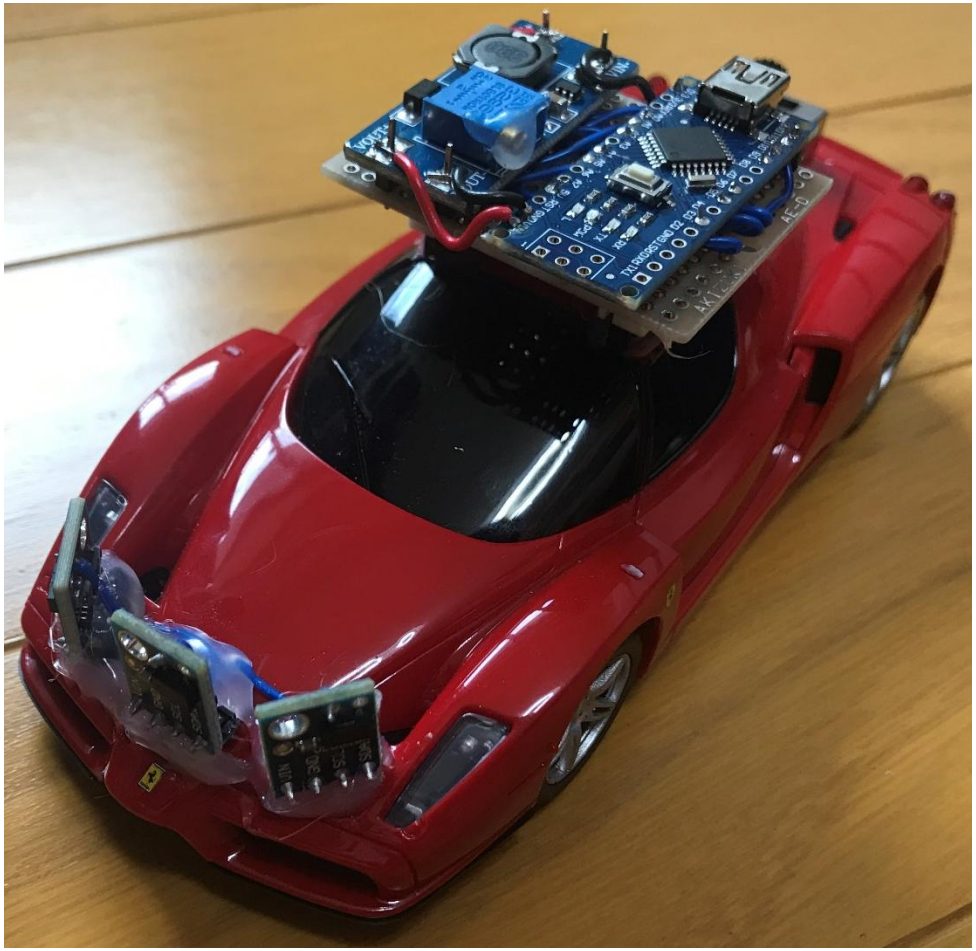

© RumiCar Development Team


Introducing the RumiCar

- A platform for developing autonomous driving programs by combining multiple car bodies and various types of compute modules
- Equipped with laser ranging modules that can measure the distance to obstacles
- Vehicle speed can be controlled by controlling motor rotation

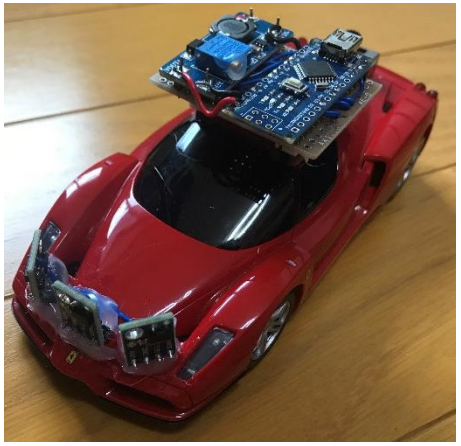


© RumiCar Development Team

Compute Module (CM)

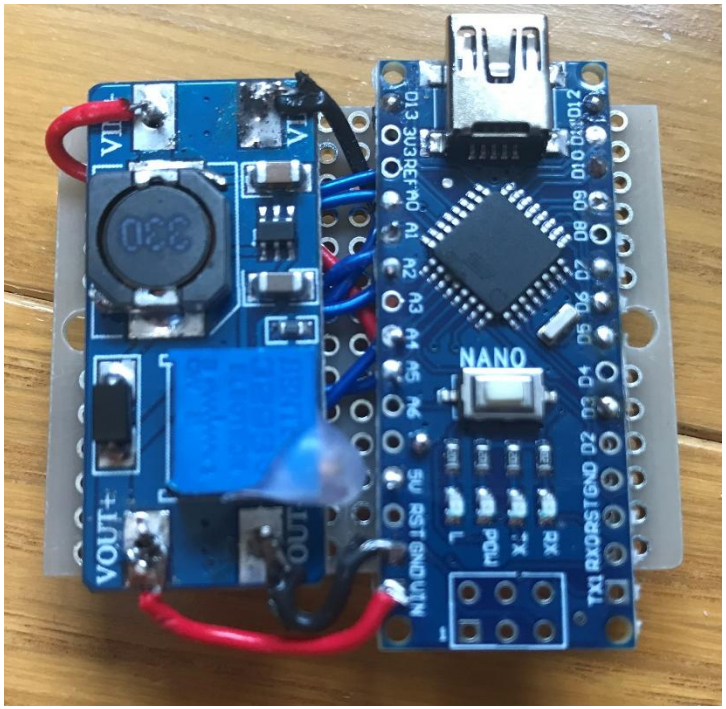


Front

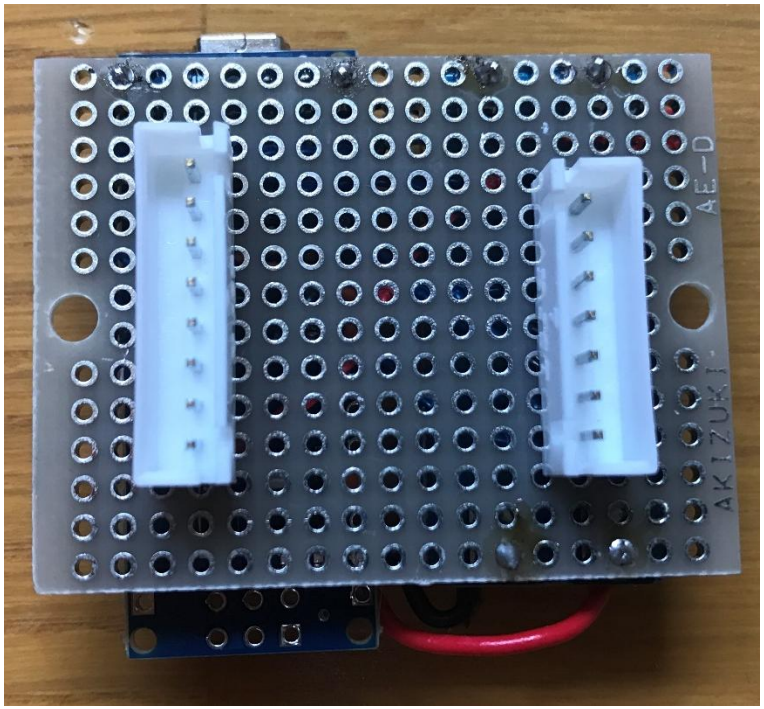

Back

© RumiCar Development Team

Compute Module (CM) on a PCB

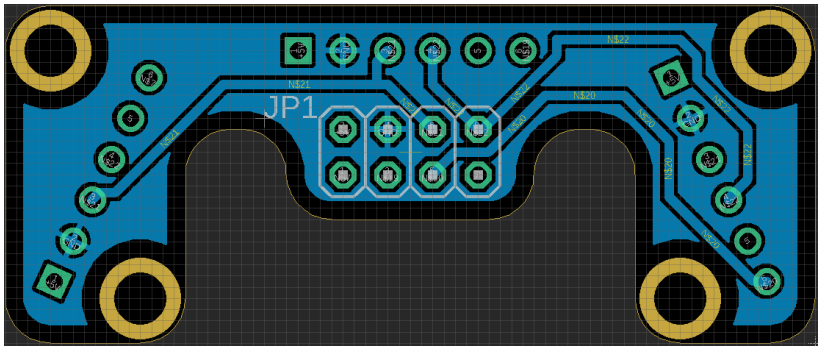


Sensor PCB

Developed and designed by Mr. Yutaka OHE



Ordered from Seeed Fusion PCB. Delivered.

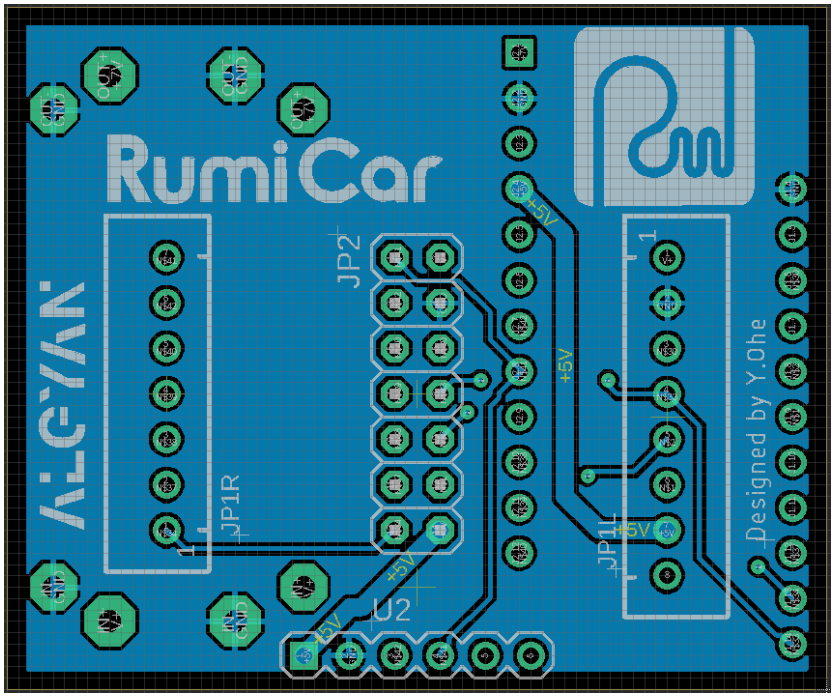

Compute Module PCB

© RumiCar Development Team

Mix and Match Freely

Arduino Nano




ESP32




ESP32+EasyVR3



Arduino Nano+BMX055

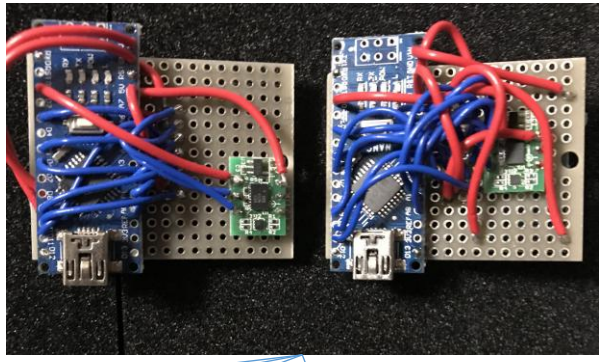

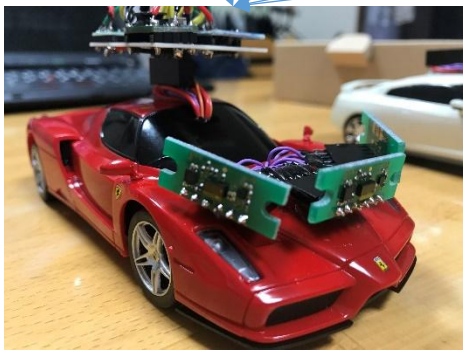








© RumiCar Development Team

Mix and Match Freely

Next Initiatives (Challenges)
Raspberry Pi

- **Compute module**
- **Motor control**
- **Image recognition**

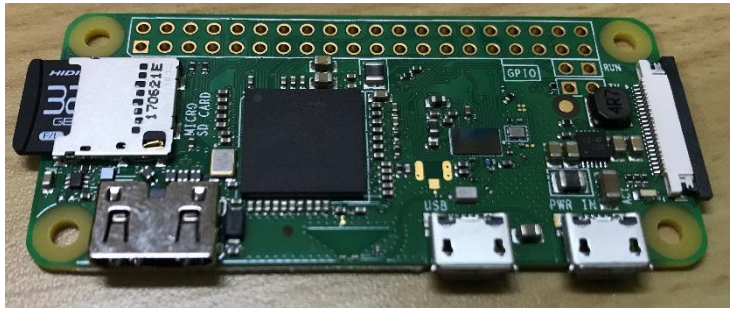



Writes code in Python and works on motor control and more: Ms. Shoko ISHIGAKI


© RumiCar Development Team

Raspberry Pi CM + Camera




© RumiCar Development Team

Raspberry Pi CM + Camera

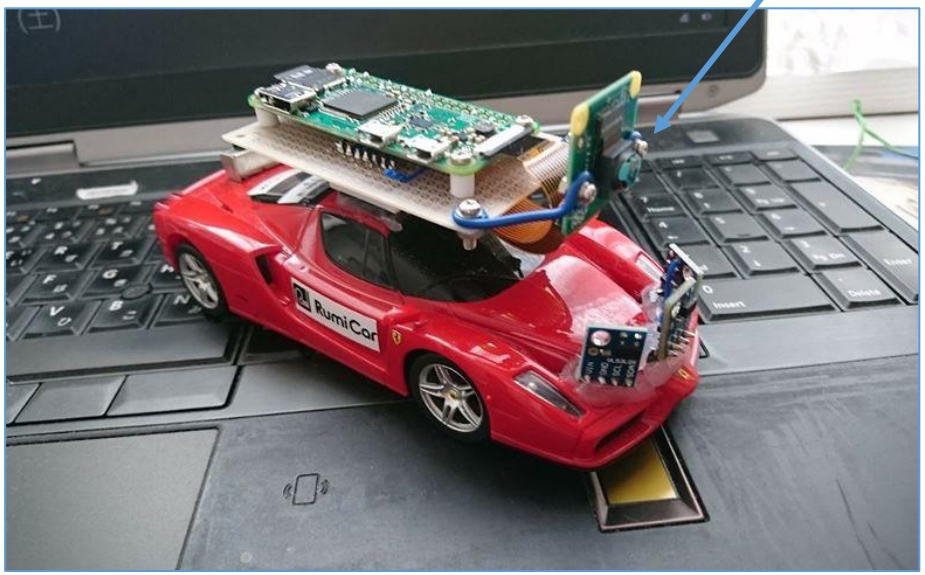

RasPi CM on a RumiCar

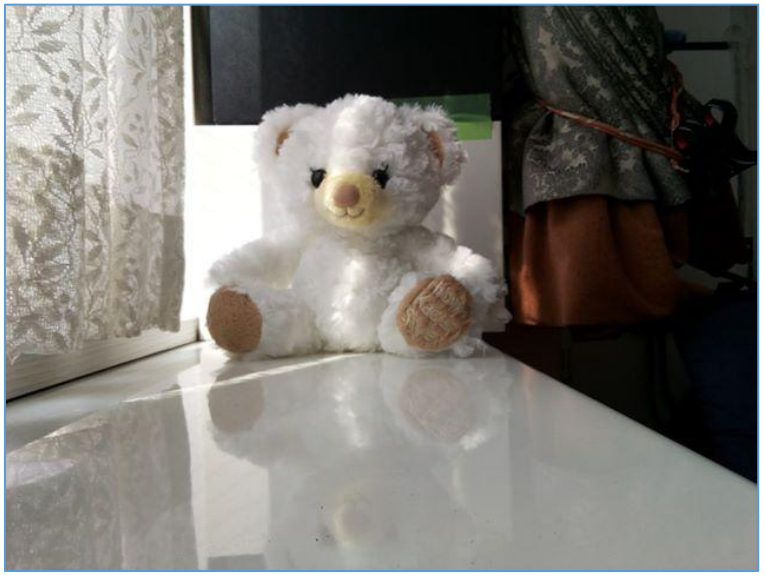

Taken with the RasPi CM camera

© RumiCar Development Team

Obniz CM




Left: Obniz version; right: Raspberry Pi version


© RumiCar Development Team

ESP32 Bluetooth (Video)

https://youtu.be/-r6Vrhn5ifQ

https://youtu.be/UpEcTDvwYFw

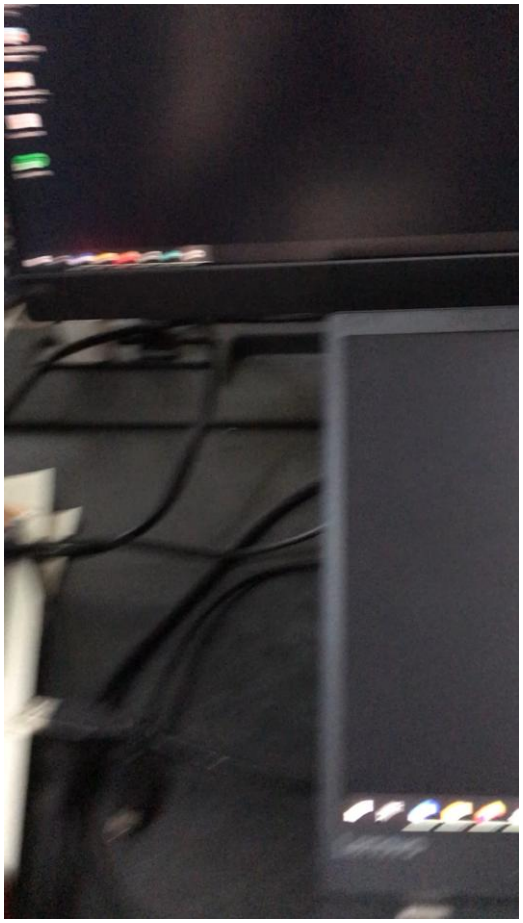

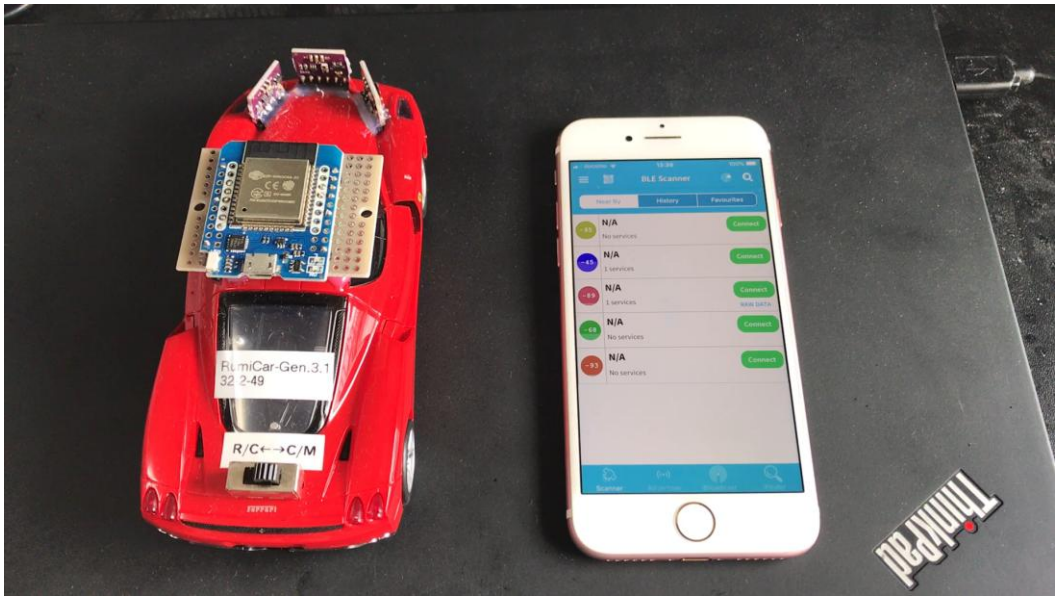

BLE (Bluetooth Low Energy) multi-connect

Bluetooth serial connection


© RumiCar Development Team

Compute Module Comparison

Board	Arduino Nano	ESP32	Raspberry Pi Zero W	Obniz	Spresense
Power supply	7-12V(VIN) (Supplying the 5V line is not recommended)	2.2-3.6V (when input to 3V3) 3.7-6.0V (when input to VIN)	5V	5V	3.6-4.4V
Internal operating voltage	5V	3.3V	3.3V	3.3V	
I/O pin voltage	5V	3.3V	3.3V	5V (voltage selectable)	Switchable 5V / 3.3V
I2C voltage					1.8V
External power supply capacity	40mA per pin 100mA total	12mA max.	16mA per pin 50mA total	1A in 5V mode	6mA
Power consumption (current)	65mA	160-260mA with WiFi	125mA 270mA with WiFi	170mA average (WiFi not used)	
Number of PWM pins	6	4	2 (hardware)	6	
Power configuration	Power: MT3608 VL/DRV: from the 5V line	PQ3RD23 (or LM2596)	Power: MT3608 (or TPS63020) VL/DRV:PQ3RD23 (or SOT-23 AP7333)	MT3608 (or TPS63020)	

Have Fun with Programming

Program it yourself!

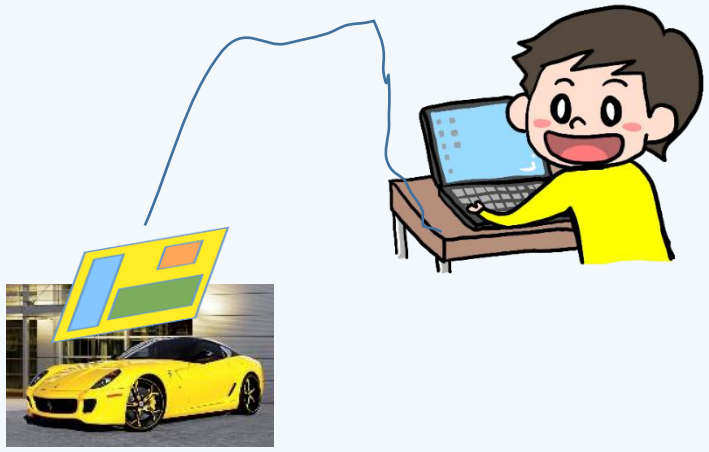

- With a RumiCar you can program it from your own computer, and drive it freely
- Take on AI
- Write programs that will amaze everyone!


© RumiCar Development Team

Connect with Friends Worldwide!

Planned / in development

Download and exchange programs

- Upload your own programs to the server
- If you find an interesting program, download it to your own RumiCar and try driving it
- Connect with friends around the world

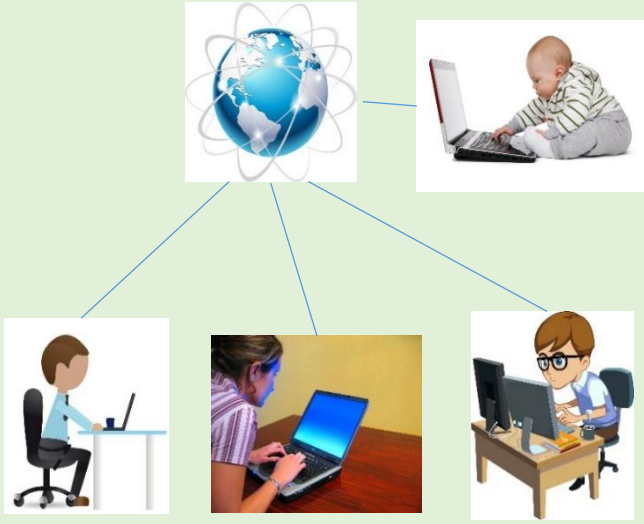

© RumiCar Development Team

Let's Learn Together!

Planned / in development

We hold classes



- Build a RumiCar!
- Build a compute module!
- Write programs!

© RumiCar Development Team

RumiCar Through the Years (Car No.1 to No.5)


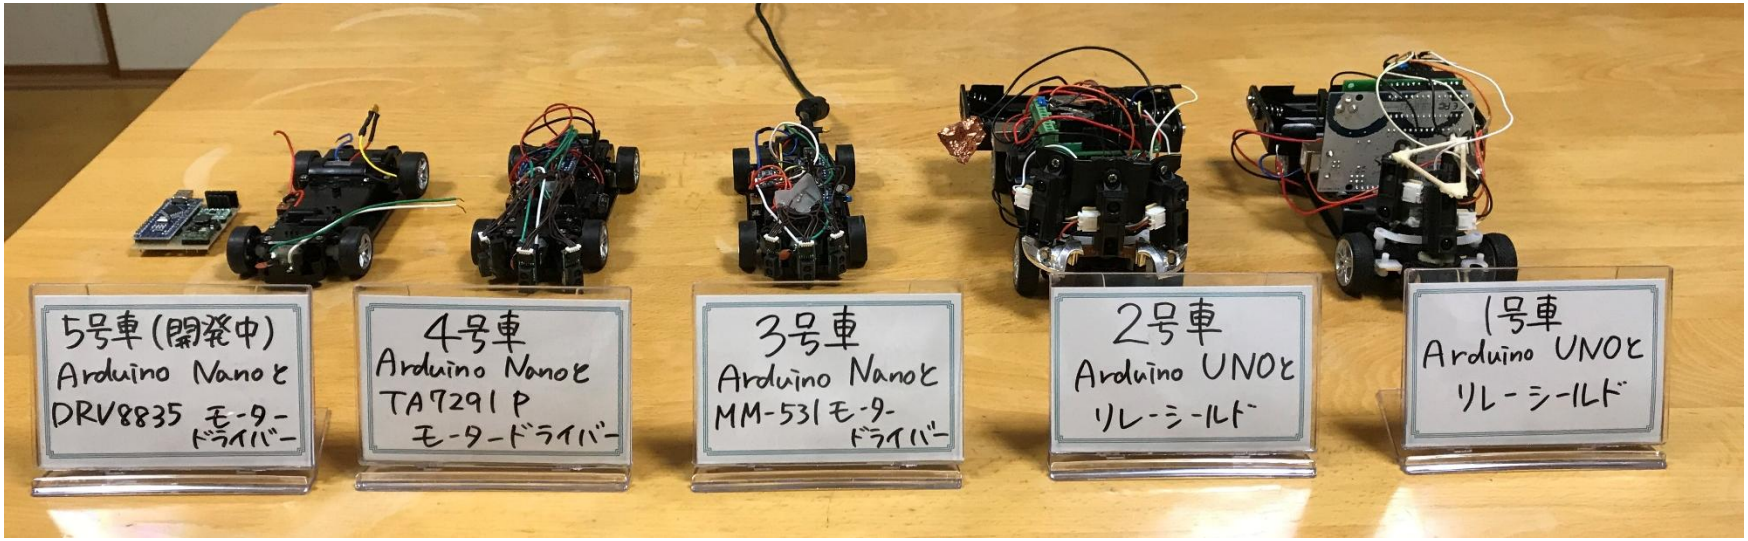


Photo taken on August 3, 2017


© RumiCar Development Team

RumiCar History (Museum)

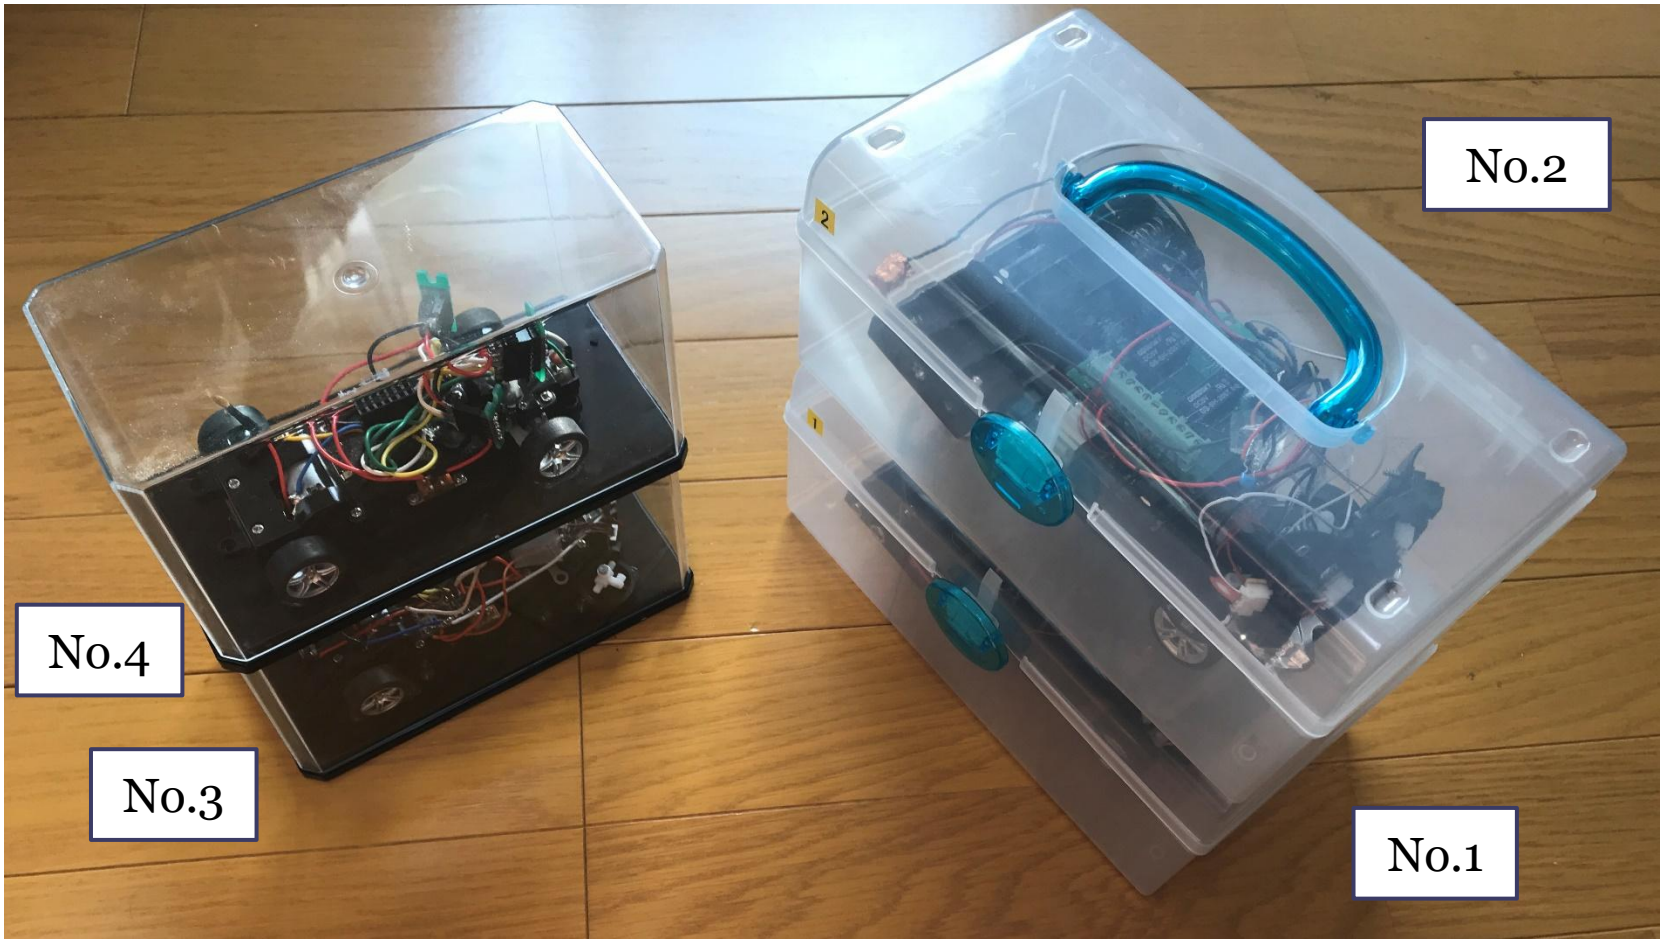


© RumiCar Development Team

RumiCar History (No.1 & No.2)

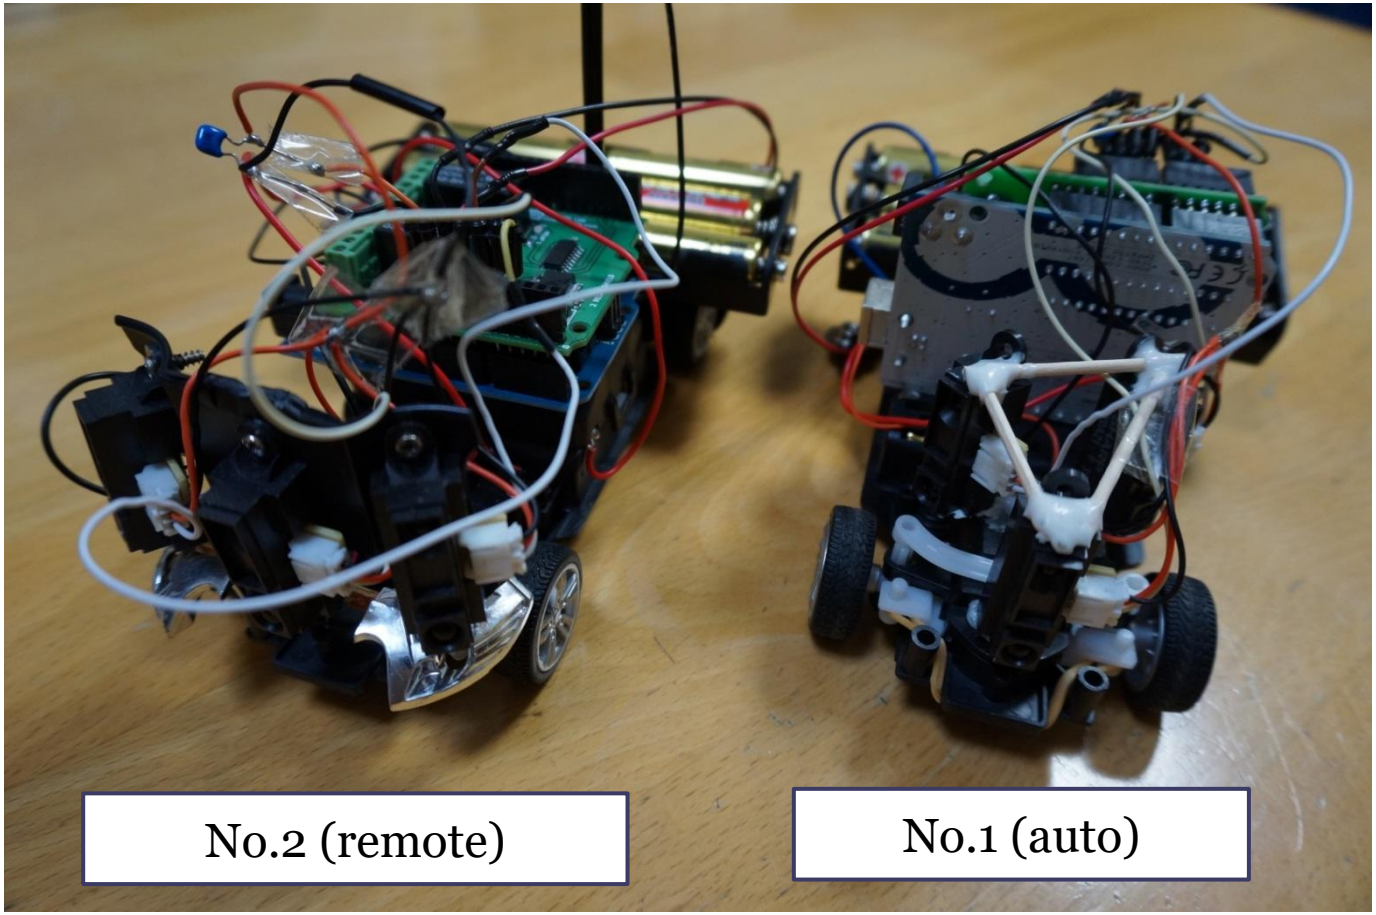


© RumiCar Development Team

RumiCar History (No.1 & No.2)

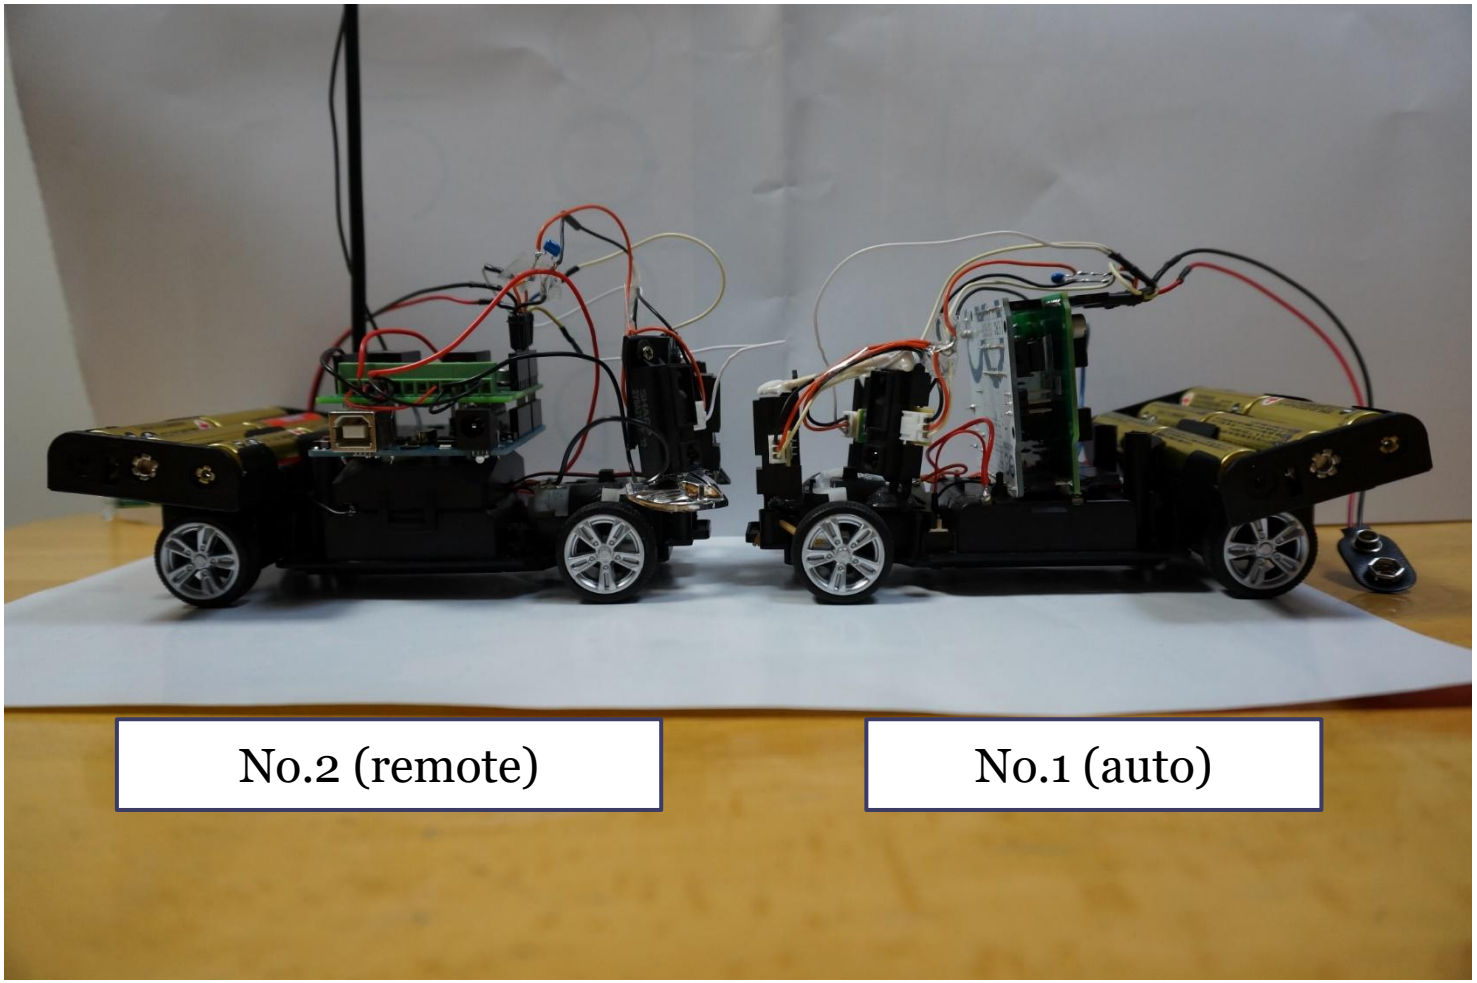

© RumiCar Development Team


About Car No.2

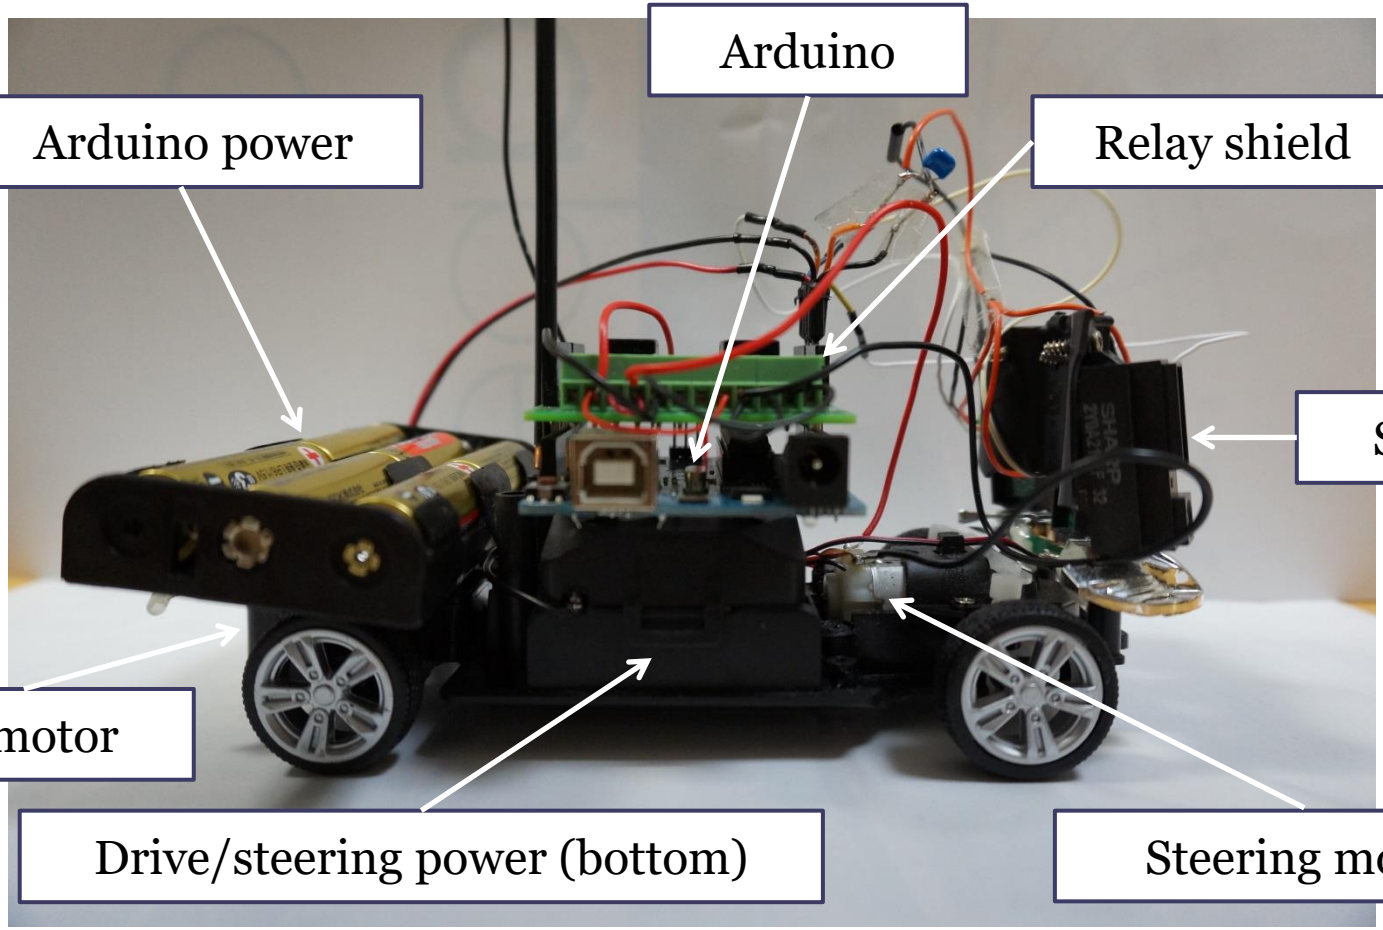

© RumiCar Development Team


Sensor Test (Video)

https://youtu.be/vIAL7uUnXTA

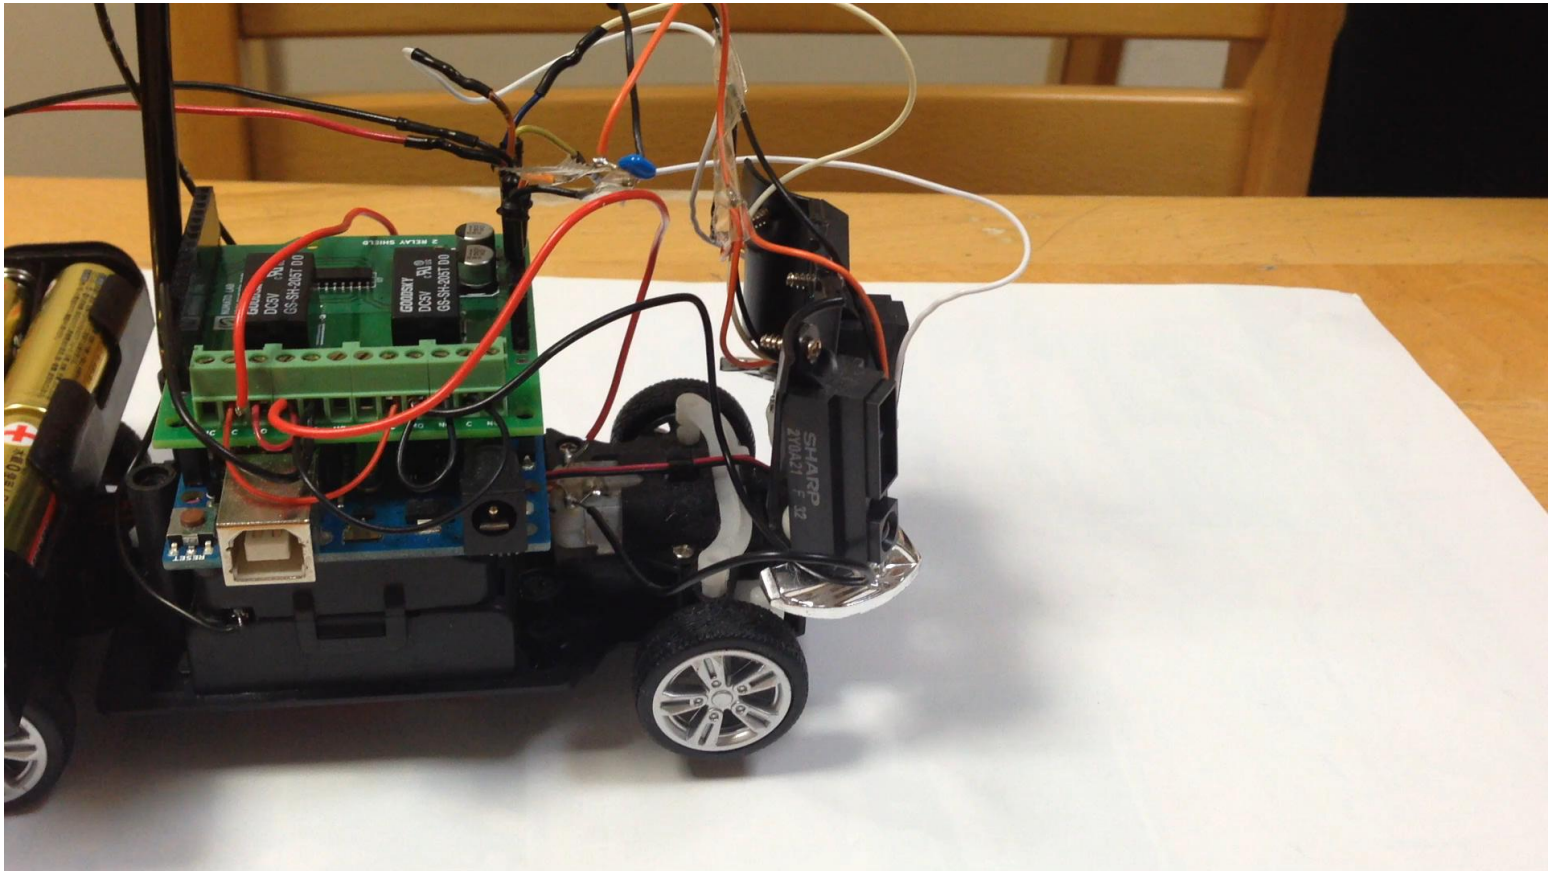


© RumiCar Development Team

Car No.3/No.4 Sensors

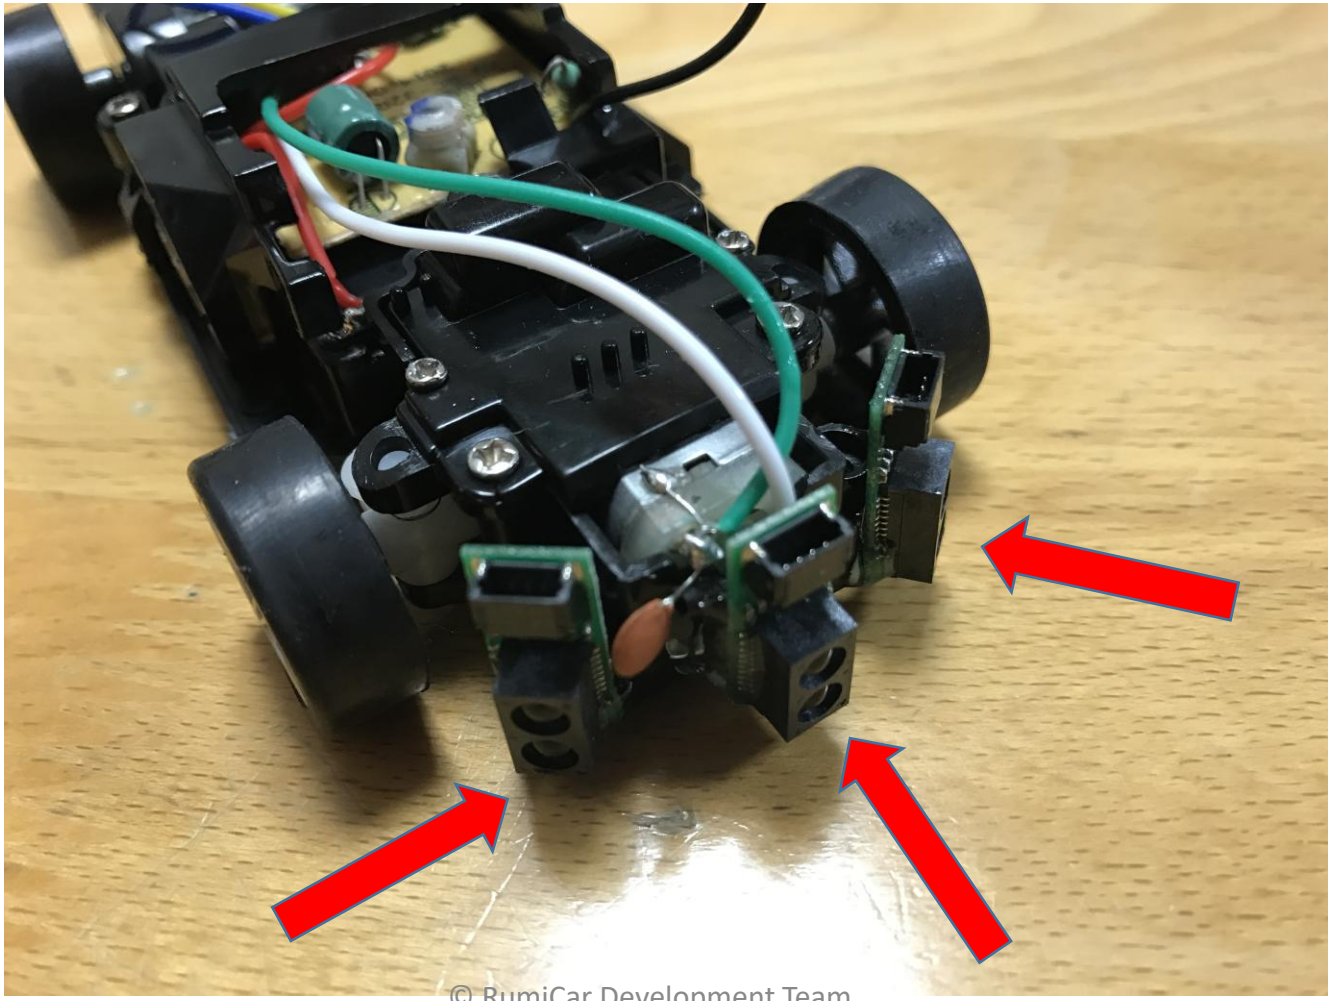

© RumiCar Development Team

Motor Driver

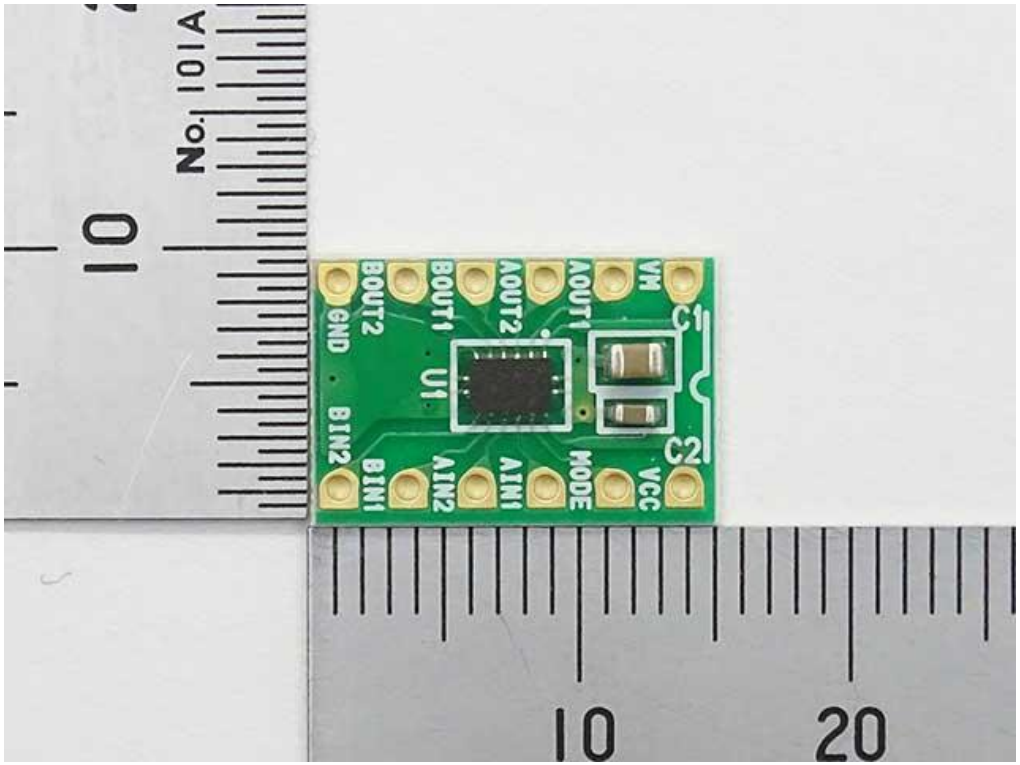

DRV8835


DRV8835 (from Akizuki Denshi Tsusho)

© RumiCar Development Team

Motor Driver

- The motor driver on the RumiCar is the DRV8835
- Features of the DRV8835
  - 2 channels
  - Up to 1.5A per channel
  - PWM(250kHz)
  - Low power consumption
  - Low voltage drop (motor side)
  - Logic power (VCC) and motor power are independent
    - Logic supply voltage: 2 to 7V
    - Motor supply voltage: up to 11V

DRV8835

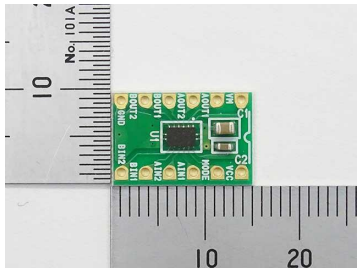


DRV8835 (from Akizuki Denshi Tsush

© RumiCar Development Team


Development Video (Video)

https://youtu.be/8jULg3fZ-jw

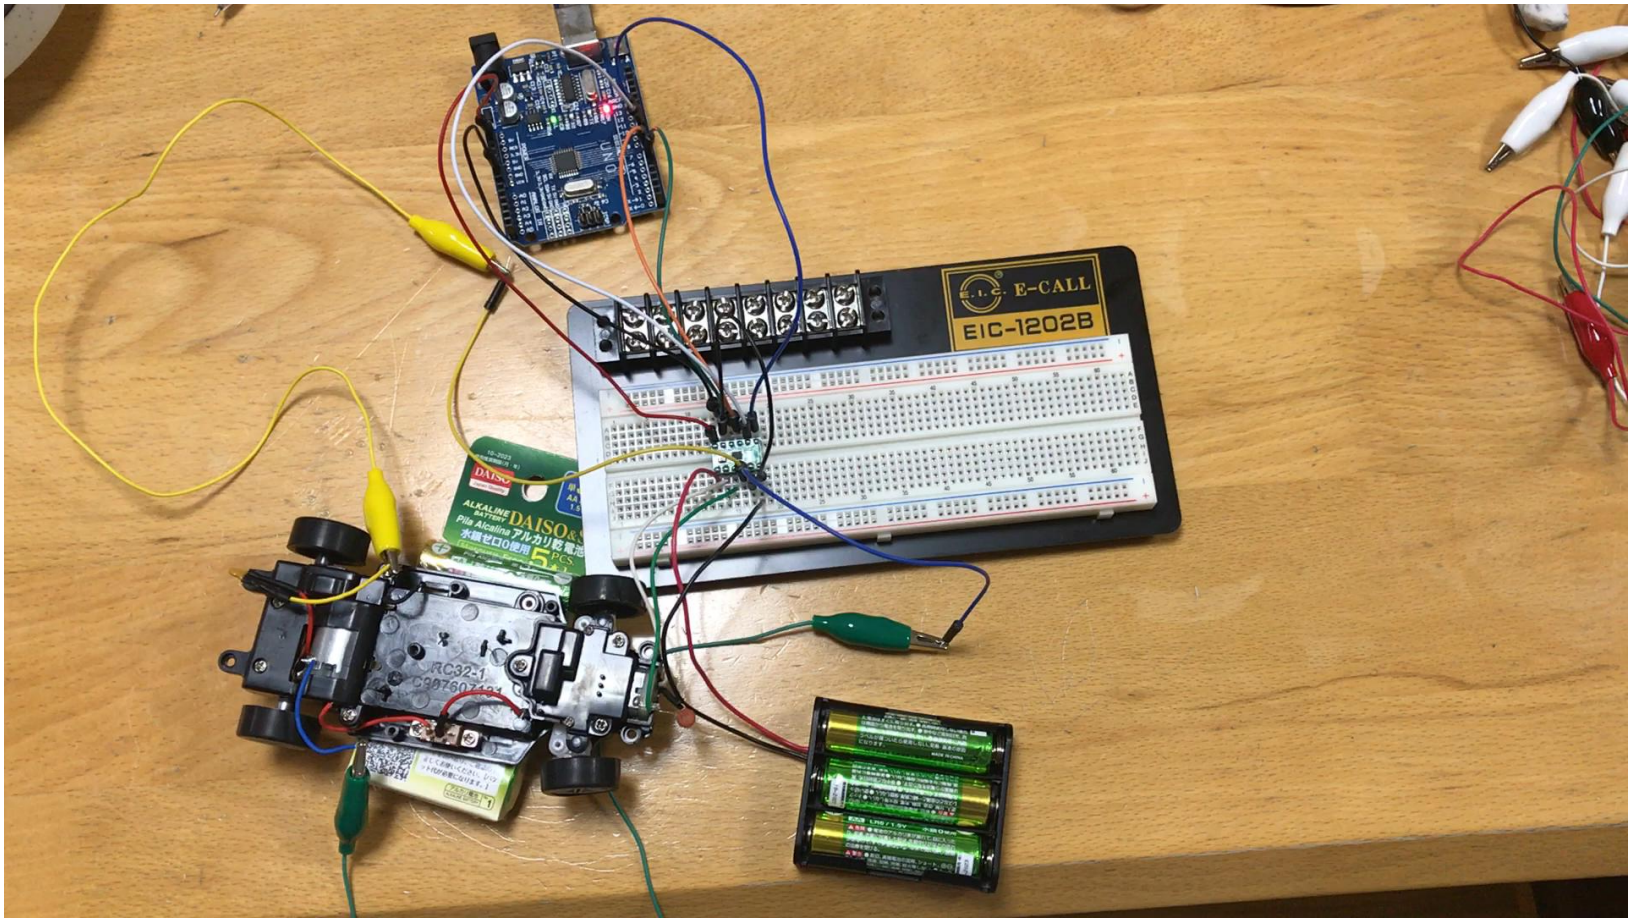


© RumiCar Development Team

Development Photo

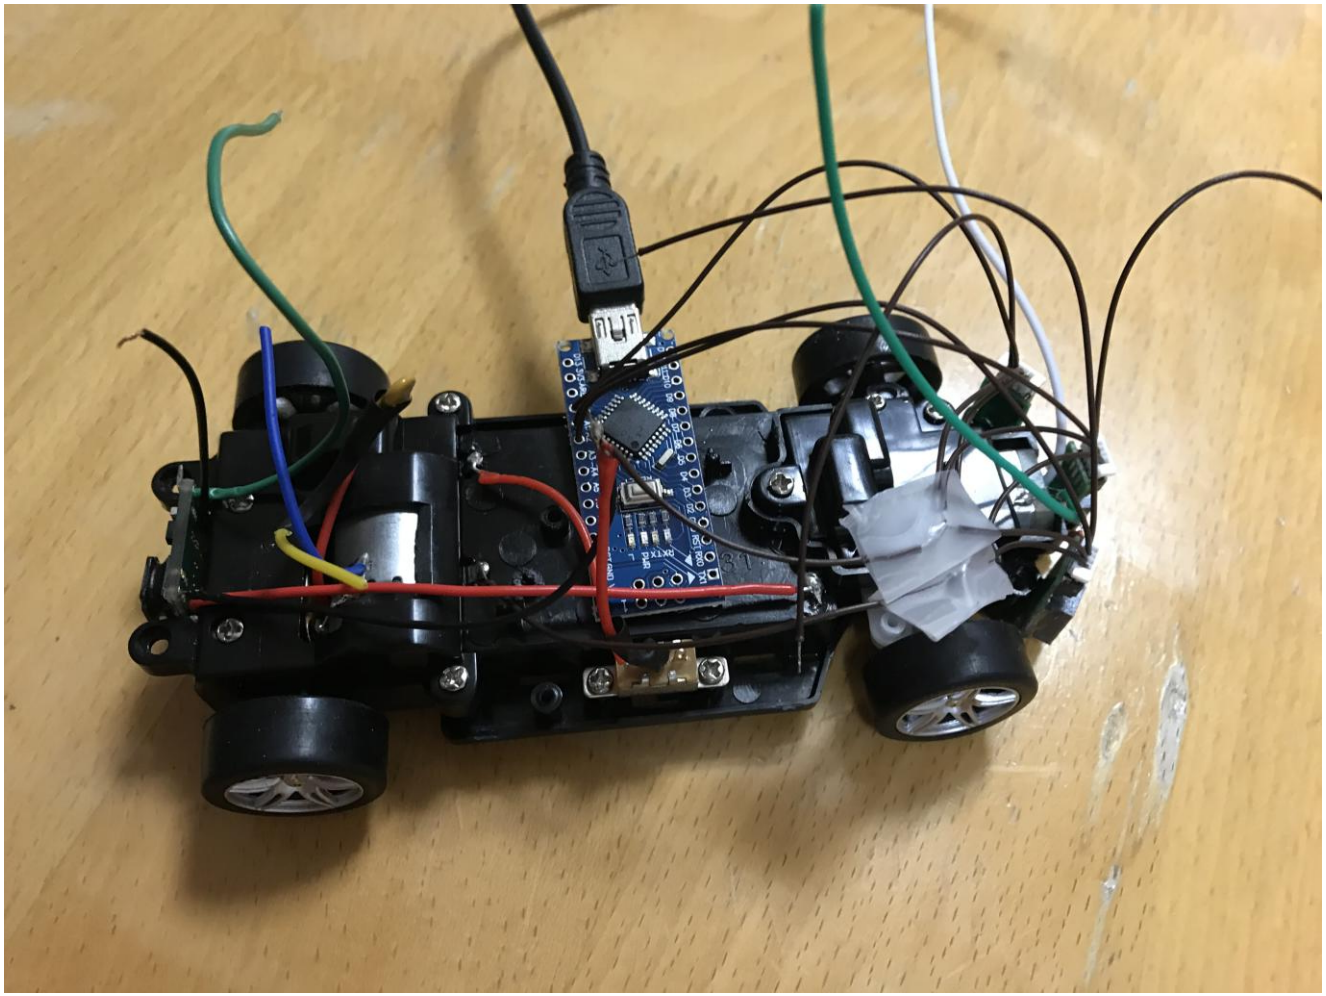


© RumiCar Development Team

Development Photo

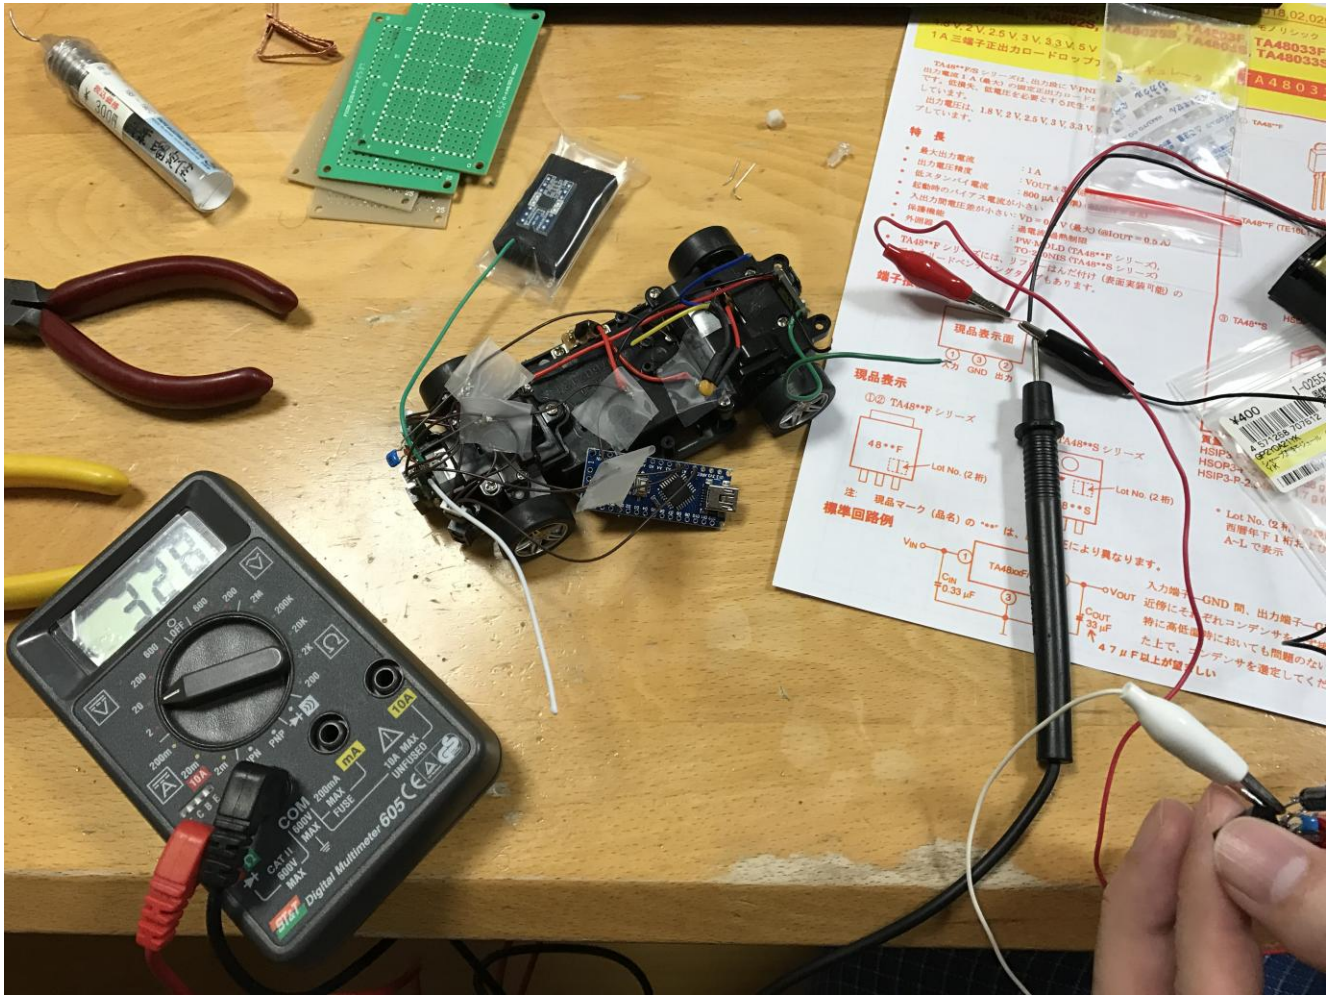

© RumiCar Development Team


Development Photo

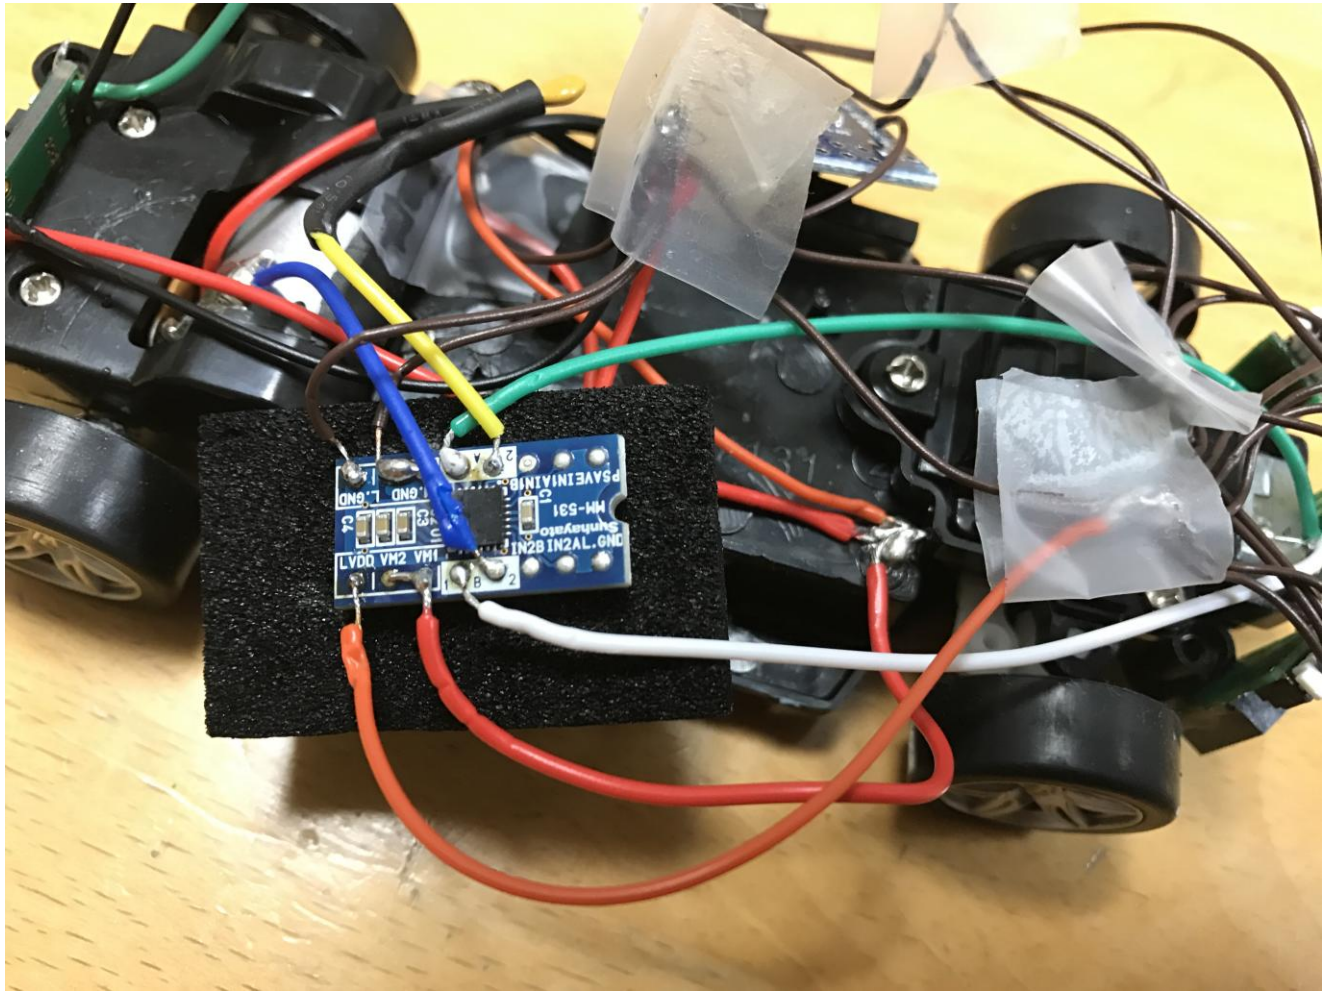

© RumiCar Development Team

Operation Test (Video)


https://youtu.be/8jULg3fZ-jw

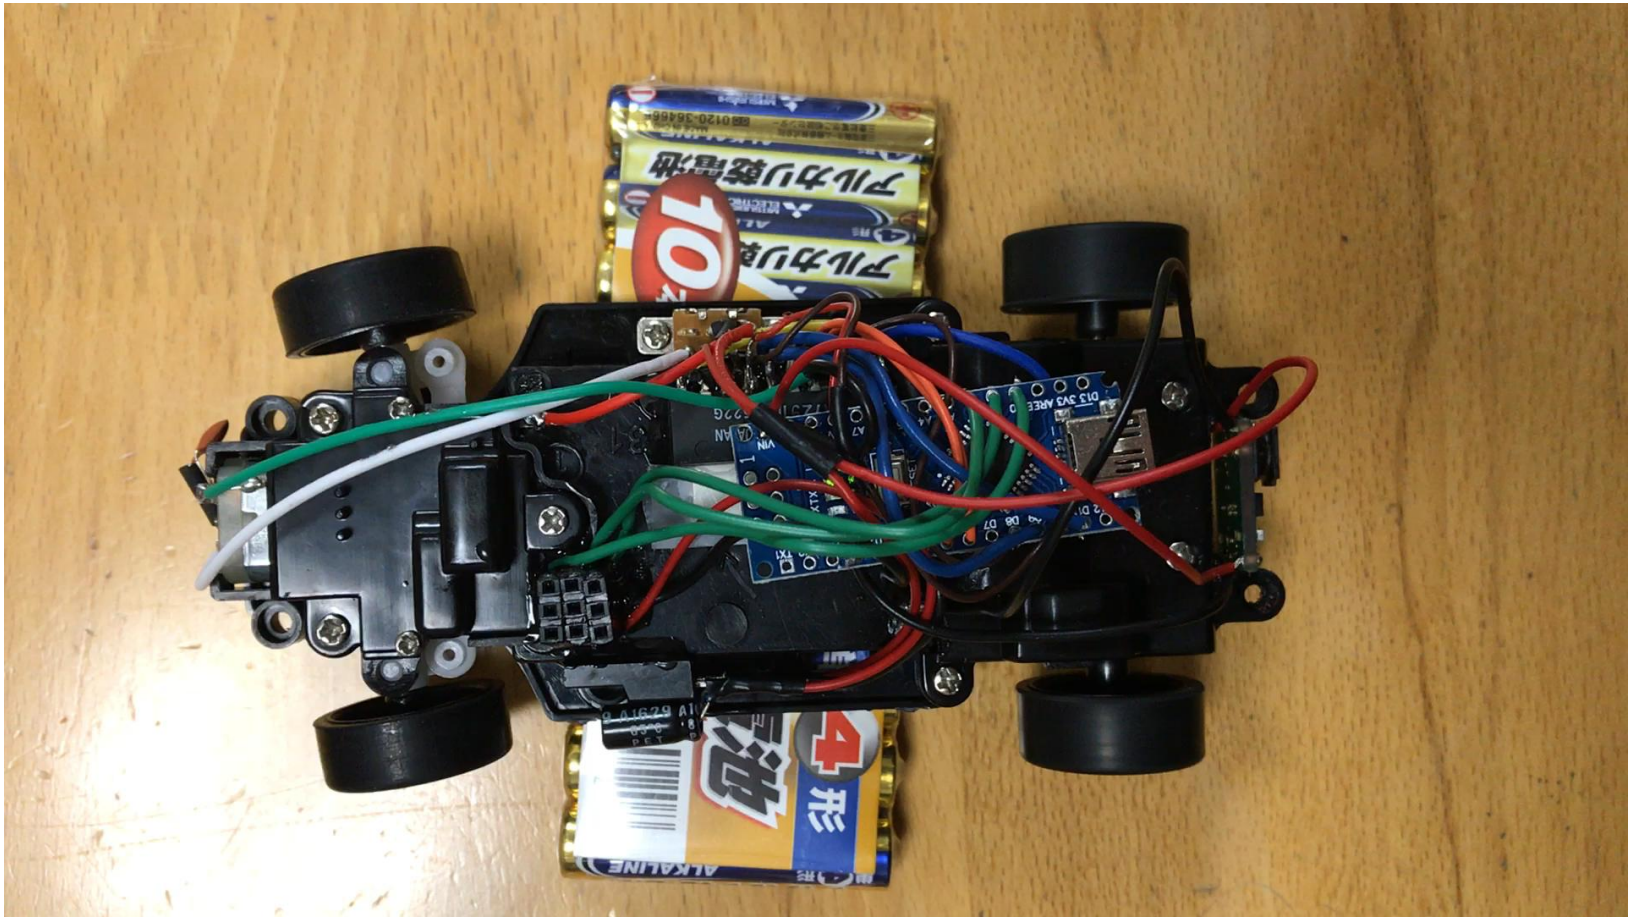

© RumiCar Development Team

Operation Test (Video)

https://youtu.be/8jULg3fZ-jw

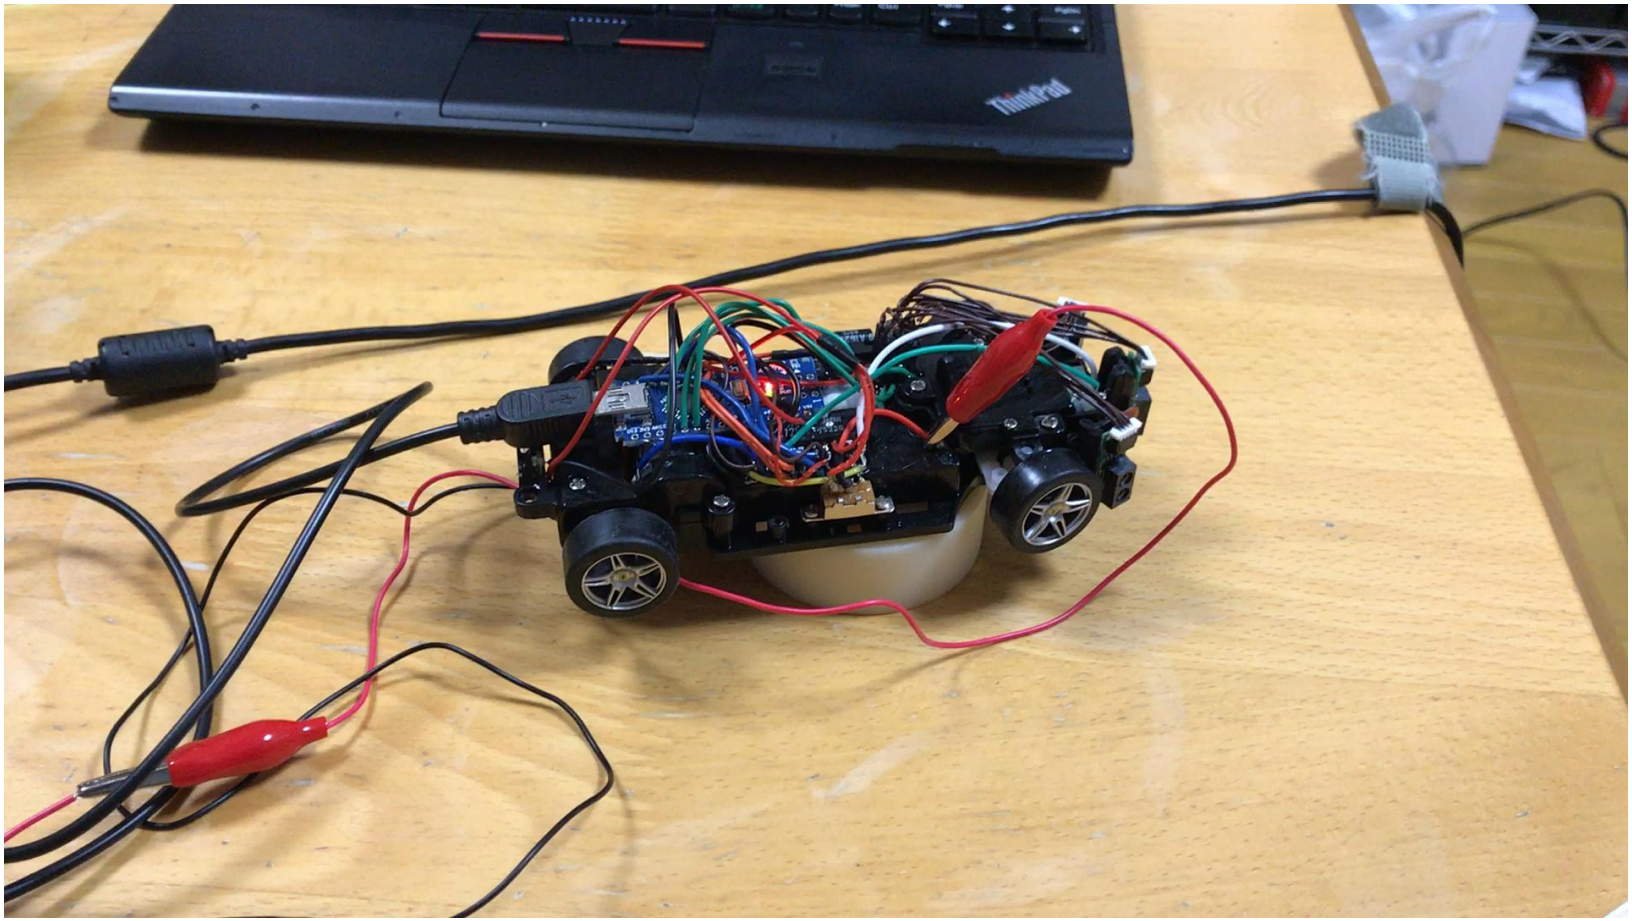

© RumiCar Development Team


System of Car No.4



© RumiCar Development Team


Operation Test (Video)

https://youtu.be/dP815X6oKPw

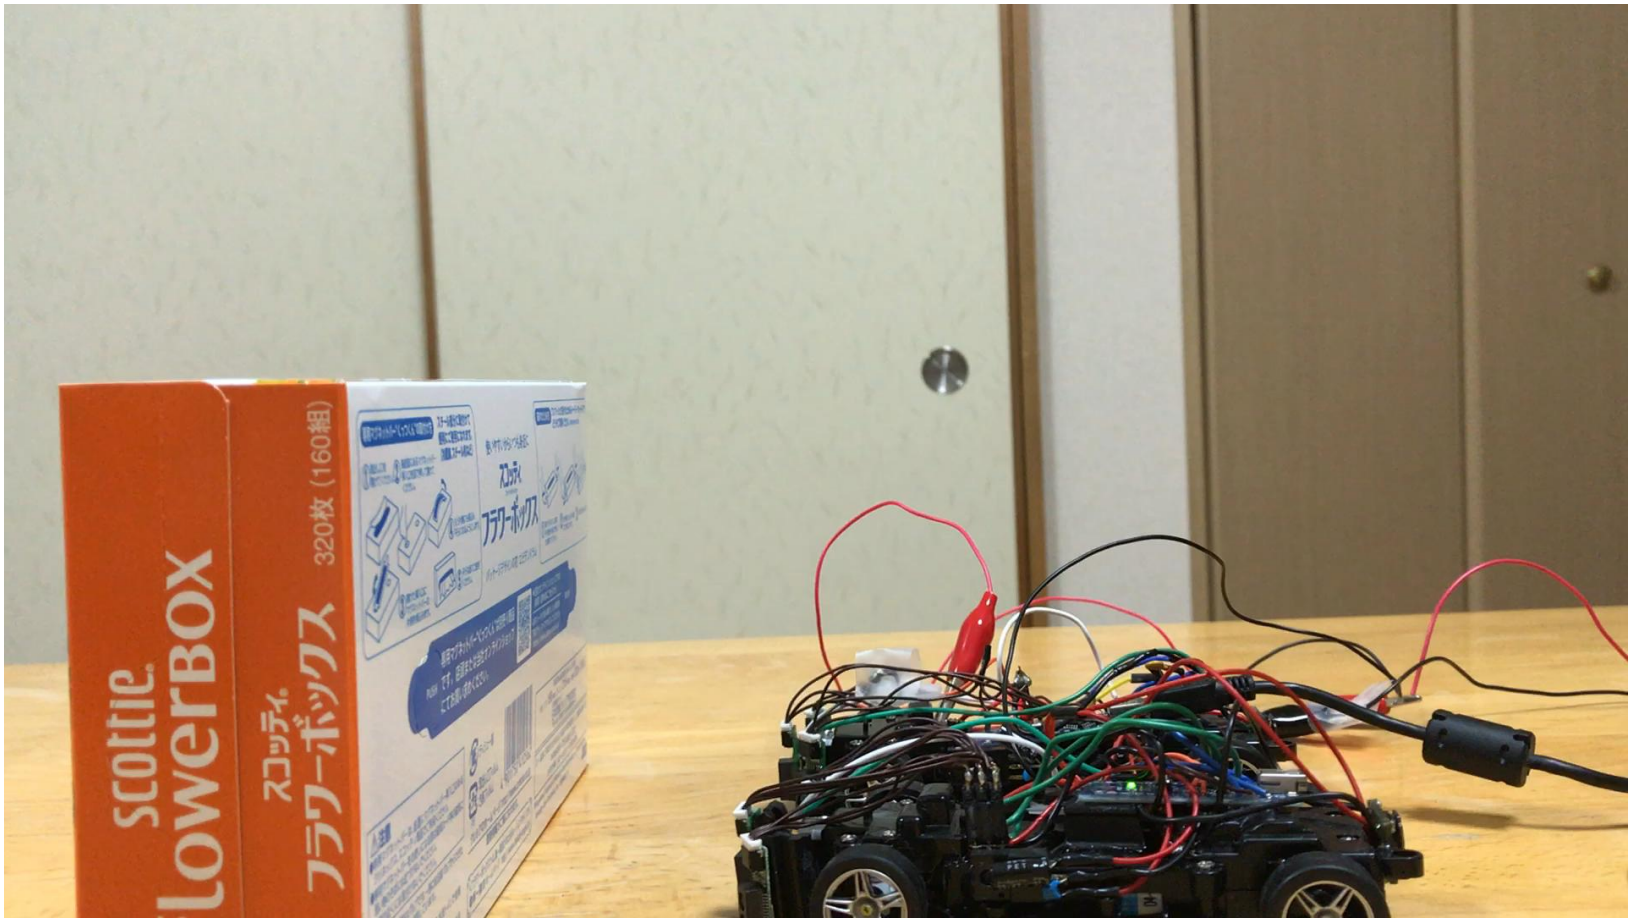


© RumiCar Development Team


Car No.6

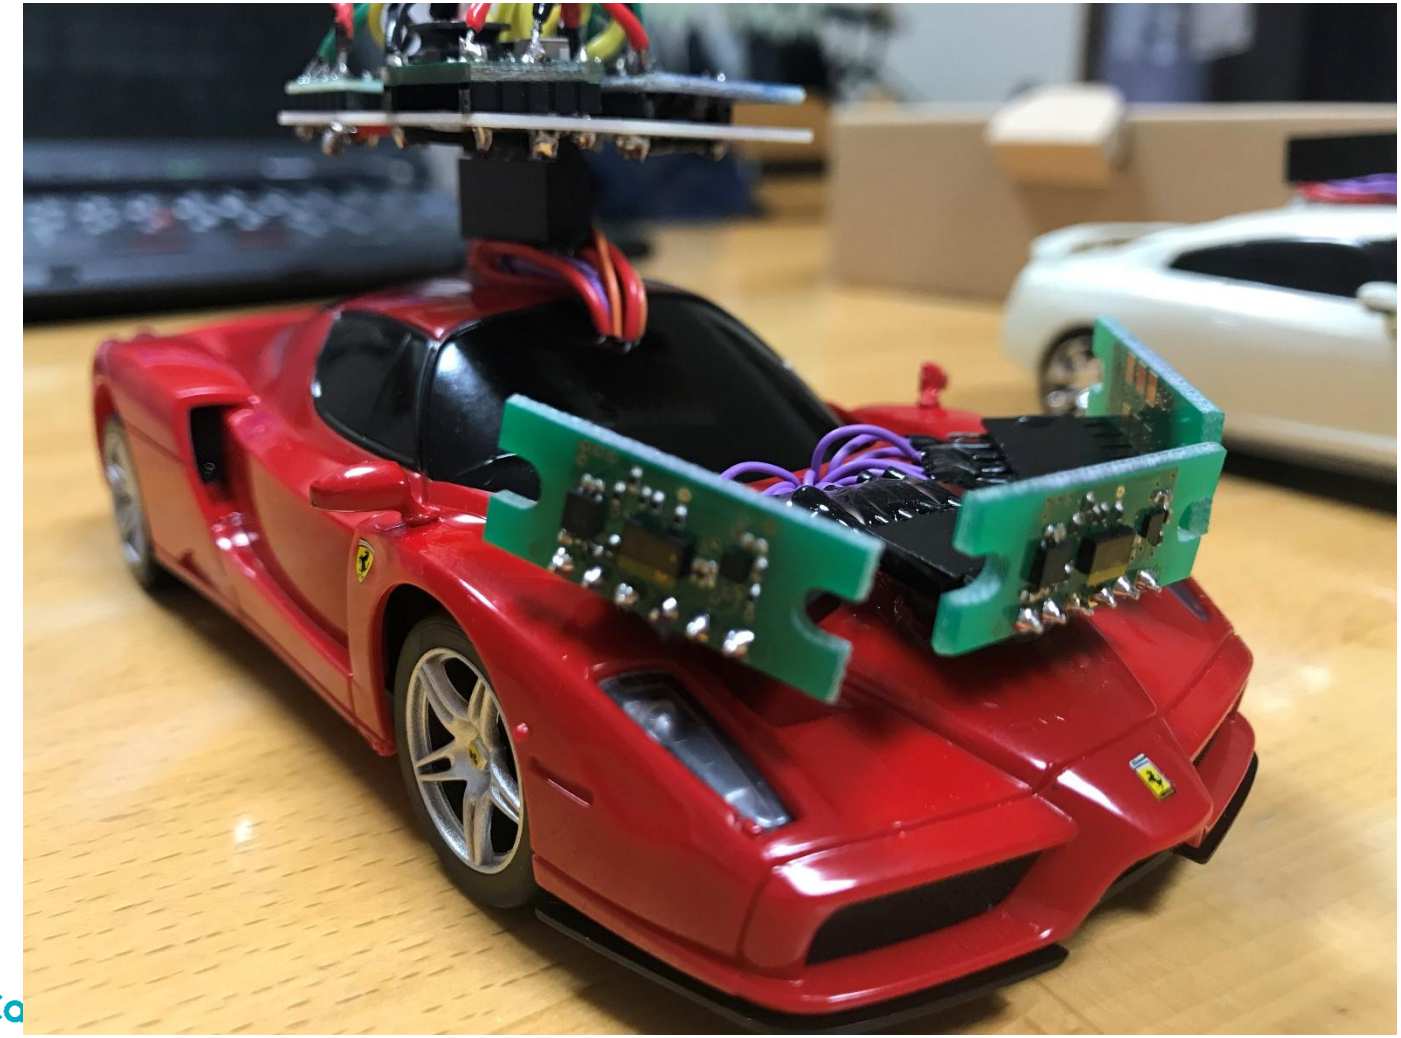

Car No.6

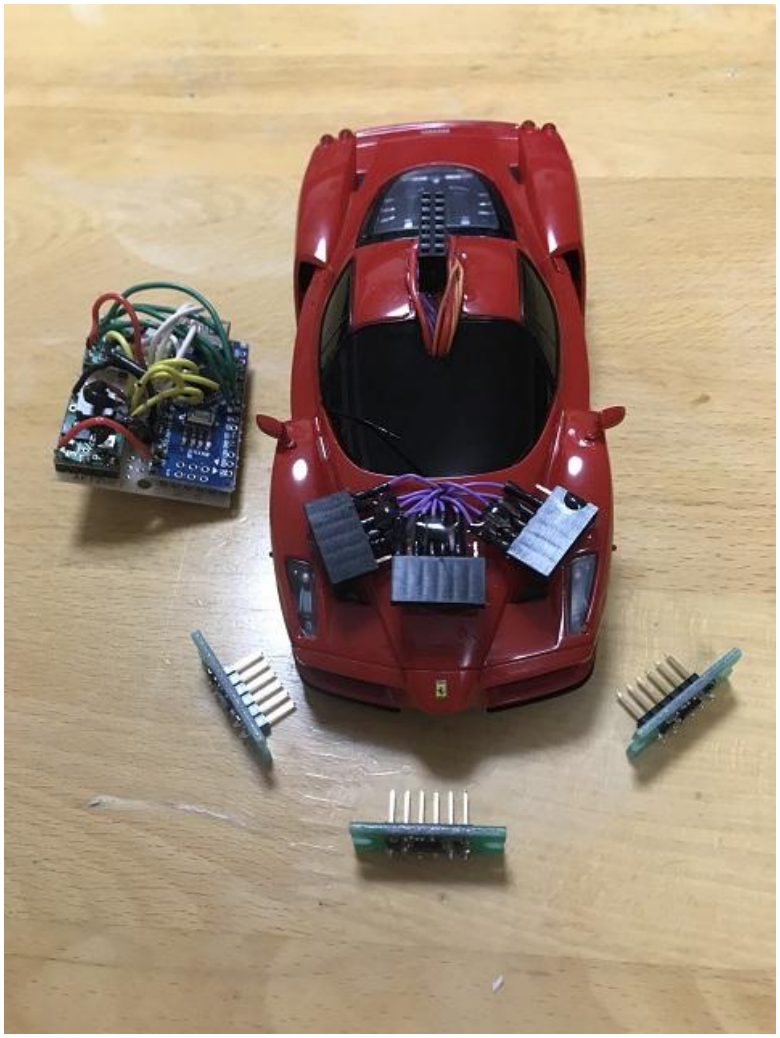

Car No.7

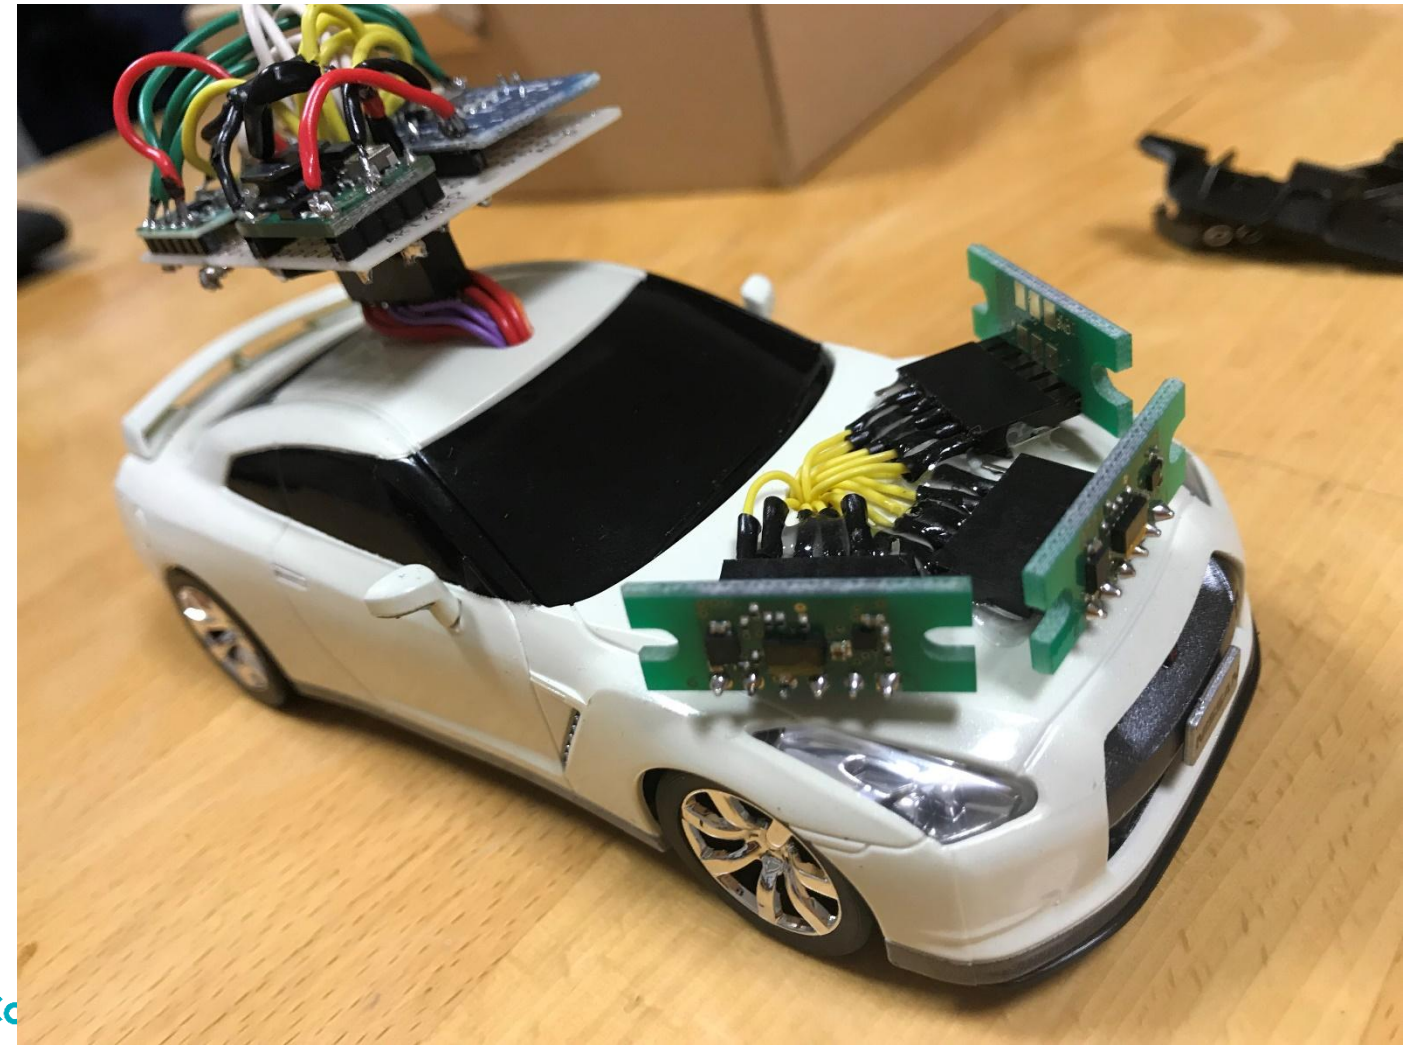

Standardized Interface



© RumiCar Development Team


RumiCar History & Configuration

Car No.	No.1	No.2	No.3	No.4	No.5
Base car scale	1/24		1/32		
Controller	Arduino UNO		Arduino Nano		Modular (selectable / interchangeable)
Motor Control	Relay shield		MM-531	TA7291P	DRV8835
Ranging module	GP2Y0A21YK		GP2Y0E02A		VL53L0X
Ranging method	Infrared				Laser
Arduino power	Six AA batteries (9V)		Boosted from AAA batteries (4.5V) to 7V with an LMR62421		
Ranging module power	Supplied from the Arduino		3.3V generated by a TA48033S		

BD6212HFP motor driver: too small, not used

© RumiCar Development Team

3rd Generation Wiring Diagram

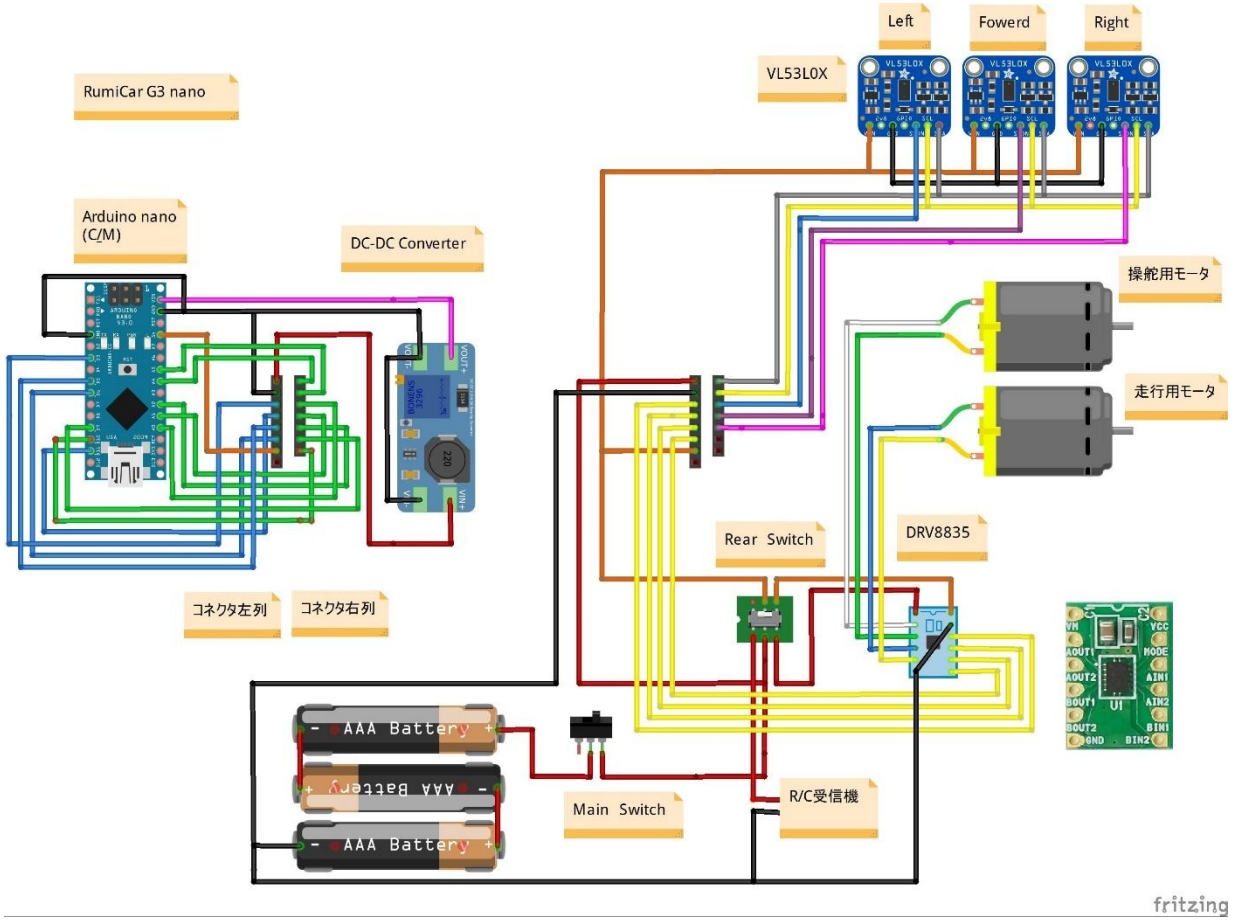

© RumiCar Development Team

Interface

Old type



NEW



© RumiCar Development Team

8×7 Pin Interface

表 3□第三世代□車体-CM 接続インターフェイス(EX-IF)(旧表記)

I/O	用途	ピン番号		用途	I/O
O	電源(4.5V)	1	8	SDA:E-GPIO21	I
O	GND	2	9	SCL:E-GPIO22	I
I	AIN1:右折側:A3;·E-GPIO04	3	10	SHDN0(左):E-GPIO19	I
I	AIN2:左折側:A11:·E-GPIO26	4	11	SHDN1(中):E-GPIO18	I
I	BIN1:前進側:A5:·E-GPIO27	5	12	SHDN2(右):E-GPIO05	I
I	BIN2:後進側:A6:·E-GPIO25	6	13	SERVO(操舵)用 A9 番ピン E-GPIO32	I
I	信号最大電圧及び電力供給(通常コンピュータの VCC)(5V または 3.3V)VL53L0X と DRV8835 の VCC へ	7	14	SERVO 用 A10 番ピン E-GPIO33	I
	誤挿入防止用のダミーピン (接続先は無し)	7.5			

Added 7.5 as a dummy pin to prevent incorrect insertion


© RumiCar Development Team


Preparation


Notes, What You Need, and Preparation

© RumiCar Development Team

Cable Connection Cautions

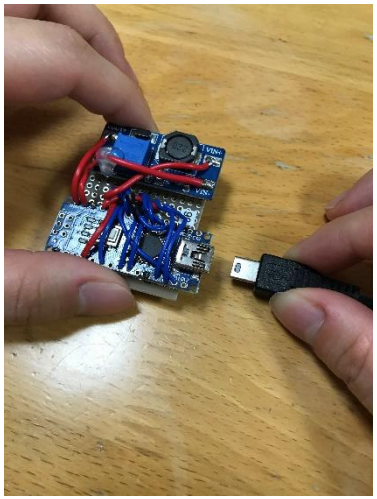


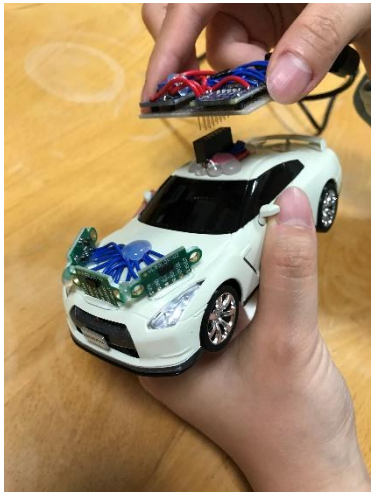

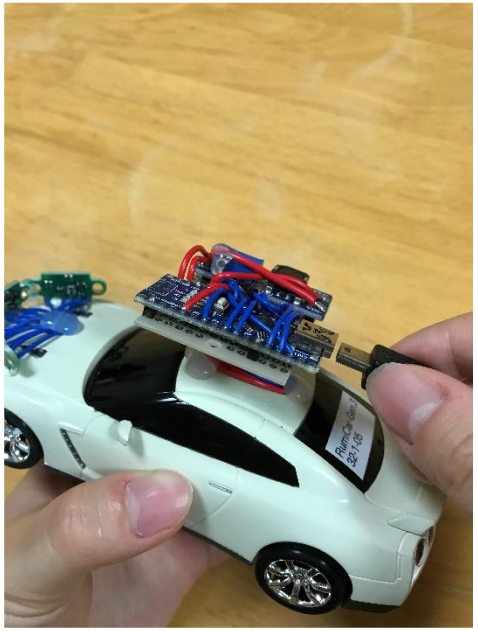

© RumiCar Development Team

Set to Computer Control

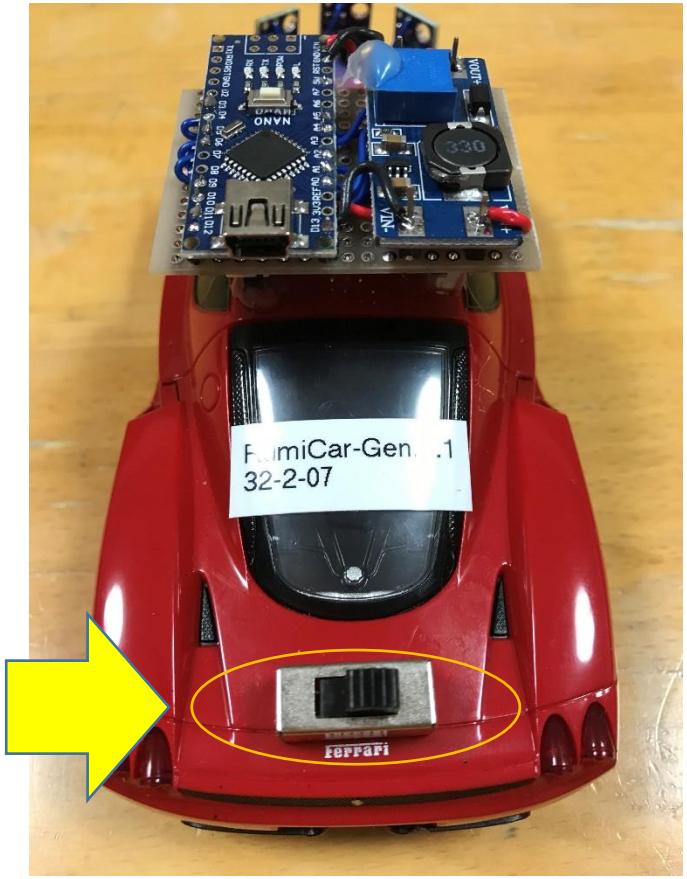

- (Some models only)
- On models with a switch between manual control and computer control, set the switch to the right
- The right side is computer control

- On the right, the car runs on commands from the CM (Arduino, ESP32, etc.)
- (On the left, it can be operated by radio control)

© RumiCar Development Team

Cable Connection Cautions

- First, connect the USB cable to the compute module
- Then connect the compute module (hereafter CM) to the car body
- Caution! Do not connect the USB cable to the compute module while the CM is attached to the car body
- Do not unplug the USB cable while the CM is attached to the car body
- Excessive force on the CM connector can cause damage

© RumiCar Development Team

Installing the Arduino IDE


- URL:https://www.arduino.cc/en/Main/Software
- Install "Windows Win 10 or newer (64-bit)"
- (If you have already installed it, you can skip this step)



© RumiCar Development Team

Installing the RumiCar Library


- Open the Arduino IDE
  - In "Tools" -> "Manage Libraries...", search for "RumiCar" and choose "Install All" (includes dependencies). Already installed? "Update" to 0.5.0 or later

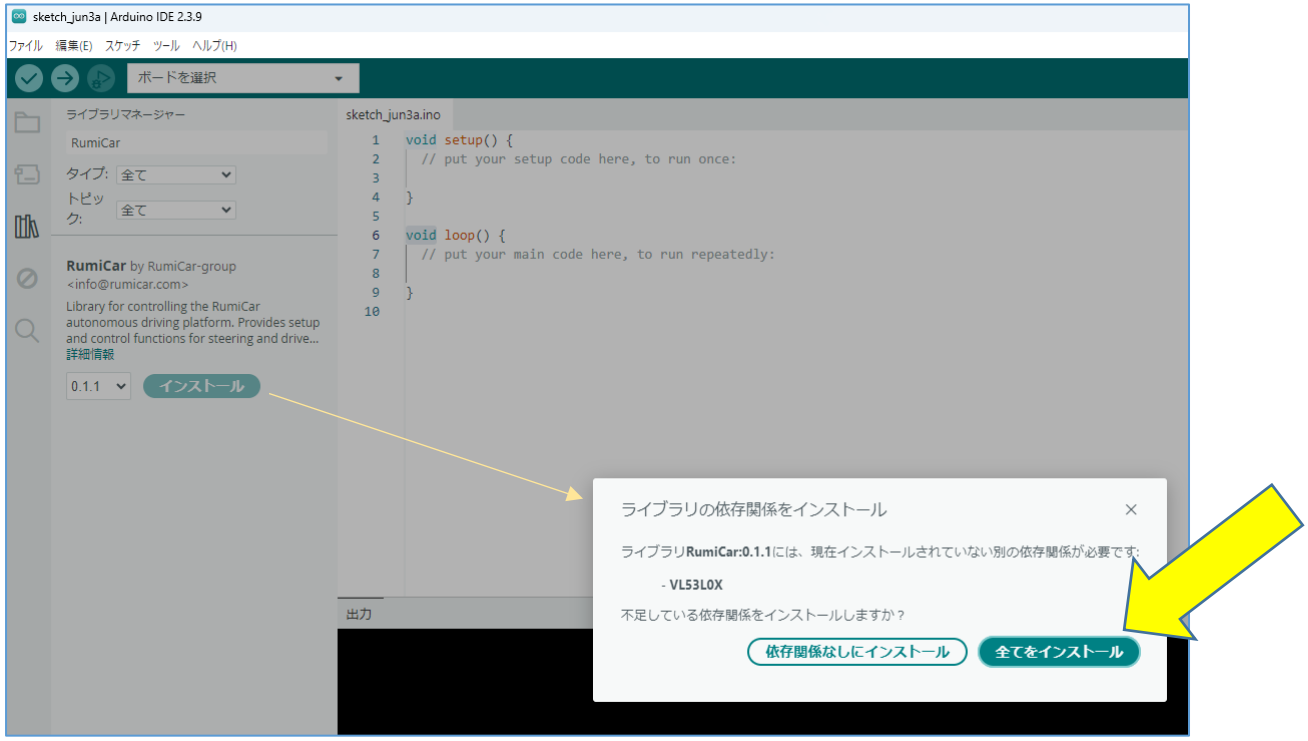

© RumiCar Development Team

Checking the COM Port (Windows)


- Connect the RumiCar compute module to your computer with a USB cable
- In Device Manager, check the number of the connected COM port. Look for CH340 (remember the COM number)

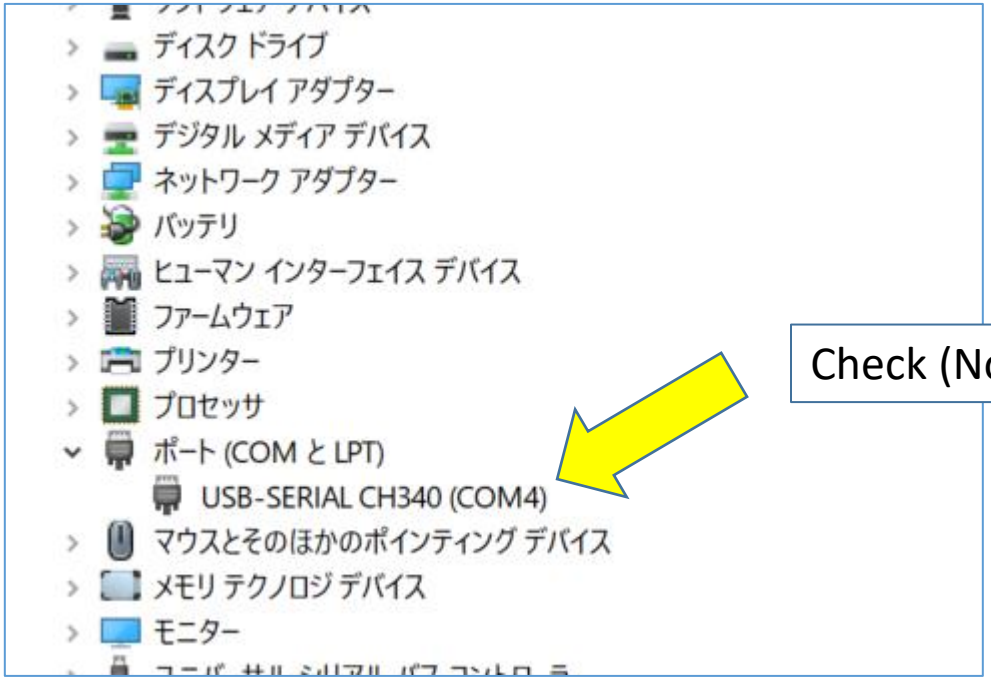

© RumiCar Development Team

Arduino IDE Settings


- Board: Arduino Nano
- Processor: ATmega328P (CM with a Type-C port)
  - Old-type CM (Mini-USB or Micro-USB port): "ATmega328P (Old Bootloader)". Tell them apart by the port shape (screenshot below: old type)
- Serial port: the number you checked in Device Manager

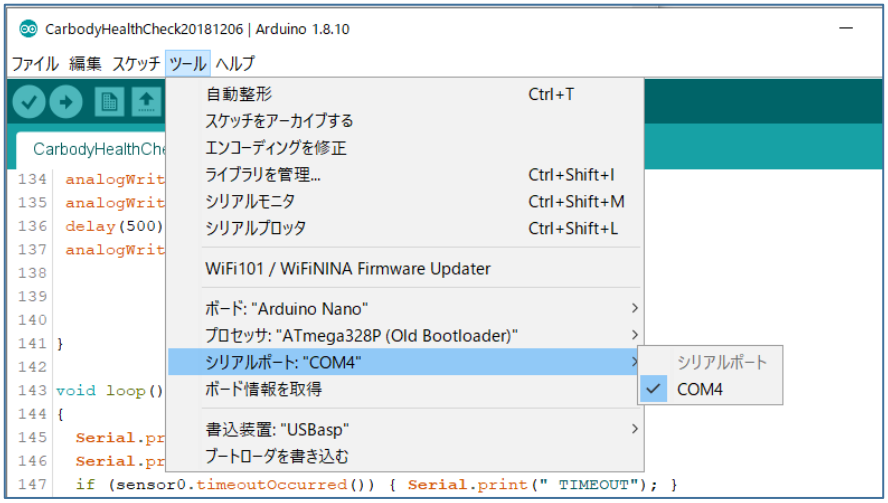

© RumiCar Development Team

Checking the COM Port (Mac)


- Start the Terminal app
- Enter the command "ls –l /dev/tty.usb*" to list the connected COM ports
- Check the COM port the Arduino is connected to
- In the example below, "usbserial-14120" (remember it)

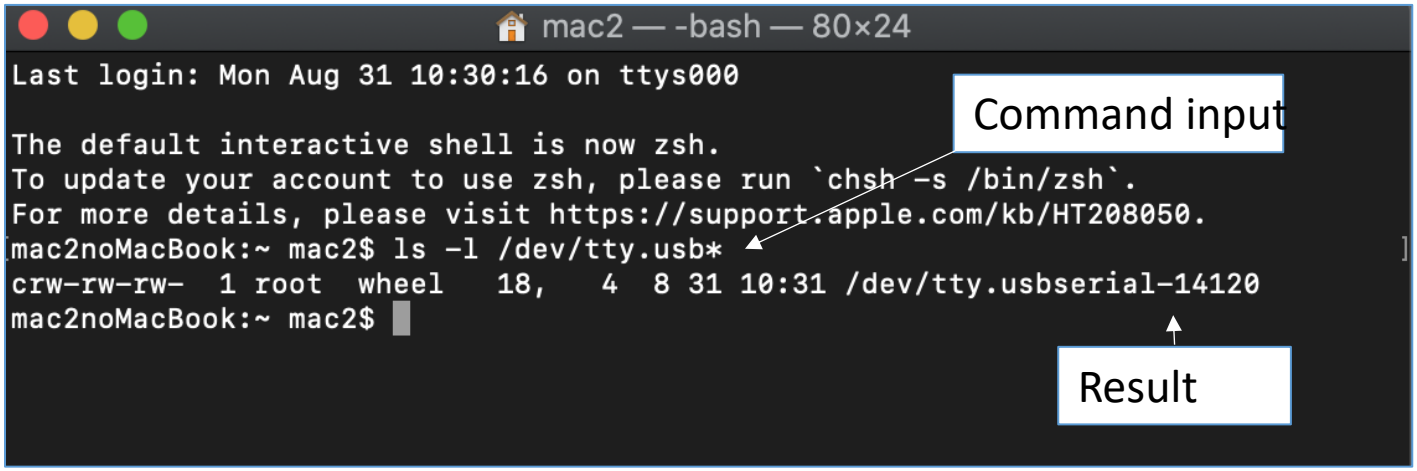

© RumiCar Development Team

Arduino IDE Settings (Mac)

- Board: Arduino Nano
- Processor: ATmega328P (Type-C). Old type (Mini/Micro-USB port): "ATmega328P (Old Bootloader)"
- Serial port: the device you checked in Terminal

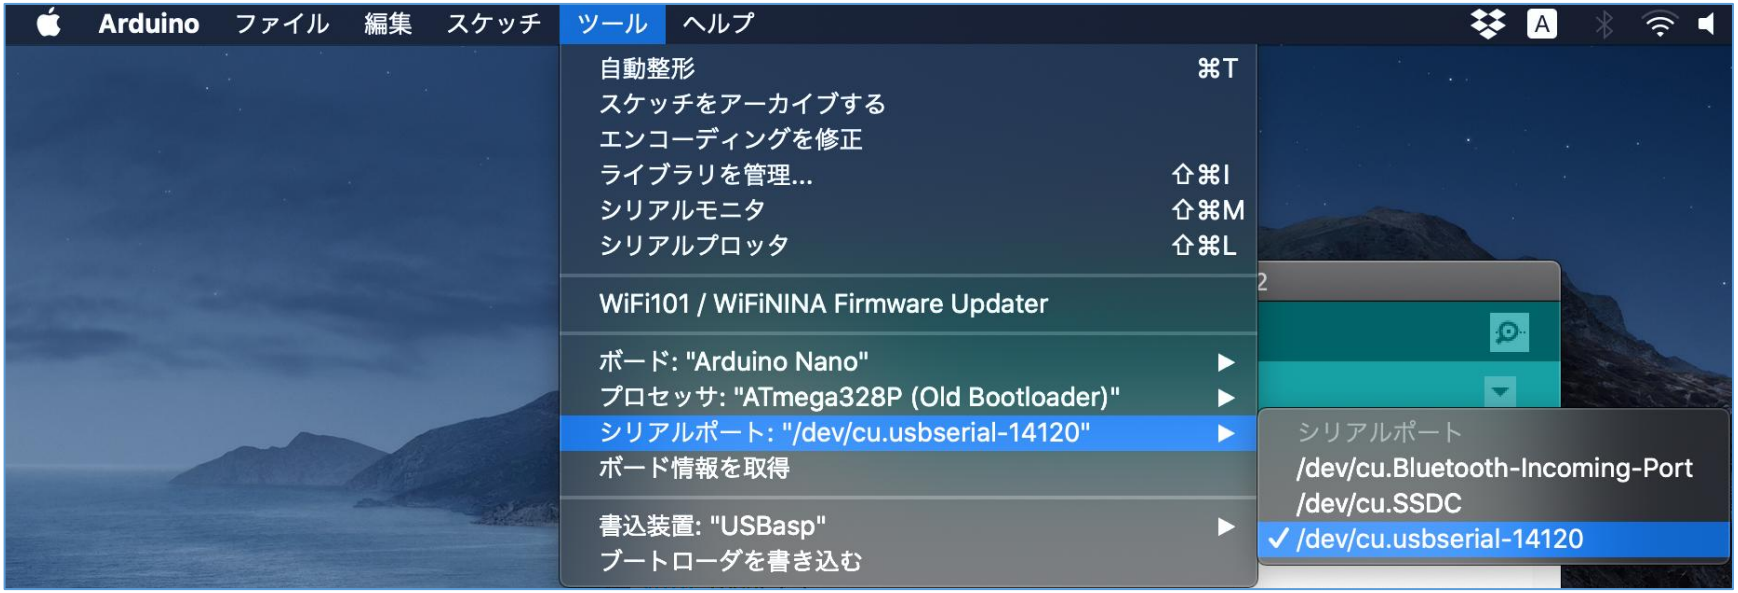

© RumiCar Development Team

Confirm Settings

- Important! Check once more!

Item	Setting	Notes
Board	Arduino Nano	Does not work with Arduino UNO
Processor	ATmega328P	Type-C port CM (standard) Old type (Mini/Micro-USB port): "ATmega328P (Old Bootloader)"
Serial port	"The number you checked in Device Manager"	May change if you change boards
Programmer	(No change needed)	Not used for normal uploading
Serial port baud rate	9600bps	Must be 9600bps (Arduino Nano) Check in the Serial Monitor

© RumiCar Development Team

CM Ports and Settings

CM port	What it looks like	Processor setting	If you pick the wrong one
Type-C (current standard)	Small oval. Plugs in either way	**ATmega328P**	"Old Bootloader" → upload fails
Mini-USB or Micro-USB (old type)	Trapezoid, one way only (Mini is thicker, Micro is flatter)	**ATmega328P (Old Bootloader)**	"ATmega328P" → upload fails

- "Old Bootloader" = the setting for old-type CMs that shipped with the older bootloader (upload program). Tell them apart by the port shape. Both types use the CH340 USB-serial chip, so the driver and the Device Manager entry are the same
- Upload error: programmer is not responding → first check that "Processor" matches the port, then the serial port and the USB cable (charge-only cables cannot transfer data)
- In Exercise-4 the AI compile-checks with a port-specific setting too: Type-C `cpu=atmega328`, old type `cpu=atmega328old`

© RumiCar Development Team



Distance Measurement

Laser Ranging Module

© RumiCar Development Team

Ranging Modules

- Comparison of Ranging Modules

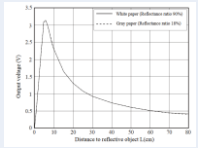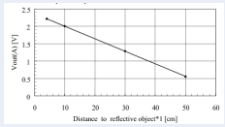Model number	GP2Y0A21YK0F	GP2Y0E02A	VL53L0X	HC-SR04
Measurement method	Infrared	Infrared	Laser	Ultrasonic
Output			Digital value	Analog
Recommended supply voltage	5V	3.3V	2.6-5.5V (Board dependent)	5V
Power consumption	40mA max.	36mA max.	20mA	15mA
Measurable distance	80cm	50cm	2m	2m
Used in RumiCar	Car No.1, 2	Car No.3, 4	Car No.5 and later	Not used
Notes	Output not proportional to distance			Echo issues at high speed

Graphs from Sharp datasheets

© RumiCar Development Team


Laser Ranging Module

- 3 modules on the front of the car

Left : 0

Center: 1

Right : 2

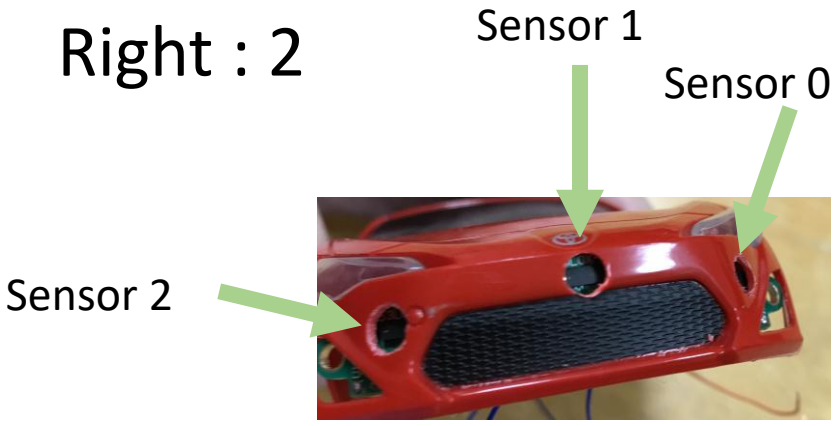



© RumiCar Development Team

VL53L0X

- The laser ranging module on the RumiCar is the VL53L0X
- Features of the VL53L0X
  - Can measure up to 2m
  - Measurements can be read via I2C
  - I2C address can be reassigned by software
  - Modes can be roughly set with parameters
    - High-speed mode
    - Long-range mode
    - High-accuracy mode
    - The sample programs are set to high-speed mode

© RumiCar Development Team

Ranging Methods

- To get the measurement from each ranging module, use for example the command below. The result is an integer (int) in mm (millimeters)

```
readRangeSingleMillimeters()
```

- For example, to get the measurement of sensor 1:

```
i = sensor1.readRangeSingleMillimeters();
```

- (Reference) You can get the same value with the library function RC_read

```
i = RC_read(CENTER);
```


© RumiCar Development Team

Opening Example Sketches

(No need to download from GitHub)

From the Arduino IDE menu

"File"

▼

"Examples"

▼

"RumiCar" (near the bottom of the list)

▼

"Exercise-1.1", etc.

*Requires the RumiCar library (previous step)

[Ref.] Advanced programs (A2.3, etc.) are on GitHub (not used today)



Exercise headers, refactoring and advanced programs added by Mr. Shigeki INADAMA

© RumiCar Development Team

Exercise-1

Let's Measure Distance

© RumiCar Development Team

Exercise-1.1

Ranging with the Central Sensor!

© RumiCar Development Team

Exercise-1.1
Central Sensor Ranging (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Attach the CM to the RumiCar body

© RumiCar Development Team

Exercise-1.1
Central Sensor Ranging

- Open "Exercise" from the Examples
- Add one line of code in loop() to display the measurement

```
 8  void loop()
 9  {
10
11  }
```



```
 8  void loop()
 9  {
10    Serial.println(sensor1.readRangeSingleMillimeters());
11  }
```

- The Serial.print and Serial.println commands display data on the Serial Monitor
- Serial.print: no line break
- Serial.println: line break after printing

© RumiCar Development Team

Exercise-1.1
Central Sensor Ranging

- Compile and Upload to the Board


Click



© RumiCar Development Team

Exercise-1.1
Central Sensor Ranging (Cont'd)


- Display the measurements on the Serial Monitor
  - Tools -> Serial Monitor

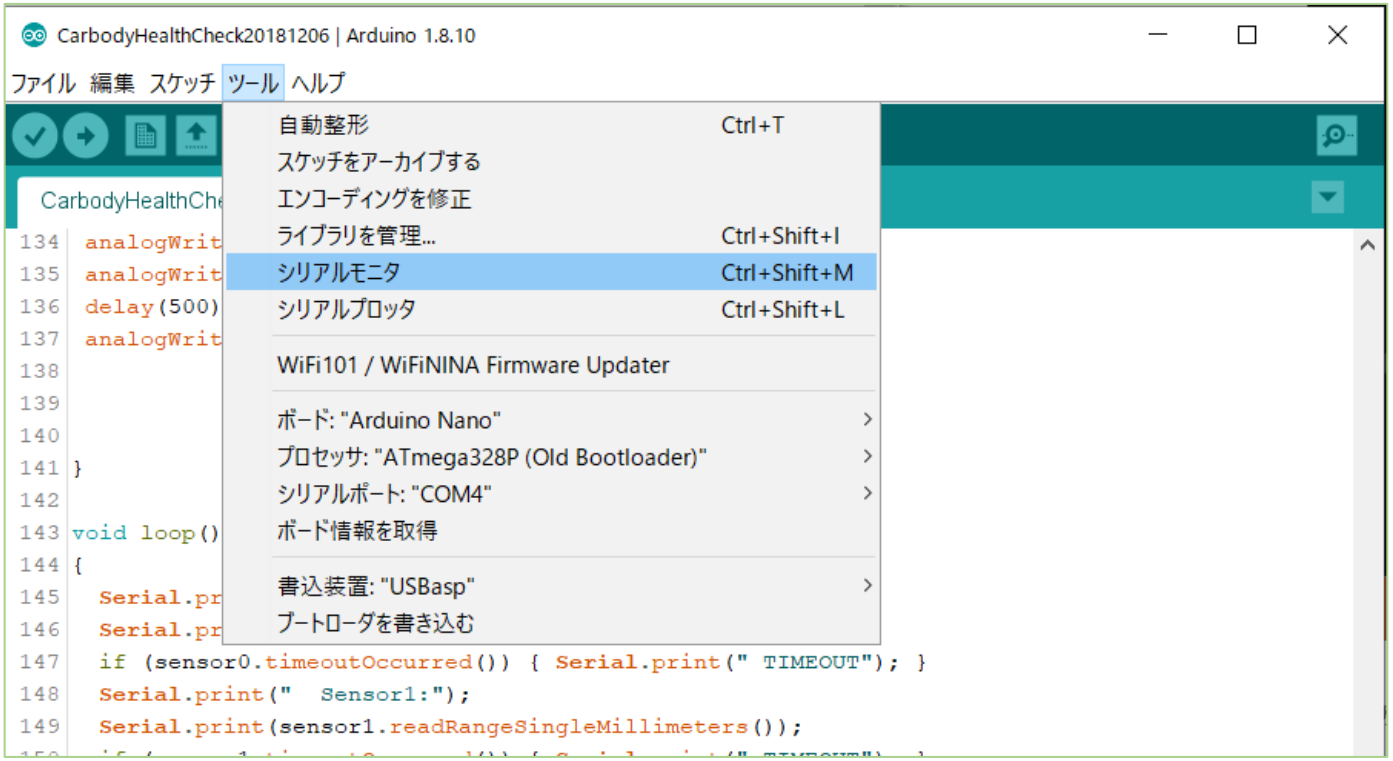

© RumiCar Development Team

Exercise-1.1
Central Sensor Ranging (Cont'd)

- If the display does not work, check the baud rate (it must be 9600 bps)

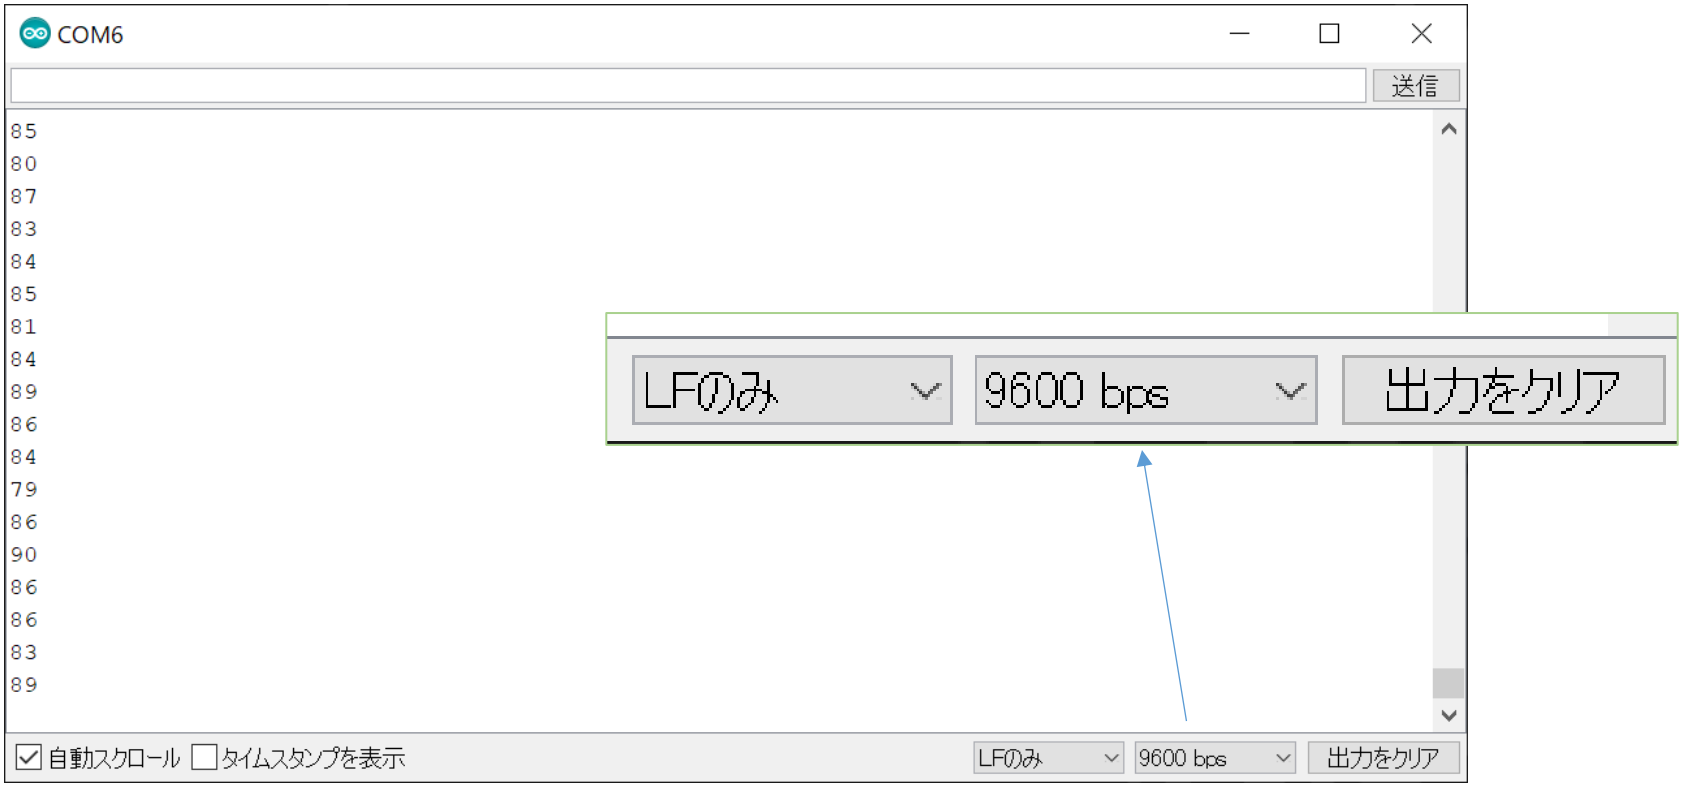

© RumiCar Development Team

Exercise-1.1
Central Sensor Ranging (Cont'd)

- If the display still does not work, check the "Confirm Settings" page in the "Preparation" section again

© RumiCar Development Team

Exercise-1.2

Ranging with 3 Sensors!

© RumiCar Development Team

Exercise-1.2
Ranging with 3 Sensors

- Open "Exercise-1.2" from the Examples


Sensors	Sensor location
Sensor0	Left
Sensor1	Center
Sensor2	Right

```
 8  void loop()
 9  {
10    Serial.print("Sensor0:");
11    Serial.print(sensor0.readRangeSingleMillimeters());
12    Serial.print("  Sensor1:");
13    Serial.print(sensor1.readRangeSingleMillimeters());
14    Serial.print("  Sensor2:");
15    Serial.println(sensor2.readRangeSingleMillimeters());
16  }
```


© RumiCar Development Team

Exercise-1.2
Ranging with 3 Sensors (Cont'd)

- Display the measurements on the Serial Monitor
  - Tools -> Serial Monitor

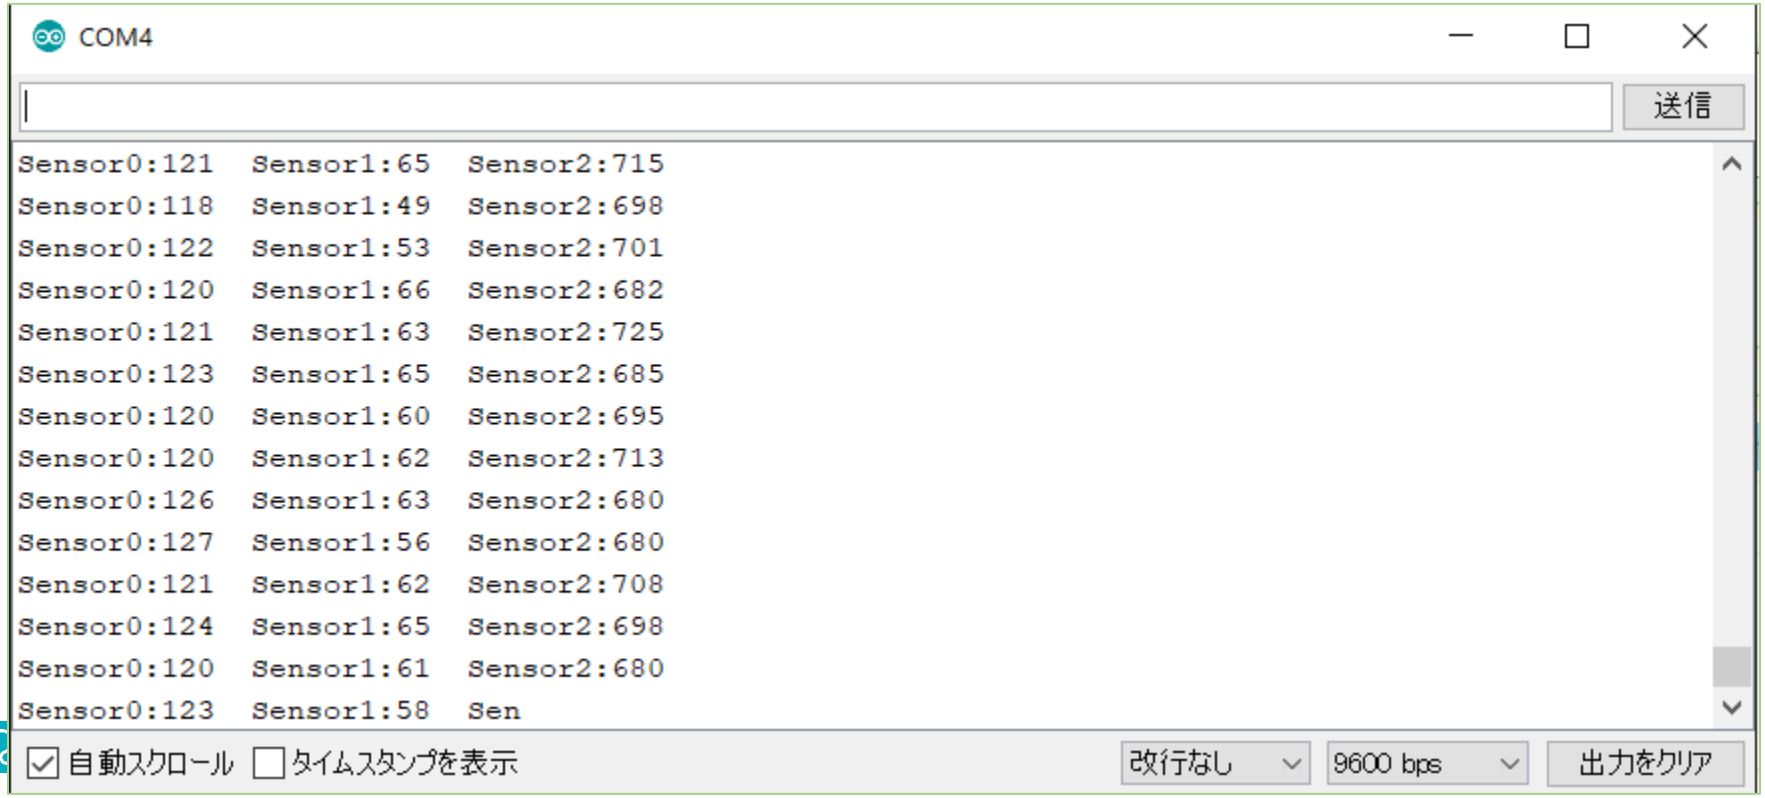


Exercise-1.3

Using the Serial Plotter

© RumiCar Development Team

Exercise-1.3
Using the Serial Plotter

- (Use the program from Exercise-1.2 as is)
- Close the Serial Monitor
- Tools -> Serial Plotter
  - *If the Serial Monitor window is open, you must close it

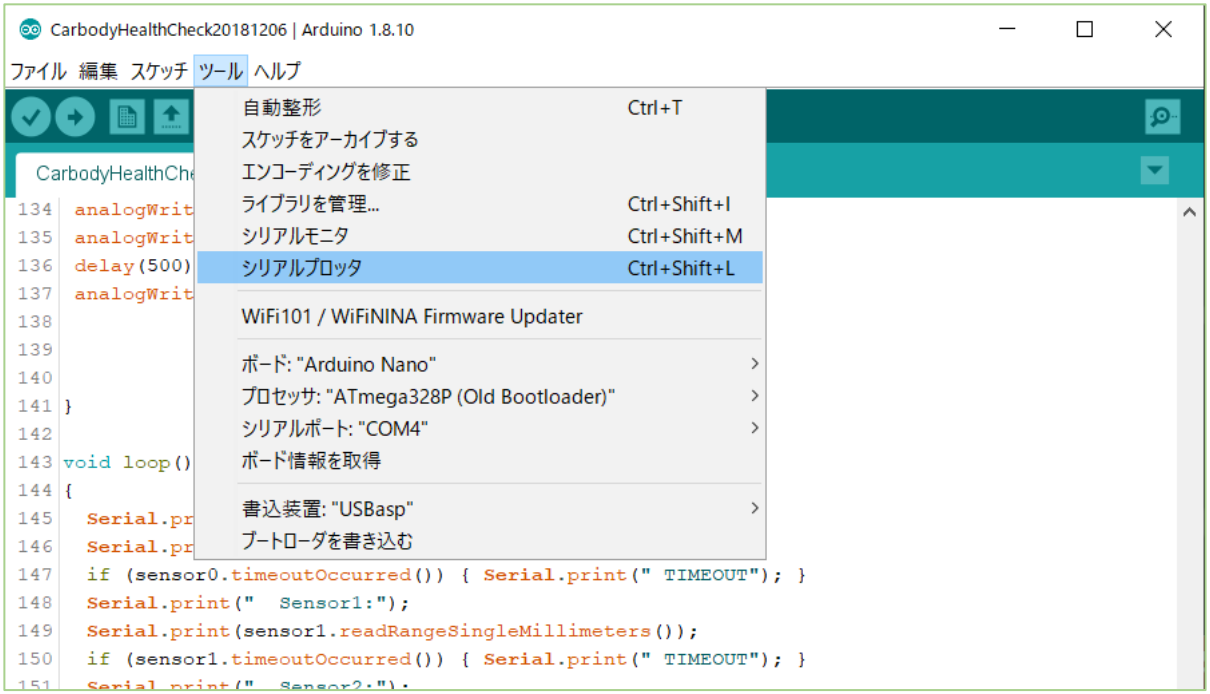


Break Room



	UV-curing resin	Hot-melt adhesive (commonly called glue)
Pros	• Hardens quickly • High strength • Transparent, looks good • Can be applied in layers	• Cheap • Easy to peel off and redo
Cons	• Brittle over a long time	• Not transparent; looks worse (not Insta-worthy) • Weaker than UV resin



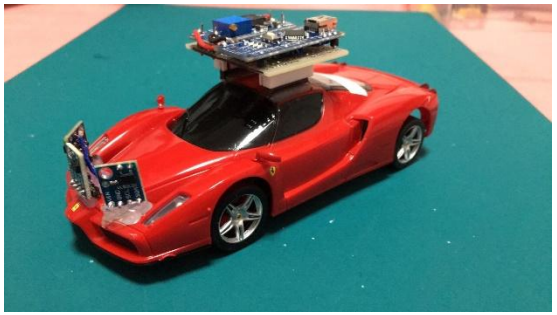

© RumiCar Development Team

Motor Control


Moving the Steering and Driving

© RumiCar Development Team

Motor Driver

- The motor driver on the RumiCar is the DRV8835
- Features of the DRV8835
  - 2 channels
  - Up to 1.5A per channel
  - PWM(250kHz)
  - Low power consumption
  - Low voltage drop (motor side)
  - Logic power (VCC) and motor power are independent
    - Logic supply voltage: 2 to 7V
    - Motor supply voltage: up to 11V

DRV8835

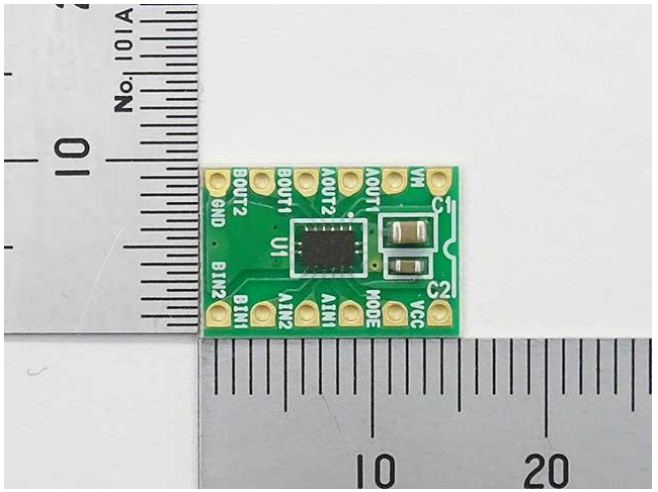

© RumiCar Development Team

DRV8835 Specs (1/2)

T_A = 25°C (unless otherwise noted)

		MIN	NOM	MAX	UNIT
V_{CC}	Device power supply voltage	2		7	V
V_M	Motor power supply voltage	0		11	V
V_{IN}	Logic level input voltage	0		V_{CC}	V
I_{OUT}	H-bridge output current(1)	0		1.5	A
f_{PWM}	Externally applied PWM frequency	0		250	kHz

(1) Power dissipation and thermal limits must be observed.

From the DRV8835 Dual Low-Voltage H-Bridge IC datasheet, August 9, 2016

© RumiCar Development Team

DRV8835 Specs (2/2)

T_A = 25°C, V_M = 5 V, V_{CC} = 3 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
POWER SUPPLY						
I_{VM}	VM operating supply current	No PWM, no load		85	200	µA
		50 kHz PWM, no load		650	2000	
I_{VMQ}	VM sleep mode supply current	V_M = 2 V, V_{CC} = 0 V, all inputs 0 V		5		nA
		V_M = 5 V, V_{CC} = 0 V, all inputs 0 V		10	95	
I_{VCC}	VCC operating supply current			450	2000	µA
V_{UVLO}	VCC undervoltage lockout voltage	V_{CC} rising			2	V
		V_{CC} falling			1.9	
LOGIC-LEVEL INPUTS						
V_{IL}	Input low voltage				0.3 × V_{CC}	V
V_{IH}	Input high voltage		0.5 × V_{CC}			V
I_{IL}	Input low current	V_{IN} = 0	–5		5	µA
I_{IH}	Input high current	V_{IN} = 3.3 V			50	µA
R_{PD}	Pulldown resistance			100		kΩ
H-BRIDGE FETS						
$R_{DS(ON)}$	HS + LS FET on resistance	V_{CC} = 3 V, V_M = 3 V, I_O = 800 mA, T_J = 25°C		370	420	mΩ
		V_{CC} = 5 V, V_M = 5 V, I_O = 800 mA, T_J = 25°C		305	355	
I_{OFF}	OFF-state leakage current				±200	nA
PROTECTION CIRCUITS						
I_{OCP}	Overcurrent protection trip level		1.6		3.5	A
t_{DEG}	Overcurrent de-glitch time			1		µs
t_{OCR}	Overcurrent protection retry time			1		ms
t_{DEAD}	Output dead time			100		ns
t_{TSD}	Thermal shutdown temperature	Die temperature	150	160	180	°C

RumiCar

From the DRV8835 Dual Low-Voltage H-Bridge IC datasheet, August 9, 2016

IN/IN Mode

- It has an IN/IN mode and a PHASE/ENABLE mode
- RumiCar uses the DRV8835 in IN/IN mode

Table 3. IN/IN Mode

MODE	xIN1	xIN2	xOUT1	xOUT2	FUNCTION (DC MOTOR)
0	0	0	Z	Z	Coast
0	0	1	L	H	Reverse
0	1	0	H	L	Forward
0	1	1	L	L	Brake

From the DRV8835 Dual Low-Voltage H-Bridge IC datasheet, August 9, 2016

© RumiCar Development Team

Phase/Enable Mode

Table 4. Phase/Enable Mode

MODE	xENABLE	xPHASE	xOUT1	xOUT2	FUNCTION (DC MOTOR)
1	0	X	L	L	Brake
1	1	1	L	H	Reverse
1	1	0	H	L	Forward

- When Enable is 1, the motor turns
- When Enable is 0, the motor stops
- When Phase is 1, reverse direction
- When Phase is 0, forward direction

Enable sets speed, Phase sets direction

From the DRV8835 Dual Low-Voltage H-Bridge IC datasheet, August 9, 2016

© RumiCar Development Team

About PWM

- RumiCar uses PWM to control driving speed
- PWM stands for "Pulse Width Modulation", a technique that changes the apparent voltage by repeatedly switching the voltage on and off at short intervals

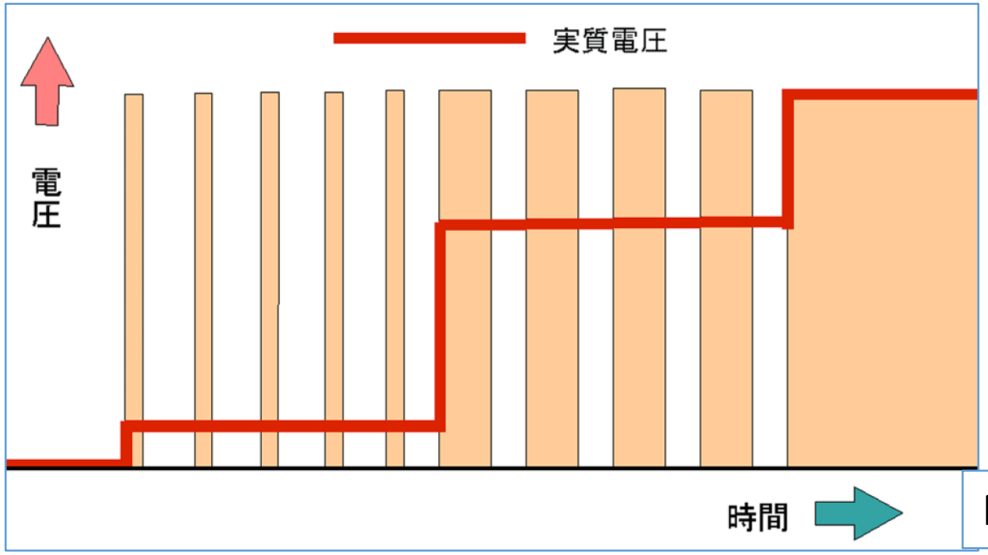


Figure from Wikipedia

PWM on Arduino

- Arduino PWM is linked to its timers
- The Arduino has 3 timers

Timer	Pin	Frequency
Timer 0	5, 6	980Hz
Timer 1	9, 10	490Hz
Timer 2	3, 11	490Hz

- Using the Arduino Servo library makes Timer 1 unavailable

Pin Assignment on the Arduino Version		
Function	Timer	Pin
Steer	Timer 2	3, 11
Drive	Timer 0	5, 6

RumiCar PWM Control

- The RumiCar sample programs define macros for the pins
- For example, to turn the steering right, set AIN1 on and AIN2 to "0"
- *Arduino pin assignment shown. ESP and other versions differ, but macros hide the differences

Timer	Function	Pin	Macro
Timer 2	Turn right	3	AIN1
	Turn left	11	AIN2
Timer 0	Forward	5	BIN1
	Reverse	6	BIN2

RumiCar RC Functions

- RumiCar provides the following functions to make program development easier

Action	Type	Function	1st argument (int)	2nd argument (int)	Action	Return value on error
Steer	int	RC_steer	RIGHT	(None)	Steer right	0
			LEFT		Steer left	
			CENTER		Center	
Drive	int	RC_drive	FREE	0 to 255 (PWM value)	Neutral	0
			REVERSE		Reverse	
			FORWARD		Forward	
			BRAKE		Brake	

- With RC_drive FREE and BRAKE, the 2nd argument must be given, but its value is ignored
- The 2nd argument of RC_drive is the PWM value; the larger the value, the more power goes to the motor
- The 1st argument is of type int. The values in this table are ultimately expanded by macros

RumiCar RC Functions (Ranging)

- A distance-measuring function, RC_read, is also provided

Action	Type	Function	1st argument (int)	Sensor to read	Return value (normal)	Return value on error
Range	int	RC_read	LEFT	Left (Sensor0)	Distance (mm) 0 to 2000	-1: timeout -2: argument error -3: out of range
			CENTER	Center (Sensor1)		
			RIGHT	Right (Sensor2)		
			REAR	Rear (Sensor3)		

- Negative values are errors: -1 no response (also when REAR is specified on a car without a rear sensor), -2 invalid argument, -3 out of range / weak signal (when readRangeSingleMillimeters() gives around 8190)
- Example: i = RC_read(CENTER); returns the same distance as sensor1.readRangeSingleMillimeters() (the Exercises use the latter)
- The rear sensor (Sensor3) is only on equipped cars. The library detects it automatically at startup


© RumiCar Development Team

Why Provide Functions

- RumiCar's macros and RC functions offer these benefits
  - Grouping commands makes programs cleaner and more readable
  - Omitting fixed arguments makes programs cleaner
  - Fewer mistakes by omitting unneeded code
  - No need to handle hardware-specific pins or control
  - Absorbs CM differences so programs can be shared

© RumiCar Development Team

Common Structure

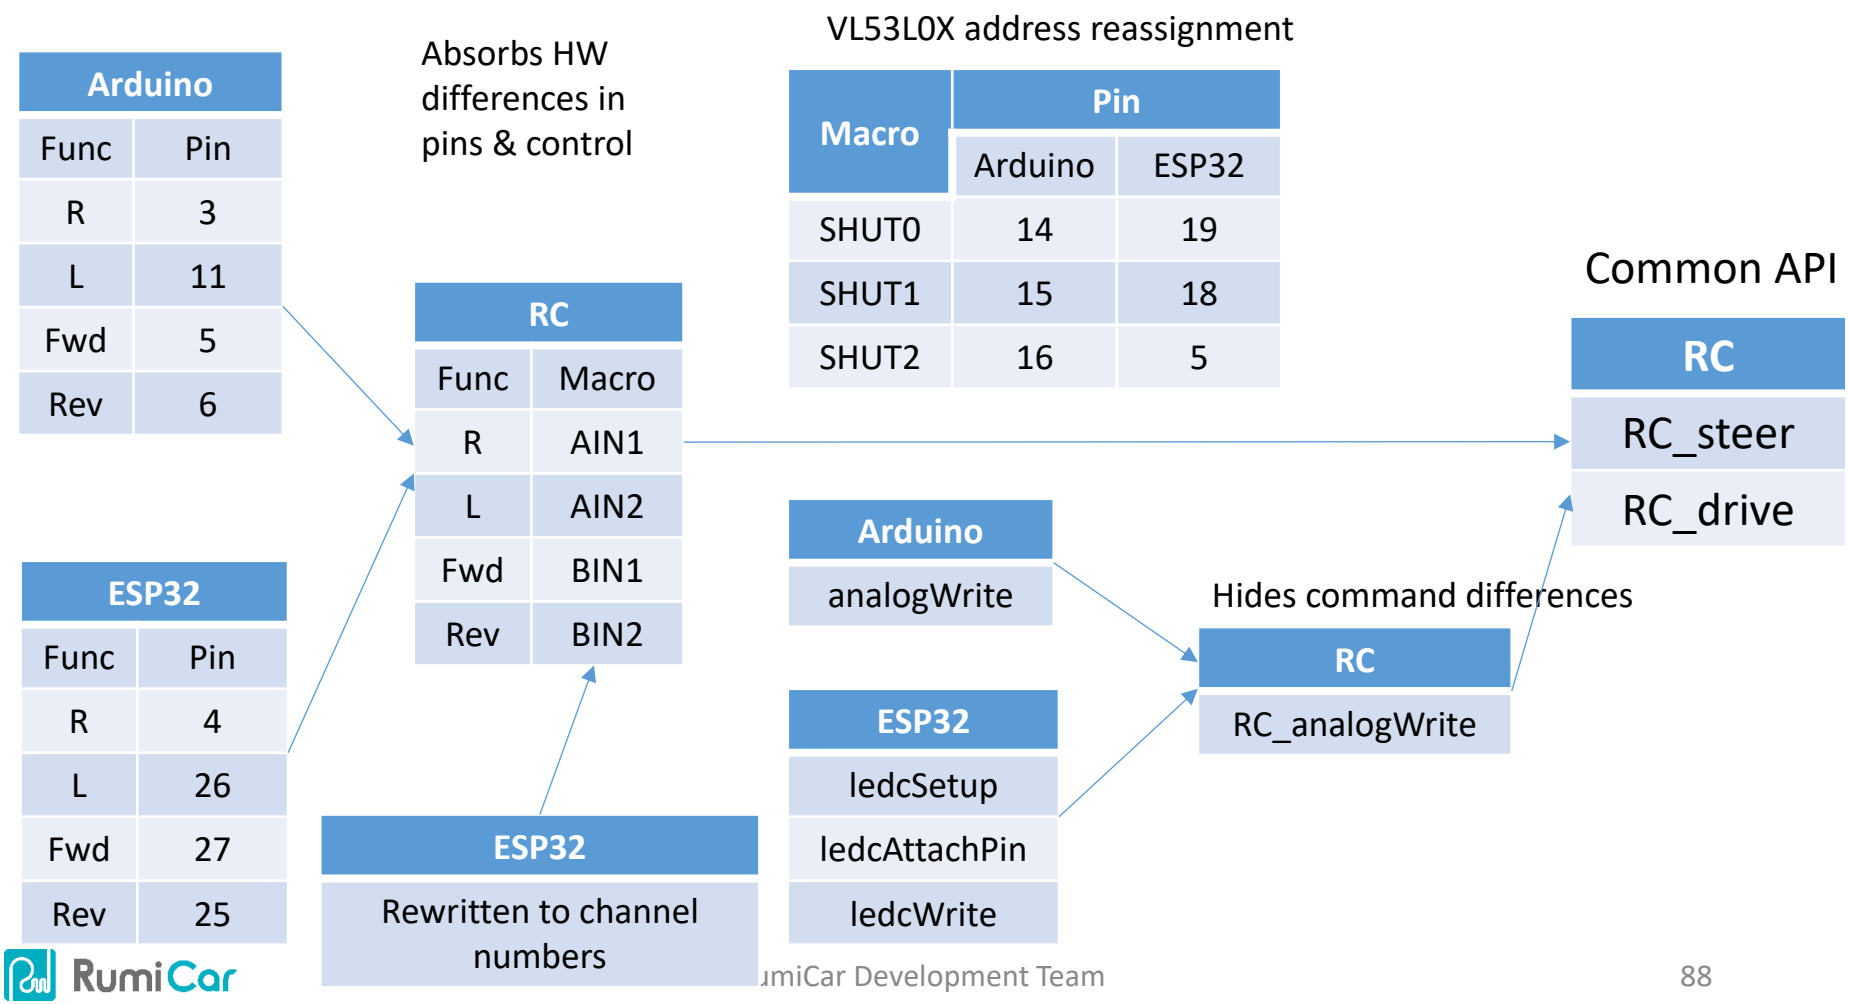


Using the RC_steer Function

- An example of steering programming using the RC_steer function
- The left side shows the code written with the original commands

Code using original commands

```
 8  void loop()
 9  {
10    analogWrite(AIN1,255);
11    analogWrite(AIN2,0);
12    delay(500);
13    analogWrite(AIN1,0);
14    analogWrite(AIN2,255);
15    delay(500);
16  }
```



Code using RC functions

```
 8  void loop()
 9  {
10    RC_steer(RIGHT);
11    delay(500);
12    RC_steer(LEFT);
13    delay(500);
14  }
```


© RumiCar Development Team

Exercise-2

Motor Control

© RumiCar Development Team

Exercise-2.1

Steering

© RumiCar Development Team

Exercise-2.1
Steering (Prep)


- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Open "Exercise-2.1" from the Examples

© RumiCar Development Team

Exercise-2.1
Steering (Program)

```
 8  void loop()
 9  {
10    RC_steer(RIGHT);
11    delay(500);
12    RC_steer(LEFT);
13    delay(500);
14  }
```

- The delay command just waits for the specified time, doing nothing
- The delay argument is in milliseconds
- This program holds the steering in one direction for 0.5 seconds (500 milliseconds)

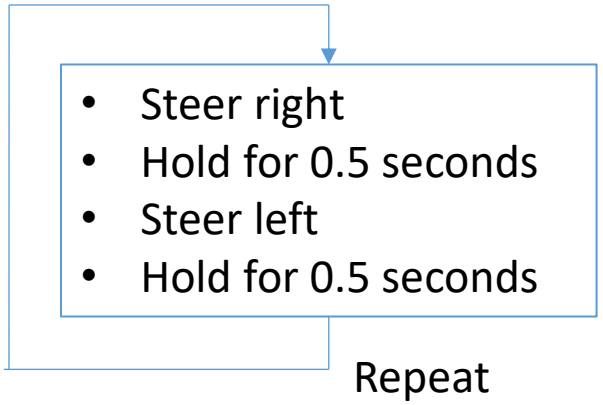

© RumiCar Development Team

Exercise-2.1
Steering (Test)

- Compile and upload the program to the CM
- Remove the USB cable from the CM
- Attach the CM to the RumiCar body
- Turn the RumiCar's power on
- Is the steering turning left and right?

© RumiCar Development Team

Exercise-2.2

Speed Control

© RumiCar Development Team

Exercise-2.2
Speed Control (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Open "Exercise-2.2" from the Examples

© RumiCar Development Team

Exercise-2.2
Speed Control (Program)

```
 8  void loop()
 9  {
10    RC_drive(FORWARD,255);
11    delay(500);
12    RC_drive(FORWARD,200);
13    delay(500);
14    RC_drive(FORWARD,150);
15    delay(500);
16  }
```

- The 2nd argument of RC_drive, such as 255, 200 or 150, is the PWM value
- 255 is the maximum; 128 is about half of the maximum
- Lowering the value makes the wheels turn more and more slowly


© RumiCar Development Team

Exercise-2.2
Speed Control (Test Run)

- Remove the USB cable from the CM
- Attach the CM to the RumiCar body
- First, don't let it run right away; keep holding the RumiCar body up in your hand
- Turn the RumiCar's power on
- Is the wheel speed changing?

- Gently place the RumiCar on the desk

© RumiCar Development Team

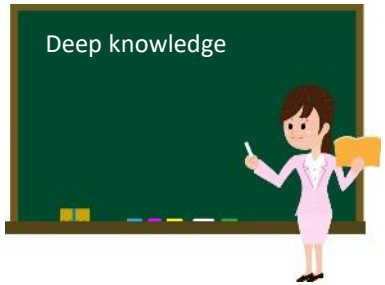


Deep knowledge

Low-Speed Control of DC Motors

Mr. Shigeki INADAMA

© RumiCar Development Team

RumiCar Motor Control

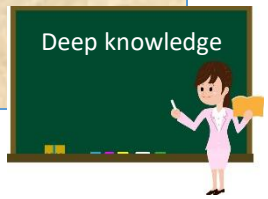

- The RumiCar controls two motors.
  - Steering

```
//操舵の関数
int RC_steer (int direc ){
```

```
RC_analogWrite(AIN1,255);
RC_analogWrite(AIN2,0);
```

On/off control
Full power on

- Angle can't be set
- Too much current

  - Drive

```
//走行の関数
int RC_drive(int direc, int ipwm){
```

```
RC_analogWrite(BIN1,0);
RC_analogWrite(BIN2,ipwm);
```

PWM control
Voltage is varied

Speed is unstable
Speed not linear in V

© RumiCar Development Team

RumiCar Motor Control




- Want low speed, but it won't move at 120/255 or below
  - Cause 1: the PWM frequency is too high
  - Cause 2: DC motors need high starting current

    $Z=j\omega L$ ... (1) $\omega=2\pi f$ ... (2)

    ≒ High apparent impedance: low PWM


    So the usable PWM range is narrow.



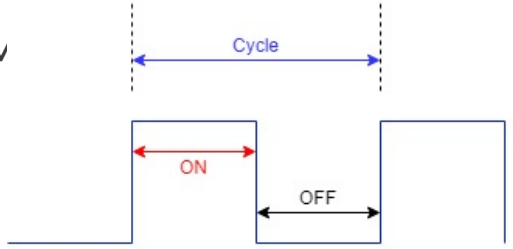


Duty = ON / Cycle
VV = Duty
VF = Cycle

  - Fix 1: change the PWM frequency
    - 976kHz → 244Hz
  - Fix 2: introduce a start boost
    - Large PWM for the first few tens of ms

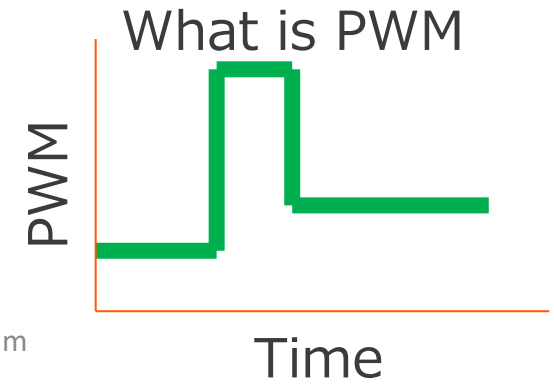

© RumiCar Development Team

Advanced Software Explained

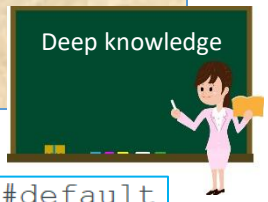

- A2-3 Driving at low speed

```
//  TCCR0B |= B00000011;                    // 64分周=  16M/  64/256=976Hz  #default
  TCCR0B |= B00000100;                     // 256分周= 16M/ 256/256=244Hz
```

```
//   始動後に低速へ
   RC_drive(FORWARD,200);      RC_delay(20);
   RC_drive(FORWARD,64);       RC_delay(500);
```

Lower PWM frequency
→ current flows at low values
Strong at start, then weaker
→ now moves down to ~40

- B2-3 Low-speed operation in the library

```
// Private Variable
#define    UP_SPEED       (200)          // StartUP speed
#define    UP_TIME        (3)            // 30[ms]
```

```
RC_drive(FORWARD,40);       RC_delay(1000);
RC_drive(BRAKE,255);        RC_delay(500);
RC_drive(REVERSE,40);       RC_delay(1000);
RC_drive(BRAKE,255);        RC_delay(500);
```

PWM driver on timer interrupt
Start boost automated
→ easy low-speed driving

- B2-5 Parallel parking challenge

See it in the video!

Note: advanced programs change the PWM freq.; use RC_delay()

© RumiCar Development Team

Drive Motor Control in the Library

- RC_drive in RumiCar library v0.2.0 and later
  - The drive motor is controlled with slow decay (switching between drive and brake), making it easier to start even at low PWM values
  - A short, strong "start kick" is added automatically only at the moment of starting from a stop or from the opposite direction
  - Timer0 (the PWM frequency) is not changed, so delay() remains accurate
  - RC_drive(BRAKE, …) stops reliably regardless of the 2nd argument

- Advanced (Exercise-A2.3, A3.1, B2.3 to B2.5)
  - These are standalone programs that do not use the library. Use RC_delay() as explained on the previous page

© RumiCar Development Team

Exercise-2.3

Forward and Reverse

© RumiCar Development Team

Exercise-2.3
Forward & Reverse (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Open "Exercise-2.3" from the Examples

© RumiCar Development Team

Exercise-2.3
Forward & Reverse (Program)

- Moves forward when the 1st argument of RC_drive is FORWARD
- Moves backward when the 1st argument is REVERSE

```
 8  void loop()
 9  {
10    RC_drive(FORWARD,255);
11    delay(500);
12    RC_drive(REVERSE,255);
13    delay(500);
14  }
```

- Go forward
- Hold for 0.5 seconds (keep going forward)
- Go backward
- Hold for 0.5 seconds (keep going backward)

Repeat

© RumiCar Development Team

Exercise-2.3
Forward & Reverse (Test Run)

- Compile and upload the program to the CM
- Remove the USB cable from the CM
- Attach the CM to the RumiCar body
- First, don't let it run right away; keep holding the RumiCar body up in your hand
- Turn the RumiCar's power on
- Are the wheels repeatedly going forward and backward?

- Gently place the RumiCar on the desk

© RumiCar Development Team

Exercise-2.3
Forward & Reverse (Challenge)

- (Advanced question) How can you repeat forward and reverse while slipping as little as possible?

© RumiCar Development Team

Exercise-2.4

Zig-Zag Driving

© RumiCar Development Team


Exercise-2.4
Zig-Zag Driving (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Open "Exercise-2.4" from the Examples

© RumiCar Development Team

Exercise-2.4
Zig-Zag Driving (Program)

```
 8  void loop()
 9  {
10    RC_drive(FORWARD,255);
11    RC_steer(RIGHT);
12    delay(500);
13    RC_steer(LEFT);
14    delay(500);
15  }
```

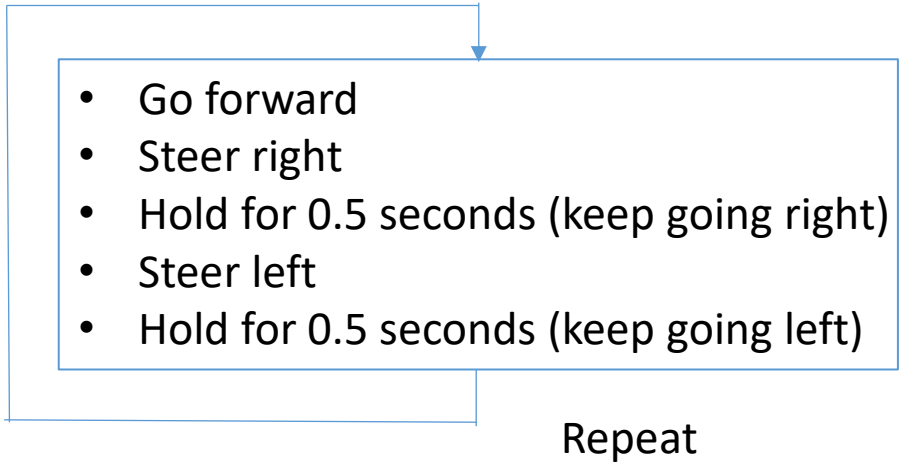

© RumiCar Development Team

Exercise-2.4
Zig-Zag Driving (Test Run)

- Compile and upload the program to the CM
- Remove the USB cable from the CM
- Attach the CM to the RumiCar body
- First, don't let it run right away; keep holding the RumiCar body up in your hand
- Turn the RumiCar's power on
- Is the RumiCar moving as you expected?

- Gently place the RumiCar on the desk

© RumiCar Development Team

Autonomous Driving Basics

Controlling the Car with Sensors

© RumiCar Development Team

Autonomous Driving Basics

- Autonomous driving means making a car drive automatically and optimally using information from sensors, information it already has, or a combination of them
- In this chapter, we will consider a simple example as the basics of autonomous driving

© RumiCar Development Team

Basics: Assumed Situation

- Assume the following simple autonomous driving situation
  - While driving forward, if an obstacle is detected ahead, stop safely without colliding with it
  - While stopped after detecting an obstacle, resume driving forward when the obstacle is gone

© RumiCar Development Team

Exercise-3

Let's Develop an Autonomous Driving Program!

© RumiCar Development Team

Exercise-3.1

Stopping the Car Safely

© RumiCar Development Team

Exercise-3.1
Stopping the Car Safely

- Specifically, assume the following simple conditions
  - While detecting obstacles with the RumiCar's central sensor (Sensor1), drive forward when no obstacle is detected
  - Stop, for example, 10cm before the obstacle, and resume driving forward when the obstacle is gone

Exercise-3.1
RumiCar Development Notes

- Distance measurement error
  - In high-speed mode, the VL53L0X setting in the sample programs, some accuracy is sacrificed to measure quickly. Therefore an error of 1-2cm occurs when ranging. Allow a margin when judging distance

- Handling failed measurements
  - A measurement of around 8190 means no laser reflection was obtained, i.e. no obstacle could be detected within the measurement range
  - (RC_read returns -3 in this case)

© RumiCar Development Team

Exercise-3.1
RumiCar Development Notes (Cont'd)

- Detecting the ground, etc.
  - The sensor's laser is emitted in a cone. Because the RumiCar is small, the sensors are mounted low, so the cone-shaped laser eventually hits the ground or floor before the measurement limit. This distance is about 30cm on the RumiCar model 32. For these reasons, set the obstacle detection distance to 30cm or less

- Sudden stops
  - Even if you command a stop or reverse while driving, the car cannot stop immediately because of inertia (momentum). If possible, think about good ways to slow down and stop

© RumiCar Development Team

Exercise-3.1
Programming Requirements

Item	Condition
Sensor used	Use only the central sensor (Sensor1)
Behavior	Stop when an obstacle is detected within the set distance
Set distance	10cm. Considering error, the actual range is 10 ± 2cm
Reliable distance	Within 30cm
Value when measurement fails	8190, but note it may contain errors (-3 with RC_read)

© RumiCar Development Team

Exercise-3.1
A Development Tip

- If the condition is simply "no obstacle", the RumiCar will drive on forever when there is no obstacle ahead. Then, if you carelessly put the RumiCar on a desk, it will jump off the desk. If you may test it on a desk, for safety it is a good idea to add a condition such as driving only when there is an obstacle within 30cm. This reduces the risk of accidentally damaging the RumiCar during development

© RumiCar Development Team


Exercise-3.1 https://youtu.be/95pc_4Wf14U
Safe Stop (Video)



© RumiCar Development Team

Exercise-3.1 Safe Stop (Video)

https://youtu.be/95pc_4Wf14U

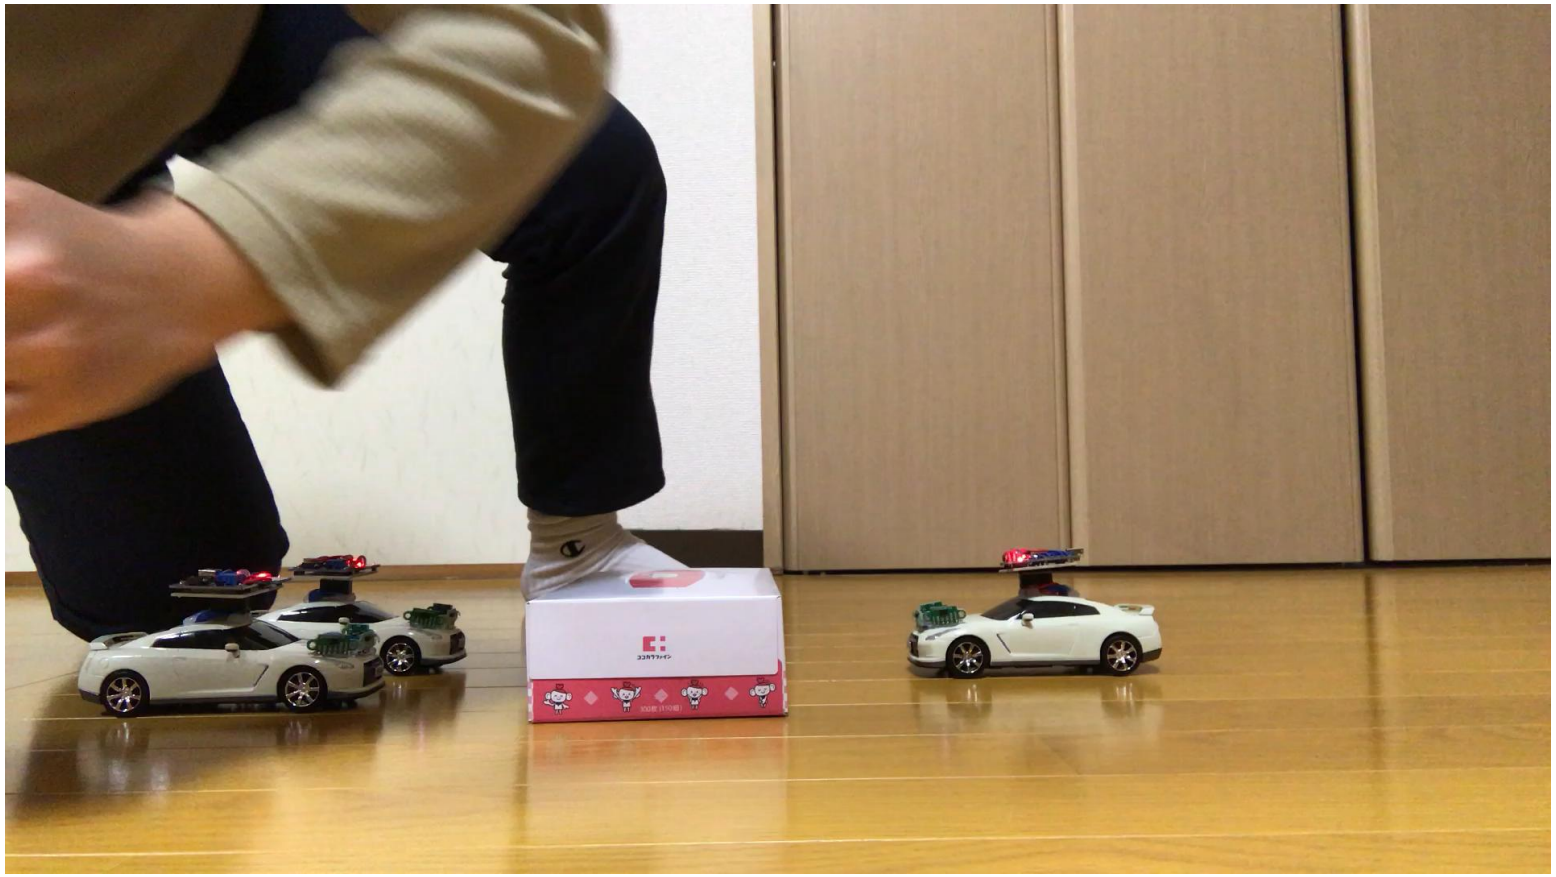

© RumiCar Development Team

Exercise-3.1
Safe Stop (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Open "Exercise-3.1" from the Examples

© RumiCar Development Team

Exercise-3.1
Safe Stop (Program)

```
 8  void loop()
 9  {
10
11    int ispeed = 255;
12    int idist1;
13    idist1=sensor1.readRangeSingleMillimeters();
14    Serial.println(idist1);
15    if ( idist1 < 300 ){
16      if ( idist1 > 120 ){
17        RC_drive(FORWARD,ispeed);
18      }else if (idist1 < 80){
19        RC_drive(REVERSE,ispeed);;
20      }else{
21        RC_drive(BRAKE,ispeed);
22      }
23    }else{
24      RC_drive(FREE,ispeed);
25    }
26  }
```

- Is there an obstacle within 30cm?
- (If not, do nothing)
- (If yes, do the following)
  - Obstacle farther than 12cm -> forward
  - Obstacle closer than 8cm -> reverse
  - 8cm to 12cm -> brake

Repeat

© RumiCar Development Team

Exercise-3.1
Safe Stop (Test Run)

- Compile and upload the program to the CM
- Remove the USB cable from the CM
- Attach the CM to the RumiCar body
- Turn the RumiCar's power on
- Move your hand toward and away from the central sensor. Is the RumiCar moving as you expected?

- Gently place the RumiCar on the desk

© RumiCar Development Team

Exercise-3.2

Driving in Urban Areas


© RumiCar Development Team

Exercise-3.2
Driving in Urban Areas

- Specifically, assume the following simple conditions
  - Drive on a road with walls on both sides, representing an urban area
  - Measure the distances to the walls on both sides and drive in the center of the road
  - Stop, for example, 10cm behind the car ahead, and resume driving forward when the car ahead is gone

© RumiCar Development Team

Exercise-3.2 https://youtu.be/jyq4Ph0mCDM
Urban Driving (Video)

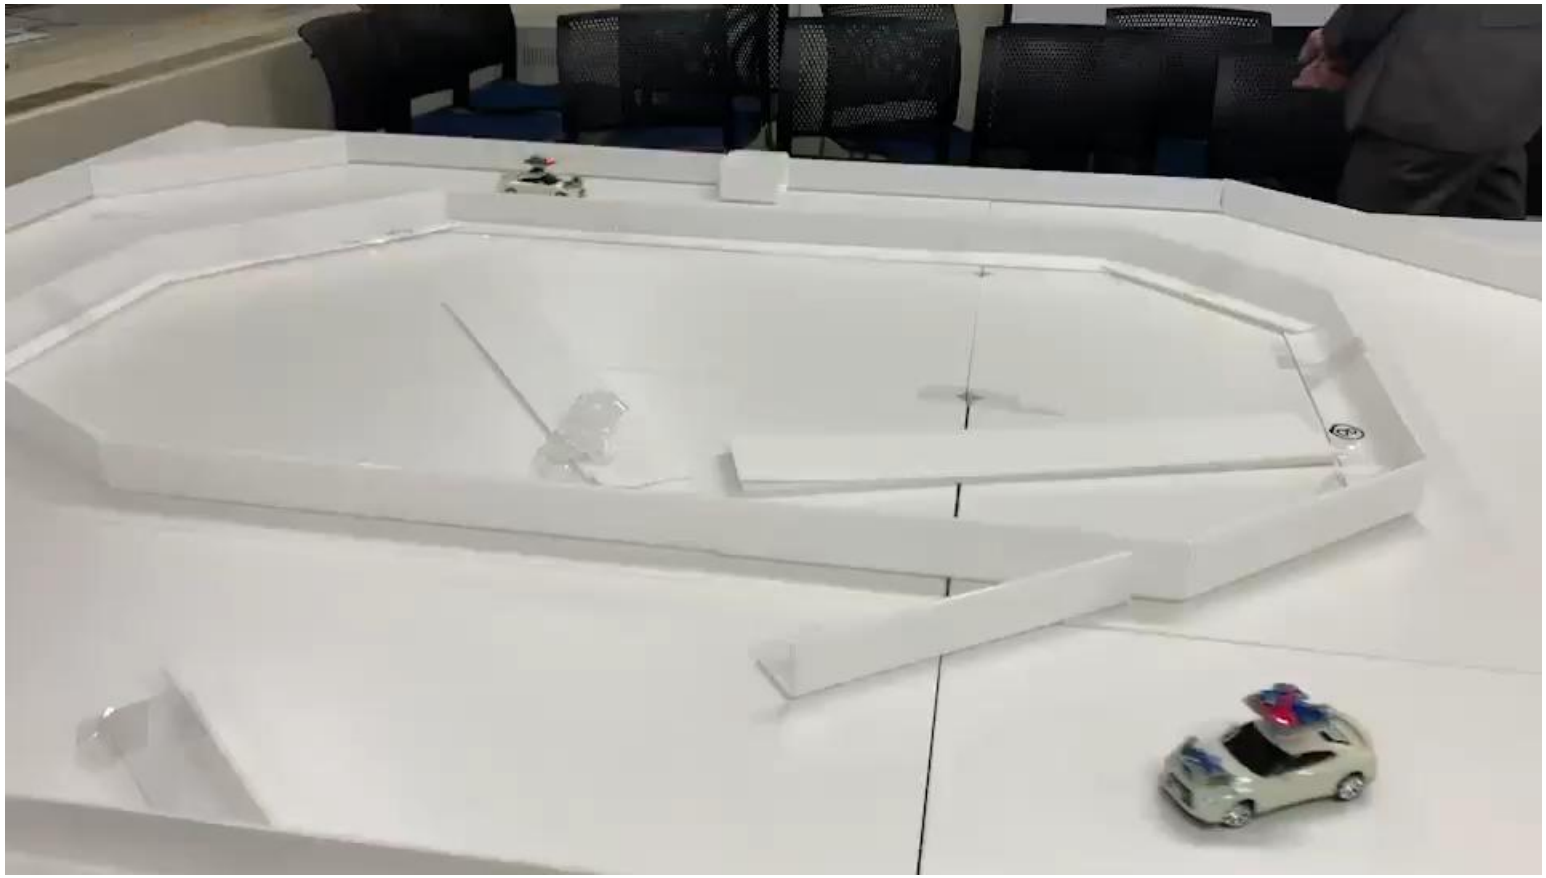

© RumiCar Development Team

Exercise-3.2
Urban Driving (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body
- Connect the USB cable to the CM
- Connect the USB cable to your computer
- Open "Exercise-3.2" from the Examples

© RumiCar Development Team

Exercise-3.2
Urban Driving (Program)

```
8  void loop()
9  {
10
11   int ibound =250;
12   int s0, s1, s2;
13   s0=sensor0.readRangeSingleMillimeters();
14   s1=sensor1.readRangeSingleMillimeters();
15   s2=sensor2.readRangeSingleMillimeters();
16
17
18   Serial.print("Sensor0:");
19   Serial.print(s0);
20   Serial.print("  Sensor1:");
21   Serial.print(s1);
22   Serial.print("  Sensor2:");
23   Serial.println(s2);
24
25   if(s1<100){
26     RC_drive(REVERSE,150);
27   }else if (s1<150){
28     RC_drive(FORWARD,150);
29   }else if (s1<250){
30     RC_drive(FORWARD,200);
31   }else{
32     RC_drive(FORWARD,255);
33   }
34   if(s0>s2){
35     RC_steer(LEFT);
36   }else{
37     RC_steer(RIGHT);
38   }
39 }
```

- Try other speed values (150, 200, 255)!
- Try other distance values (100, 150, 250)!
- What will happen??

- Obstacle closer than 10cm -> slowly reverse
- Obstacle closer than 15cm -> slowly forward
- Obstacle closer than 25cm -> a bit faster forward
- Otherwise -> full speed forward

- Compare the distances to the left and right walls
- Move away from the closer wall (steer toward the farther wall)

© RumiCar Development Team

Exercise-3.2
Urban Driving (Test Run)

- Compile and upload the program to the CM
- Remove the USB cable from the CM
- Attach the CM to the RumiCar body
- Turn the RumiCar's power on

- Gently place the RumiCar on the course

© RumiCar Development Team

Exercise-4

Improve Your Programs Together with AI!

© RumiCar Development Team

AI Pair Programming

- Describe what you want in plain English (typed or spoken) and the AI rewrites the program
  - People decide the plan, the AI writes the code, people check it
- In this chapter we improve earlier Exercises together with an AI
  - Exercise-4.1 Smooth forward & reverse (builds on 2.3)
  - Exercise-4.2 Getting unstuck at a corner (builds on 3.2)
- Tool: Google “Antigravity CLI” (command agy; the free plan is enough)
  - Age 13+ (varies by country): your own Google account. Younger: with a parent
- You learn how to ask and how to check. Never trust the AI’s answer blindly

© RumiCar Development Team

Homework Checklist

What to check	How
RumiCar library is 0.5.0 or later	Search for RumiCar in “Manage Libraries…” and look at the version. Older? Press “Update”
Examples include Exercise-4.1 … 4.2-Answer	“File” → “Examples” → “RumiCar”
Antigravity CLI is installed	Type agy --version in a terminal and a version number appears
Signed in with a Google account	Start agy and it answers a question (personal Gmail; work/school accounts are not accepted)
Voice input works	In agy type /voice, say a few words, press Enter → text appears (if not, see “Ask by Voice”)
Save your quota for class week	The free plan has a weekly limit. Don’t use it all up the week before

Not ready? Raise your hand. The instructor will do the AI step on their PC and hand you the program

© RumiCar Development Team

Workflow for 4.1 and 4.2

Step	What	How
1	Open the example	“File” → “Examples” → “RumiCar” → “Exercise-4.x”
2	Save As	“File” → “Save As…” → keep the name and save
3	Open the folder	“Sketch” → “Show Sketch Folder” → right-click → “Open in Terminal” (Mac: type cd in Terminal and drag the folder in)
4	Start agy	Type agy in the terminal. First time: answer Yes to “trust this folder”
5	Ask by voice or text	/voice and speak (or type) → check the text, Enter. e.g. “Make the acceleration and braking smoother”
6	Read the diff, approve	Ctrl+R shows the changes → press Y once you understand them
7	Upload from the IDE	The IDE window updates by itself → “Upload” as usual
8	Test holding the car up	Power on while holding the car in the air → watch the wheels, then put it on the floor

© RumiCar Development Team

Ask by Voice (/voice)

Step	What to do
1	In agy's input box type /voice and press Enter. Wait until the status shows "Recording"
2	Speak your request into the microphone (e.g. "Make the acceleration and braking smoother")
3	Press Enter to stop. What you said appears as text in the input box (not sent yet)
4	Read the text and fix mistakes with the keyboard (Esc = cancel, Ctrl+Z = undo)
5	Press Enter to send it to the AI

- Dictated text is never sent automatically. Read it before sending (don't send a misheard request)
- Function names and numbers (RC_drive, 255 …) are easy to mishear → fix them with the keyboard
- The mic also picks up people nearby. Speak close to it (use a headset if you have one). One recording is up to 3 min 30 s
- F5 also starts dictation (if F5 does nothing, use /voice)
- Won't start? Allow the microphone (Windows: Settings › Privacy & security › Microphone › "Let desktop apps access your microphone"; Mac: System Settings › Privacy & Security › Microphone › your terminal) → still not working? /logout and sign in again

© RumiCar Development Team

Rules for Using AI

- Never approve a change you don't understand (ask: "make it simpler", "explain it")
- Only the .ino may change. The rules for the AI are in the next tab, AGENTS.md (don't edit it)
- You do the uploading. The AI never uploads to the car
- First test with the car held up in your hands
- The original example is untouched: if you break yours, just open it again
- By default your chats may be used to improve the AI. Don't type personal information
- Not working? Rephrase the request → still stuck? Call the instructor

© RumiCar Development Team

What Is AGENTS.md?

- A file included in the Exercise-4.1 and 4.2 examples
- The AI reads it automatically from the working folder
- In the IDE it appears as a tab next to the .ino (not compiled)
- “Save As” copies it along with the sketch
- Written in Japanese with an English summary at the top; the AI reads either
- You don’t need to change it

What AGENTS.md says
Use only the RumiCar functions (RC_setup / RC_steer / RC_drive / RC_read)
Edit only the .ino. Don’t create new files
Reversing needs a time or count limit. No endless loops
PWM 0–255, delay a few seconds at most
After editing, compile-check with arduino-cli (setting depends on the port)
Never upload to the car. Reply briefly, in the user’s language

© RumiCar Development Team

Exercise-4.1
Smooth Forward & Reverse (Prep)

- The Challenge from Exercise-2.3, this time solved together with an AI
- Turn the RumiCar's power off
- Remove the CM from the RumiCar body and connect it to your computer with the USB cable
- Open "Exercise-4.1" from the Examples (same code as Exercise-2.3)
- "Save As" and save it (in the read-only example, the AI's changes won't show in the IDE)
- "Sketch" → "Show Sketch Folder" → open in Terminal → agy

© RumiCar Development Team

Exercise-4.1
How You Ask Matters

Request 1
"Stop it from slipping"
→ The AI decides what to change. You can't explain the result

Request 2 (with a plan)
"Make forward and reverse speed up gradually instead of jumping to full speed, and slow down gradually before stopping. Brake to a stop before changing direction. Use only RC_drive and delay."
→ Says what, how much, and what must not change

- Try Request 1 first and run it, then ask again with Request 2 and compare
- **The 3 parts of a good request:** what (acceleration / braking), how much (e.g. over 1 second), what stays the same (only RC_drive)
- Long answer? "Explain in 3 lines." Hard words? "Explain it for a 10-year-old"

© RumiCar Development Team

Exercise-4.1
Read the Diff Before You Approve

What to check	Where to look
Speed values are within 0–255	The 2nd number in RC_drive(…, speed)
Waits are not too long	The number in delay(…). Thousands (= seconds)? Ask why
It stops before changing direction	Is there a BRAKE between FORWARD and REVERSE?
setup() and loop() are still there	The overall shape. RC_setup() must not disappear
No unknown functions were added	Anything other than RumiCar functions (RC_…)? Ask about it

Ctrl+R shows the diff (changed lines). Happy? Press Y. Not happy? Press N and ask “please change …”

© RumiCar Development Team

Exercise-4.1
Test Run and the Next Request

- Check that the AI's change shows in the IDE, then compile and upload to the CM
- Remove the USB cable from the CM and attach the CM to the RumiCar body
- Keep holding the RumiCar body up in your hand and turn the power on
- Do the wheels speed up gradually, then slow down gradually?
- Gently place it on the floor. Does it slip less?
- Want it even better? Ask agy again
  - "Slow down more gently too", "Run at full speed for longer"

© RumiCar Development Team


Exercise-4.1-Answer
Sample Answer (in the Examples)

```
21  void rampDrive(int direc)
22  {
23    for (int pwm = MIN_PWM; pwm <= MAX_PWM; pwm += STEP_PWM) {    // speed up
24      RC_drive(direc, pwm);
25      delay(STEP_MS);
26    }
27    RC_drive(direc, MAX_PWM);
28    delay(HOLD_MS);
29    for (int pwm = MAX_PWM; pwm >= MIN_PWM; pwm -= STEP_PWM) {    // slow down
30      RC_drive(direc, pwm);
31      delay(STEP_MS);
32    }
33    RC_drive(BRAKE, 0);    // stop before changing direction
34    delay(STOP_MS);
35  }
```

- loop() is just two lines: rampDrive(FORWARD); rampDrive(REVERSE);. The speed changes by STEP_PWM (15) every STEP_MS (40 ms), runs at full speed for HOLD_MS, slows down before stopping and BRAKEs before changing direction. Below MIN_PWM (70) the motor won't turn
- Compare it with the AI's answer. Different is fine — both can be right (comments translated on this slide)

© RumiCar Development Team

Exercise-4.2
Getting Unstuck at a Corner

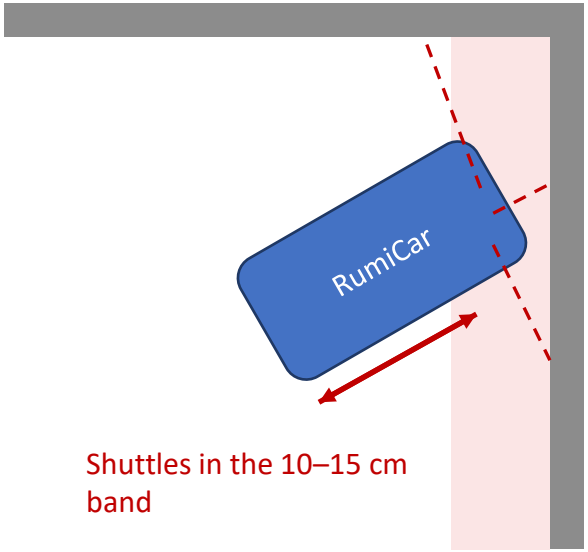

- When the Exercise-3.2 car hits the outer wall of a curve at an angle…
- Front < 10 cm → reverse
- Over 10 cm → forward again → hits again
- It just jitters back and forth and never gets out
- We call this being “stuck”
- **Today’s task: a car that gets itself unstuck**

© RumiCar Development Team

Exercise-4.2
Why Does It Get Stuck?

- 3.2 decides only from the front distance and which side is farther
  - Front < 10 cm → reverse, < 15 cm → slow forward, otherwise → fast forward
  - The steering stays turned toward the “farther” side
- After hitting the wall at an angle, reversing barely changes the heading
  - It hits the same spot at the same angle → shuttles in the 10–15 cm band
  - Every direction change adds a start kick, so it looks like “jittering”
- **What’s missing:** ① a way to notice it is stuck ② a move that changes the heading

© RumiCar Development Team

Think ①
How Can the Car Tell It Is Stuck?

What you can use (standard RumiCar body)

- The three ToF distance sensors (front, left, right)
- What you are commanding the motor right now (forward / reverse, and when you last switched)
- A clock (millis(): time since power-on)

What you can't use

- Wheel rotation counts (no encoder), tilt or acceleration (no IMU), a camera

With only these, how would you decide the car is stuck? Discuss with your neighbor for 2 minutes

Hint: while stuck, what do the sensor values and your own commands look like?

© RumiCar Development Team

Three Ways to Tell It Is Stuck


Method	Idea	Strength	Weakness
① Count direction flips	Forward ⇄ reverse 4 or more times within 3 s	Matches the symptom itself. Two variables	Misses wheel-spin against a wall (no flips)
② Distance doesn't change	Commanding forward / reverse, yet the front distance changes < 20 mm in 1 s, twice in a row	Catches the wheel-spin case that ① misses	Takes about 3 s. Not judged when the front is far
③ Three sides close	Front, left and right all under 12 cm	Instant. One if statement	False alarms in narrow spots. Threshold < half the course width

Any one of them means "stuck". The numbers are starting points: tune them on your own course. No re-detection for 2 s after an escape

© RumiCar Development Team


Think ②
How to Get Out? Back Up and Turn

Reversing: steer toward the near wall

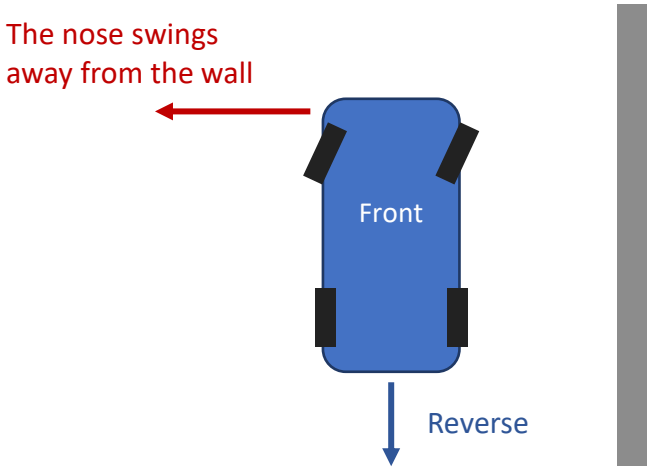

Steer right and back up → the nose swings left (away from the wall)

Going forward: steer toward the far side

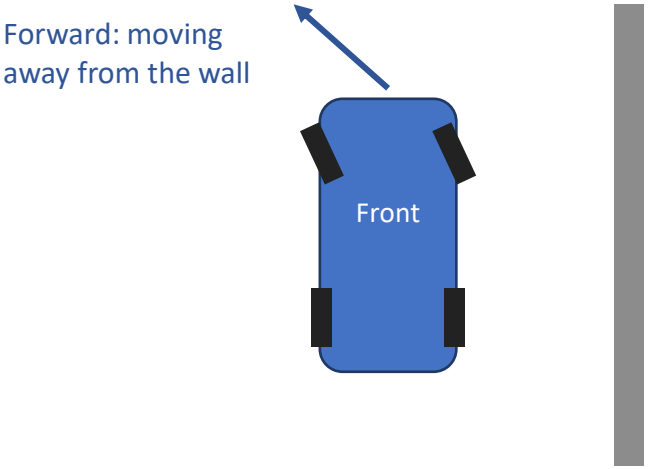


Steer left and drive → the car moves away from the wall

- 3.2 couldn't escape because it steered toward the far side while reversing, too
- Rule: reverse toward the near wall, go forward toward the far side. That is the back-and-turn move (just like driving a real car)

© RumiCar Development Team

Escape Sequence
States and Numbers

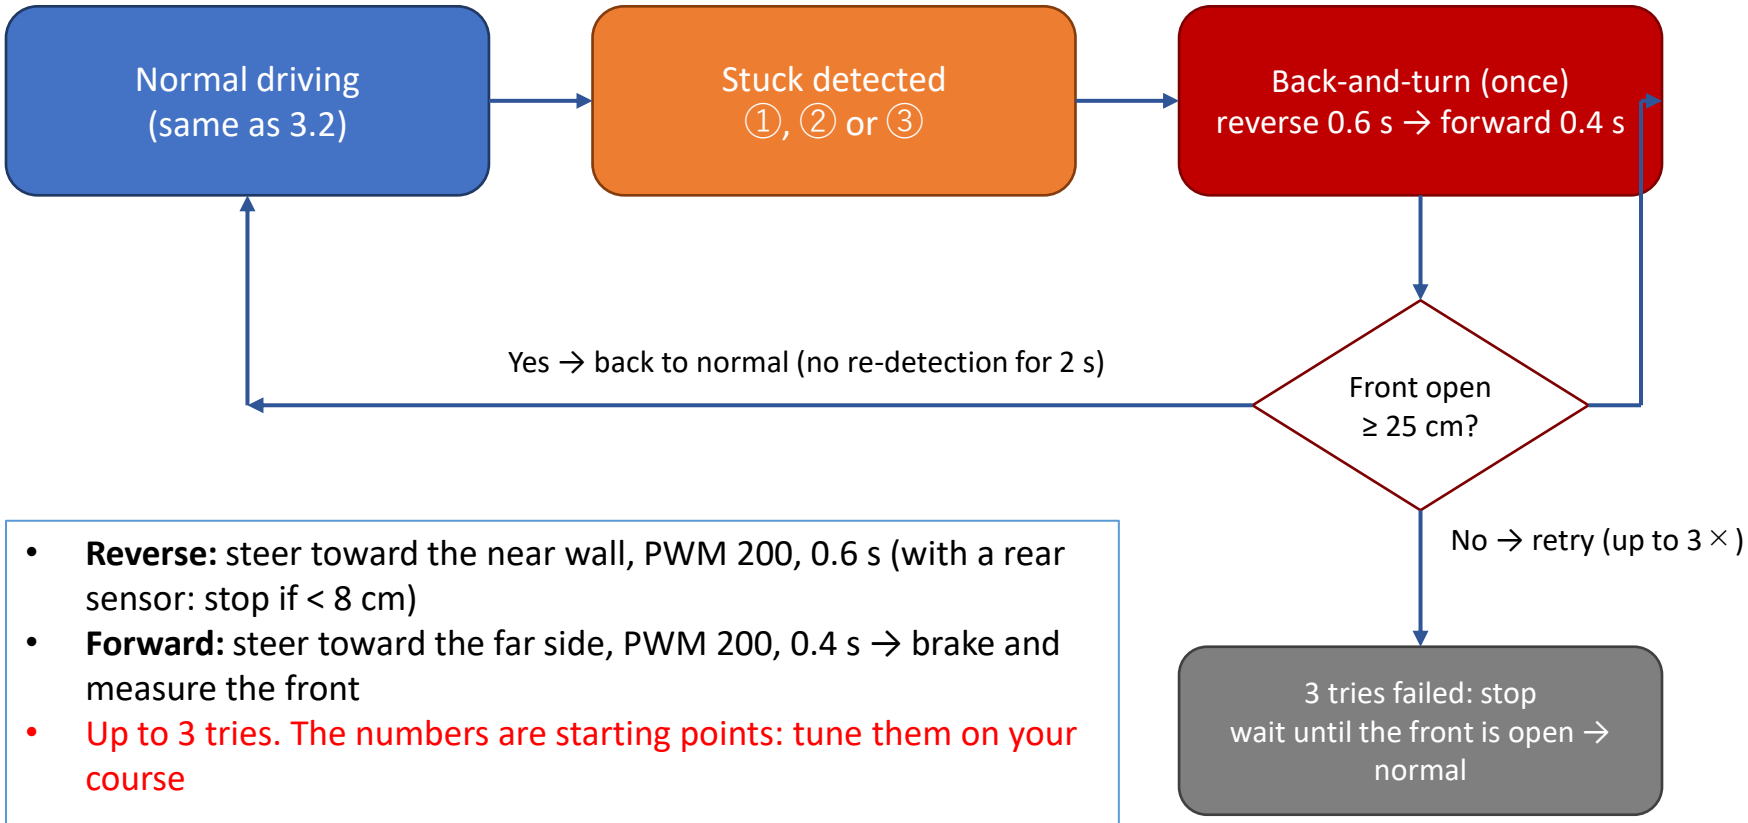

- **Reverse:** steer toward the near wall, PWM 200, 0.6 s (with a rear sensor: stop if < 8 cm)
- **Forward:** steer toward the far side, PWM 200, 0.4 s → brake and measure the front
- Up to 3 tries. The numbers are starting points: tune them on your course

© RumiCar Development Team

Exercise-4.2
Getting Unstuck at a Corner (Prep)

- Turn the RumiCar's power off
- Remove the CM from the RumiCar body and connect it to your computer with the USB cable
- Open "Exercise-4.2" from the Examples (same code as Exercise-3.2)
- "Save As" and save it
- "Sketch" → "Show Sketch Folder" → open in Terminal → agy
- Write down the plan you made in Think ① and ② (you will use it on the next page)

© RumiCar Development Team

Exercise-4.2
Asking: Vague vs. With a Plan

Vague

"Don't get stuck at corners"

→ It writes something. But you can't explain why it works

- With a plan it becomes your own program
- No need to ask for ①–③ at once: start with ①, run it, then add ② and ③
- Long requests are easier to write in Notepad and paste

With a plan (tell it the plan you made)

"Add a back-and-turn escape to Exercise-4.2. The car is stuck when any of these is true: (a) forward / reverse flipped 4 times within 3 seconds, (b) while driving forward the front distance changed less than 20 mm in 1 second, twice in a row, (c) front, left and right are all under 12 cm. To escape: steer toward the near wall and reverse 0.6 s, steer the other way and go forward 0.4 s, repeat up to 3 times until the front is 25 cm or more, otherwise stop. Use only RumiCar.h functions and don't change anything except the .ino."

© RumiCar Development Team

Exercise-4.2
What to Check in the Diff

What to check	Why it matters
No endless loops. Reversing and back-and-turn have a count / time limit	Without a limit it keeps driving backward while stuck
There is a condition to return to normal driving (the 3.2 part)	If it never returns, it can’t continue along the course
Speeds within 0–255, times within a few seconds	Too big is dangerous / too small and the motor won’t turn
It watches behind while reversing (bodies with a rear sensor)	So it doesn’t hit a wall or a person behind it
The 3.2 driving itself is not broken	“Drives properly” comes before “never gets stuck”
Invalid readings (-1 / -3 / 8190) are handled	Mistaking “far” for “near” makes it reverse forever

© RumiCar Development Team

Exercise-4.2
Getting Unstuck (Test Run)

- Compile and upload to the CM, then attach the CM to the RumiCar body
- Keep holding the car up and power on. Cover the front sensor with your hand so it flips direction 4 times → does the escape start?
- Put it on the course and deliberately drive it into the outer wall of a curve at an angle
  - Got out? Success. If not, ask for one change at a time:
- "Detect sooner (3 flips)", "Reverse for 0.8 s", "Up to 5 tries"
- Check STUCK / ESCAPED in the Serial Monitor

© RumiCar Development Team

Exercise-4.2-Answer
Skeleton of the Sample Answer

```
198  void loop()
199  {
200    int s0 = RC_read(LEFT);
201    int s1 = RC_read(CENTER);
202    int s2 = RC_read(RIGHT);
210    bool canJudge = (millis() >= cooldownEnd);   // no detection right after an escape
211    if (canJudge && (stuckByFlip()
212                     || stuckByNoProgress(s1)
213                     || stuckByThreeSides(s0, s1, s2))) {
215      escape(s0, s2);   // back-and-turn (up to ESCAPE_TRIES times)
216      return;
217    }
219    driveLikeExercise32(s0, s1, s2);   // same driving as 3.2
220  }
```

- stuckByFlip() = ① flip count, stuckByNoProgress() = ② distance not changing, stuckByThreeSides() = ③ three sides close. escape() = steer toward the near wall and reverse → steer the other way and go forward, up to 3 times
- Splitting the decisions into functions lets you try them one at a time. The numbers are const at the top. Full code: example Exercise-4.2-Answer (Serial.print lines omitted; comments translated here)


© RumiCar Development Team

Exercise-4 Summary
Who Does What: People and AI

Who	What
People	Decide what to do. Think up the plan (how to detect? how to escape?)
AI	Turn the plan into code. Check that it compiles
People	Read the diff. Ask when unsure. Test on the real car. Tune the numbers

- Don’t swallow the AI’s suggestion whole. You pass when you can explain in your own words why it works
- Asking well: what / how much / what stays the same. Decide the numbers on your own car and course
- You can continue at home. Start from the examples that include AGENTS.md

© RumiCar Development Team

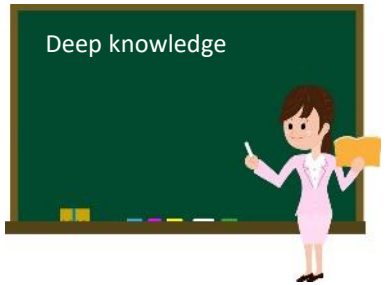


Deep knowledge

Raspberry Pi Sample Programs

Ms. Shoko ISHIGAKI

© RumiCar Development Team


Raspberry Pi Sample Programs

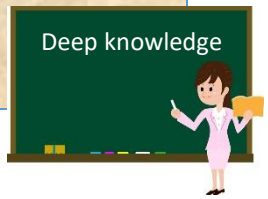

- The pigpio library is used for all GPIO control, including PWM control. Start pigpiod before running the program.


  Start command: sudo pigpiod

- The ranging modules use I2C, so enable I2C beforehand.

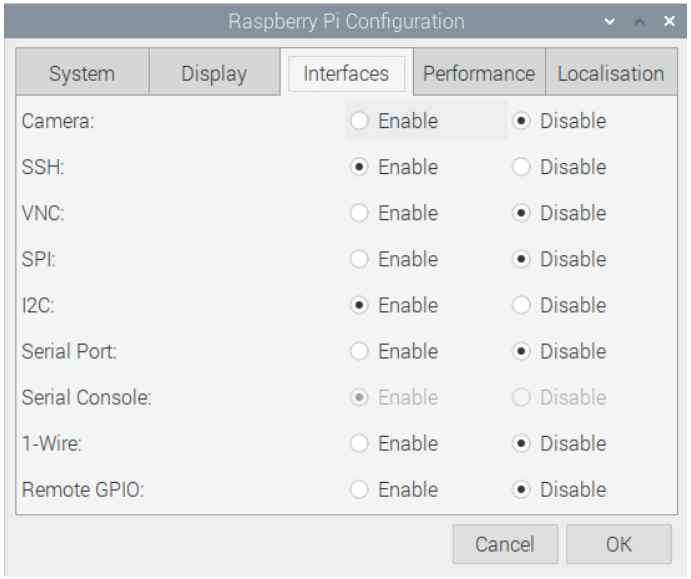

© RumiCar Development Team

Raspberry Pi Sample Programs

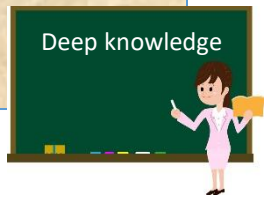


- Software PWM and hardware PWM
  - The Raspberry Pi has two independently controllable hardware PWMs

    Pins 12/32 and pins 33/35 can be used as hardware PWM
  - Software PWM can be used on all GPIO pins
  - Hardware PWM is used for the drive motor, which needs precise control such as sudden stops

© RumiCar Development Team

Raspberry Pi Sample Programs

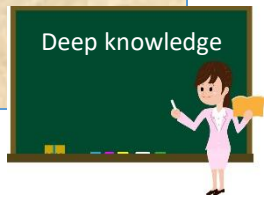

How to install the library needed to run the VL53L0X program

- Use the library published on GitHub

1. git clone https://github.com/johnbryanmoore/VL53L0X_rasp_python
2. Run make in the cloned VL53L0X_rasp_python folder

Notes

- The samples assume the repository is cloned to /home/pi/Documents. Change the shared library path in VL53L0X.py if needed.
- If the VL53L0X Vcc is not the RasPi's 3.3V output, connect the RasPi GND to the VL53L0X GND

© RumiCar Development Team


Azure Iot Hub



- Two-way communication between IoT devices (Raspberry Pi, etc.) and Azure
- Enables visualization of driving data and remote control
- Integration with other Azure services such as Azure Machine Learning

© RumiCar Development Team

Device-to-cloud messages

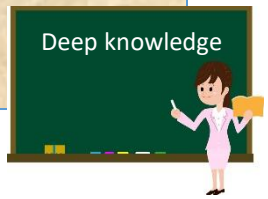


- Sending and monitoring sensor data
- Can send data up to 256KB


```
ShokonoMacBook-Pro:~ $ az iot hub monitor-events --hub-name raspi-ishigaki --device-id raspi
Starting event monitor, filtering on device: raspi, use ctrl-c to stop...
{
    "event": {
        "origin": "raspi",
        "interface": "",
        "payload": "{\"distance\": 424, \"control\": FREE}"
    }
}
{
    "event": {
        "origin": "raspi",
        "interface": "",
        "payload": "{\"distance\": 422, \"control\": FREE}"
    }
}
{
    "event": {
        "origin": "raspi",
        "interface": "",
        "payload": "{\"distance\": 422, \"control\": FREE}"
    }
}
```


© RumiCar Development Team

desired properties

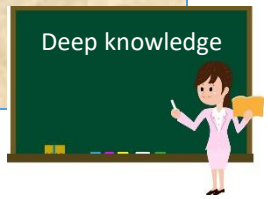


- Cloud-to-device notifications
- Control commands such as start and stop

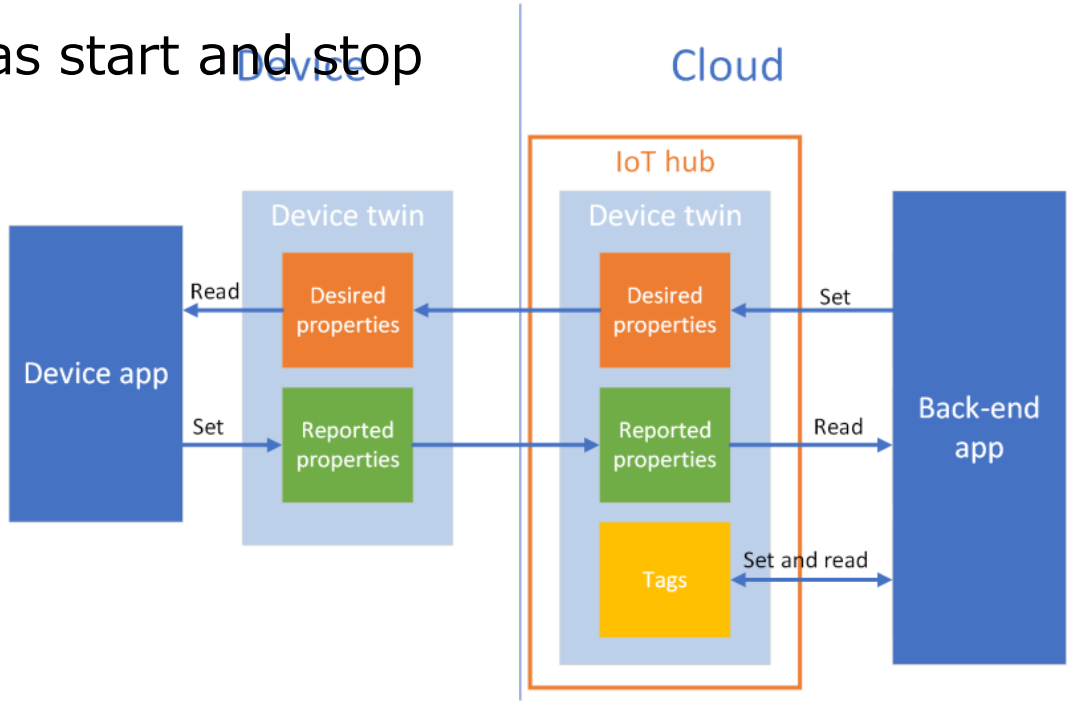


https://docs.microsoft.com/en-us/azure/iot-hub/tutorial-device-twins

© RumiCar Development Team


Operation Video (Video)

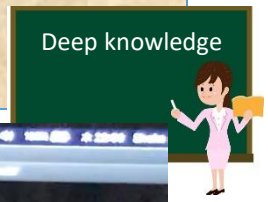

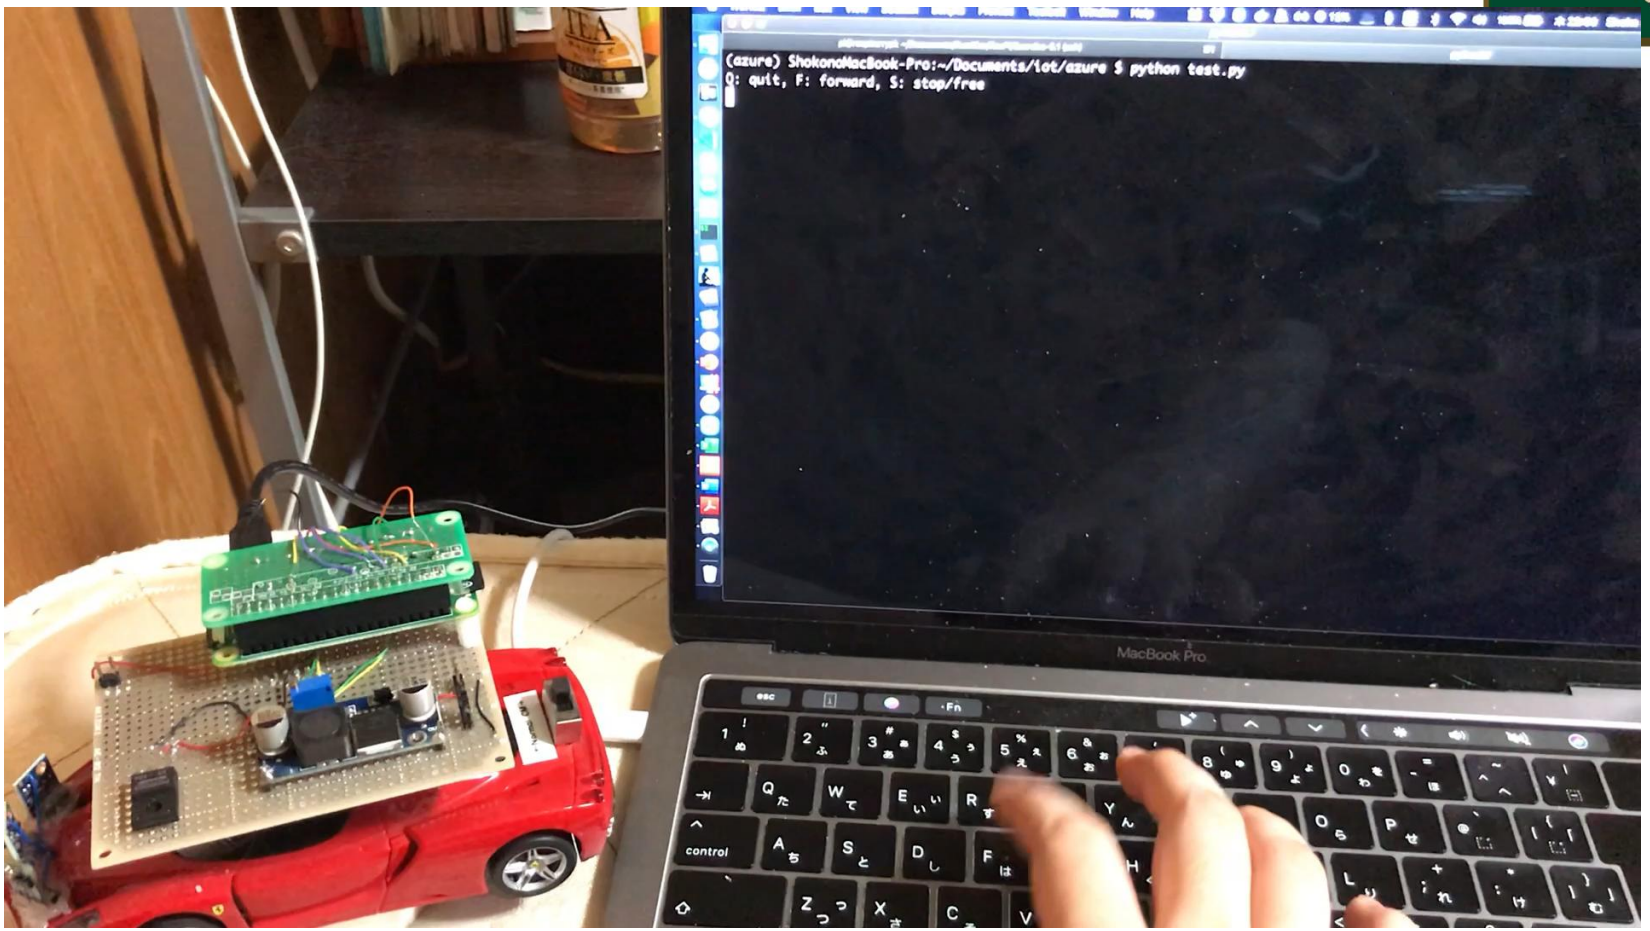

© RumiCar Development Team

References

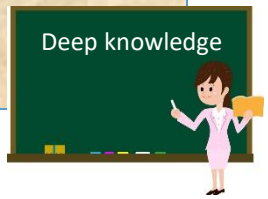

- Azure IoT Hub tutorials
  - https://docs.microsoft.com/ja-jp/azure/iot-hub/quickstart-send-telemetry-cli
- Source code (Raspberry Pi)
  - https://github.com/RumiCar-group/RumiCar/tree/master/RasPi/misc
  - Sending to the cloud: azure_d2c.py
  - Desired property: azure_property.py (Raspberry Pi side), azure_service.py (controlling side, e.g. PC)

*You need to create an Azure IoT Hub.

© RumiCar Development Team

Appendix

© RumiCar Development Team

I2C Addresses

- RumiCar uses I2C communication. These are the addresses currently in use

Sensor			Address	How to set
VL53L0X (Laser ranging module)	Sensor0	Left	0x14	Changed by software
	Sensor1	Center	0x15	
	Sensor2	Right	0x16	
	Sensor3	Rear	0x17	Mounted on the rear of the CM (optional). Changed from 0x29 at startup
BMX055 (9-axis sensor)	Accelerometer		0x19	Jumper setting on the board
	Gyro sensor		0x69	
	Magnetic sensor		0x13	

© RumiCar Development Team

Contributors by Area

Name	Details
Hideaki KATAOKA	• RumiCar car body building • CM development
Yutaka OHE	• Sensor PCB design and development • Arduino Nano CM PCB design and development
Shoko ISHIGAKI	• Raspberry Pi CM development • Python program development • Microsoft Azure IoT Hub integration
Shigeki INADAMA	• Motor low-speed control • ESP32 PCB design and development • M5StickC PCB design and development • Sensor PCB design and development
Hideki TAKASE	• Library development
Yoshiteru CHIBA	• Arduino official library registration and maintenance

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
1	Aug 5-6, 2017	MakerFaireTokyo2017	Tokyo Big Sight	
2	May 18-20, 2018	MakerFaireBayArea2018	San Mateo, USA	
3	Aug 4-5, 2018	MakerfaireTokyo2018	Tokyo Big Sight	
4	Mar 15, 2019	Hello Tomorrow Global Challenge	Paris, France	Investor event
5	Aug 3-4, 2019	MakerFiareTokyo2019	Tokyo Big Sight	
6	Nov 30, 2019	IoT ALGYAN Tsukuruyo 2!	Information Science College	
7	Apr 18, 2020	IoT ALGYAN RumiCar Hands-On (live stream)	Online	
8	Apr 25, 2020	IoT ALGYAN RumiCar Hands-On (live stream)	Online	
9	Jun 6, 2020	IoT ALGYAN RumiCar Hands-On	Online	Online with loaner cars

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
10	Jun 20, 2020	[In person] My RumiCar Test Run! Run your machine with RumiCar Development Team members!	Asao Ward, Kawasaki	
11	Aug 10, 2020	RumiCar Hands-On with Real Cars & Running Meet	Yokohama Port Opening Memorial Hall	
12	Aug 30, 2020	RumiCar Running Meet	Asao Culture Center	
13	Nov 13, 2020	- Learn Self-Driving Car Control Basics with RumiCar - Session 1: parts check, building hardware	Zoom	Organizer: Hiroshima Info. Industry Assn. Tech. Committee Sponsor: RumiCar Development Team
14	Dec 4, 2020	- Learn Self-Driving Car Control Basics with RumiCar - Session 2: hardware (cont'd), basic software tests		

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
15	Jan 10, 2021	15th Event: RumiCar Hands-On & Running Meet (300-seat venue!)	Asao, Kawasaki	
16	Sep 26, 2021	RumiCar Conference	Online	
17	Nov 28, 2021	RumiCar Running Meet (Cat Day)	Asao Culture Center	
18	Dec 12, 2021	RumiCar Conference 12/12	Online	YouTube Live
19	Apr 29, 2022	Makers' Flea Market	Giken Base	
20	Aug 7, 2022	17th Event: RumiCar Test Run	Osaki No.2 Community Hall (Shinagawa)	Event chair: Mr. Inoue
21	Sep 3-4, 2022	Maker Faire Tokyo2022	Tokyo Big Sight	
22	Oct 23-27, 2022	1st RumiCar Gallery (solo show)	Sumida Park Riverside Gallery	

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
23	Nov 3, 5, 6, 12 & 13, 2022	2nd RumiCar Gallery (solo show)	Sumida Park Riverside Gallery	
24	Dec 31, 2022	Comic Market 101	Tokyo Big Sight	
25	Feb 1-3, 2023	Technical Show Yokohama 2023	PACIFICO Yokohama	Exhibited at the R2 booth
26	Mar 25, 2023	Self-Driving Algorithm Platform "RumiCar" Lecture & Hands-On	Sony City Osaki BRIDGE TERMINAL	
27	Jul 19-21, 2023	Robot Innovation Week 2023	Nagoya Congress Center	Exhibited at the R2 booth
28	Oct 14-15, 2023	Maker Faire Tokyo 2023	Tokyo Big Sight	

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
29	Oct 26-27, 2023	Tsubame-Sanjo Monozukuri Messe 2023	Tsubame-Sanjo Regional Industries Promotion Center	Taiguruma ver. by RumiCar Niigata
30	Nov 3-4, 2023	HANAZONO EXPO 2023	Hanazono Central Park (Higashiosaka)	Exhibited at the R2 booth
31	Nov 26, 2023	Self-Driving Mini Car Battle 2023, Elementary School Division	Sky Hall Toyota	RumiCar bodies used (Toyota Eng. Society)
32	Nov 29 - Dec 2, 2023	International Robot Exhibition 2023	Tokyo Big Sight	Exhibited in the R2 area
33	Dec 9-10, 2023	Aichi Robo Fes 2023	Aichi Sky Expo	Toyota Eng. Society workshop

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
34	Dec 16, 2023	BLACK TECH SATURDAYS	Detroit, USA	Exhibited by Detroit Autonomous Vehicle Group
35	Jan 21, 2024	2nd Tobitate Festival	MEXT East Building	Exhibition and on-stage talk
36	Feb 3-4, 2024	YOXO FESTIVAL 2024	Minato Mirai, Yokohama	Exhibition and workshop; reached the pitch finals

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
37	Feb 24, 2024	[Toyota Eng. Society presents] Let's Build a Self-Driving Mini Car!	SMBC Park Sakae (Nagoya)	Toyota Eng. Society workshop
38	Mar 2-3, 2024	Kariya Micro Maker Faire 2024	Kariya City Industrial Promotion Center	Exhibited at the SPRESENSE booth
39	May 20, 2024	Driving the Future (AutoSens USA 2024)	Detroit, USA	Used in a hands-on for elementary students
40	Jul 6-7, 2024	Tech Seeker 2024 Board Computer Programming Class	ATC (Osaka)	Workshop (SPRESENSE ver.)

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
41	Jul 2024	Let's Move a Car with "Self-Driving" Using Sensors! (class)	Shibaura Inst. of Technology Jr. & Sr. High School	Class (SPRESENSE ver.)
42	Jul 24, 2024	Same as above: final race	Sony Headquarters	Time attack
43	Sep 21-22, 2024	Maker Faire Tokyo 2024	Tokyo Big Sight	
44	Sep 23, 2024	RoboRAVE Kobe 2024	Kobe International House	
45	Oct 6, 2024	Yuru Mechatro Exhibition 2	Tokyo Technical College	Taiguruma ver. by RumiCar Niigata
46	Oct 18-20, 2024	Maker Faire Bay Area 2024	Vallejo, USA	Received a Blue Ribbon

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
47	Oct 26-27, 2024	Tsukuroka! 3	Osaka Municipal Central Library	
48	Oct 27, 2024	Self-Driving Mini Car Battle 2024, Elementary School Division	Sky Hall Toyota	RumiCar bodies used (Toyota Eng. Society)
49	Dec 14-15, 2024	Aichi Robo Fes 2024	Aichi Sky Expo	Toyota Eng. Society workshop
50	FY2024	"Community Circle Activities"	Makihigashi Junior High School (Niigata)	
51	Feb 8, 2025	[Toyota Eng. Society presents] Let's Build a Self-Driving Mini Car!	SMBC Park Sakae (Nagoya)	Toyota Eng. Society workshop

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
52	Mar 8, 2025	Raspberry Pi 13th Birthday Party (Raspberry JAM Tokyo 2025)	Sony City Osaki BRIDGE TERMINAL	Lightning talk
53	Mar 16, 2025	8th WE Love Toyota Festa	Sky Hall Toyota	Self-Driving Mini Car Club booth
54	Jul 12, 2025	Programming class for elementary and junior high students	FUN+TECH LABO (Sagamihara)	Workshop (SPRESENSE ver.)
55	Jul 27, 2025	RumiCar Program an Autonomous Vehicle	Cambridge, UK	Workshop held
56	Nov 8, 2025	Tokai Environment Festa 2025	Tokai Village Office	
57	Mar 28, 2026	NT Fukushima 2026	Aizu Keikodo (Aizuwakamatsu)	

© RumiCar Development Team

Event History

	Date	Event	Venue	Notes
58	Apr 22, 2026	STEAM Fair 2026	Northville, USA	
59	May 10, 2026	Tech Festival	Cambridge, UK	
60	Aug 11, 2026	RumiCar Programming Class (morning and afternoon), 18th RumiCar Running Meet	Hokutopia (Kita City, Tokyo)	
61	Aug 30, 2026	RumiCar Car Body Building Class	bono Sagami-Ono South Mall	
62	Sep 23, 2026	RumiCar Programming Class (morning and afternoon, with an English class), 19th RumiCar Running Meet	Hokutopia (Kita City, Tokyo)	

© RumiCar Development Team

Media Coverage

	Media	Date	Details	Page
1	I/O Vol.47, July issue (No.549)	July 2022 issue	100-Yen Robot Club!	118-119
2	I/O Vol.47, August issue (No.550)	August 2022 issue	RumiCar	10-13
3	The World of Electronics Crafts Expanding from "Raspberry Pi"	Released Nov 30, 2022		

© RumiCar Development Team

Partnerships

	Media	Date	Details
1	R2		
2			
3			

© RumiCar Development Team

Final Notes

RumiCar Info

© RumiCar Development Team

For More Enjoyment

- The RumiCar Development Team believes standardization is important so that many people can enjoy RumiCar
- Standardization improves the hardware compatibility of car bodies and compute modules and increases the reusability of programs
- This lets many people improve, add and enhance functions without the trouble of making changes
- So that more people can enjoy it, please follow the RumiCar standard for compute module pin assignments and pin layout when developing

© RumiCar Development Team

RumiCar Info



- RumiCar Development Team Web Page
  - https://www.rumicar.com/
- Facebook RumiCar Group
  - https://www.facebook.com/groups/rumicar
- RumiCar Development Team Contact E-mail
  - info@RumiCar.com
- RumiCar YouTube
  - https://www.youtube.com/channel/UCVg3CBSVBcc_00FdC6q2wDg
- GitHub
  - https://github.com/RumiCar-group/RumiCar
  - https://github.com/RumiCar-group/RumiCar-lib

© RumiCar Development Team

Thank you for participating in the RumiCar Hands-On!

We're done!

© RumiCar Development Team