

商储平台操作指南¹

1. 用户登录²

- 业主向经销商提供注册的邮箱及手机号码;³
- 安装商新建场站, 并为用户绑定设备;⁴

The screenshot displays two overlapping windows in the Midea Energy platform. The 'Edit' window on the left contains fields for basic information (Plant name: USA CLOU, Plant type: household/business and industry, Belonging provider: AAB, Plant coordinates: Clou@Clou.com, Owner's Name: Hamas, Contact number: 15212411245, Contact email: Clou@Clou.com, Grid connection date: 2025-05-01, Plant status: Normal, Region: USA, Detail Address: xxxxxxxx) and device parameters (PV installed capacity: 50 kW, Inverter power (kW): 50 kW, Battery capacity: 45 kWh, contact method: 4G/ethernet/wifi). The 'Device Binding' window on the right shows a table with columns for DeviceType, Device ID, and Operation. The table lists three inverters with Device ID 9527, each with an 'unbind' operation link. Both windows have 'Confirm' and 'Reset' buttons at the bottom.


DeviceType	Device ID	Operation
Inverter	9527	unbind
Inverter	9527	unbind
Inverter	9527	unbind

- 经销商在商储平台新建用户账号, 并设定初始密码;⁷

The screenshot shows the 'Users' management page in the Midea Energy platform. It includes a search bar with 'User ID' and 'Daily Report' filters, and a 'Query' button. Below the search bar is a table listing users with columns for SN, User ID, Name, Email, Phone, Account status, User Role, Creation Time, Modification Time, Address, and Operation. The table contains six rows of user data.

SN	User ID	Name	Email	Phone	Account status	User Role	Creation Time	Modification Time	Address	Operation
1	DGSTY	Jim	Clou@Clou.com	15845616541	Normal	Administrator	2025-12-29	2025-12-29	XXXXXXXX..	edit delete
2	DGSTY	Jim	Clou@Clou.com	15845616541	Normal	Administrator	2025-12-29	2025-12-29	XXXXXXXX..	edit delete
3	DGSTY	Jim	Clou@Clou.com	15845616541	Normal	Administrator	2025-12-29	2025-12-29	XXXXXXXX..	edit delete
4	DGSTY	Jim	Clou@Clou.com	15845616541	Normal	User	2025-12-29	2025-12-29	XXXXXXXX..	edit delete
5	DGSTY	Jim	Clou@Clou.com	15845616541	Normal	agent	2025-12-29	2025-12-29	XXXXXXXX..	edit delete
6	DGSTY	Jim	Clou@Clou.com	15845616541	Normal	agent	2025-12-29	2025-12-29	XXXXXXXX..	edit delete


- 业主打开 APP 点击“登录”, 首次登录, 提示用户去重置密码;⁹

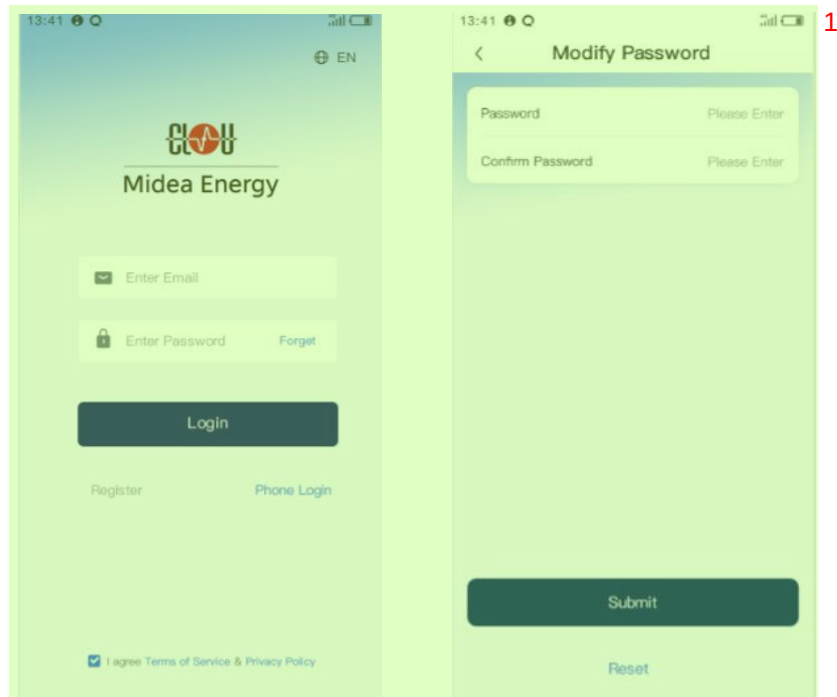


- 用户登录后，加载其场站设备信息。2

2. 服务商注册 3


- 打开 APP 点击“注册”，进入注册界面 4

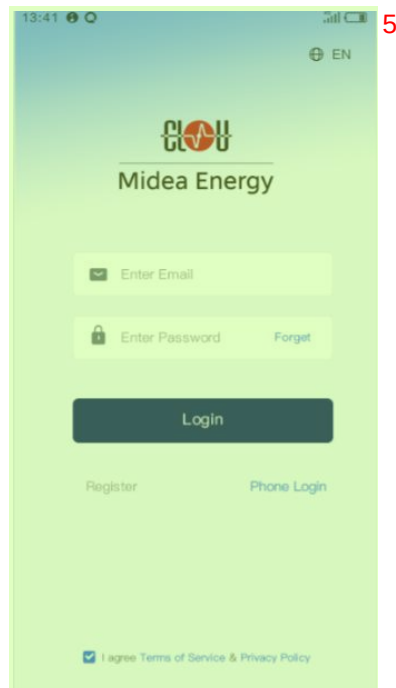

- 选择根据自身定位，选择”经销商“或“安装商” 6

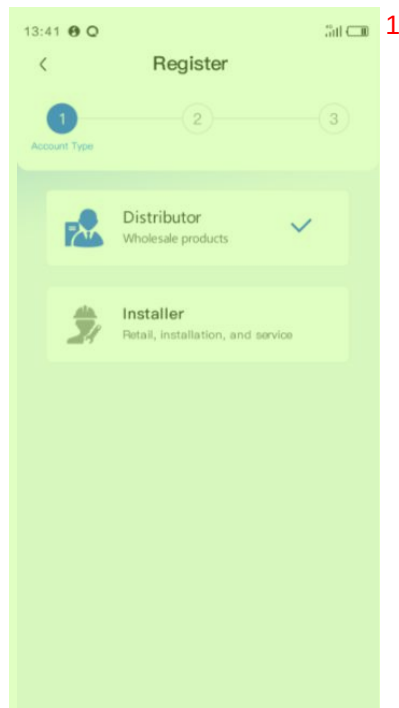

- 输入邮箱、营业证书、联系人、联系电话、公司名称、地址等信息（安装商需多提供电力施工资质，如电工证）2

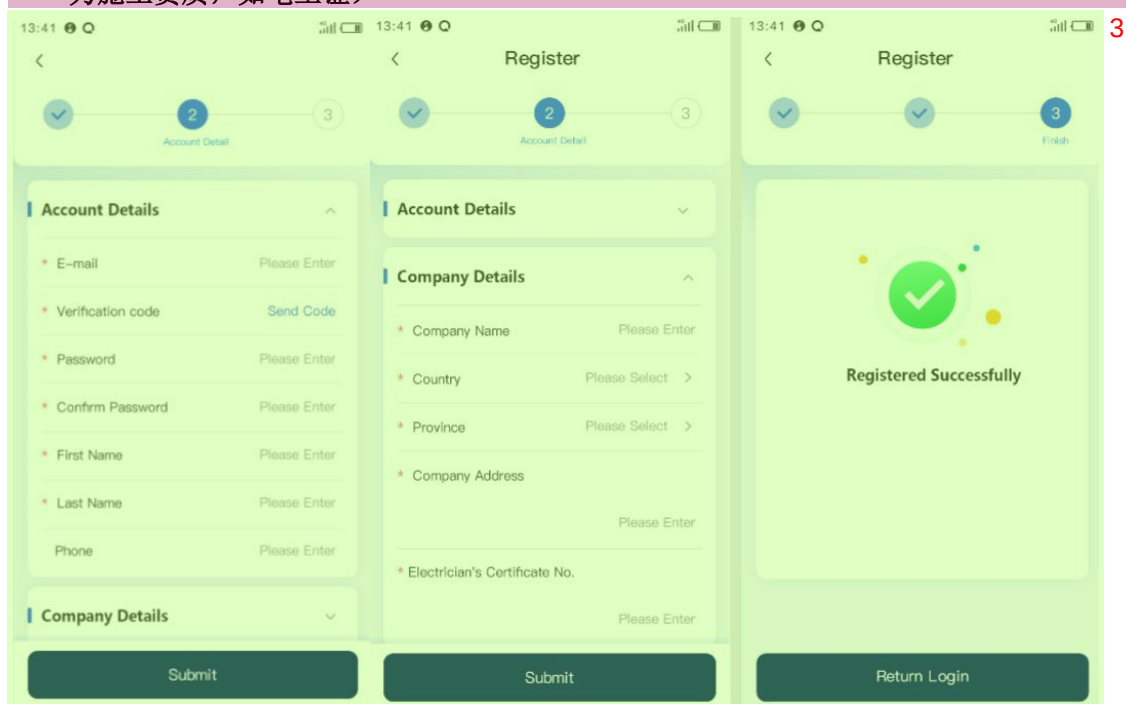


- 点击确认，注册成功。4

3. 创建场站（服务商）5


- 登录 APP 1

- 打开 APP 点击场站按钮，点击场站列表右上角“+”按钮；2

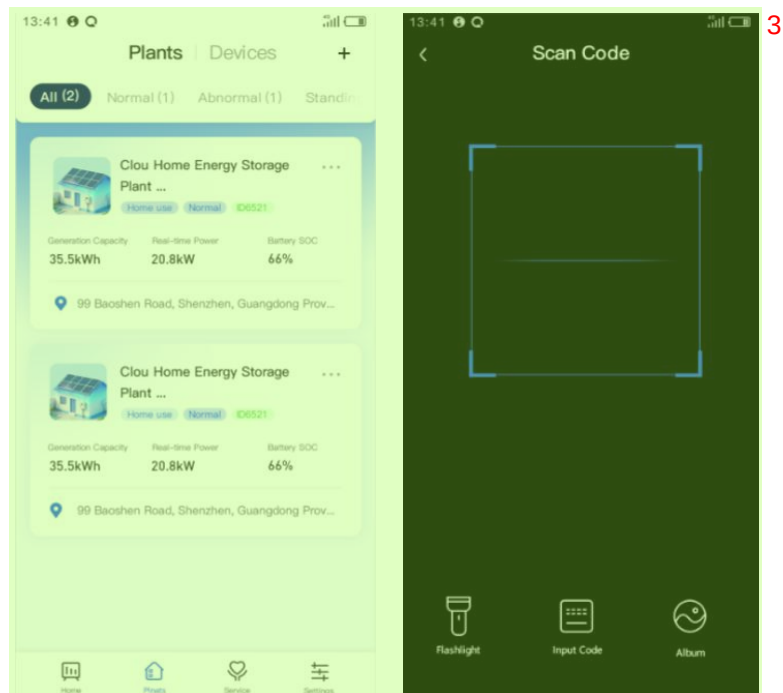

- 扫描随箱资料上的 SN 码标签或逆变器的 SN 码；4


- 输入场站业的信息及邮箱、地址等信息，点击“下一步”；5

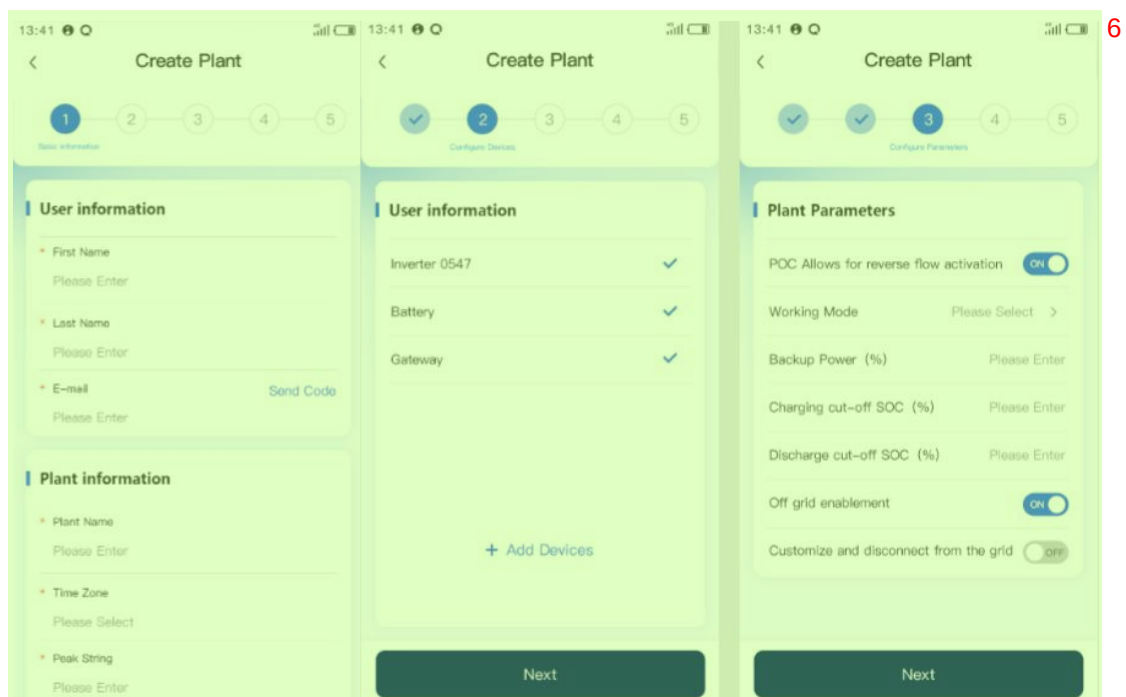

- 显示当前站点已添加的设备，点击“下一步”；（如有没有检测与添加的设备，可先跳过）；7

- 输入场站的参数，是否防逆流、工作模式，备电 SOC，充放电上下限及自定义并离网的设置，点击“下一步”；8


- 自检，检测云平台连接、网络状态及直流侧、通讯及储能的状态，通过点击“下一步”；9

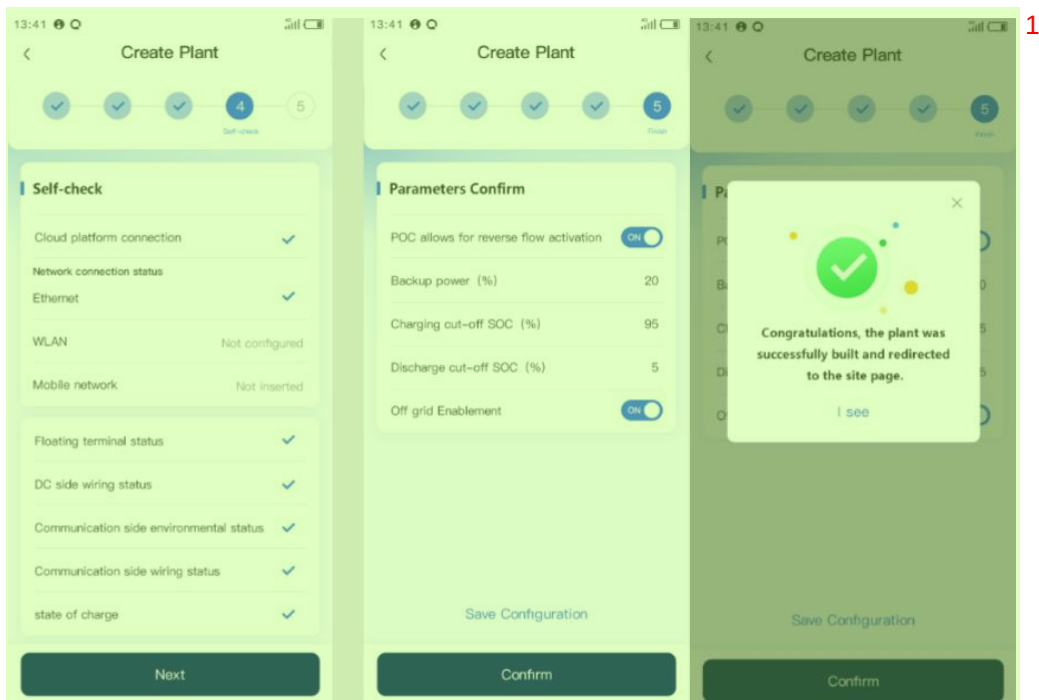

- 确认设定的参数，建站成功。²

4. 关机操作³

- 设置 (Setting) → 场站设置 (Plant Setup) → 开关机 (Power on/off)⁴

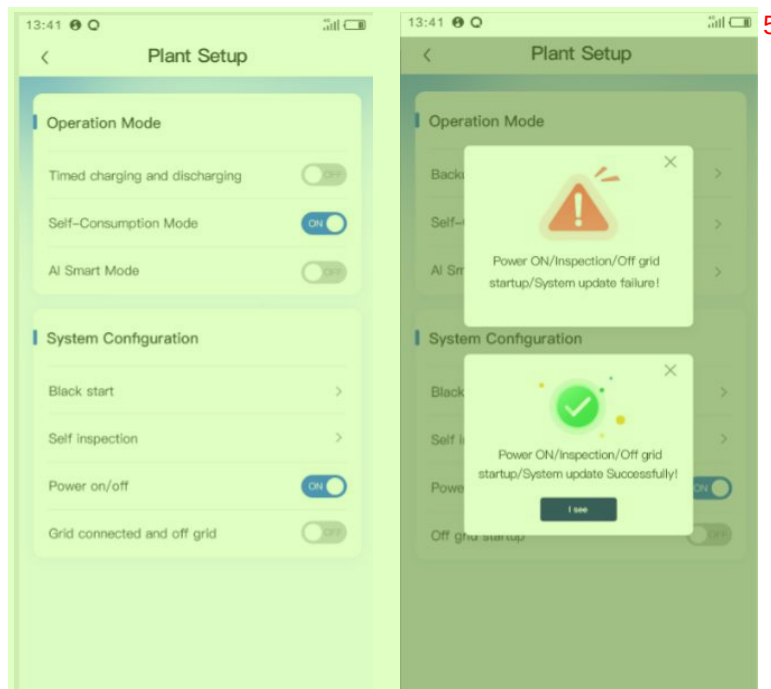

- 确认提示:⁶


确定关机？系统将停止运行。点 确认⁷
系统安全停机流程：

先降功率 → 断并网 / 离网输出¹
停止 PCS → 断开 DC 主继电器
BMS 下电 → 系统进入待机 (Standby)

- APP 显示：已关机 (Off)、所有功率为 0 → 关机完成。²

5. 开机操作³

设置 (Setting) → 场站设置 (Plant Setup) → 开关机 (Power on/off)⁴

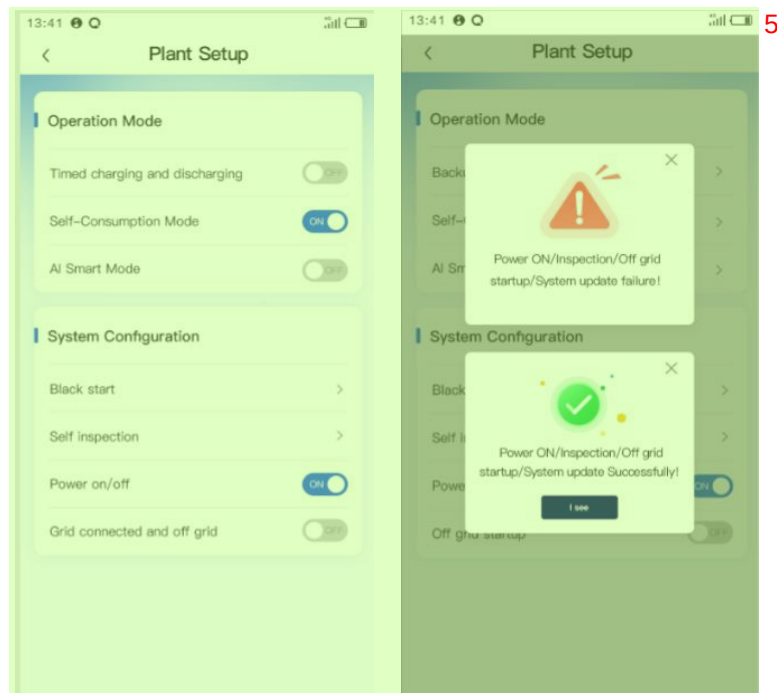

- 确认提示:⁶

确定开机? 系统将自检并启动。点 确认 (Confirm)⁷

- 系统自动执行:⁸


BMS / 电池自检 → DC 预充、母线升压 → PCS 启动、并网 / 待机⁹

- 开机完成。¹⁰

6. 充放电模式切换¹¹

在新建场站时已经选择一种运行模式 (默认为自发自用模式)。¹²

- 设置 (Setting) → 场站设置 (Plant Setup) → 运行模式 (Power on/off)¹³

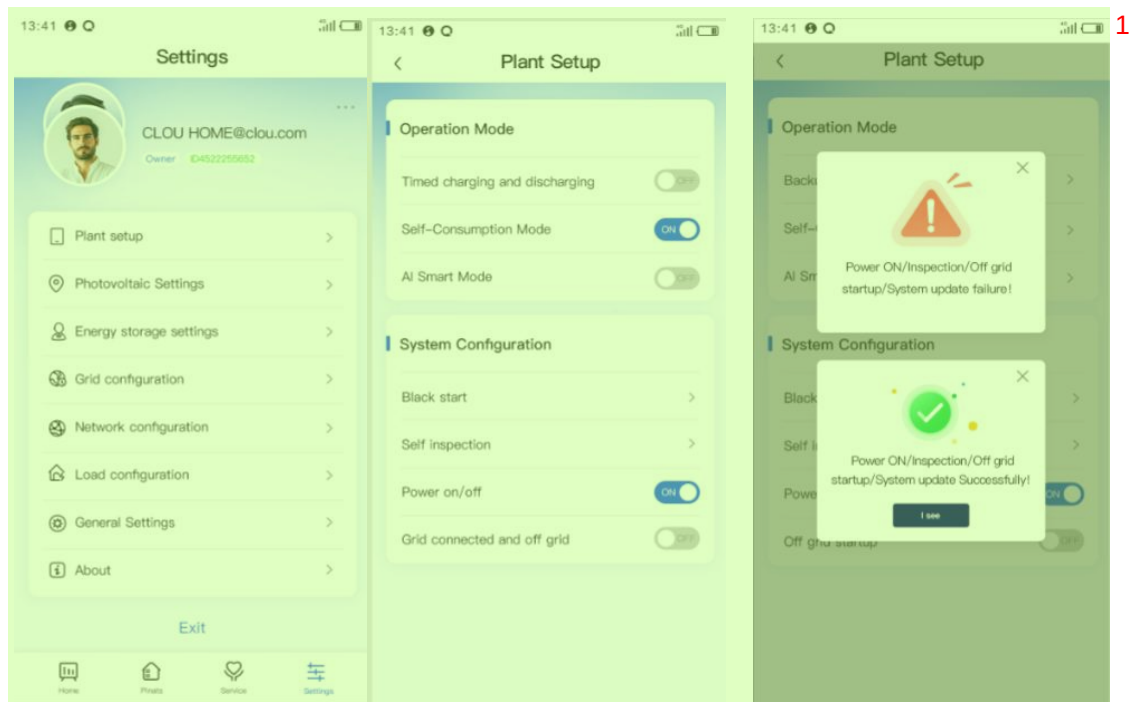

• 点击相应 AI 模式、自发自用、按时间充放电的模式后的开关可进行切换。²


• 系统自动执行:³

选择新的充放电模式后，云端校验后→ 设备停机/降载 → 状态自检 → 新策略加载 → 功率重启→ 反馈确认的完整流程⁴

• 系统提供新充放电模式切换成功。⁵

充放电模式设置⁶

➤ 点击每个模式可对应设置每个模式的参数⁷

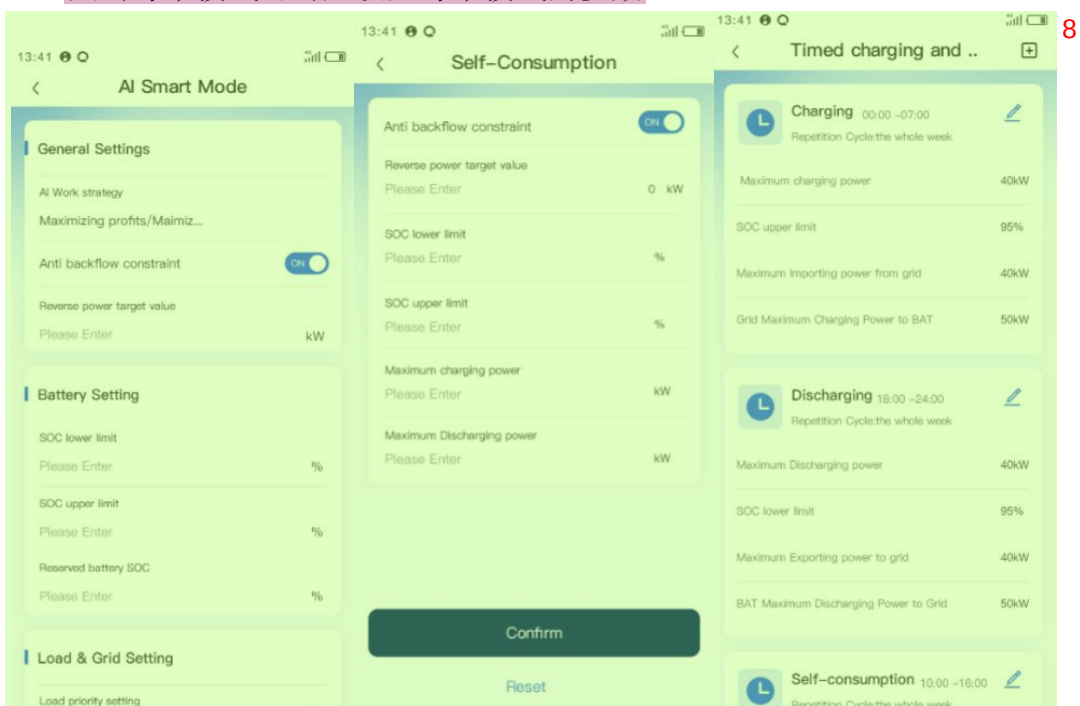


7.并离网-并转离（默认自动切换）¹

• APP 前置检查²

- 电池 **SOC ≥ 50%**（建议≥70%）³
- 无故障告警、系统正常
- 负载功率 ≤ 离网额定功率

• APP 操作⁴


1. 进入设置(Setting) → 场站设置(Plant Setup) → 并离网(Grid connected and off grid)⁵

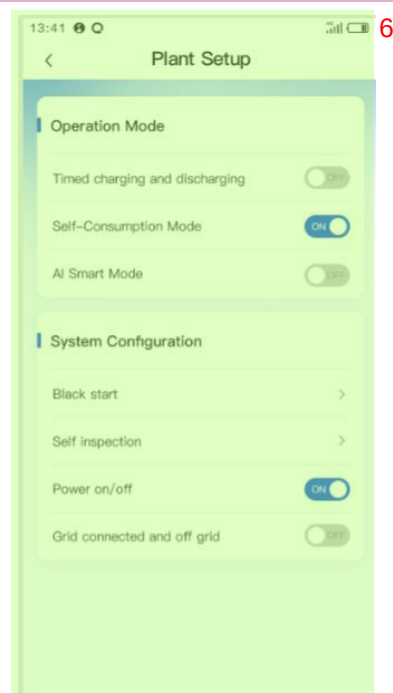

- 点击 **切换至离网** → 确认⁷
- 输入安全密码（如需）
- 系统执行（后台自动）
- 停止充放电 → 断开电网开关
- PCS 进入**离网 VF 模式**（建立电压 / 频率）
- 黑启动成功 → 带载运行
- APP 状态显示：**离网运行**
- 离网后注意
- 仅备电回路供电
- 不可超功率、不可并网
- 观察 SOC，低电量自动停机

8.并离网-离转并（默认自动切换）¹

- 检查条件²
 - 电网已恢复、电压 / 频率正常
 - 无故障、电池电量充足
 - 负载不过载
- APP 操作
 - 进入设置(**Setting**) → 场站设置(**Plant Setup**) → 并离网(Grid connected and off grid)

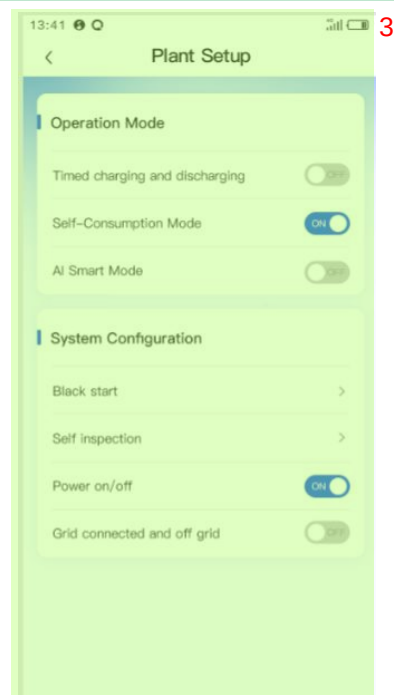


- 点击 切换至并网 → 确认⁴

• 系统执行（后台自动）⁵

- 离网停机 → 检测电网⁶
- 锁相（电压 / 频率 / 相位同步）
- 闭合并网开关 → 并网运行
- APP 状态：并网运行

9.系统自检⁷

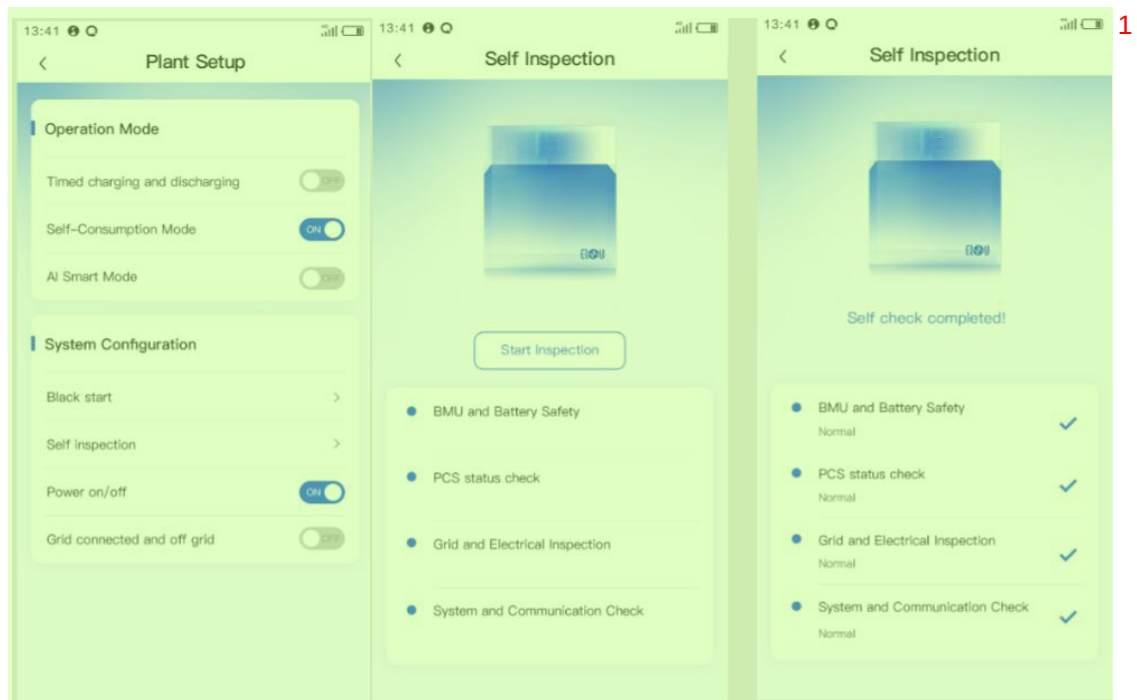

- 自检结果：通过 / 异常²

检测项：电池系统（BMS）检测、逆变器（PCS）检测、电网与电气安全检测、系统与通信检测³


自检完成后返回各模块状态结果，失败则提示用户重新自检或反馈给经销商。⁴

- APP 操作⁵

- 进入设置（Setting）→ 场站设置（Plant Setup）→ 自检（Self Inspection）⁶
- 跳转到自检界面，点击 开始自检⁷
- 自检针对各模块进行检测，成功则显示正常，不成功显示异常，并提示用户重新检查或联系经销商。⁸

10.工单⁹

- 工单来源由两部分组成，服务商新建、反馈转换¹⁰

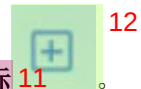

- 打开商储云平台，点击菜单服务>工单，点击右上角新增图标¹¹。
- 新增工单窗口，输入工单、场站设备、派往场站联系人信息及电话、安装维修人员，¹³ 点击确认。

1

Add Ticket

Basic info

Ticket ID: CL122220

Ticket title

Ticket type

Priority

Required completion time

Ticket source

Plant and Device

Plant

Device Type

Device Number

Device SN

Fault information

Alarm code

occurrence time

Fault classification

Fault phenomeno

Contact and Handling

Contact

Contact phone

Remarks

Upload Attachment

Assign a handler

Submit

Reset

Save Draft

- 生成一条工单信息，并发送站内信或 APP 推送给到安装维修人员。

3

Tickle Handle

Ticket ID: M23410002

Processing method

Remote Processing

Handling Measures

Processing Result

Note

Upload on-site Photos

+ Upload picture

Confirm

Reset

- 工单处理完成后，维修工程师通过 APP 上传工单处理情况及现场照片等信息。

Ticket handle ✕

Processing method ☐ Remote processing ☐ On site maintenance

Cause of failure

Handling measures

Processing result ☐ Resolved ☒ Partially resolved ☐ Unresolved

Replace spare parts

Note

Upload on-site photos [Please Upload Photos](#)

- 服务商登录商储平台验收工单情况并关闭工单。²

11.反馈³

- 登录 APP⁴



- 点击服务>帮助中心，点击右下角“⁵...”的反馈按钮，弹出反馈页面⁷

13:41 📶 🔋 8

Feedback

 Clou Home Energy Storage
ID: 251554411


Please select the type of question

>

Problem description

Attachment upload

- 用户输入反馈问题的类型，是产品咨询还是产品问题，问题描述图片等上传，反馈列表⁹生成一条反馈记录。

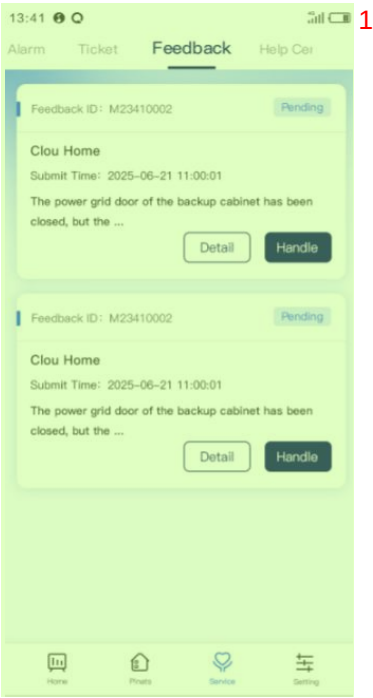

- 服务商在反馈列表中查看反馈信息，产品咨询给出解答，产品问题则转成工单信息。³

