
WOODEN DOG CRATE

Furniture-style crate with two side doors and a pivoting front door

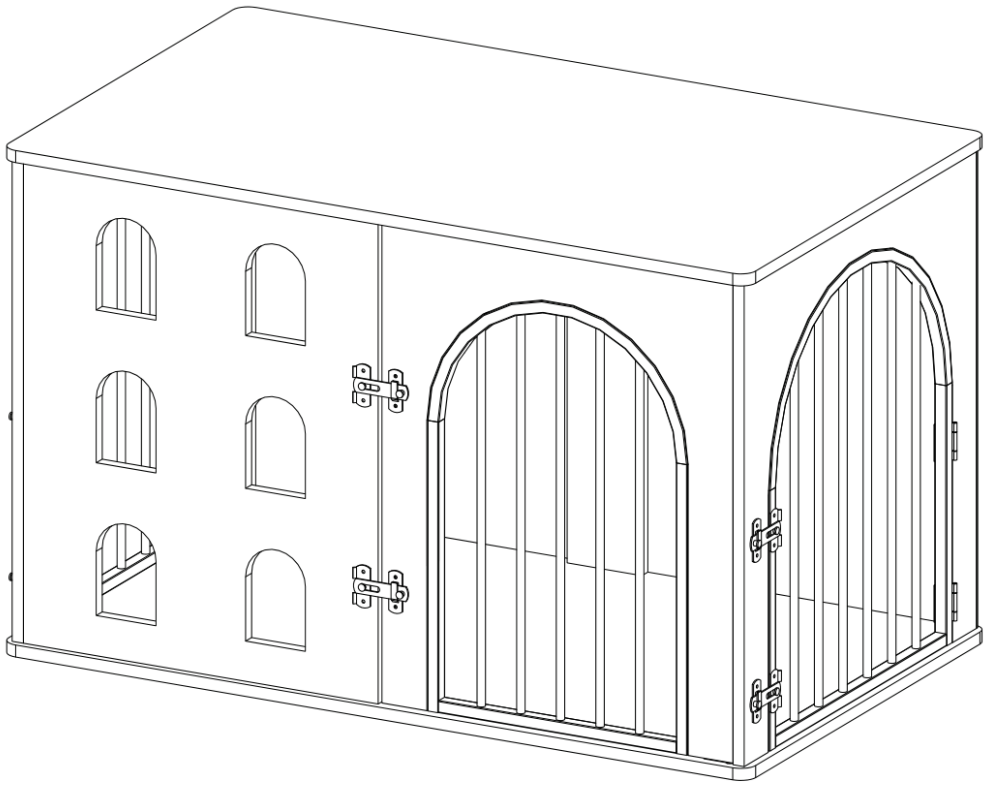

PLEASE READ BEFORE YOU START

Read these instructions all the way through before assembly. Check that every panel and every piece of hardware listed on pages 3 and 4 is in the box, and that no part is damaged.

Assembly needs two people and about 45–60 minutes. Work on a flat floor with a blanket or cardboard underneath to protect the panels.

Keep this manual for future reference — it also covers cleaning, checking and safe use.

BEFORE YOU START

Read this first

How to unpack, lay out and handle the crate during assembly

- Assemble on a clean, flat floor. Put a blanket or cardboard underneath to protect the panels and your floor.
- Two people make assembly easier — the panels are large and need to be held square while you tighten the fittings.
- Lay out every part and all hardware first, then check them against the parts list on page 3 and the hardware list on page 4.
- Do not fully tighten any screw until the whole unit is standing square and every joint is closed.
- Keep screws, dowels and cam locks away from children and pets — small parts are a choking hazard.

TOOLS

INCLUDED IN THE BOX

Screwdriver (G), Allen key M3 (H)

YOU MAY ALSO NEED

No. 2 Phillips screwdriver, soft mallet, a helper

ASSEMBLY TIME

About 45–60 minutes

ABOUT THE HARDWARE CODES

The letters A–H in this manual are the hardware codes printed on the hardware card in the box. The numbers 1–14 are the panels and parts. Every step drawing uses these codes, so you can always check which screw or which panel a step refers to. Spare screws and plugs are supplied and are not needed for assembly.

HOW TO READ THE DRAWINGS

Numbers in dark circles (1–14) are panels and parts. Letters in dark circles (A–H) are screws, cam bolts and tools. Dashed leader lines show where a screw or fitting is driven in; solid arrows show the direction a panel moves or a fitting turns. Circles drawn with a thick arrow are close-up views of a small area of the drawing.

WORK IN THIS ORDER

Panels first, then the cam locks, then the roof, then the doors and finally the latches. Steps 1 and 2 prepare the parts, steps 3 to 5 build the body, and steps 6 to 8 hang the doors and fit the slide bolts. Do not skip ahead — later steps rely on earlier ones.


SAFE USE STARTS HERE

Never leave a dog unattended in a new crate until it is settled, and always check that every latch is engaged before you go out. Full care and safety notes are on page 14.

PANELS AND PARTS


Parts list

Lay every part out and tick it off before you begin

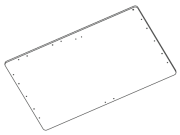


1 Floor panel

QTY **1**

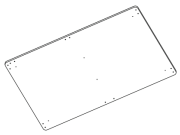


2 Roof panel

QTY **1**




3 Center post

QTY **1**

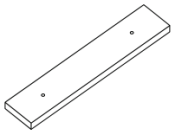


4 Roof trim strip

QTY **1**

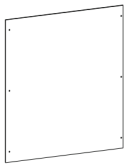

5 Back panel

QTY **2**




6 Window panel (6 arches)

QTY **1**




7 Front door

QTY **1**

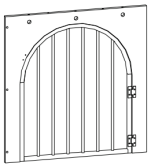


8 Side door, left

QTY **1**

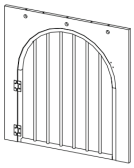


9 Side door, right

QTY **1**

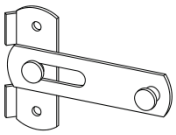


10 Slide-bolt latch

QTY **6**




11 Keeper plate

QTY **2**

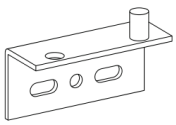


12 Pivot pin

QTY **1**

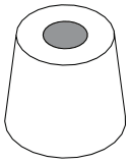

13 Threaded insert

QTY **4**

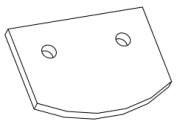

14 Arch reinforcement plate


QTY **2**

Panels 1 and 2 form the floor and the roof. They look alike — check the hole pattern against the drawings before you start.

HARDWARE AND TOOLS

Hardware list

Letters A–H are used in every step drawing

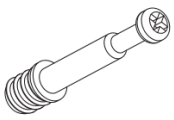

A Cam bolt

QTY **10**




E Screw 3.5 x 20 mm

QTY **6**




B Cam lock

QTY **10**




F Screw M5 x 40 mm

QTY **17**

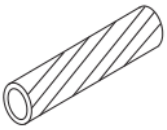

C Wooden dowel ø6 x 30 mm

QTY **8**




G Screwdriver

QTY **1**



D Screw 3.5 x 14 mm

QTY **48**

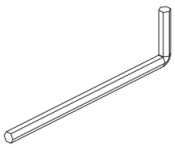

H Allen key M3

QTY **1**


SPARE PARTS

Extra screws, dowels and plugs are included in the box. They are not required for assembly — keep them with this manual in case a screw is lost later. If any listed part is missing or damaged, contact the seller before you start assembly.

ASSEMBLY AT A GLANCE

Exploded view

Where every panel goes — the eight steps that follow build this up

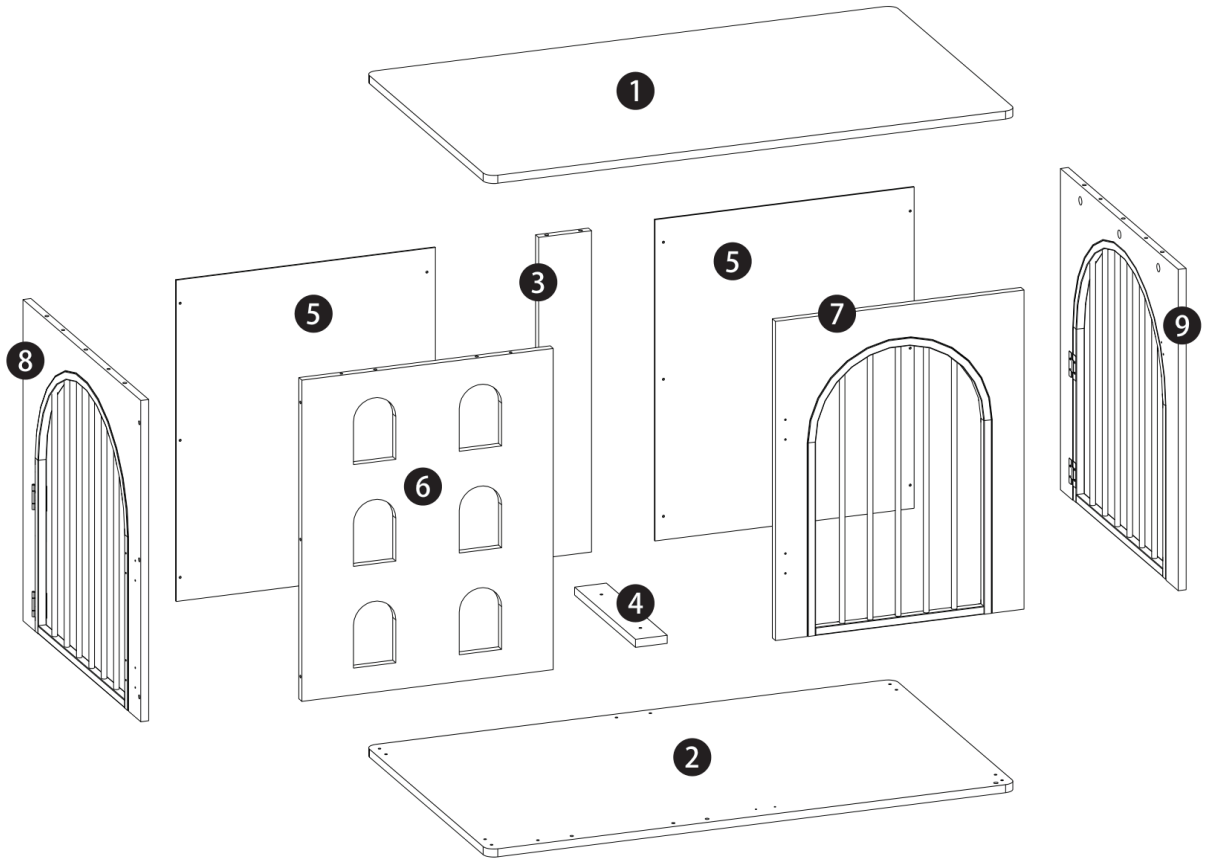

THE EIGHT STEPS

1 **Reinforce the side doors**
page 6

2 **Prepare the floor and roof panels**
page 7

3 **Assemble the body**
page 8

4 **Close the roof**
page 9

5 **Fit the back panels**
page 10

6 **Assemble the front door**
page 11


7 **Hang the front door**
page 12

8 **Fit the slide-bolt latches**
page 13

STEP 1 OF 8

Reinforce the side doors

Doors 8 and 9 · plates 14 · screws D

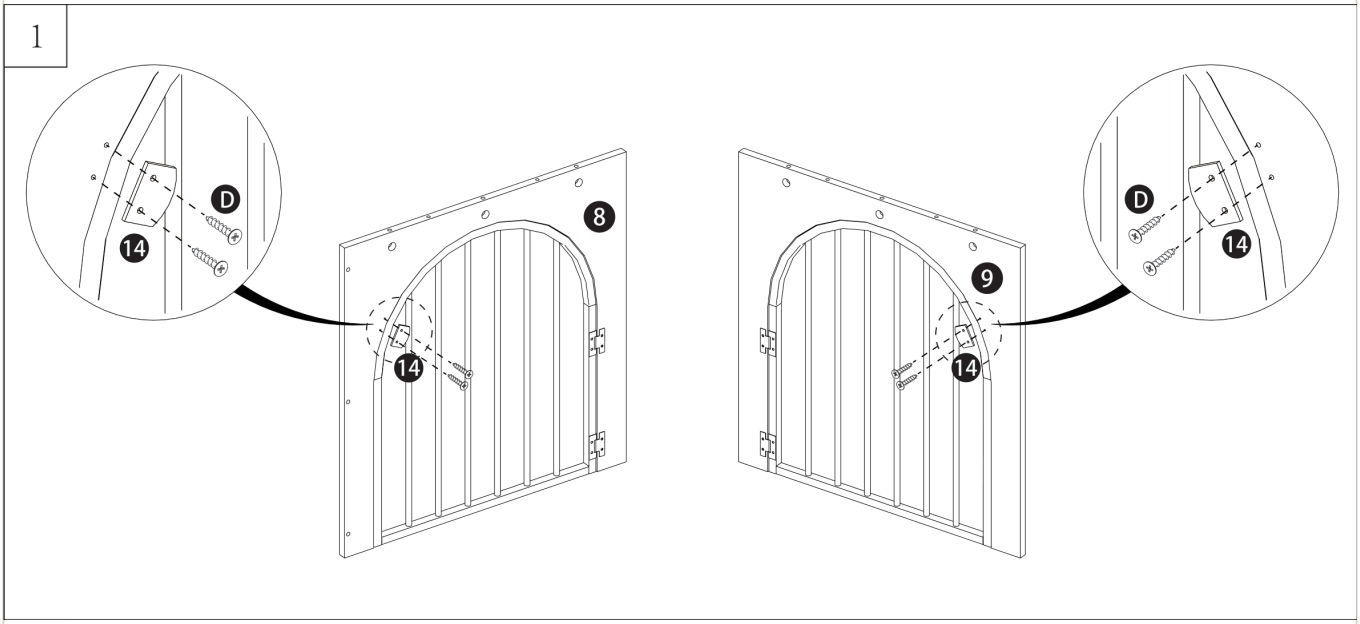

1. Lay side door (8) flat on a soft surface with the inside face up.
2. Set the curved plate (14) against the inside of the arched frame at the top corner, and line its two holes up with the pre-drilled holes.
3. Drive two screws (D) through the plate and tighten them evenly.
4. Repeat on the second side door (9).

AFTER THIS STEP

Both doors now have a plate at the top inner corner, sitting flush against the curve of the arch.

PARTS & HARDWARE

	**14** Arch plate	× 2
	**8** Side door L	× 1
	**9** Side door R	× 1
	**D** Screw 3.5x14	× 4

TIP

The plate follows the curve of the arch. If it rocks or does not sit flush, turn it over — only one face is shaped to fit.


NEXT

Step 2 — Prepare the floor and roof panels (page 7)

STEP 2 OF 8

Prepare the floor and roof panels

Panels 1 and 2 · cam bolts A · dowels C · keepers 11

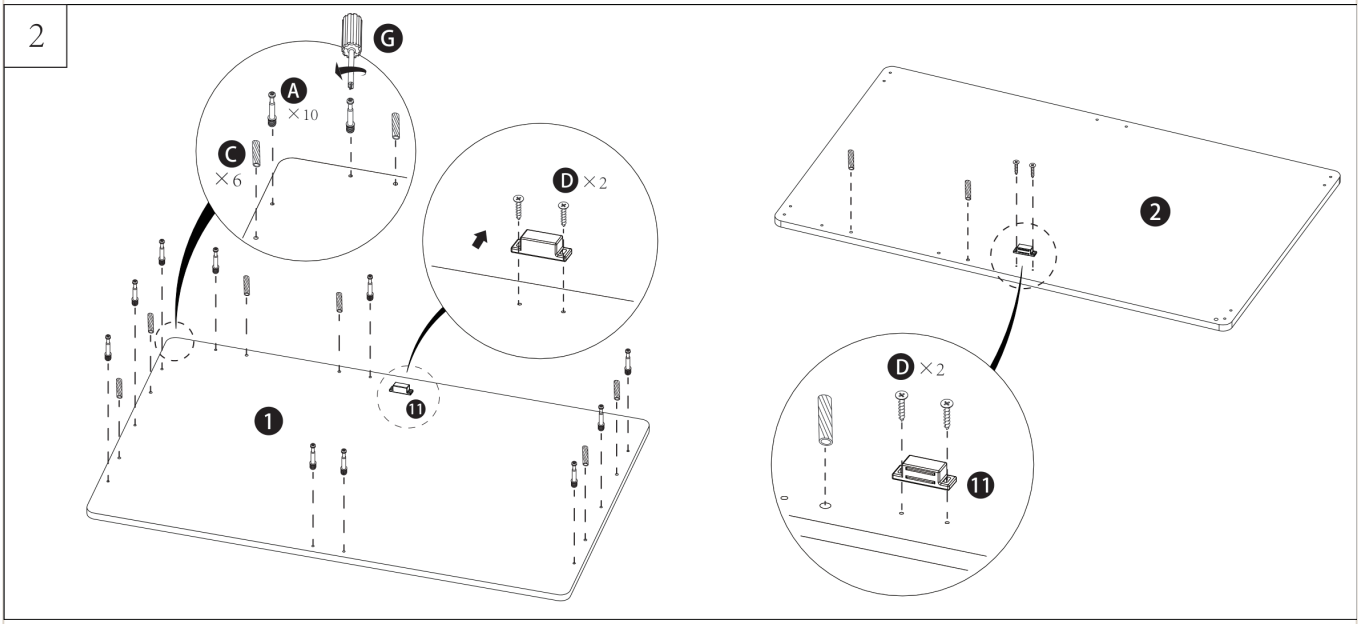

1. Lay the floor panel (1) flat with the inside face up.
2. Screw the ten cam bolts (A) into the edge holes around the panel. Use the screwdriver (G) and stop when the bolt head is tight against the wood.
3. Tap the six wooden dowels (C) into the remaining edge holes until they sit flush — a soft mallet helps.
4. Screw the keeper plate (11) onto its marked position with two screws (D).
5. Repeat the keeper on the roof panel (2).

AFTER THIS STEP

Ten cam bolts and six dowels sit in the edge holes of panel 1. Nothing has been driven into the round face holes.

PARTS & HARDWARE

	**A** Cam bolt	× 10
	**C** Dowel 6x30	× 6
	**11** Keeper plate	× 2
	**D** Screw 3.5x14	× 4

TIP

Cam bolts and dowels only go into the edge holes. Keep the round face holes free — the cam locks (B) are pressed into those in step 3.


NEXT

Step 3 — Assemble the body (page 8)

STEP 3 OF 8

Assemble the body

Panel 1 · doors 8 and 9 · window panel 6 · post 3 · cam locks B

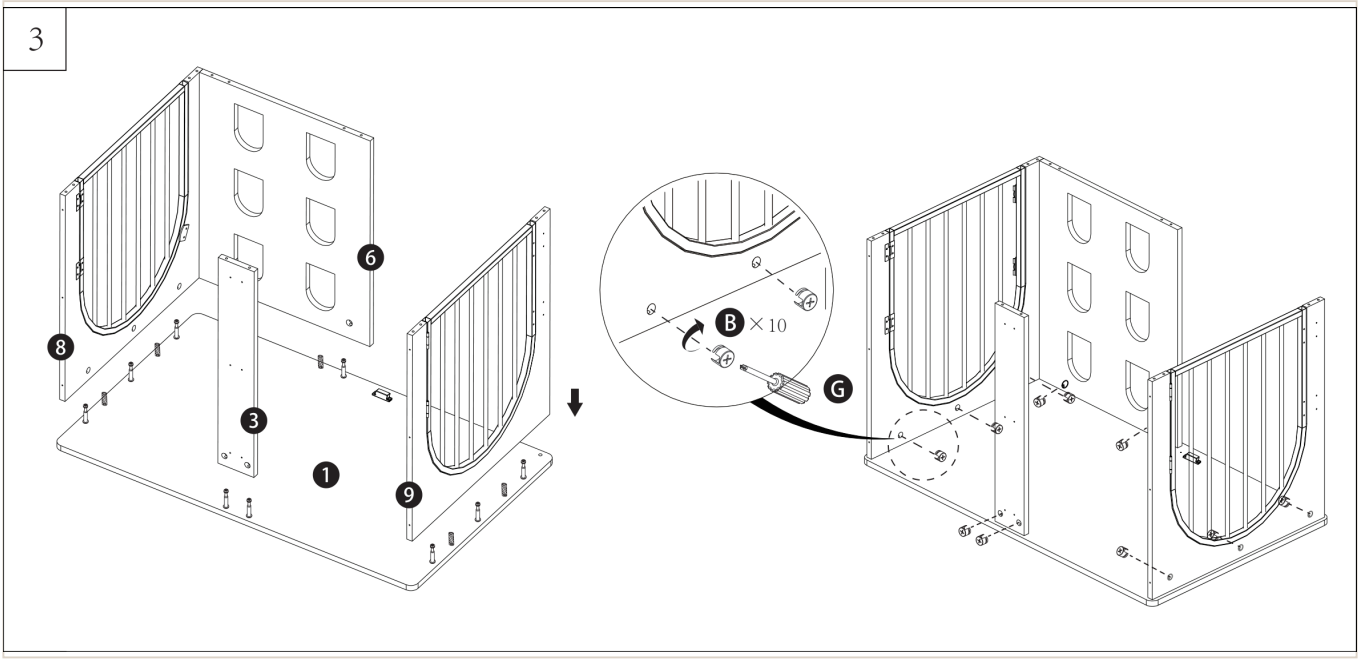

1. Keep the floor panel (1) flat on the floor with the cam bolts pointing up.
2. Stand side door (8) on the left edge, the window panel (6) on the back edge and side door (9) on the right edge. The bolt holes in each panel must face the cam bolts.
3. Slide the center post (3) into the slot at the front so that it stands upright.
4. Press a cam lock (B) into each of the ten holes, then turn every lock clockwise with the screwdriver (G) until it grips the bolt and pulls the joint tight.

AFTER THIS STEP

The three panels and the center post stand square on panel 1, with no visible gap at any joint.

PARTS & HARDWARE

	**8** Side door L	× 1
	**6** Window panel	× 1
	**9** Side door R	× 1
	**3** Center post	× 1
	**B** Cam lock	× 10
	**G** Screwdriver	× 1


TIP

Fit the outer panels first and the center post last. Turn the cam locks until the panels meet the floor panel with no visible gap — then stop.

STEP 4 OF 8

Close the roof

Roof panel 2 · trim strip 4 · inserts 13 · screws E and F

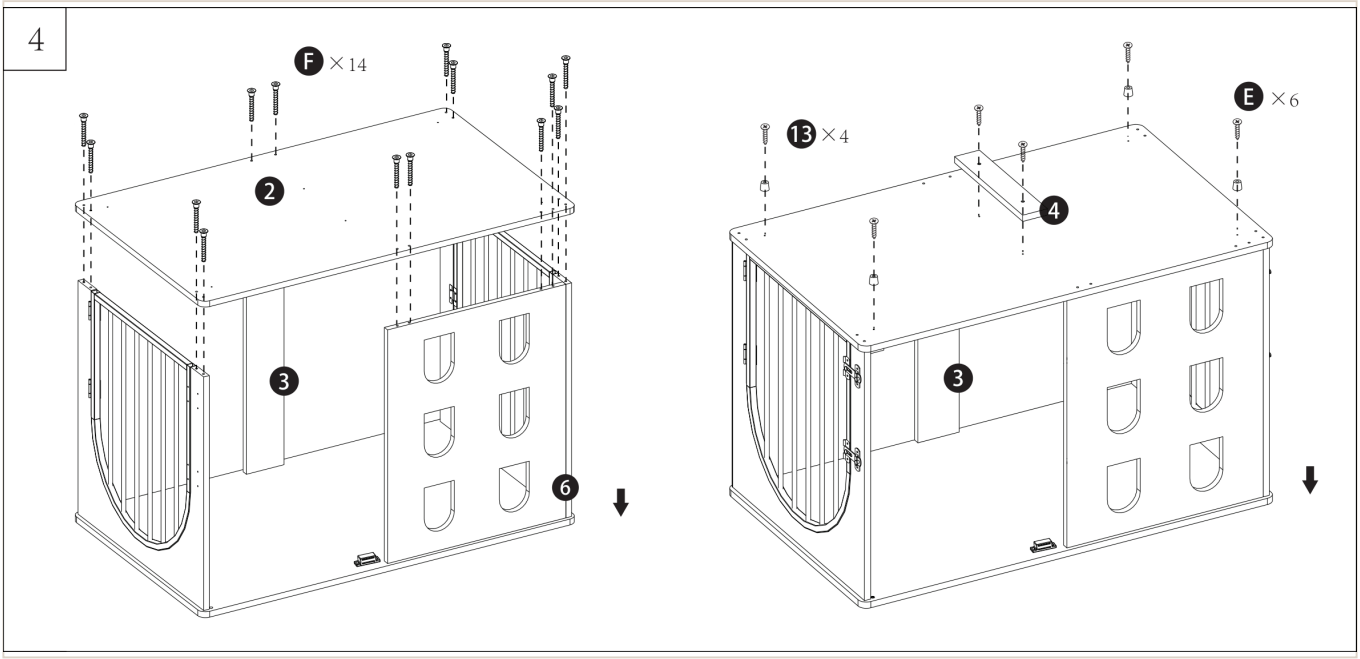

1. Lower the roof panel (2) onto the open top and align its edges with the panels below.
2. Drive the fourteen screws (F) down through the pre-drilled holes in the roof into the frame. Work from corner to corner so the panel seats evenly.
3. Press the trim strip (4) into the slot in the roof until it sits flush.
4. Push a threaded insert (13) into each of the four corner holes, then drive a screw (E) into each insert from above. Drive the two remaining screws (E) into the middle holes.

AFTER THIS STEP

The roof sits flush on all four edges, the trim strip is pressed down and the four inserts are in place.

PARTS & HARDWARE

2 Roof panel	× 1
4 Trim strip	× 1
13 Insert	× 4
E Screw 3.5x20	× 6
F Screw M5x40	× 14

TIP


If a screw (F) feels tight before it is seated, back it out and check that the hole is aligned. Never force a screw — it will strip the wood.

1 2 3 4 5 6 7 8

STEP 5 OF 8

Fit the back panels

Back panels 5 · side door 8 · screws D and F

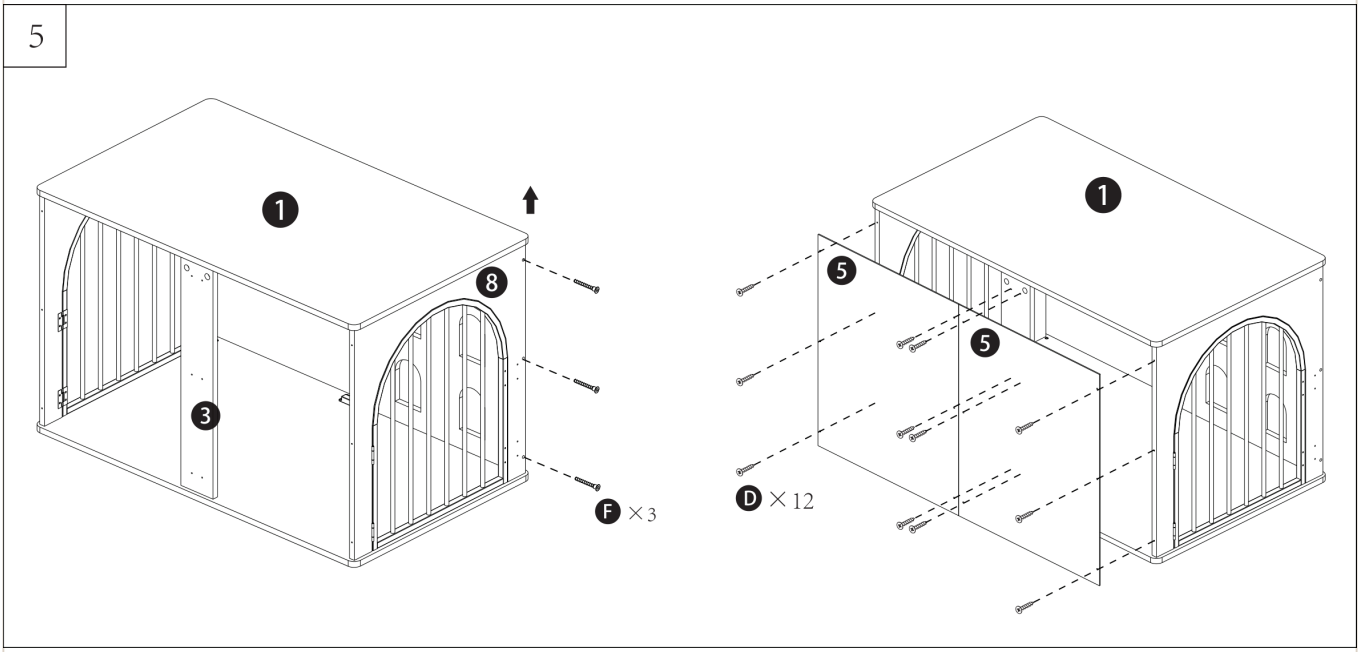

1. Set the crate on a flat surface so that the open long side faces you.
2. Drive three screws (F) through the end frame into the edge of side door (8).
3. Place the two back panels (5) over the open side, butt them together in the middle and align the outer edges.
4. Secure each panel with six screws (D) driven from the outside — top and bottom holes first, then the middle ones.

AFTER THIS STEP

Both back panels lie flat against the frame and butt together in the middle without a gap.

PARTS & HARDWARE

5 Back panel	× 2
8 Side door L	× 1
D Screw 3.5x14	× 12
F Screw M5x40	× 3

TIP

Do not overtighten the back panels. They only need to sit flat against the frame; overtightening pulls them out of line and leaves a gap.


NEXT

Step 6 — Assemble the front door (page 11)

STEP 6 OF 8

Assemble the front door

Front door 7 · pivot pin 12 · keeper plates 11 · screws D

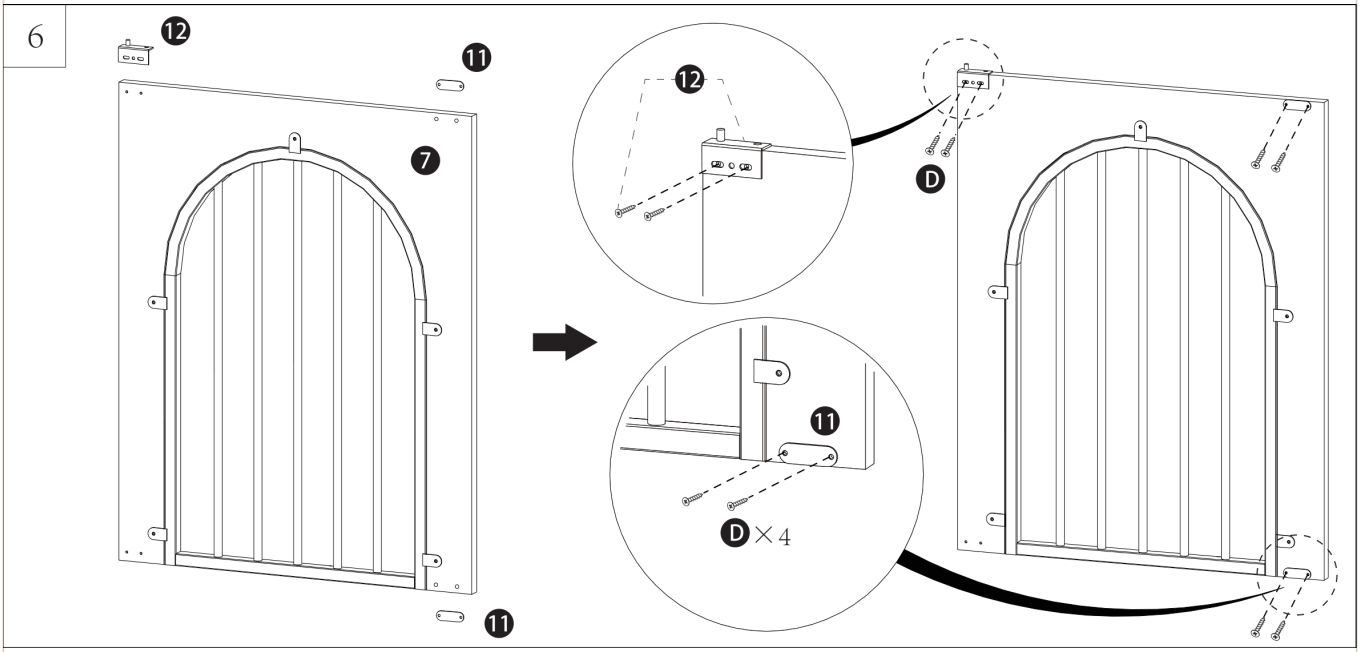

1. Lay the front door (7) flat with the inside face up.
2. Insert the pivot pin (12) into the hole in the top edge of the door and tap it in until the head sits flush.
3. Fit a keeper plate (11) to the door edge near the top and a second one near the bottom.
4. Secure each keeper plate with two screws (D).

AFTER THIS STEP

The pivot pin sits flush in the top edge and both keeper plates are tight against the door.

PARTS & HARDWARE

7 Front door		× 1
12 Pivot pin		× 1
11 Keeper plate		× 2
D Screw 3.5x14		× 4

TIP

Check the door before you hang it: the pivot pin must sit square in its hole and must not stand proud of the edge.


NEXT

Step 7 — Hang the front door (page 12)

STEP 7 OF 8

Hang the front door

Front door 7 · pivot pins 12

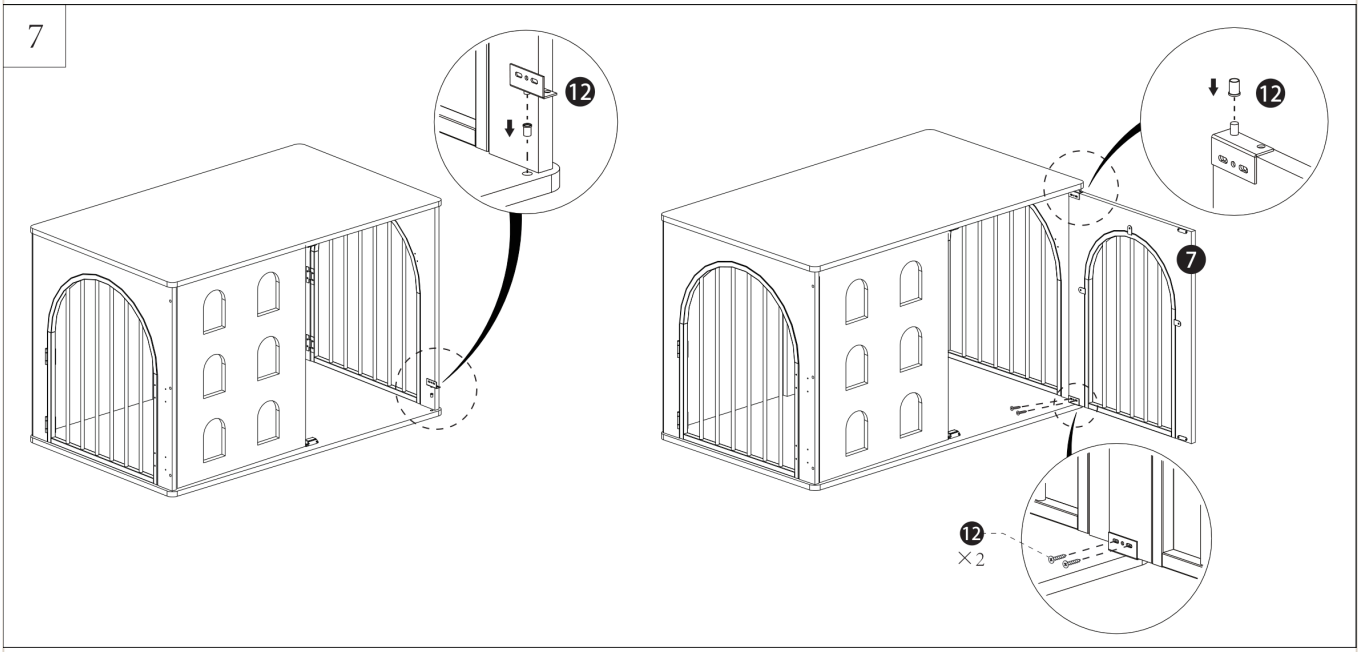

1. Lift the door (7) into the front opening, guiding the pivot pin at the top into the hole in the roof frame.
2. Insert the two pins (12) into the frame above and below the door so that the door is held in place and can swing freely.
3. Open and close the door a few times. It should swing without rubbing on the frame or the floor.

AFTER THIS STEP

The door swings freely, sits level in the opening and does not rub on the floor or the frame.

PARTS & HARDWARE

	**7** Front door	× 1
	**12** Pivot pin	× 2

TIP

If the door rubs, loosen the screws on the nearest hinge point a quarter turn, re-align the door and tighten again.


NEXT

Step 8 — Fit the slide-bolt latches (page 13)

STEP 8 OF 8

Fit the slide-bolt latches

Latches 10 · screws D

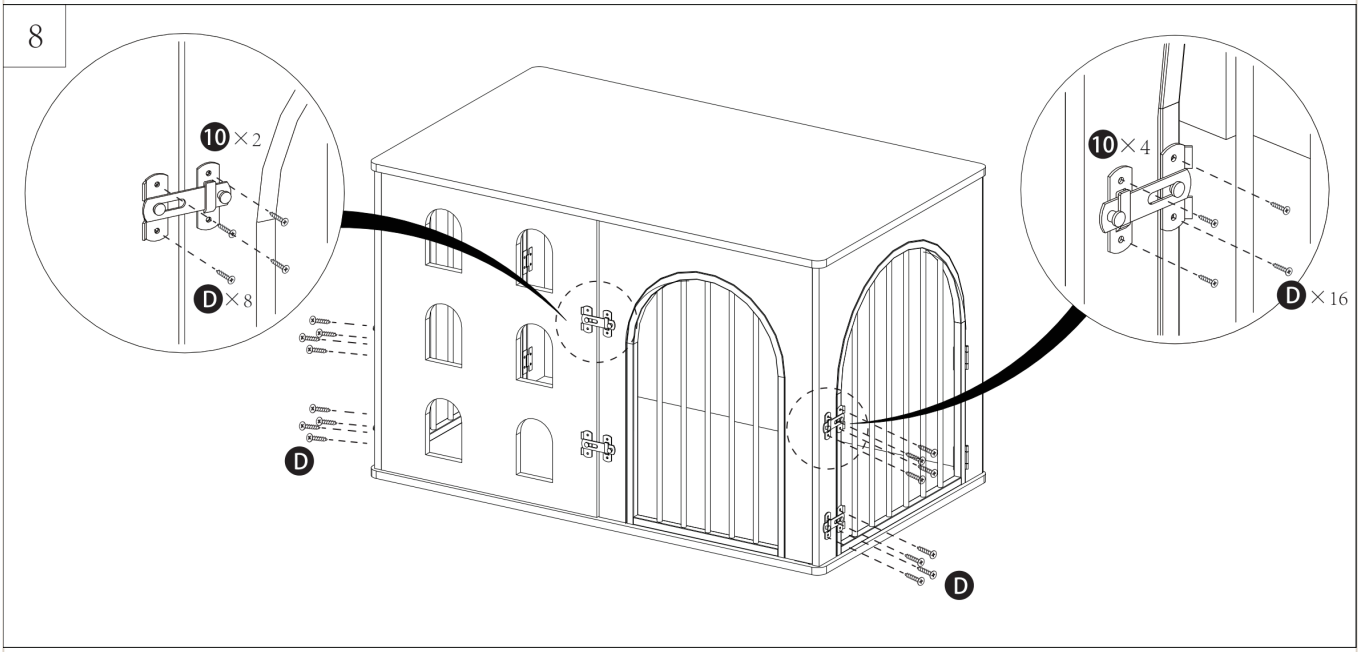

1. Close all three doors.
2. Hold a latch (10) against the free edge of the door at the height shown, with the bolt pointing towards the keeper plate.
3. Drive four screws (D) horizontally through the door frame into the latch plate.
4. Repeat for the second latch on the front door (eight screws in total) and for the four latches on the side doors (sixteen screws).
5. Slide every bolt home and check that it engages the keeper plate smoothly.

AFTER THIS STEP

Each bolt slides into its keeper with one hand and holds the door firmly closed.

PARTS & HARDWARE

	**10** Slide bolt	× 6
	**D** Screw 3.5x14	× 24

TIP

The bolt must slide freely without lifting the door. If it binds, loosen the latch screws slightly, slide the bolt home, then retighten.

NEXT

Finishing touches and safe use (page 14)

AFTER ASSEMBLY

Care, checks and safe use

A few minutes of care keeps the crate solid and safe

CARE AND MAINTENANCE

Cleaning
Wipe with a soft, slightly damp cloth. Do not use abrasive cleaners, bleach or solvents on the wood or the metal fittings.

Moisture
Dry any spills straight away. Do not soak the panels and do not place the crate in a damp room.

Checks
Inspect the crate every month. Re-tighten any loose screw and check that every cam lock is still tight.

Metal parts
Put a drop of light machine oil on each latch and pivot pin twice a year.

Placement
Keep the crate out of direct sunlight and away from radiators — heat dries the wood and can cause cracks. Indoor use only.

SAFETY WARNINGS

- This crate is designed for a dog. Do not sit, stand or climb on it and do not use it as a step.
- Remove your dog's collar, leash and tags before it enters the crate so they cannot catch on the bars or the latches.
- Make sure every slide-bolt latch is fully engaged before you leave your dog alone.
- Supervise a new or anxious dog until it is settled in the crate.
- Stop using the crate if any panel, bar or fitting is cracked, bent or missing.
- Small parts are a choking hazard. Keep all hardware away from children and pets during assembly.

SETTLING YOUR DOG IN

- Put the crate where the family spends time so your dog does not feel shut away.
- Add a familiar blanket or a worn T-shirt so the crate smells of home.
- Leave the door open for the first few days and let your dog go in and out.
- Feed meals inside the crate and praise your dog each time it settles.
- Start with short periods and build up slowly.
- Never use the crate as punishment — it must stay a calm, safe place.

NEED HELP?

If a part is missing or damaged, or if you are not sure about a step, contact us before returning the crate. Please quote the model name and the part number or hardware letter from this manual — it helps us send the right part the first time.

Seller contact _____

Order no. _____

Model **Wooden Dog Crate · Double Door**