WIRED MODE

USB 2.0 This function is subject to the real object

USB 2.0

Power ON/OFF

OFF ☐☐ ON   B ☐☐ G

OFF ☐ ON   OFF ☐ N

1 A ((·)) ((o)) ⊡

1 NUM

A CAPS

((·)) Three sets of Bluetooth code matching indicator ,Group Q is red, group W is blue, group E is green

((o)) 2.4G code matching indicator

⊡ Charging lights and low voltage warning lights

HOW TO USE

BT Connection

Switch Power On

Switch to B

1 SHORT PRESS
Fn+Q/W/E/ to BT Chan...

2 LONG PRESS
Fn+Q/W/E/ Entry Pairing Mode

HOW TO USE

2.4Ghz

OFF ☐ ON

Switch Power On

B ☐ G

Switch to G

BACKLIGHT CONTROL

Fn + PrtSc ⊛ Switch Backlight Mode

Fn + ↑ ☀ Backlight Brightness +

Fn + ↓ ☀ Backlight Brightness -

Fn + → ⌣ Backlight Speed +

Fn + ← ⌣ Backlight Speed -

Fn + Del ⊚ (The same applies to RGB) **Monochrome switching**

Fn + Ins ScrLK

Fn + PgUp Pause

Fn + PgDn End
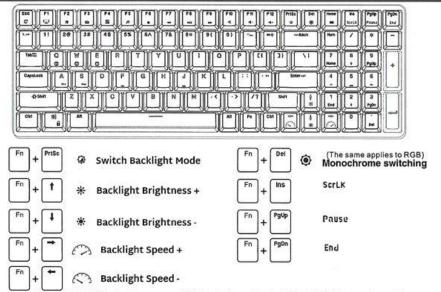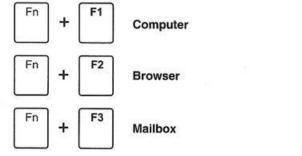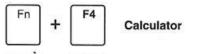
Light recording : FN+1!,2@,3# Select a group of lights to be edited , FN+HOME Enter the editing state, the indicator light flashes at this time, after the recording is completed, Press FN+HOME again to save
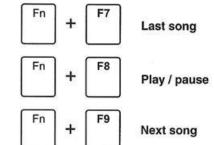
MULTIMEDIA KEY FOR WINDOWS

In Windows mode(FN + A: switch to Windows system)

Fn	+	F1	Computer

Fn	+	F2	Browser

Fn	+	F3	Mailbox

Fn	+	F4	Calculator

Fn	+	F5	Player

Fn	+	F6	Stop

Fn	+	F7	Last song

Fn	+	F8	Play / pause

Fn	+	F9	Next song

Fn	+	F10	Mute

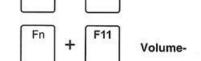| Fn	+	F11	Volume-

Fn	+	F12	Volume+

MULTIMEDIA KEY FOR WINDOWS

MAC system(FN + s: switch to MAC system)

Fn	+	F1			Fn	+	F7	Last song
Fn	+	F2			Fn	+	F8	Play / pause
Fn	+	F3			Fn	+	F9	Next song
Fn	+	F4			Fn	+	F10	Mute
Fn	+	F5			Fn	+	F11	Volume-
Fn	+	F6			Fn	+	F12	Volume+