



After flashing the Arduino with the code below, open the serial monitor and set it to append carriage return only and then set the baud rate to 9600.

Arduino Mega

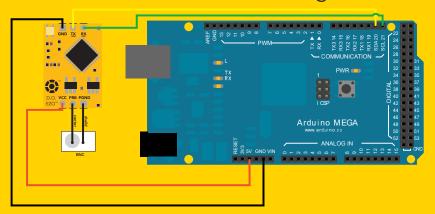

Arduino Uno

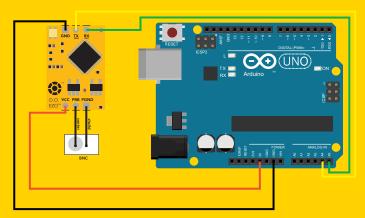

Click here to download the sample code