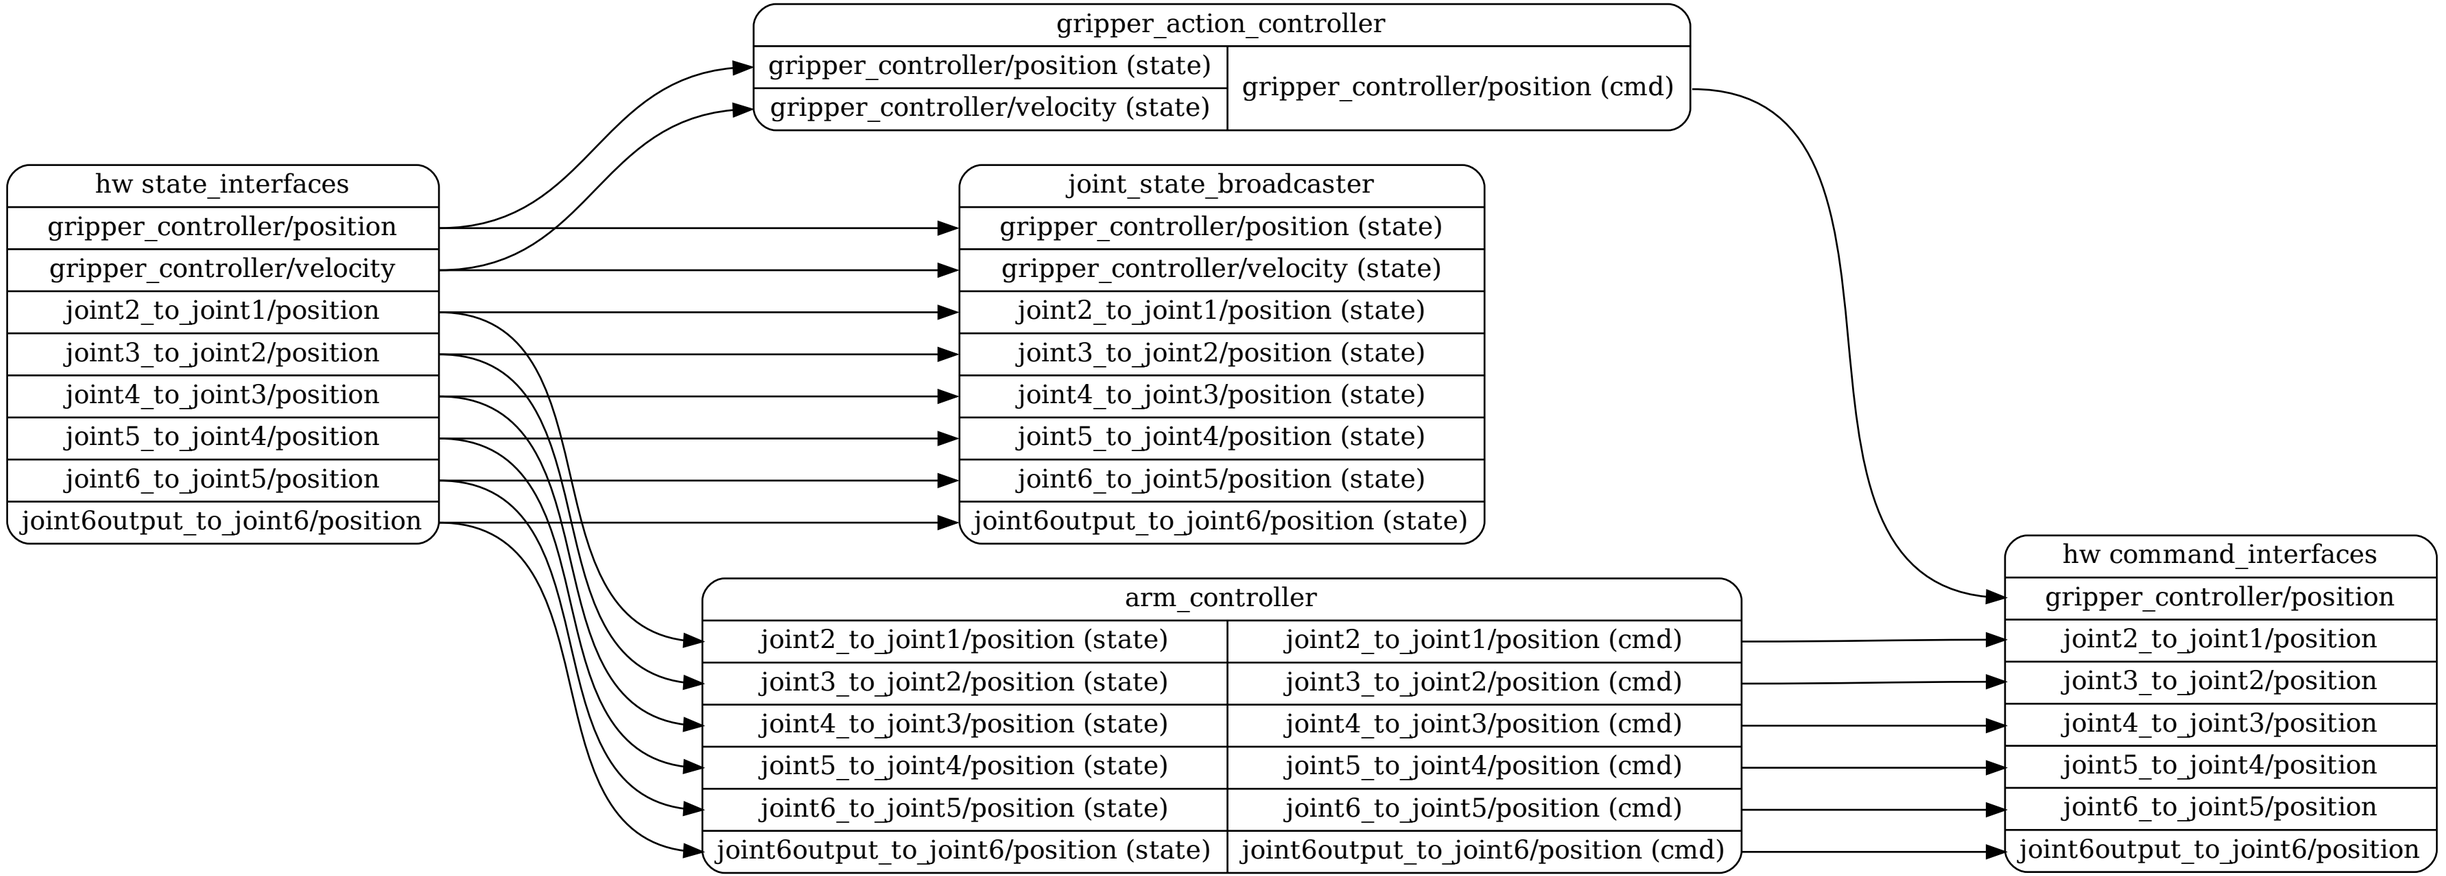
gripper_action_controller
gripper_controller/position (state)
gripper_controller/velocity (state)
gripper_controller/position (cmd)
hw state_interfaces
gripper_controller/position
gripper_controller/velocity
joint2_to_joint1/position
joint3_to_joint2/position
joint4_to_joint3/position
joint5_to_joint4/position
joint6_to_joint5/position
joint6output_to_joint6/position
joint_state_broadcaster
gripper_controller/position (state)
gripper_controller/velocity (state)
joint2_to_joint1/position (state)
joint3_to_joint2/position (state)
joint4_to_joint3/position (state)
joint5_to_joint4/position (state)
joint6_to_joint5/position (state)
joint6output_to_joint6/position (state)
arm_controller
joint2_to_joint1/position (state)
joint3_to_joint2/position (state)
joint4_to_joint3/position (state)
joint5_to_joint4/position (state)
joint6_to_joint5/position (state)
joint6output_to_joint6/position (state)
joint2_to_joint1/position (cmd)
joint3_to_joint2/position (cmd)
joint4_to_joint3/position (cmd)
joint5_to_joint4/position (cmd)
joint6_to_joint5/position (cmd)
joint6output_to_joint6/position (cmd)
hw command_interfaces
gripper_controller/position
joint2_to_joint1/position
joint3_to_joint2/position
joint4_to_joint3/position
joint5_to_joint4/position
joint6_to_joint5/position
joint6output_to_joint6/position