Diagram 6 (Zones)

Space numbers 300 - 399

Zone 300

Space numbers 200 - 299

Zone 200

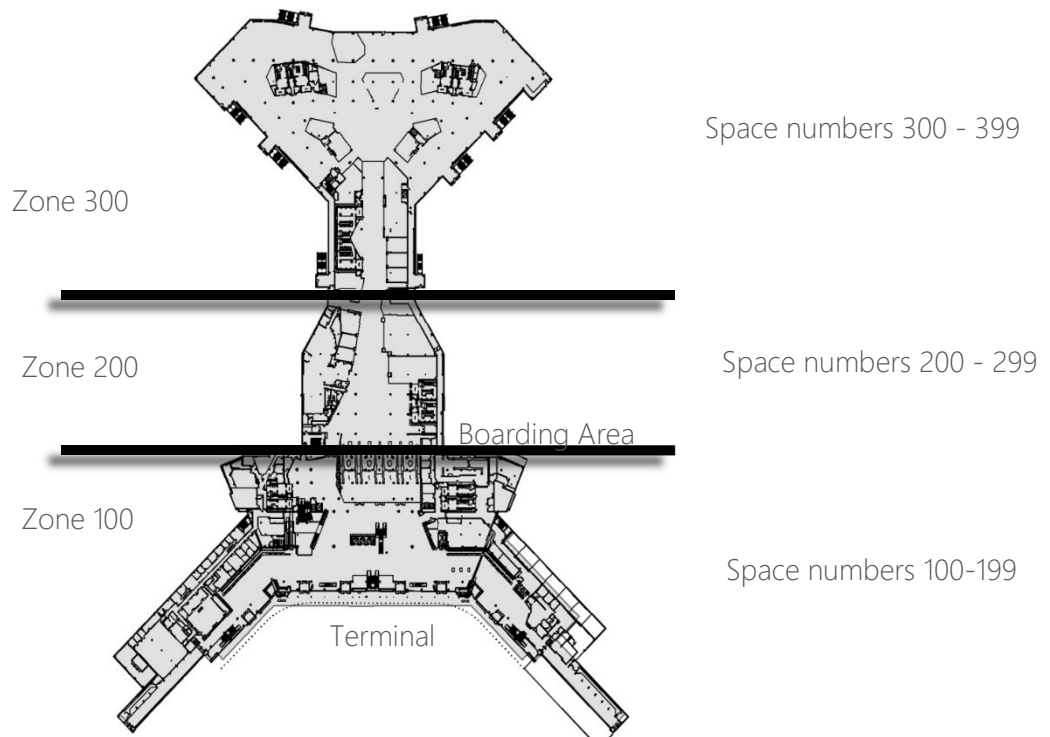Boarding Area

Zone 100

Space numbers 100-199

Terminal

Diagram 6 (Note):
Terminal and boarding areas are to be divided into numeric zones. These zones will help users to determine where the room number will be located within the building. Space numbers are assigned within a zone and range from the lowest number in that zone to the highest. Zones will be in increments of 100 and will start with Zone '000' up to Zone '300' and higher if needed. Zone '100' will be closest to the terminal curb-side and Zone '300' or higher will be furthest from the curb-side, thus supporting the space numbers increasing in value away from the curb from Section 5.b.i.1. Zone breaks will be attempted to be performed at prominent architectural features of the structure. The Airport will make the determination of zone boundaries on a per terminal/boarding area basis.