Rate Map

1 Copy	Zone 2 ✏️	3 [-]	4 0.0
		Product A	0.0
5 Import	6	Product B	0.0
		7	
		Product C	0.0
8 Export	9 🗑️	Product D	0.0
	11 ⊗ 12 ⬇️	13 Color	Blue ⌄
Enable 10 VR			
14 Full Screen			
15 Zones			
16 Sat View			
17 Rate Data			

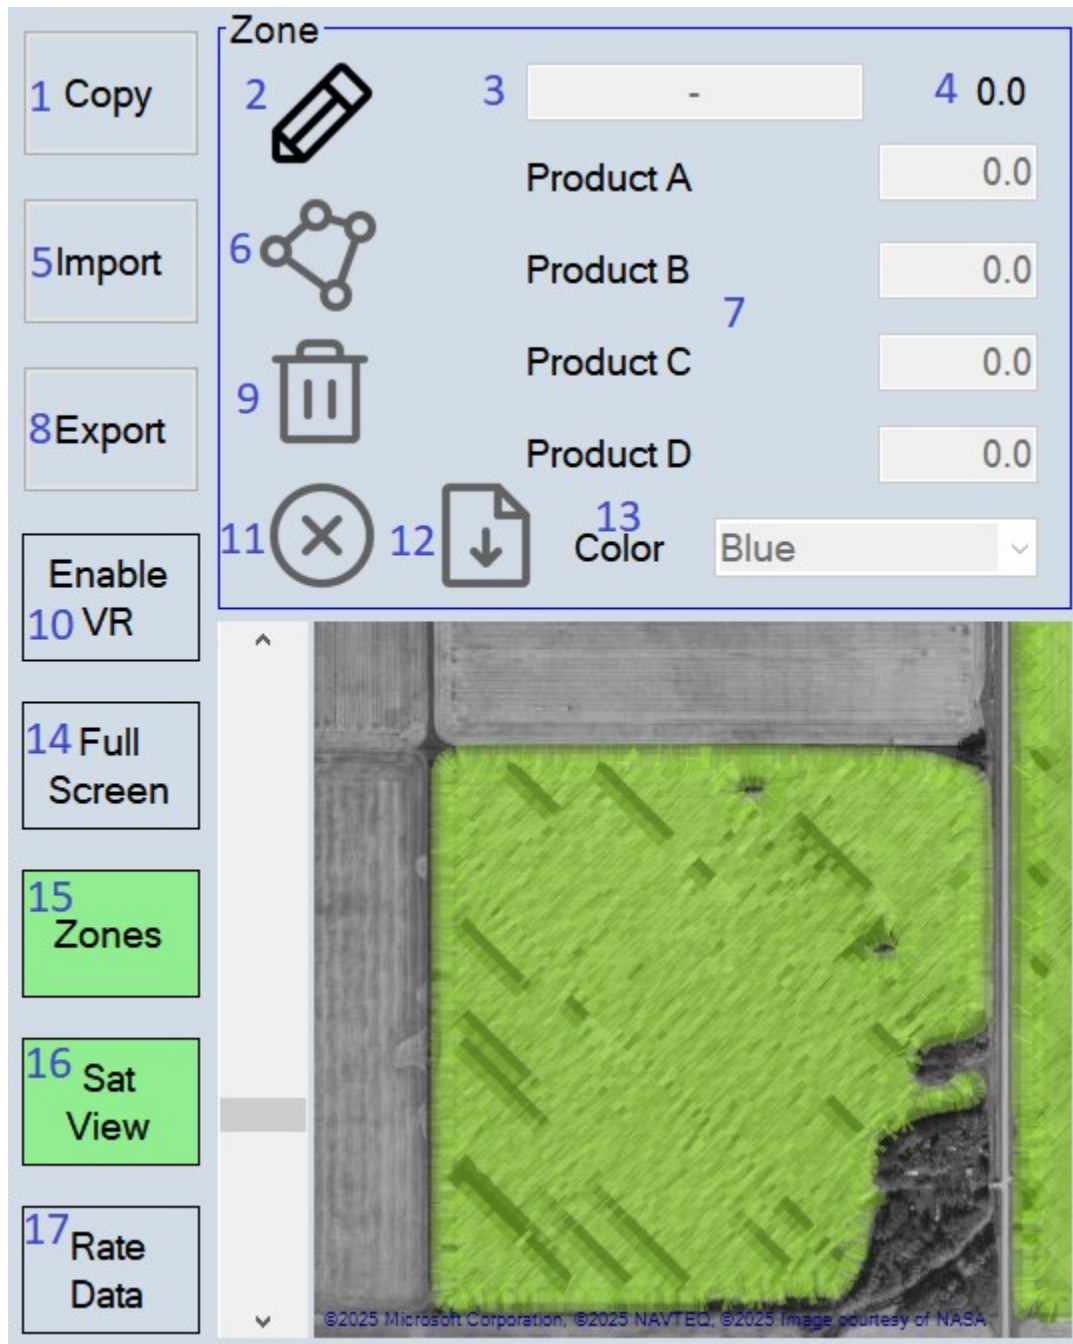©2025 Microsoft Corporation, ©2025 NAVTEQ, ©2025 Image courtesy of NASA

1. Copy rate map from another job.
2. Edit rate zone properties.
3. Assign or edit zone name.
4. Area of zone in acres or hectares.
5. Load a shape file and cross-reference attributes.
6. Edit zone shapes.
7. Assign/edit product application rates.
8. Save map image and shape file.
9. Delete zone.
10. Activate variable rate control for all products.
11. Discard changes.
12. Save changes.
13. Assign or change zone color.
14. Toggle full screen map view.
15. Show/hide zone boundaries.
16. Show/hide satellite imagery.
17. Show/hide rate data overlay.