User Manual — Strike First ABC Dry Chemical Fire Extinguishers

This manual covers the Strike First multi-purpose **ABC dry chemical** portable fire extinguishers supplied by Tesla Fire Systems. Read it completely before you need to use the extinguisher, keep it with your fire-safety records, and make sure everyone who may use the unit knows where it is and how it works.

Models covered

Model	Capacity	UL/ULC rating	Range	Discharge	Pressure
SF-ABC110ST	2.5 lb	1-A:10-B:C	8–10 ft	9 sec	150 PSI
SF-ABC310	5 lb	3-A:10-B:C	8–10 ft	13 sec	195 PSI
SF-ABC340	5 lb	3-A:40-B:C	8–10 ft	13 sec	195 PSI
SF-ABC680	10 lb	6-A:80-B:C	10–15 ft	15 sec	235 PSI
SF-ABC1020	20 lb	10-A:120-B:C	10–15 ft	28 sec	235 PSI
SF-ABC30	30 lb	10-A:120-B:C	10–15 ft	28 sec	195 PSI

Operating temperature range: –65 °F to 120 °F (–54 °C to 49 °C). Ratings, range and discharge times are nominal values from the manufacturer's published data. Always refer to the label on your unit for its exact model and rating.

Standards and approvals

Strike First ABC dry chemical extinguishers are manufactured in Scarborough, Ontario, and are rated to meet or exceed ANSI/UL 299 and 711 and CAN/ULC-S504 and S508. They comply with NFPA 10 and meet D.O.T. requirements; U.S.C.G. approvals apply with the bracket listed on the label.

Before you begin

IMPORTANT — READ FIRST

- A portable extinguisher is for **small, contained fires only**. Your safety and the safety of others come first.
- **Call 911 / the fire department first** — or have someone call — before or as you attempt to fight any fire.
- Keep your back to a clear exit. Do not fight a fire that is spreading, filled with smoke, or blocking your escape.
- Never test-discharge your extinguisher. Discharge empties the unit and it must be recharged before further use.

tesla fire systems inc.

Toronto — Head Office
1010 Bathurst St, Toronto, ON M5R 3G7
(416) 535-9693 | 1-866-471-2916
info@teslafiresystems.com

Vancouver (Office)
112-970 Burrard Street
Vancouver, BC V6Z 2R4
1-866-471-2916

Montreal (Office)
2001 Blvd Robert-Bourassa, 17th Fl
Montreal, QC H3A 2A6
1-866-471-2916

Parts of the extinguisher

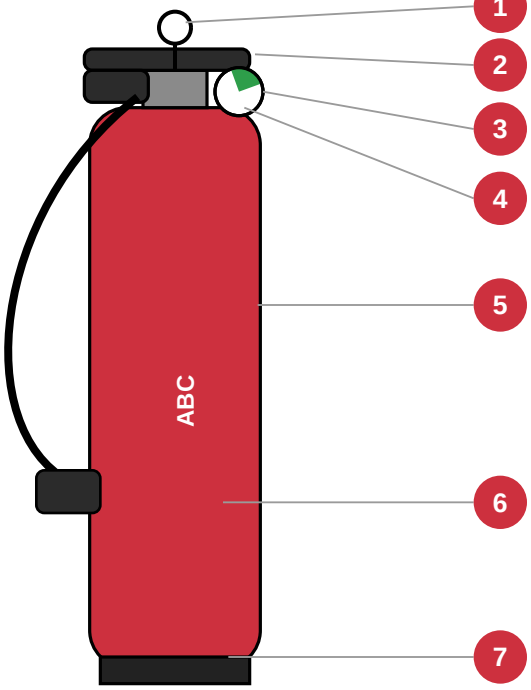

1. **Pull pin & tamper seal**
   Locks the handle. Pull straight out to operate.
2. **Squeeze handle / lever**
   Squeeze to discharge; release to stop.
3. **Pressure gauge**
   Needle in the green zone = charged.
4. **Valve assembly**
   Anodized aluminum handle, stainless gauge.
5. **Cylinder & label**
   Steel cylinder, powder-paint finish. Colour- and bar-coded label.
6. **Hose & nozzle**
   Aim at the base of the fire.
7. **Protective skirt**
   Steel base protects the cylinder.

Fire classes — what this extinguisher is for

Class	Type of fire	ABC unit?
A	Ordinary combustibles — wood, paper, cloth, rubber, many plastics	**Yes**
B	Flammable liquids and gases — gasoline, oil, grease, solvents, propane	**Yes**
C	Energized electrical equipment — panels, appliances, wiring	**Yes**
D	Combustible metals — magnesium, titanium, sodium	**No**
K	Commercial cooking oils and fats (kitchen hoods / fryers)	**No**

Dry chemical leaves a residue that can damage sensitive electronics and is a respiratory irritant — ventilate and clean up promptly after use. Where Class D metals or Class K cooking appliances are present, use the extinguisher type specified for that hazard.

tesla fire systems inc.

Toronto — Head Office
1010 Bathurst St, Toronto, ON M5R 3G7
(416) 535-9693 | 1-866-471-2916
info@teslafiresystems.com

Vancouver (Office)
112-970 Burrard Street
Vancouver, BC V6Z 2R4
1-866-471-2916

Montreal (Office)
2001 Blvd Robert-Bourassa, 17th Fl
Montreal, QC H3A 2A6
1-866-471-2916

How to Use — Remember P.A.S.S.

Operate from a safe distance with your exit behind you. Discharge range is about 8–10 ft on the 2.5 and 5 lb models and 10–15 ft on the 10, 20 and 30 lb models; the discharge lasts only 9–28 seconds, so use it deliberately.

1. **PULL the pin**
   Hold the extinguisher upright and pull the pin straight out, breaking the tamper seal. The pin is oversized and tethered with a retaining strap.

2. **AIM low**
   Point the nozzle or hose at the **base** of the fire — not at the flames. Stay 8–10 ft away (10–15 ft for larger units) and move closer only as the fire diminishes.

3. **SQUEEZE the handle**
   Squeeze the handle and lever together to discharge. Release to stop. On larger units, hold the hose firmly.

4. **SWEEP side to side**
   Sweep the nozzle from side to side across the base of the fire until it is out. Watch for re-ignition and be ready to repeat.

After discharge

- Back away and keep your exit clear. **Do not assume the fire is out** — wait for the fire department to confirm.
- Even a partial discharge empties the extinguisher of pressure and dry chemical reliability. **Tag it out and have it recharged by a certified technician** before returning it to service.
- Ventilate the area. Dry chemical powder is an irritant — avoid breathing it and flush skin or eyes with water if affected.

WARNINGS

- Never use on fires outside the ratings above (Class D metals, Class K cooking oils).
- Do not use on a fire that is large, spreading, or between you and your exit — leave and call 911.
- Do not use the unit if the gauge is out of the green zone, the pin or seal is missing, or the cylinder is damaged or corroded.
- Keep out of reach of children. Not a toy. Do not puncture or incinerate the cylinder — it is under pressure.
- Discharging indoors in confined spaces can reduce visibility. Be prepared to evacuate.

tesla fire systems inc.

Toronto — Head Office
1010 Bathurst St, Toronto, ON M5R 3G7
(416) 535-9693 | 1-866-471-2916
info@teslafiresystems.com

Vancouver (Office)
112-970 Burrard Street
Vancouver, BC V6Z 2R4
1-866-471-2916

Montreal (Office)
2001 Blvd Robert-Bourassa, 17th Fl
Montreal, QC H3A 2A6
1-866-471-2916

Inspection & Maintenance

Maintain your extinguisher in accordance with **NFPA 10** and the requirements of your local fire code (for example, the Ontario Fire Code). Keep a record of every inspection and service on the extinguisher's tag and in your fire-safety log.

Monthly visual check (owner / responsible person)

- ☐ Extinguisher is in its designated location, visible, unobstructed and easy to reach.
- ☐ Pull pin is in place and the tamper seal is intact.
- ☐ Gauge needle is in the green (operable) range.
- ☐ Cylinder is free of dents, rust, corrosion, leakage or clogged nozzle.
- ☐ Hose, nozzle and handle are in good condition. Label is legible and facing out.
- ☐ Bracket is secure, and the unit has not been moved or discharged. Record the date and initials on the tag.

Professional service schedule

Interval	Service	By
Annually	Full maintenance check — mechanical parts, quantity and condition of agent, and pressure; new tamper seal and service tag.	Certified technician
Every 6 years	Stored-pressure dry chemical units are emptied and a maintenance check carried out, then refilled with fresh agent and a six-year tag applied.	Certified technician
Every 12 years	Hydrostatic pressure test of the cylinder (and every 12 years thereafter).	Certified technician
After any use	Recharge, even if only partly discharged. Replace seal and tag.	Certified technician

Mounting and storage

- Mount on the bracket supplied for your model — wall or vehicle/marine — at a height compliant with your local fire code, and near an exit path.
- Store between –65 °F and 120 °F (–54 °C to 49 °C). Keep away from heat sources, corrosive vapours and prolonged moisture.
- Do not paint over, remove or obscure the label, gauge or serial information.

tesla fire systems inc.

Toronto — Head Office
1010 Bathurst St, Toronto, ON M5R 3G7
(416) 535-9693 | 1-866-471-2916
info@teslafiresystems.com

Vancouver (Office)
112-970 Burrard Street
Vancouver, BC V6Z 2R4
1-866-471-2916

Montreal (Office)
2001 Blvd Robert-Bourassa, 17th Fl
Montreal, QC H3A 2A6
1-866-471-2916

Troubleshooting, Warranty & Support

Quick troubleshooting

Observation	What to do
Gauge needle outside the green zone	Do not rely on the unit. Replace it with a spare and have the extinguisher inspected and recharged.
Pin or tamper seal missing or broken	Treat as discharged or tampered with. Take out of service for inspection and recharge.
Dents, rust, leaks or damaged hose / nozzle	Take out of service and have it examined by a certified technician.
Dry chemical leaking from the valve or nozzle	Take out of service immediately. Do not attempt to repair.
Handle will not squeeze or pin will not pull out	Do not force it. Use another extinguisher and have this unit serviced.
Extinguisher is past its annual, 6-year or 12-year date	Book service with a certified technician as soon as possible.

Warranty

Strike First extinguishers carry a **6-year manufacturer's warranty**. Warranty terms and claim procedures are provided by the manufacturer — contact us with your model number and proof of purchase and we will assist you.

Manufacturer

Strike First, 777 Tapscott Road, Scarborough, Ontario M1X 1A2 | 416 299-7767 | 1 888 575-1132 | strike-first.com

Inspection record

Date	Location	Inspected by	Gauge OK?	Notes / Service

This manual is a general guide for the Strike First ABC dry chemical line and does not replace the label on your extinguisher, NFPA 10, or your authority having jurisdiction. Specifications are subject to change without notice.

tesla fire systems inc.

Toronto — Head Office
1010 Bathurst St, Toronto, ON M5R 3G7
(416) 535-9693 | 1-866-471-2916
info@teslafiresystems.com

Vancouver (Office)
112-970 Burrard Street
Vancouver, BC V6Z 2R4
1-866-471-2916

Montreal (Office)
2001 Blvd Robert-Bourassa, 17th Fl
Montreal, QC H3A 2A6
1-866-471-2916