HUNTR/SEEKR

C5 CYD User Guide - Public Beta 1

NM-CYD-C5 (RockBase)

# HUNTR/SEEKR


Counter-surveillance signal scanner

## C5 CYD Edition
## User Guide and Start-up Guide


NM-CYD-C5 (RockBase)
Public Beta 1




Arm groups

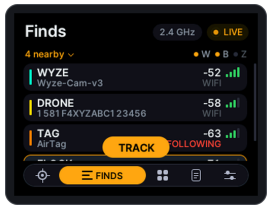


See what it finds

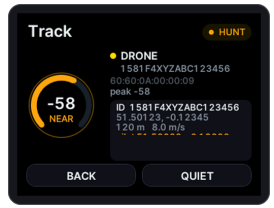


Track a signal

Printable guide. Screen pictures are example renderings of the interface; your screen will match the layout.

# Appendix A. Technical summary

| Item | Detail |
|---|---|
| **Board** | NM-CYD-C5 (RockBase) |
| **Display** | 2.8 inch LCD, 320 x 240 pixels, ST7789 driver (some units use an ILI9341), resistive touch (XPT2046) |
| **Radios** | Dual-band Wi-Fi 6 (scans 2.4 GHz or 5 GHz, your choice), Bluetooth 5 (LE), 802.15.4 (Zigbee / Thread), one shared radio |
| **Built-in extras** | microSD slot, RGB LED (not used by the app), header P1 (IO26 and GND for an optional buzzer), socket for an optional GPS module (P5), two USB-C ports. No speaker, no motion sensor, no clock chip, no battery gauge. |
| **Storage** | Logs and settings on the microSD card if one is fitted, otherwise in on-board flash (about 1.5 MB with the 8M scheme) |
| **Hotspot** | WPA2, name HUNTR-SEEKR-xxxx (four new characters every Share), random 8-character password, address 192.168.4.1 |
| **Software** | Firmware image for the ESP32-C5. Public Beta 1 |





# Contents

**1. About this device** 3

**2. What you need** 5

**3. Quick start** 6

**4. Getting around** 8

**5. The detection groups** 9

**6. Everyday use** 15

**7. Drone Remote ID** 22

**8. Sharing over Wi-Fi with your phone** 23

**9. Logs, signatures, clock and updates** 24

**10. Settings reference** 28

**11. Self-test and troubleshooting** 31

**12. Care, safety and responsible use** 35

**Quick-reference card** 36

**Glossary** 37

**Appendix A. Technical summary** 39

| Term | Meaning |
|---|---|
| **RSSI** | Received signal strength indicator, the number shown in dBm. |
| **SSID** | The name of a Wi-Fi network. |
| **Zigbee / Thread** | Smart-home mesh networks (lights, sensors, locks) that run over 802.15.4. |
| **Skimmer** | A device hidden inside a card reader (gas pump, ATM) that copies card data. Some send it to the thief over Bluetooth. |





# 1. About this device

HUNTR/SEEKR turns the NM-CYD-C5 (cheap yellow display) board into a pocket radio scanner. It listens on the 2.4 GHz or 5 GHz Wi-Fi band and on Bluetooth for the wireless signals that certain kinds of devices give off, compares them with built-in lists of known makers and names, and shows you what it heard, how strong each signal is, and lets you follow a signal to its source.

## What it can find

- **Wi-Fi devices** such as security cameras, doorbells, smart glasses, drones and license-plate readers, from their network names and hardware addresses. Smart bulbs in set-up mode are tagged LIGHT.
- **Bluetooth devices** such as trackers (AirTag, Tile, SmartTag, Google Find Hub), body cameras, smart glasses and drones that announce themselves.
- **Bluetooth types**: beacons (iBeacon, Eddystone, AltBeacon), wearables (watches, fitness bands, rings), smart lights, Fast Pair accessories and Bluetooth Mesh nodes, each shown with a type tag.
- **Zigbee and Thread** smart-home radios (802.15.4), which are separate from Wi-Fi.
- **Drone Remote ID**: many drones broadcast their own serial number and position, which this device can read and display.
- **Possible card skimmers** : Bluetooth LE modules still wearing a factory name such as HC-08 or linvor, the kind sometimes hidden in gas pumps and ATM card readers. See section 6.9 for what this can and cannot do.

## How it works in one minute

Every Wi-Fi access point and camera regularly broadcasts a short **beacon** that says who it is: a network name (**SSID**) and a hardware address (**MAC address**). The first three bytes of a MAC address are the **OUI**, a code that identifies the manufacturer. Bluetooth devices do something similar: they **advertise** a name and manufacturer data. HUNTR/SEEKR receives these broadcasts, matches names and OUIs against its lists, and groups the matches into **groups** such as CAMS or TAGS.

It also measures **signal strength (RSSI)** in dBm. A stronger signal usually means the device is closer, which is what lets you track one down.

# Glossary

| Term | Meaning |
|---|---|
| **802.15.4** | The low-power radio standard used by Zigbee and Thread smart-home devices. Separate from Wi-Fi and Bluetooth. |
| **Access point (AP)** | A device that provides a Wi-Fi network, such as a router or a camera that creates its own network. |
| **Advertisement** | A short Bluetooth message a device sends repeatedly to announce itself. |
| **Beacon** | The Wi-Fi equivalent: an access point announcing its name and details several times a second. |
| **BLE** | Bluetooth Low Energy, the power-saving kind of Bluetooth used by trackers and wearables. |
| **Channel** | A slice of the Wi-Fi band. The device steps through channels 1 to 13 (2.4 GHz) or nine channels from 36 to 165 (5 GHz), listening on each briefly. |
| **CSV** | Comma-separated values: a plain text table that opens in any spreadsheet. |
| **dBm** | The unit of signal strength. Negative numbers; closer to zero is stronger. |
| **Beacon types** | iBeacon, Eddystone and AltBeacon are small, fixed Bluetooth messages that shops and venues broadcast to mark a place or object. |
| **Fast Pair** | Google's quick-pairing system for Android accessories such as earbuds. |
| **Find Hub** | Google's tracker network (formerly Find My Device). Its trackers broadcast a special Bluetooth frame that this device recognizes. |
| **Hotspot** | A Wi-Fi network created by the board itself (HUNTR-SEEKR-xxxx, a new name every time) so your phone can connect to it. |
| **IP address (192.168.4.1)** | The board's address on its own hotspot network. Type it into a phone browser. |
| **MAC address** | A device's hardware address, for example 2C:AA:8E:01:02:03. |
| **OUI** | The first three bytes of a MAC address; identify the manufacturer. |
| **Remote ID** | A broadcast from a drone giving its serial number, position and the pilot's position. |





**IMPORTANT Read this once**

Results are hints, not proof. Device names and addresses can be changed or randomized, many devices are not in the lists, and a quiet device may simply be out of range. "Nothing found" never proves nothing is there. Do not treat a match as evidence about a person or place.

**NOTE About Public Beta 1**

This is a **public beta**: the first release for general use. It does what this guide describes, but a beta can have rough edges and some behaviour may change in later releases. Things that depend on parts you add yourself (the buzzer, a GPS module, a microSD card) work only as well as your wiring and parts allow. If something does not behave as described, section 11 lists what to check, and the project page explains how to report a problem.

# Quick-reference card

Cut out or fold this page and keep it with the device.

| | |
|---|---|
| **MOVE**<br>Swipe left / right, or tap the bottom tabs:<br>ARM, FINDS, GROUPS, LOG, SETUP. | **ARM**<br>ARM page: tap a tile.<br>Or GROUPS page: tap a Scene chip. |
| **TRACK**<br>FINDS: tap a device, then TRACK.<br>Number closer to zero = closer to it. | **HIDE A DEVICE**<br>Long-press its row for one second. |
| **PAUSE / RESUME**<br>Tap the pill at the top right. | **SILENT + DIM**<br>Long-press the pill (it shows QUIET). |
| **WI-FI vs ZB/TH**<br>Only one side at a time. Blocked tiles are dim red. BT and TAGS work with both. | **SIGNAL (dBm)**<br>-30 to -50 very close<br>-50 to -65 close<br>-65 to -80 medium<br>-80 to -90 far |
| **HOTSPOT**<br>LOG > SHARE. Join HUNTR-SEEKR-xxxx (the name shown on the board), open http://192.168.4.1. Wi-Fi scanning pauses meanwhile. | **SET THE CLOCK**<br>Open /live from your phone once while on the hotspot. |
| **CALIBRATE TOUCH**<br>SETUP > Calibrate touch: press and hold each of the four crosses. | **SOMETHING WRONG?**<br>SETUP > Self-test.<br>A red dot marks the problem. |





# 2. What you need

| Item | Notes |
|---|---|
| **NM-CYD-C5 (RockBase) board** | The board this guide covers. It has the 2.8 inch resistive touchscreen, a microSD card slot and two USB-C ports. It has no speaker of its own: add a small passive buzzer if you want sound (section 2). |
| **USB-C data cable** | Must be a data cable, not a charge-only cable. Some cables that came with power banks are charge-only. |
| **A computer** | Windows, macOS or Linux, to load the software onto the board. |
| **The firmware file** | **HUNTR-SEEKR_C5_CYD_Public_Beta_1.bin** and **SHA256SUMS.txt**, from the project's Releases page (section 2). |
| **A flashing tool** | **esptool**, free, needs Python 3. Section 3.2 shows the one command you need. |
| **A phone (optional)** | Used for the Live view and to set the clock (this board has no clock chip) over the board's own Wi-Fi hotspot. |
| **A buzzer (optional)** | There is no speaker on the board. For sound add a small **passive buzzer or piezo** to header **P1**: **pin 3 (IO26)** to its + and **pin 4 (GND)** to its -. The software uses IO26 for the buzzer. IO26 is one of the chip's boot-mode pins: a piezo is safest, and if flashing ever fails with a magnetic buzzer fitted, unplug it while you flash. Do not use IO8 or IO9 (the I2C lines). |
| **A microSD card (optional)** | Logs, the ignore list and your own signatures are kept on the card when one is fitted at start-up; otherwise in the board's flash. **SETUP > Save to** can force either. Use a FAT32 card (32 GB or smaller is safest) and fit it before you switch the board on. |
| **A GPS module (optional)** | Plugs into the board's P5 socket (for example the NM-ATGM336H) and adds your position to the log. |

**TIP One device**
This guide is for the **C5 CYD** (NM-CYD-C5 (RockBase)). The boot screen shows the software version in small text at the bottom.

# 12. Care, safety and responsible use

- **It mostly listens.** It receives broadcasts. The access-point scan and Bluetooth scanning send the same small "who is there?" requests any phone sends. It does not jam, connect to, or interfere with other devices.
- **Know the law where you are.** Rules about scanning radio signals, recording device information and following people differ between countries and places. You are responsible for how you use it.
- **Results are not proof.** A match means a signal looked like a known kind of device. It cannot tell you whether a device is recording, who owns it, or why it is there. Names and addresses can be changed or randomized.
- **Do not use it to harass or confront anyone.** If a tracker alert worries you, move to a safe public place and contact the appropriate authorities or support services in your area.
- **Power.** Use a proper USB-C supply and cable. If you add your own battery or power bank, follow its maker's safety instructions.
- **Keep the software up to date** by flashing newer releases.





# 3. Quick start

## 3.1 Get the firmware file

Download **HUNTR-SEEKR_C5_CYD_Public_Beta_1.bin** and **SHA256SUMS.txt** from the project's Releases page and keep them in one folder. To check the download is intact, compare its checksum with the line in SHA256SUMS.txt (optional but recommended):

| Computer | Command |
|---|---|
| **Windows (PowerShell)** | **Get-FileHash .\HUNTR-SEEKR_C5_CYD_Public_Beta_1.bin -Algorithm SHA256** |
| **macOS or Linux** | **shasum -a 256 -c SHA256SUMS.txt** |

## 3.2 Flash it to the board

1. Install **Python 3** (python.org) if you do not have it, then install the flashing tool once: **pip install esptool** (on Windows, if pip is not found: **py -m pip install esptool**).
2. Plug the board into the computer with the USB-C data cable.
3. Find the port: on **Windows** it is a COM port in Device Manager (for example COM5); on **macOS** it looks like /dev/cu.usbmodem... (list with ls /dev/cu.*); on **Linux** it is usually /dev/ttyACM0.
4. In a terminal, in the folder with the file, run (replace YOUR_PORT):
   **esptool --chip esp32c5 --port YOUR_PORT --baud 460800 write-flash 0x0 HUNTR-SEEKR_C5_CYD_Public_Beta_1.bin**
5. Wait for **Hash of data verified** and **Hard resetting**. The board restarts by itself.

> **TIP If the computer cannot connect to the board**
> Use a USB-C **data** cable, and try the other USB-C port on the board and another port on the computer. Then put the chip in download mode: unplug the cable, **hold the board's BOOT button**, plug the cable in, release BOOT, and run the command again. If the connection is unreliable, use **--baud 115200**. If a magnetic buzzer is fitted, unplug it while you flash.

| What you see | What to try |
|---|---|
| **Log times are blank or amber** | The clock is not set. Open the Live view from your phone once. |
| **My logs are not on the SD card** | Open **SETUP > Self-test** and drag down to the **SD card** row: it says whether the card was found. Fit the card **before** you switch the board on (it is not noticed later). Use a **FAT32** card: cards over 32 GB are often exFAT, which this board cannot read. Check **SETUP > Save to** is not Flash only. |
| **The phone will not stay on the hotspot** | Some phones drop networks without internet. Turn off "auto-switch to mobile data" or similar while connected. The address is http://192.168.4.1 (not https). |
| **The phone says "Unable to join the network"** | Join the exact name shown on the board: it ends in four characters that change every time you press Share, along with the password. If the phone still refuses, it may have saved an older network from a previous version (or another board) that is called plain HUNTR-SEEKR: forget it (iPhone: Settings > Wi-Fi > the i next to the name > Forget This Network; Android: touch and hold the name > Forget) and join again. |
| **The phone update page does not work** | Not supported on this board in this release. Update over USB (section 3.2). |
| **A watch or phone shows only "Apple" or does not appear** | Normal. Apple devices rotate their address and send very little, so they cannot be told apart from each other. |
| **A light or watch shows as plain BT** | Its name and maker did not match the built-in lists. You can add your own rule in /sigs (section 9.3). |
| **A DEAUTH, TWIN or KARMA warning appears** | Section 5.2 explains each one. They are warnings, not proof; a venue with several access points can look like a TWIN. Tap the find to Track the source, hide it with the ignore list, or turn the alerts off with SETUP > Rogue Wi-Fi alert. |
| **I cannot find a Wi-Fi device I know is there** | Check **SETUP > Wi-Fi band**. The sweep hears only the band you chose, so a 5 GHz access point does not show while the band is 2.4 GHz, and the other way round. |
| **Bluetooth finds are slow to appear while a Wi-Fi group is armed** | Keep **SETUP > Wi-Fi band** on 2.4 GHz (the board has one radio for Wi-Fi and Bluetooth) and check **SETUP > Self-test > Radio timing**. If it is still slow, turn **SETUP > Bluetooth share** on (section 5.2) so Wi-Fi pauses regularly and Bluetooth gets the whole radio. |







> **NOTE What flashing changes**
> Writing the file replaces the software and **resets the saved settings**, including the touch calibration, so you will be asked to press the four crosses again. Logs saved on the microSD card are not touched. To update later, flash the newer file the same way.

## 3.3 First start-up checklist


1. The screen shows a small radar animation and the name, then a line at the bottom: **ready Public Beta 1**.
2. The first time only, the **Touch setup** screen appears by itself, before anything else: press and hold each of the four crosses (section 6.8). Then the **ARM** page appears with nine group tiles. That is the home screen.
3. If the bottom line says **touch NOT detected** in red, see Troubleshooting (section 11.2).
4. Tap the tiles to check that touch works. Then go to **SETUP > Self-test** (see section 10). Every dot should be green except Motion (this board has no motion sensor) and Clock until you set it from your phone.

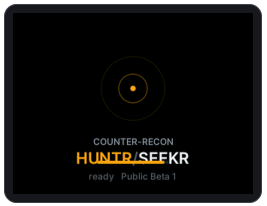


Boot screen

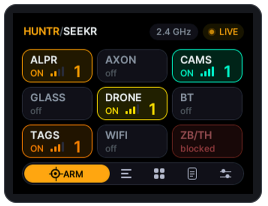


ARM page (home)

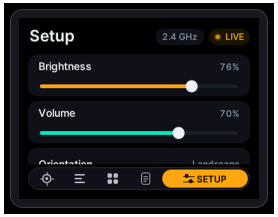


SETUP page

## 11.2 Troubleshooting

| What you see | What to try |
|---|---|
| **Nothing shows on the screen** | Check the cable is a data cable, try another USB port, and unplug and replug the board. If it stays black or shows noise, flash the .bin again (section 3.2). If it still does, your board may have a different display panel than this release supports: report it on the project page. |
| **The picture appears but the colours are wrong** | Open **SETUP > Screen colors** and tap it until the colours look right: **Swap R/B** if red and blue are traded, **Invert** if the picture looks like a photo negative, **Swap + invert** if it is both. Some boards use a slightly different display panel, and this makes up for it. The choice is kept. |
| **Touch does nothing** | Boot screen says "touch NOT detected"? Unplug, wait, plug in again. Check Self-test > Touch. Flash the .bin again (section 3.2). |
| **Touch lands in the wrong place, or only works near the edges** | Run **SETUP > Calibrate touch** (section 6.8) and press each cross exactly. |
| **The first touch after a pause does nothing** | Normal: that touch wakes the screen. Touch again. |
| **No sound** | Check, in this order: (1) a **passive** buzzer with + on **IO26** (header P1 pin 3) and - on **GND** (pin 4); (2) the Volume slider is up and Discreet mode is off; (3) SETUP > Self-test > BEEP. The Serial Monitor (115200) prints "sound: buzzer ready on IO26" at start-up. |
| **Wi-Fi groups find nothing** | The list says "Wi-Fi radio: no frames yet" at first, then after 10 seconds "scanning access points". In that mode only access points are seen, in bursts. Wi-Fi also pauses while the Share hotspot is on. Make sure a Wi-Fi group (not ZB/TH) is armed. |
| **The list says "Wi-Fi hears nothing: unplug USB power 10 s"** | The board's radio has stopped hearing Wi-Fi at all. This can follow Zigbee/Thread scanning (or other firmware that used the radio), and a restart does not always clear it: unplug USB power for about 10 seconds and plug it back in, then arm a Wi-Fi group first. If the problem started after you switched **SETUP > Wi-Fi band** to 5 GHz, set it back to 2.4 GHz. |
| **A tile is dim red and says blocked** | You armed groups from the other side of the radio rule (section 5). Switch the other side off first. |





# 4. Getting around

The device has five pages. Swipe left and right to move between them, or tap the tab bar along the bottom. The tab you are on grows to show its name.

| Page | What it is for |
|---|---|
| **ARM** | Turn detection groups on and off. Each group is a tile. |
| **FINDS** | The live list of everything found (strongest first by default; tap the count to change the view). |
| **GROUPS** | Every group with what it looks for, its live results, and one-tap Scenes. |
| **LOG** | The findings record (SAVE LOG), counters, the Share button and the Session Report. |
| **SETUP** | Brightness, volume, orientation, alerts and other settings. |

## Touch gestures

| Do this | To get this |
|---|---|
| **Tap** | Select or press a button, arm or disarm a tile, choose a row. |
| **Swipe left / right** | Move to the next / previous page. |
| **Drag up / down** | Scroll a long list or page. |
| **Long-press a tile (about half a second)** | Open the list of finds for just that group. |
| **Long-press a find in a list (about one second)** | Hide that device. Bring it back from the Ignored screen (tap N hidden). |
| **Tap the status pill (top right)** | Pause or resume scanning. |
| **Long-press the status pill** | Switch Discreet mode on or off. |
| **Touch a sleeping screen** | The first touch only wakes the screen. Touch again to act. |

| Row | What green means | If it is red |
|---|---|---|
| **SD card / Storage / Memory** | **SD card**: its size and free space, green when findings are saved on it. **Storage**: space used on whichever storage is in use (the card or the flash), custom rules loaded, hidden devices. **Memory**: free memory and uptime. | **SD card** red: no card was found (or Save to is Flash only), so findings go to the flash (or nowhere, with SD card only). **Storage** red means logs cannot be saved. Free space with SETUP > Storage > DELETE LOGS. |





### The status pill

The rounded label at the top right tells you what the device is doing. (This board has no battery, so it shows no battery icon.) Just to its left, a small label shows the Wi-Fi band in use: **2.4 GHz** (grey) or **5 GHz** (teal). It follows **SETUP > Wi-Fi band** at once and appears on the main pages.

| Pill says | Meaning |
|---|---|
| **LIVE** | Scanning is running normally. |
| **PAUSED** | You paused scanning. Nothing new is recorded. |
| **IDLE** | No group is armed, so nothing is being scanned. |
| **HUNT** | You are tracking one device. |
| **QUIET** | Discreet mode is on: silent, dim, no banners. |
| **SAVER** | Power saver is active: dimmer, shorter screen time, slower scanning. |
| **SKIM?** | A possible card skimmer was heard in the last 3 minutes (section 6.9). The pill is red. |

# 5. The detection groups

Everything the device looks for is organized into nine groups. Arm the ones you care about; the device only records matches for armed groups.

| Group | Looks for | Radio |
|---|---|---|
| **ALPR** | Flock (cameras, Raven sensors, battery packs), Penguin, Pigvision, Ubicquia and Genetec AutoVu (license-plate readers) | Wi-Fi and Bluetooth |
| **AXON** | Body cameras, docks, TASER (Axon equipment), also recognised by their Bluetooth service data and company ID | Wi-Fi and Bluetooth |
| **CAMS** | Wyze, Ring, Tapo, Reolink, Eufy, Nest, Arlo, Blink, Amcrest, Lorex, Hikvision, Dahua, Axis, Uniview, Vivotek, Hanwha cameras, and the names low-cost hidden-camera modules use; police body and dash cameras (Digital Ally, WatchGuard, i-PRO, Utility BodyWorn, Motorola VideoManager); Verkada, Avigilon | Wi-Fi and Bluetooth |
| **GLASS** | Ray-Ban Meta (Wayfarer, Oakley Meta), Spectacles, Vuzix smart glasses | Wi-Fi and Bluetooth |

# 11. Self-test and troubleshooting

## 11.1 The Self-test screen

**SETUP > Self-test** lists each part of the board with a green dot when it looks healthy and a red dot when it does not. It updates several times a second. On this board **Motion** is always red (there is no motion sensor) and **Clock** is red until you set it from your phone. The list is longer than the screen: **drag it up and down** to see every row. **BEEP** plays the start-up melody so you can check the buzzer.

| Row | What green means | If it is red |
|---|---|---|
| **Touch** | The touch chip answers. Numbers show how many readings and touch signals it has sent. | Restart the board. If it stays red, flash the .bin again (section 3.2). |
| **Display** | Shows the screen size and brightness. | - |
| **Sound** | The buzzer pin is set (BEEP plays the start-up melody). The board cannot tell whether a buzzer is really connected. | Check the volume is above zero; flash the .bin again. |
| **Motion** | This board has no motion sensor, so this row says "not found" in red. That is normal. | Nothing to fix. |
| **Clock** | The clock has a valid time. | Open the Live view from your phone to set it ("approx" means estimated). |
| **Battery** | Says "no battery detected": normal, the board runs from USB power. | Nothing to fix. |
| **Radios** | Counts of Wi-Fi, Bluetooth and 802.15.4 signals received. | Zeros with a group armed: see the Wi-Fi row below. |
| **Radio timing** | Seconds from switching the radios on to the first Wi-Fi frame and the first Bluetooth advert, and how many times a radio had to be restarted (W for Wi-Fi, B for Bluetooth). | Amber means a restart was needed. Rarely is fine; always amber: keep the band on 2.4 GHz and arm fewer groups. |
| **Last start** | How the device last started (power on, restart or reset button) with no fault. | Red names the step it was in when it crashed or reset, for example *crash while: wifi start*. Include that line in a bug report. |






| Group | Looks for | Radio |
|---|---|---|
| **DRONE** | DJI, Autel, Skydio, Parrot, and Remote ID broadcasts | Wi-Fi and Bluetooth |
| **BT** | Bluetooth devices by name or maker, with type tags (see section 5.1): IBEACON, EDDYSTONE, ALTBEACON, WEARABLE, LIGHT, FASTPAIR, MESH; also named when recognised: public-safety radios and vehicle light-bar controllers (Motorola, L3Harris, Tait, Feniex, SoundOff, Whelen) | Bluetooth |
| **TAGS** | Tile, AirTag and other Find My trackers, SmartTag, Google Find Hub trackers, Chipolo, Pebblebee, TrackR, Jiobit | Bluetooth |
| **WIFI** | Any nearby Wi-Fi network (access point) on the band you chose, and devices with a fixed address asking for a named network (tag PROBE). Rogue Wi-Fi signs are tagged DEAUTH, TWIN and KARMA (section 5.2). Smart bulbs in set-up mode (WiZ, LIFX, Yeelight) are tagged LIGHT. Vehicle routers (Cradlepoint, Sierra Wireless, Peplink), rugged laptops and handhelds (Panasonic, Zebra, Datalogic) are named when recognised | Wi-Fi |
| **ZB/TH** | Zigbee, Thread and plain 802.15.4 devices (channels 11 to 26) | 802.15.4 |


**NOTE About the public-safety signatures**

Many of these signatures come from a published list and are marked there as **possible**: the maker also sells ordinary products, so a match is a hint, never proof. Those are listed quietly (low confidence, no alert). What it cannot see: radios and accessories that use only **Bluetooth Classic** (many Motorola, Harris, Tait and Kenwood models), 5 GHz channels that need a radar check (52 to 144), and devices that use a random address. Agency fleet Wi-Fi names are usually changed from the maker's default, so a router can go unseen. The device recognises 166 of the 184 signatures in the list it was built from by itself (no rules file needed); the other 18 need abilities these chips lack, such as Bluetooth Classic.


| Setting | Options | Default | What it does |
|---|---|---|---|
| **Bluetooth share** | On / Off | Off | With Wi-Fi and Bluetooth groups armed together, pauses Wi-Fi for 2 seconds in every 6 so Bluetooth gets the whole radio (section 5.2). |
| **Auto-dim** | On / Off | Off | When on, dims the screen after 60 s and switches it off after 2 minutes; a touch wakes it. Off by default, so the screen stays on. Turn it on to save power. |
| **Power saver** | Off, Auto, On | Auto | See section 6.7. |
| **Discreet mode** | On / Off | Off | Silent, dim, no banners. Same as a long-press on the status pill. |
| **Boot logo** | Default, Custom | Default | The picture on the boot screen. Custom is your own picture uploaded from the phone page (section 9.5). |
| **Ignore list** | Tap to open the Ignored screen | Empty | Shows how many devices are hidden. Tap a device there to restore it, or RESTORE ALL. |
| **Self-test** | Opens a screen | - | Checks every part of the hardware (next page). |
| **Help** | Opens a screen | - | A short in-device reminder of the groups and tips. |
| **Storage** | Opens a screen | - | Shows how full the flash memory is and lists the files on it. |

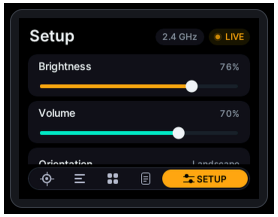


Brightness, volume, orientation

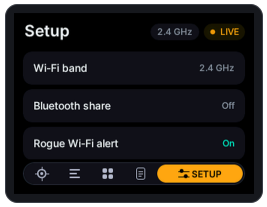


Alerts and modes

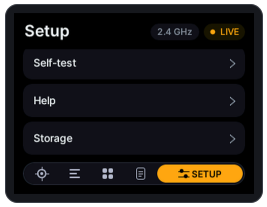


Ignore list, Self-test, Help, Storage






## The one rule: Wi-Fi groups and ZB/TH cannot run together


The board has a single radio that is shared between Wi-Fi, Bluetooth and 802.15.4. Bluetooth groups can run alongside either, but Wi-Fi scanning and Zigbee/Thread scanning both need the radio to itself, so the device lets you arm **one side at a time**:

- **Wi-Fi side:** ALPR, AXON, CAMS, GLASS, DRONE, WIFI.
- **802.15.4 side:** ZB/TH only.
- **BT** and **TAGS** work with either side.


When one side is armed, every tile on the other side turns dim red and says **blocked**. Tapping a blocked tile shakes it and shows a short message telling you what to switch off first.

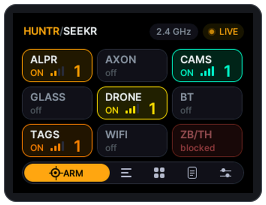


ARM page: the red ZB/TH tile is blocked while Wi-Fi groups are armed

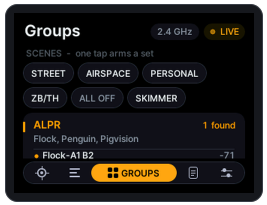


GROUPS page with Scenes

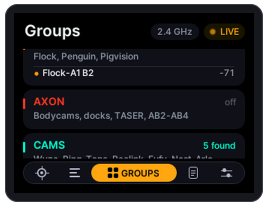


A group card lists its strongest targets

## Signal strength (dBm) in plain terms

Signal strength is shown as a negative number in dBm. **Closer to zero is stronger.** Each 10 dB is roughly a tenfold change in power.

| Reading | What it usually means |
|---|---|
| **-30 to -50** | Very close: within a few metres, often the same room. |
| **-50 to -65** | Close: same room or just through a wall. |
| **-65 to -80** | Moderate: another room, or 10 to 20 metres in the open. |
| **-80 to -90** | Weak: far away or heavily blocked. |
| **below -90** | Barely detectable. |

| Setting | Options | Default | What it does |
|---|---|---|---|
| **Screen colors** | Normal, Swap R/B, Invert, Swap + invert | Normal | Corrects a screen whose colours look wrong. Each tap moves to the next choice and the picture changes at once; the choice is kept. **Swap R/B** fixes red and blue traded places (skin looks blue); **Invert** fixes a photo-negative picture; **Swap + invert** does both. Leave it on Normal if the colours already look right (section 11.2). |
| **Find alert** | Off, New group, Every find | New group | How often finds are announced by chime and banner. |
| **Tracker alert** | Off, 5, 10, 20 minutes | 10 min | How long a tracker must stay near you before the FOLLOWING alert. |
| **Skimmer alert** | On / Off | On | Warns when a Bluetooth LE module with a card-skimmer name is heard (section 6.9). Works whichever groups are armed, as long as scanning is running. |
| **Save to** | Auto: SD first / SD card only / Flash only | Auto: SD first | Where logs, the ignore list and your signatures are kept. **Auto** uses the microSD card when one is fitted at start-up and the flash otherwise. **SD card only** never falls back to the flash: with no card nothing is saved, and the Self-test says so. **Flash only** ignores the card. A change applies after a restart (unplug and replug USB). |
| **Rogue Wi-Fi alert** | On / Off | On | Announces DEAUTH, TWIN and KARMA signs (section 5.2) whichever groups are armed, as long as a Wi-Fi group is scanning. |
| **Wi-Fi band** | 2.4 GHz / 5 GHz | 2.4 GHz | Which Wi-Fi band the sweep listens on (section 5.2). |





The bars beside a reading: 4 bars is stronger than -55, 3 is stronger than -65, 2 is stronger than -75, 1 is stronger than -88. Treat all of this as rough. Walls, your own body and the other device's antenna can change a reading by 10 to 20 dB.

## 5.1 Bluetooth type tags

Devices found by the **BT** group carry a tag in the list that says what kind of device they appear to be, instead of a plain "BT". Unnamed devices are shown by their maker (for example "Garmin" or "Huami") using the official Bluetooth company list, not a bare number.

| Tag | What it means | How it is recognized |
|---|---|---|
| **IBEACON** | Apple iBeacon (shops, museums, asset tags). The row shows a short ID and the major/minor numbers, e.g. iB 4F52 1234/5678. | Apple's beacon message inside the Bluetooth advertisement. |
| **EDDYSTONE** | Google's open beacon format. Shows the beacon ID or the web address it broadcasts. | The Eddystone service and frame type (UID, URL, TLM, EID). |
| **ALTBEACON** | An open beacon format used by many vendors. | The 0xBEAC marker in the manufacturer data. |
| **WEARABLE** | Watches, fitness bands, heart-rate straps and rings (Garmin, Amazfit/Huami, Polar, Suunto, Withings, Oura, Galaxy Watch and similar). | The maker, the device name, or the device's own "I am a watch" appearance code. |
| **LIGHT** | Bluetooth bulbs and LED strips (Govee, Philips Hue, Yeelight, Nanoleaf, common strip controllers). | The maker, the name, or the Hue service. Wi-Fi bulbs in set-up mode are tagged the same way. |
| **FASTPAIR** | An Android Fast Pair accessory, typically earbuds or headphones. Not a tracker. | Google's Fast Pair service. |
| **MESH** | A Bluetooth Mesh node (often lighting or sensors). | The Mesh proxy or provisioning service. |

> **NOTE Tags are best guesses**
> A device can call itself anything, and many phones and watches hide behind changing addresses and say almost nothing. An Apple Watch or iPhone usually appears only as "Apple", or not at all. Zigbee bulbs (Hue bridge, IKEA) can be seen only as a Zigbee network under ZB/TH, never by name, because their radio traffic is encrypted.
> Type-tagged finds are quiet: they are listed but do not trigger chimes, banners or log entries.

| Item | Detail |
|---|---|
| **Largest picture** | 232 x 232 pixels. The page makes the picture fit for you. A picture that is taller than the room on a given screen (for example in landscape) is shrunk to fit when it is drawn, keeping its shape; it is never enlarged. |
| **Your existing boot.bmp** | A plain **24-bit uncompressed BMP** uploaded from the hotspot's home page also works as it is, up to 1024 x 1024 (it is shrunk to fit when drawn). If both exist, the picture from the Boot logo page is used. 8-bit, compressed and other BMP types are not supported: use the Boot logo page and it will convert them. |
| **Size on flash** | A 200 x 200 picture is 78 KB. It is read from flash while the boot screen is drawn, so it uses no memory. It is drawn once; afterwards only the progress bar is redrawn. |
| **If something goes wrong** | If the file is missing, damaged or too big for the screen, the normal radar boot screen is shown instead of a blank one. Delete on the Boot logo page removes the picture and returns to Default. |
| **Housekeeping** | DELETE LOGS and Wipe all logs never touch your picture. Uploads are refused if less than 40 KB of storage would be left free. |


# 10. Settings reference

Find these on the **SETUP** page. Drag up to scroll; the list is long.

| Setting | Options | Default | What it does |
|---|---|---|---|
| **Brightness** | Slider | About 78% | Screen brightness. The screen also dims automatically when idle. |
| **Volume** | Slider, 0 to 100% | 70% | How loud the buzzer is, if you have fitted one (section 2): all the way right is the loudest it can be, all the way left is silent, and in between it gets steadily louder. With no buzzer fitted it does nothing. |
| **Orientation** | Portrait, Landscape, Portrait flip, Landscape flip | Landscape | Which way the screen is drawn. The touch calibration works in every orientation. |
| **Calibrate touch** | Opens a screen | - | Runs the four-cross touch calibration again (section 6.8). |





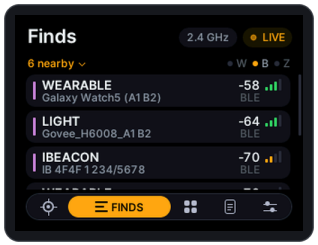


FINDS list with type tags: WEARABLE, LIGHT, IBEACON

## 5.2 Wi-Fi band, Bluetooth share and rogue Wi-Fi signs

The Wi-Fi sweep listens on one band at a time, chosen with **SETUP > Wi-Fi band**. **2.4 GHz** (the default) steps through channels 1 to 13. **5 GHz** steps through nine channels: 36, 40, 44, 48, 149, 153, 157, 161 and 165. The 5 GHz channels that need a radar check (52 to 144) are not scanned. Devices on the other band are not heard, so switch bands to look at the other one. Track and hunt follow a device on its own channel in either band. A small label at the top of the main pages, just left of the status pill, always shows the band in use: **2.4 GHz** in grey or **5 GHz** in teal. If the radio refuses 5 GHz, the device says so, with the reason, stays on 2.4 GHz and the label returns to 2.4 GHz.

**SETUP > Bluetooth share** (Off by default) is for when Wi-Fi and Bluetooth groups are armed together. With it On, Wi-Fi scanning pauses for 2 seconds in every 6 so Bluetooth gets the whole radio for a while. Turn it On if Bluetooth finds are slow to appear while a Wi-Fi group is armed. The board has one radio that Wi-Fi and Bluetooth share, so keep the band on **2.4 GHz** when Bluetooth groups are armed.

**Switching groups on and off.** Arm and disarm groups in any order and as often as you like. When only Bluetooth groups are armed, the Wi-Fi radio is switched off so Bluetooth has the board to itself, and it starts again as soon as a Wi-Fi group is armed. While Wi-Fi and Bluetooth are both running, Bluetooth listens quietly and every 25 seconds asks nearby devices for their names for a few seconds. **SETUP > Self-test > Radio timing** shows how long each radio took to hear its first signal.

While a Wi-Fi group is scanning, the device also watches for three signs of rogue Wi-Fi behaviour, and lists devices that are asking for a named network:

and, optionally, **low**, **med** or **high** confidence. The page shows how many rules loaded and how many lines were ignored as invalid.

**Signature updates.** A second file named **sigs_update.txt** in the top folder of the microSD card (or the board's flash) uses the same format and is read after your own rules, so an update can be dropped onto the card and takes effect at the next start-up. Keep your own rules in /sigs and use sigs_update.txt only for lists you receive from someone else.

## 9.4 Update the software

This board is updated over USB: flash the newer .bin file as described in section 3.2. The phone update page (192.168.4.1/update) is not supported on this board in this release; update over USB. Flashing resets the saved settings (including the touch calibration); saved logs stay.

## 9.5 A boot logo of your own

The boot screen normally shows the radar rings and the HUNTR/SEEKR title. You can replace those with your own picture. The progress bar and the version line stay.

1. Press **SHARE** on the LOG page, join the **HUNTR-SEEKR-xxxx** hotspot (the name shown on the board) and open **192.168.4.1/bootlogo** (or tap **Boot logo** on the home page).
2. Choose any picture: PNG, JPG, BMP, GIF or WebP. The page converts it in your browser: it shrinks it to fit this screen (the page states the largest size, for example 232 x 232 px on this board), turns transparent areas black, and shows you the result.
3. Press **Upload to the device**. The page says **OK - saved 280 x 140** and the boot logo is switched to **Custom** for you. **Show it on the device** displays the boot screen straight away.
4. **SETUP > Boot logo** switches between **Default** and **Custom** (only offered once a picture is stored). Each change shows a preview of the boot screen.






| Tag | What it means | How it is decided |
|---|---|---|
| **DEAUTH** | A transmitter is flooding de-authentication frames, which knock devices off a Wi-Fi network. It can be a Wi-Fi attack or a faulty device. | 15 or more de-authentication or disassociation frames from one address within one second. |
| **TWIN** | A network name that is also heard on a password-protected network from a different maker, but this copy is open. It may be an "evil twin" set up to catch people who join. | The same name on an open access point and on a protected one whose hardware address belongs to a different maker. |
| **KARMA** | One transmitter that answers to many different network names, which is how some attack gadgets lure phones. | Replies for 5 or more different names within 30 seconds. |
| **PROBE** | A device with a fixed (not randomized) address is asking for a particular network name, which is shown. Listed in the WIFI group at low confidence. | Probe requests only. Phones that randomize their address are not listed. |


**NOTE Warnings, not proof**
A venue with several access points, a hotspot or a repeater can look like a TWIN, and a busy network can look like a DEAUTH. DEAUTH, TWIN and KARMA are announced (chime and banner, following the Find alert setting) whichever groups are armed, as long as at least one Wi-Fi group is armed so that scanning is running. Turn them off with **SETUP > Rogue Wi-Fi alert**.

## Other things it notices

- **Device fingerprint.** Many Wi-Fi devices can be told apart by the way they describe themselves when they ask to join a network. The device adds a short code (for example **IE-fp 3A91C0F2**) to the name of a Wi-Fi device it has heard, so the same hardware can be recognised again even if its name or address changes. You can turn a code into a rule (section 9.3).
- **Drone Remote ID over Wi-Fi.** Drones that send Remote ID using Wi-Fi Aware (NAN) are read and shown in the DRONE group, the same as Bluetooth and beacon Remote ID.
- **Bluetooth spam.** Phones and gadgets that flood the air with fake pairing pop-ups (Apple, Fast Pair and Swift Pair) are recognised and shown once as **BLE SPAM**, so they do not fill the list with hundreds of fake devices.

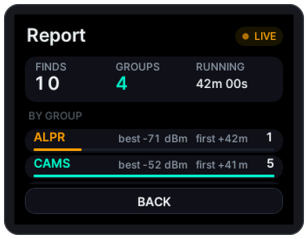


Session report

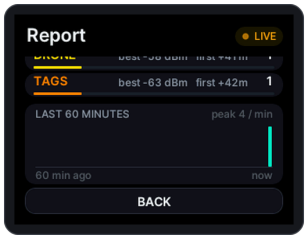


Finds per minute, last 60 minutes

## 9.2 The clock

This board has no clock chip. The clock is set from your phone: open the Live view (section 8) once and the board takes the time and time zone from the phone. It then keeps time until the board is restarted or loses power; after that it is only an estimate (from when the software was built) until you open the Live view again. The time shows at the top right of the LOG page's session card: **teal** when set from your phone, **amber** when it is only an estimate. Saved logs use it for their time stamps.

## 9.3 Your own detection rules (signatures)

Open **192.168.4.1/sigs** on your phone while connected to the hotspot, type rules one per line, and press Save. They are used in addition to the built-in lists and are kept after a restart. Up to 128 rules. A line that starts with # is a comment.

| Rule | Example | Matches |
|---|---|---|
| **oui** | oui B4:1E:52 ALPR high | Any device whose hardware address starts with those three bytes (Wi-Fi or Bluetooth). |
| **ssid** | ssid MyCamNet CAMS | A Wi-Fi network name containing the text (not case sensitive, at least 3 letters). |
| **ble** | ble MyTag TAGS | A Bluetooth device name containing the text. |
| **cid** | cid 0x0171 GLASS | A Bluetooth manufacturer (company) ID. |
| **uuid** | uuid 0xFE65 TAGS | A Bluetooth service ID (a 16-bit number, as four hex digits) that the device advertises. |
| **ie** | ie 3A91C0F2 CAMS | A device fingerprint code (eight hex digits) as shown in a Wi-Fi find, such as IE-fp 3A91C0F2 (section 5.2). |

After the word or code comes the **group** it should go in (ALPR, AXON, CAMS, GLASS, DRONE, BT, TAGS, WIFI, or a camera brand such as RING or WYZE)





- **Hidden-camera module names.** Names that low-cost hidden-camera modules often use (for example IPC-123456, HDWiFiCam, YsxLite, A9-xxxx or P2P-xxxx) are listed under CAMS at low confidence. Many harmless products use similar names, so treat one as a reason to look closer, not as a finding.

# 6. Everyday use

## 6.1 Arm groups and use Scenes

1. Go to the **ARM** page and tap a tile. It lights up and the pill changes to LIVE. Tap it again to disarm.
2. A number on the tile counts the finds in that group. The small bars on an armed tile show the strongest signal heard in that group in the last 10 seconds.
3. For a quick setup, open **GROUPS** and tap a Scene chip at the top.

| Scene | Arms |
|---|---|
| **STREET** | ALPR, AXON, CAMS, GLASS |
| **AIRSPACE** | DRONE |
| **PERSONAL** | TAGS and GLASS |
| **ZB/TH** | Zigbee/Thread only (turns Wi-Fi groups off) |
| **ALL OFF** | Disarms everything |
| **SKIMMER** | Bluetooth only, and switches the Skimmer alert on (section 6.9) |

## 6.2 Read the list of finds

**FINDS** lists everything found, strongest first. Each row shows a colored group bar, the type, the device name or ID, its signal in dBm and bars, and how it was seen (WIFI, BLE or 802.15.4). A red **FOLLOWING** tag marks a tracker that has been near you for a long time (section 6.6). Long-press a tile on the ARM page, or tap a group on the GROUPS page, to see only that group.


Files are created only when something is saved, so starting and stopping sessions leaves no empty files behind. Get the files from the phone page (section 8), or take the microSD card out and read it on a computer. With a card fitted, logs, the ignore list and your signatures are kept on the card; without one they are kept in the board's flash. Each is a plain text table that opens in any spreadsheet. To free space, **SETUP > Storage > DELETE LOGS** (tap twice) removes the saved log files and leaves your settings, ignore list and signatures alone.

| Column | Meaning |
|---|---|
| **first_seen, last_seen** | Date and time from the board's clock, or +HH:MM:SS from the start of the session if the clock is not set. |
| **name** | The device's network name (SSID) or ID. |
| **mac** | Its hardware address. |
| **family, type** | What it matched (for example WYZE, TAG, DRONE) and how: by hardware address (OUI), network name (SSID), Bluetooth name or type tag (WEARABLE, LIGHT...), or a Remote ID broadcast. |
| **radio, channel** | How it was heard (WIFI, BLE or ZB) and on which channel. |
| **best_rssi, last_rssi, hits** | Strongest and latest signal in dBm, and how many times it was heard. |
| **confidence** | LOW (just a nearby network or device), MED or HIGH (a strong match). |
| **lat, lon** | Where you were when it was first heard. Blank unless a GPS is fitted and has a fix. |
| **rid_lat, rid_lon, rid_alt** | The drone's own reported position and height, from Remote ID. |


**LOG > REPORT** shows a summary of the current session on the board: total finds, the number of active groups, the running time, a bar for each group with its best signal and when it first appeared, and a chart of finds per minute over the last hour.






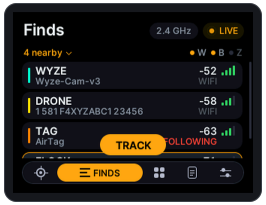


FINDS list

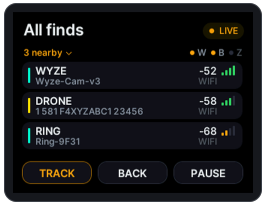


One group's list

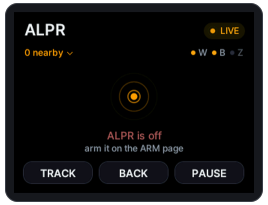


Empty list explains why

### Choosing one device in a busy area

When the list is long it is easy to tap the wrong row, so the list is built to hold still and to be narrowed:

- **It does not move while you reach for a row.** The order is frozen while a finger is on the list, for three seconds after, and while the list is scrolled down. New finds join at the end until it settles, then the list re-sorts by signal.
- **Tap the count above the list** (for example "12 nearby v") to change the view: **Strongest** (default), **Strong only** (hides anything weaker than -75 dBm and says how many it hid), **Newest** (latest find first) or **A-Z** (by name). The same choice is in **SETUP > List view** and is remembered.
- A device you have selected is never filtered out, so you can always track it. If *Strong only* hides everything, the list says so and tells you to tap the count.
- **Tap a row to select it, then tap it again** (or tap TRACK) to start tracking. Long-press to hide one (section 6.4).

## 6.3 Track a device

1. On **FINDS** tap the device row, then tap the amber **TRACK** button. (You can also tap a banner when a find is announced.)
2. The tracking screen shows the live signal as a big number, an arc that fills as the signal gets stronger, and a graph of the last few seconds.
3. Walk slowly. **Stronger (closer to zero) means warmer.** The word under the number changes: FAR, NEAR, then CLOSE (stronger than -55).
4. If you have fitted a buzzer it beeps faster and higher as you get closer. Tap **QUIET** to mute the beeps, **SOUND** to bring them back, and **BACK** to leave.

**If the signal disappears.** A Wi-Fi network is followed on its own channel, read from the network's beacon (a strong network is also heard on the channels either side of its own, so the channel the radio happened to be on is not reliable). If the

# 9. Logs, signatures, clock and updates

## 9.1 The findings record: save what was found, when you choose

The board keeps a **findings record** of the session in memory: every network and device it has found, one entry each, with when it was first and last heard, its best signal, channel, how many times it was heard, and where you were if a GPS is fitted. **Nothing is written to flash while you scan.** You decide when to save it, so scanning can never quietly fill the storage.

- **SAVE LOG** on the LOG page writes the record to one file, for example **skiscan_log_004.csv**. Tap it again later and the *same file is rewritten* with the new finds: it never grows by repetition.
- If a GPS module is fitted and at least one find has a position, SAVE LOG also writes the same record as a map file next to the CSV, with the same name ending **.kml** and **.geojson** (for example **skiscan_log_004.kml**). Open either in Google Earth, QGIS or geojson.io to see where each find was heard. A drone's own reported position is added as a second point.
- The LOG page's session card says exactly what is saved ("saved 21:15 - 4 devices"), or "not saved yet".
- The record holds up to 192 devices; if more are found, the ones heard longest ago make way and the toast says how many were left out. A saved file is a few tens of kilobytes at most.
- A device you have hidden (section 6.4) is not recorded. If less than 40 KB of storage is free, SAVE LOG refuses and says so instead of filling it.

**SETUP > Save log** chooses how saving works:

| Setting | What it does |
|---|---|
| **Manual (default)** | Saves only when you tap SAVE LOG. Starting a new session with unsaved finds shows a reminder; nothing is written behind your back. |
| **Auto 5 min** | Refreshes the same file every 5 minutes if something changed, and whenever you stop or pause scanning. Silent unless it fails. |
| **Live** | The old way: every new find is added to a separate file (**skiscan_live_NNN.csv**) the moment it is found, once per device per session, up to 1500 rows, stopping when less than 64 KB is free. Tracking trails (**skiscan_hunt_NNN.csv**) are written only in this mode and only with a GPS fix. |





network has not been heard for about two seconds, the word under the number changes to **SEARCHING** in amber, the beeps stop, and the radio sweeps outwards from its channel (+1, -1, +2, -2 and so on, across channels 1 to 13) until the network is heard again. It then stays on that channel, and moves to the beacon's stated channel if that differs. If the network really has gone, it keeps searching and picks it up as soon as it comes back. You never need to leave and restart tracking. (Bluetooth and Zigbee targets do not need this: they are not channel-bound in the same way.)

> **TIP Getting a good reading**
> Turn slowly on the spot. Your body blocks the signal, so the reading is strongest when the device is in front of you. Signal strength jumps around indoors, so trust the trend over a few seconds, not one number. This device cannot show a compass direction; it only tells you warmer or colder.

## 6.4 Hide a device you do not care about, and bring it back

Your own cameras, or a neighbour's doorbell, can fill the list. **Long-press a row** for about a second: the toast "Hidden: <name>" appears and the device is removed from the list. It will not be shown, counted, alerted on or logged again, even after a restart. Up to 32 devices can be hidden (the oldest is dropped after that).

**Nothing is lost.** Hidden devices are kept by name on the **Ignored** screen, and there are three easy ways to reach it:

- On the **FINDS** page, tap **N hidden** next to the count at the top (shown when there is room), or the **N hidden - tap to manage** row at the end of the list.
- In **SETUP**, tap **Ignore list**.
- On the Ignored screen, tap a device to bring it back, or **RESTORE ALL**. A restored device shows up again the next time it is heard.

> **TIP Testing with your own network**
> If you hid your home network by accident, tap **N hidden** on the FINDS page and tap it in the list. Each hidden device is shown with its name, type and address so you can recognise it.


## 6.5 Alerts: banners, chimes and the find alert

- A **banner** slides in under the header for about five seconds with the group, the device name and its signal. Tap it to start tracking. A strong (high-confidence) find also wakes a sleeping screen.


# 8. Sharing over Wi-Fi with your phone

The board can create its own Wi-Fi network so your phone can download logs, see a live list, edit signatures, and set the clock. It needs no internet.

1. On the board go to **LOG** and tap **SHARE**. The screen shows a network name that starts with **HUNTR-SEEKR-** and ends in four characters that change every time (for example **HUNTR-SEEKR-4F7A**), a random **password** and the address **192.168.4.1**. Both change every time you press Share, so your phone never reuses a password it saved earlier.
2. On your phone open Wi-Fi settings and join that exact network name with that password (up to two devices can join). If the phone warns there is no internet, stay connected.
3. Open a browser on the phone and go to **http://192.168.4.1**.
4. When you have finished, tap **STOP** on the board. Scanning resumes.

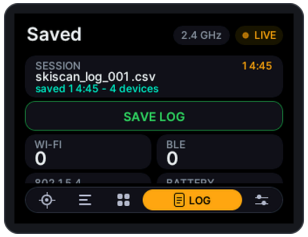


LOG page: SHARE and REPORT

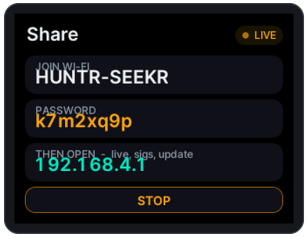


Share screen


| Web page | What you can do there |
|---|---|
| **Home (192.168.4.1)** | List, download and delete the saved log files ("Wipe all logs" asks first), and open the pages below. |
| **Live view (/live)** | A list of current finds that refreshes every 1.5 seconds, with signal, tracker flags and drone positions. Opening it also **sets the board's clock from your phone**. |
| **Signatures (/sigs)** | Add your own detection rules (section 9). |

> **IMPORTANT While the hotspot is on**
> Wi-Fi scanning pauses because the radio is busy running the hotspot. Bluetooth scanning keeps going and everything already found stays in the list. Stop the hotspot to return to full scanning.






- Each group has its own three-note **chime**, so you can tell what was found without looking.
- **SETUP > Find alert** chooses how often this happens: **Off**, **New group** (the default: one alert the first time each armed group finds something), or **Every find**. There is always a gap between alerts (at least four seconds, or 1.5 seconds in Every find mode), and the setting plays a sample when you change it.

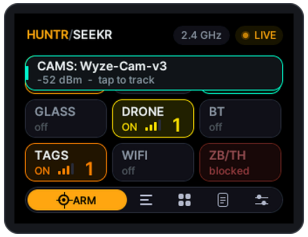


Find banner

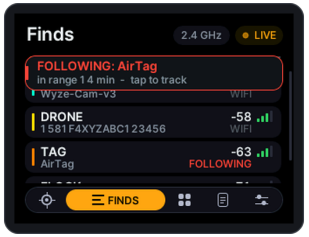


Tracker alert

## 6.6 Tracker alert ("following you")


A tracker that stays near you for a long time is worth noticing. When a device in the **TAGS** group has been continuously in range for the chosen time, you get a red **FOLLOWING** banner, an urgent alarm and a red tag in the list. Choose **SETUP > Tracker alert**: **5**, **10** (default) or **20** minutes, or Off. "In range" means it was heard within the last 90 seconds. It alerts once per tracker. It measures continuous time in range, so a tracker that keeps leaving and coming back may not trigger it.

## 6.7 Pause, quiet and power saving

# 7. Drone Remote ID

Many drones are required to broadcast **Remote ID**: a short message giving the drone's serial number, its position, height and speed, and often the pilot's position. It travels over Bluetooth or Wi-Fi and anyone can read it. HUNTR/SEEKR reads it when the **DRONE** group is armed.

- The drone's **serial number** becomes its name in the list.
- On the tracking screen a card shows the ID, the drone's latitude and longitude, its height and speed, and the **pilot's position** when it is broadcast.
- The position and pilot position are also written to the saved log and shown on the phone Live view.
- Signal strength still works as usual for finding the drone; the reported position is what the drone says about itself, and it may be missing or wrong.

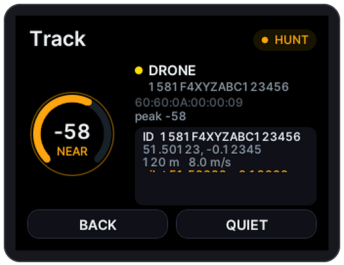


Tracking a drone with Remote ID

> **NOTE Nothing here gives you a compass arrow**
> The device has no GPS or compass, so it cannot point to a position. You can copy the coordinates into a maps app on your phone.





| Feature | How | What it does |
|---|---|---|
| **Pause** | Tap the status pill | Stops recording new finds. Tap again to resume. |
| **Discreet mode** | Long-press the pill, or SETUP > Discreet mode | Silent: no sounds, no banners, no screen wake. Screen dims after 8 seconds and turns off after 20. Brightness is capped low. Scanning and logging continue. |
| **Power saver** | SETUP > Power saver: Off / Auto / On | Screen dims after 10 seconds and turns off after 30, brightness is capped, Bluetooth scanning and Wi-Fi channel changes slow down. Auto does nothing on this board (it has no battery); choose On to use it. |
| **Screen sleep** | SETUP > Auto-dim (off by default) | When switched on: dim after 60 seconds, off after 2 minutes. A touch wakes it (the first touch only wakes). Power saver and Discreet mode dim the screen on their own, whatever this is set to. |

## 6.8 Turn the screen and calibrate touch

**SETUP > Orientation** cycles through **Portrait**, **Landscape** (the default, the usual way to hold a CYD), **Portrait flip** and **Landscape flip**. Landscape shows the tiles as a wide three-column grid. The choice is remembered. This board has no motion sensor, so the screen does not turn by itself.

A resistive screen has to be told where its corners are. **The first time you start the board, and any time from SETUP > Calibrate touch**, the **Touch setup** screen takes over the whole display, with nothing else on it, and asks for four presses. All four targets are shown: the one to press is bright, finished ones turn green. CANCEL appears at the bottom only when you re-run it from SETUP:

1. Press and hold the cross near one corner with a fingertip or a stylus until the bar fills and the cross turns green, then lift.
2. Repeat for the other three corners. The fourth press is used to check the first three.
3. If a press was sloppy or the points do not line up, the screen says **TRY AGAIN** and starts over by itself. Your previous calibration is not overwritten by a failed attempt.

| What happens | Details |
|---|---|
| **Red banner** | **POSSIBLE SKIMMER**, with the device name and its signal. Tap it to start tracking. |
| **Siren** | A two-tone siren from the buzzer (it needs the buzzer fitted, section 2), about 2.5 seconds. It follows the Volume slider and is silent in Discreet mode. |
| **Screen** | A sleeping or dimmed screen wakes up. |
| **Status pill** | Turns red and says **SKIM?** for 3 minutes after the last time the device was heard. |
| **Repeats** | While the device stays in range the warning repeats about once a minute, at most four times. |
| **Record** | The device appears in FINDS with a red **SKIMMER** tag and is written into the findings record. |

SKIMMER scene chip | The warning | In the FINDS list

**IMPORTANT Know the limits**

**This only sees Bluetooth Low Energy.** The most common gas-pump skimmers use *Classic* Bluetooth modules (HC-05 and HC-06), and this board's ESP32-C5 has no Classic Bluetooth, so it cannot see them at all. It can catch skimmers built on a Bluetooth LE module (for example an HC-08). **A quiet screen does not mean a pump is safe.** Skimmers that store the data inside or send it by other means are invisible to this feature too.

**NOTE A warning is a suspicion, not proof**

It matches names only. Many harmless products and hobby projects use the same modules, and a thief can rename a module. The names watched for are HC-03, HC-05, HC-06, HC-08 (also written HC05 and HC06), linvor, and RNBT-xxxx with four hex characters; the match is exact, and capital letters do not matter.

**TIP If you get a warning**

Do not put your card in. Move to a different pump, preferably one in the attendant's view, or pay inside. Look for signs of tampering (a loose card reader, broken security seals). Tell the attendant or the bank, and report it to your local authorities. If it keeps warning about a device you know is harmless, long-press its row in FINDS to hide it. To switch the feature off use **SETUP > Skimmer alert**.








4 When it says **Touch calibrated**, tap **CONTINUE**. The result is saved in flash and works in every orientation.

**TIP Better touch**

Use a stylus or a fingernail tip for the crosses and press firmly on the cross itself. If taps ever land beside the target, run Calibrate touch again.

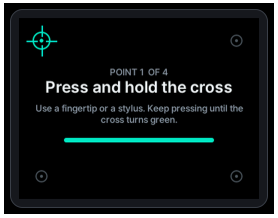

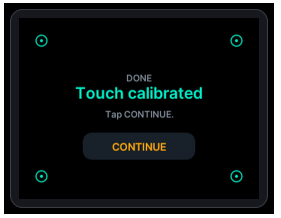
Touch setup: press the cross | Done | Portrait ARM page
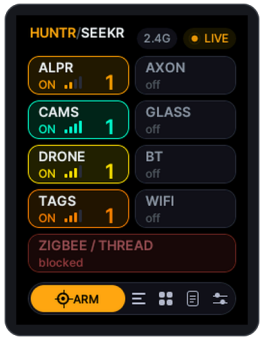
## 6.9 Skimmer watch for gas pumps and ATMs

Some card skimmers are hidden inside gas pumps or ATM card readers and send the stolen card data to a thief over Bluetooth, using a cheap serial Bluetooth module that still carries its factory name. The board listens for those names and warns you loudly if it hears one.

1 Walk up to the pump or machine and open **GROUPS**, then tap the **SKIMMER** scene chip. (It arms Bluetooth and switches the Skimmer alert on. Any armed group that listens by Bluetooth works too, and the alert does not need the BT group to be armed.)

2 Stay near the pump for 10 to 20 seconds. A suspect has to be heard several times, so one stray signal does not set it off.

3 If a suspect is heard you get the warning described below. **Do not use that pump or machine.** Tap the red banner to track the signal and see which way it gets stronger.